

INSTRUCTION MANUAL


SHOWER COLUMN WITH THERMOSTATIC&NORMAL FAUCET



DEAR CUSTOMER:

Thank you for choosing our product, please read this manual carefully before assembling or using the product to avoid damage caused by improper use. If the product is passed on to third parties, this manual has to be passed on along with the product.

WORKING PRESSURE & TEMPERATURE FOR THERMOSTATIC FAUCET

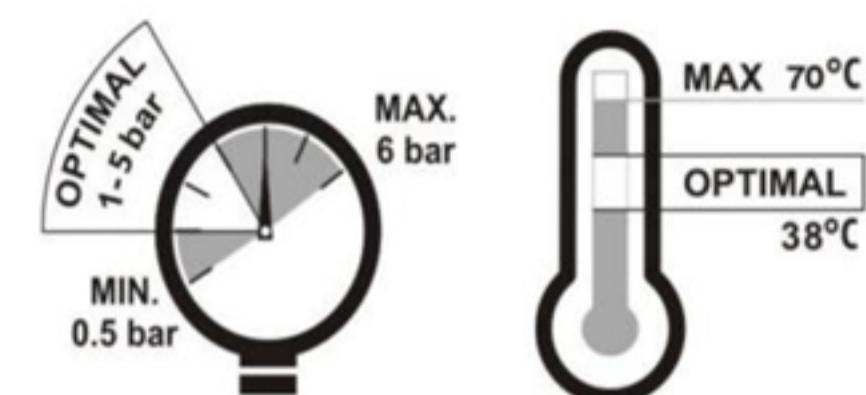


1. Working pressure:0.5-6 bar
2. Optimal pressure:1-5 bar
3. The supply of Cold water temperature:4-25°C, the supply of hot water temperature 55-70°C
4. Normal condition temperature:20-50°C, the optimal temperature:38°C
5. Applicable standard:EN1111-2017, CAS B125-98, ASSE1016, AS-4032.1, QB2806-2006

2

SPECIFICATION


SQUARE SHOWER COLUMN WITH ADJUSTABLE HEIGHT

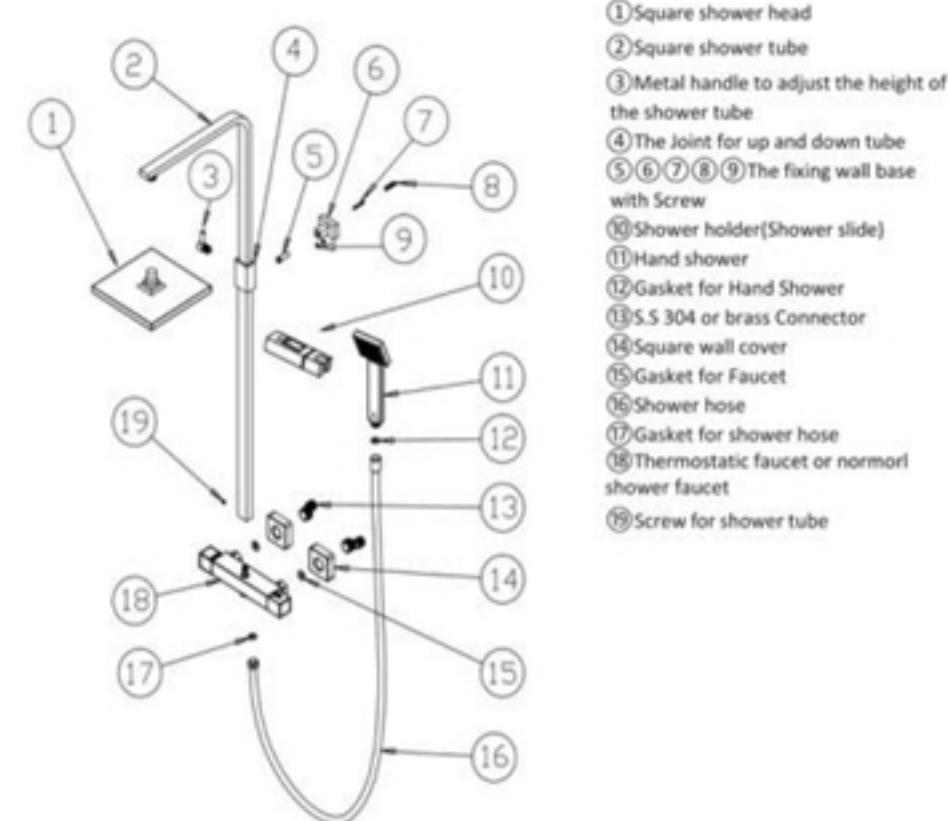

5

INSTALLATION DIMENSION

SQUARE SHOWER COLUMN WITH ADJUSTABLE HEIGHT

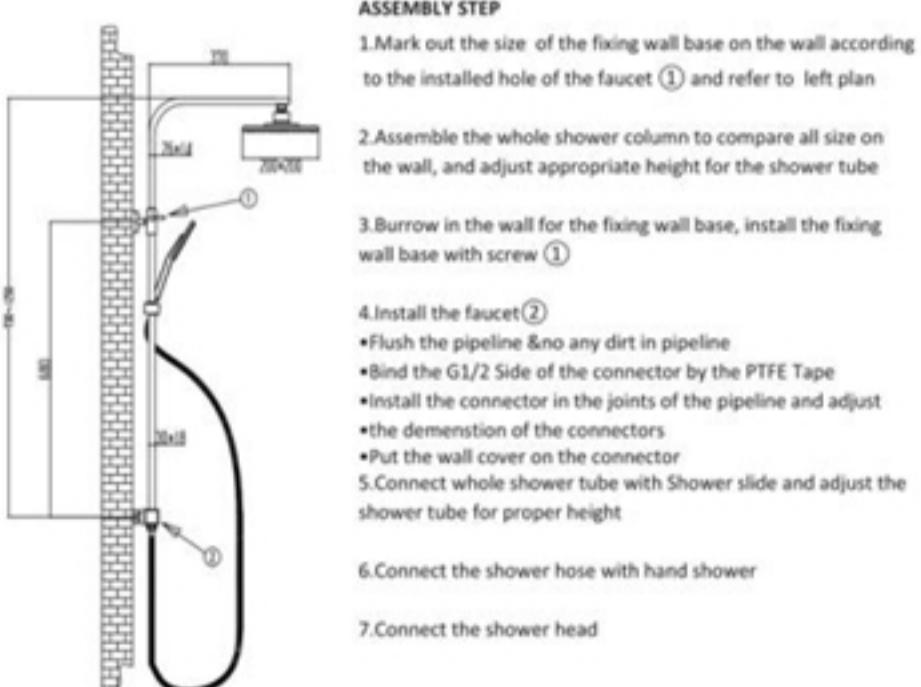

SAFTY INSTRUCTIONS

Read the instruction manual completely and carefully before assembling or using the product to avoid personal injury or property damage. Pay special attention to the safety instructions

SAFTY INSTRUCTIONS FOR THE INSTALLATION:

- Make sure that there is no any dirt in your pipeline system before installing the faucet to prevent dirt from entering the faucet
- Make sure all the pipelines for connecting the faucet are shut off from the water supply during the whole installation process to aviod damages
- Only install the faucet over a properly functioning drain
- The faucet has to be assembled properly to avoid failures in function. Pay special attention to seals to avoid the escape of water and other damages

CHECK THE PROPER FUNCTION OF THE FAUCET AFTER THE INSTALLATION

- Reopen the water supply for the faucet. Set left handle to hand shower and right handle to "cold" and turn on the faucet.
 - Set right handle to hot[press down the button]. Keep your fingers away from the faucet and the water to avoid burning or scalding yourself
 - Set left & right the handle to original location
 - Turn off the faucet and check the whole faucet for leaking water. Pay particular attention to the part of the faucet which is located on the wall. Be careful with the shower hose and shower tube.
- If you find a leak or if water escapes during the testing process ,turn off the faucet immediately and shut off from the water supply. Do not reconnect the faucet until you find the failure

SAFTY INSTRUCTIONS FOR THE INSTALLATION:

- Never clean the faucet and other accessories with scratching or scouring items,abrasives or acid.Use a soft cloth and cleaning agent for chrome surface
- Protect the faucet from frost. If water freezes in the faucet it can be damaged, only suitable for use in rooms with temperature over 0°C, when there is danger of frost, shut off the water supply and empty the faucet