

Fitting Instructions and Product Care

Please read the following instructions carefully.

Fitting Backplates to Wall.

- Position backplate on wall in desired location – make sure the backplate is positioned with the grub screw facing the floor.
- *Tip* – a piece of masking tape applied to the wall before marking the fixing holes will stop the drill wandering, particularly on tiled surfaces.
- Mark the two screw positions.
- Remove backplate and drill two holes using a 6mm drill bit to a depth of 30mm.
- **Caution: Take care using power tools - beware hidden cables or pipes when drilling. The use of a residual current device (RCD) is recommended.**
- Ensure that the flat surface of the backplate is sitting against the wall and fix backplate to wall using wall plugs and screws provided.
- Note: Wall plugs supplied are only suitable for solid stone / brick walls. For plasterboard walls use specialist wall plugs.

Attaching Accessory to Backplate(s)

- Loosen the small grub screw on the accessory body.
- Locate the groove on the inside top of the accessory body onto the top of the backplate.
- Push accessory into position and secure by tightening the grub screw.
- Check accessory is secure.

Double Backplate Accessories

For items with two backplates it is important that the distance between them is correct. This can be established as follows,

- Assemble the product.
- Offer product up to the wall in the desired location.
- Mark the centre positions taking the location from small grub screw located on the base of the accessory body.
- Fit each backplate to the wall in the marked positions using the process detailed above.

Cleaning

We recommend cleaning using a soft damp cloth only. Do not use metal cleaners or other abrasive cleaning agents.

Important Information about Glass Components

Glass Shelf

- Maximum safe load for the glass shelf is 5kg.
- The shelf should be fitted by a competent person.
- For safety reasons the shelf should not be fitted in a shower enclosure or above a bath.
- Do not place very hot or very cold items against or in close proximity to glass surfaces unless adequately thick insulating material is used to prevent such items from coming into contact with the glass.
- Do not strike the glass with hard or pointed items.
- Glass shelf is toughened glass. Should the glass become chipped or broken please contact Roper Rhodes at the address below for a replacement.

For replacement parts or further information please contact Roper Rhodes at the address below: