



1. Shut off water supply to tank. Flush tank and sponge out remaining water. Remove old fill valve assembly
2. Carefully remove CONE WASHER from center of SHANK WASHER. Place SHANK WASHER on THREADED SHANK of new VALVE. Place flat surface against VALVE.
3. When installed, the CRITICAL LEVEL MARK on the FILL VALVE should be at least 1" above the top of the OVERFLOW PIPE.
4. To adjust the height of the FILL VALVE, twist the THREADED SHANK in or out of VALVE body. The height of the VALVE adjusts from 225mm to 330mm.
5. Position VALVE inside tank. Push down on the VALVE SHANK (not the TOP) while tightening LOCK NUT. Hand tighten only. DO NOT OVERTIGHTEN or tank may crack. Make sure FLOAT CUP does not touch toilet tank walls, trip mechanism or FLUSH VALVE.
6. With correct WASHERS in place tighten COUPLING NUT. Hand tighten only. DO NOT OVERTIGHTEN. CAUTION: DO NOT USE CONE WASHER WITH PLASTIC SUPPLY LINE.