

BC 108-SDC Dolphin Coin Operated Styler Dryer User Manual

Please read carefully before use



Installation Instructions for your BC109-SDC

UNPACKING

Your BC109-SDC has been tested before leaving the factory. If any part should be damaged in transit, please return that part to us for immediate replacement. Each carton includes:-

- a) Machine
- b) 4, No 8 x 1½" wood screws
- c) Hair dryer
- d) 4, No 8 wall plugs
- e) Installation leaflet

SITING

The BC109-SDC is rated IPX0 and is therefore only suitable for areas designated Zone 3.

The underside of the timer box should be the following approx. heights from the floor, according to use:-

Mens Use 60" (1524mm) Ladies Use 56" (1422mm)

The unit must be fixed vertically to ensure correct operation of the coin mechanism.

FIXING

Remove the money draw from the timer box. Remove the 2 screws on the under-side, holding the front panel in position & slide out. Position the timer box on the wall, and mark through the four fixing points. Drill the wall to suit the No 8 wall plugs (supplied). If the supply is to be concealed, drill a hole through the wall, in line with the 20mm hole in the back plate. Screw the timer box to the wall. Do not position the dryer near another mirror as this will cause excessive stretching of the hair dryer cable when used.

 
WIRING

Wiring must conform to the relevant electrical regulations and a residual current circuit breaker (E.L.C.B) must be fitted.

The 230 volt 50Hz supply must be connected to the BC109-SDC via a double pole fused isolator having a contact separation of at least 3mm between all poles, A 7 amp fuse should be fitted.

WARNING:- THIS APPLIANCE MUST BE EARTHED

Wire up the timer box as follows:

- The red or brown lead to the terminal marked L
- The black or blue lead to the terminal marked N.
- The green or green & yellow lead to terminal marked E or 

It is recommended that the electrical installation is carried out by a qualified electrician, and inspected every six months.

TIMER ADJUSTMENT

Turn the timer adjustment knob clockwise to increase the time and anti-clockwise to reduce it.

NOTE: The adjustment is between 1/2 minute and 3 minutes approx. (The factory setting is 2 minutes approx.)

COVER

Slide the cover back into position and fix with the 2 screws provided. Ensure that the star washers are used, as these maintain earthing to the front.

FILTER

Inspect the hair dryer filter periodically and, if necessary, remove and wash in soapy water. Dry before replacing.

CLEANING HIGH CHLORINE AREAS

It is a known fact that stainless steel can show signs of rusting in high chlorine areas, especially where high ambient temperatures are involved. To minimise this, the stainless case must be wiped down regularly. Do not use abrasive cleaners. Due to this phenomenon the manufacturer will not be responsible for this cosmetic occurrence

INSPECTION

The coily cable to the hair dryer should be checked regularly, especially in high usage areas, for any signs of wear, splitting or vandalism, especially at both ends. The hair dryer case should be checked regularly for any damage and the safety warning labels are still in place.

GUARANTEE

The professional hair dryer supplied is considered a consumable item and is guaranteed against faulty workmanship and materials for 6 months. This does not cover vandalism or improper use. Any physical damage will be classed as vandalism.

The Timer Box is guaranteed against faulty materials for a period of 12 months from the date of purchase. Should any part fail during normal use, within this period, just return it for immediate repair/replacement.

LEAVE THESE INSTRUCTIONS WITH THE PERSON RESPONSIBLE FOR THE SAFE WORKING OF THIS HAIR DRYER.



Bell-Chem Products Company

Haywood Way, Hastings, TN35 4PL

Tel: 01424 202224

info@dolphindispensers.co.uk

www.dolphindispensers.co.uk