



## **TEMPERATURE SETTING & CALIBRATION**

### **1.0 PRE-SET TEMPERATURE**

**1.1** The valve temperature is pre-set at 38°C but on certain installations the setting may need to be adjusted.

### **2.0 CHECK TEMPERATURE & CALIBRATION**

**2.1** Fully turn on valve water flow.

**Note:** Ensure the hot water is above 60°C

**2.2** Set the Temperature Control Knob at the 38°C position & check the temperature of water from the handset- if not at 38°C continue below.

**2.3** Remove the centre cap & knob securing screw from the Temperature control Knob.

**2.4** Fully remove the Temperature Control Knob.

**2.5** Relocate the Temperature Control Knob approximately 3mm back on to the splined shaft.

**Note:** Hold in position.

**2.6** If the pre-set temperature is too hot turn the Temperature Control Knob clockwise to obtain the 38°C.

**Note:** Turn in small increments & allow 10 seconds between each to allow the cartridge to stabilise.

**Note:** If too cold turn the Temperature Control Knob anti-clockwise to obtain 38°C.

**2.7** When set at 38°C carefully remove the Temperature Control Knob from the splined shaft.

**2.8** Carefully relocate the Temperature Control Knob on the splined shaft aligning the 38°C (on the knob) with the line on the fixed ring located on the valve body.

**Note:** Ensure that the knob is not rotated during this operation, as the temperature will be altered.

**2.9** Secure the Temperature Control Knob with the fixing screw & replace the centre cap.

**Ultra Finishing**

**Customer Care Helpline Tel. 01282 446789**