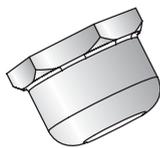
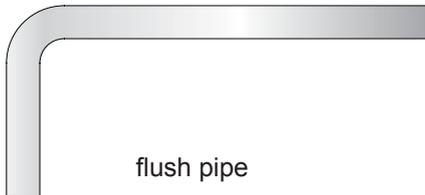
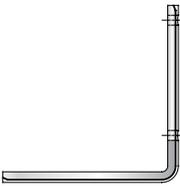



- Mount the cistern securely on the wall at the height of 750mm from the underside of the cistern to the floor using the fixing holes through the rear of the cistern and the fitted **brackets**. See handy hint. The cistern can be mounted lower if needed, but the minimum height from the underside of the cistern to the floor should be 600mm.
- Use the **brass fixing nut** (as part of the **decorative cover**) to fix in the cistern fittings. Place the **decorative cover** and **plastic fixing nut**, **plastic washer**, **cone shaped washer** (supplied as parts of the cistern fittings) over the top of the **flush pipe** (longer end of the **flush pipe**) and insert into the **threaded siphon stem** (supplied as part of the cistern fittings). Once the **flush pipe** is secured by the **plastic fixing nut**, screw the **decorative cover** up to the **brass fixing nut**.
- Insert the lower end of the **flush pipe** into the pan via the **flush cone** (supplied as part of the cistern fittings).

HANDY HINT



When installing your cistern, ensure that the **rubber spacing washers** are used to create a small gap between the cistern back and the wall. There are two reasons for this firstly it will help to reduce the possibility of condensation when cold mains pressure is contained within a humid environment. Secondly, the gap will help prevent 'thermal shock'. This is when rapid temperature change occurs (usually overnight) and causes the wall to contract or expand, thus cracking the sanitary ware. When fixing the cistern to the wall it is advisable to insert the screw through a washer (not supplied) on the inside of the cistern. This will prevent the screw damaging the sanitary ware when the screw 'bites'.

Parts supplied:

 <p>decorative cover & brass fixing nut</p>		 <p>flush pipe</p>	
 <p>rawl plug</p>	 <p>screw</p>	 <p>bracket</p>	 <p>rubber spacing washer</p>
1x	4x	2x	4x

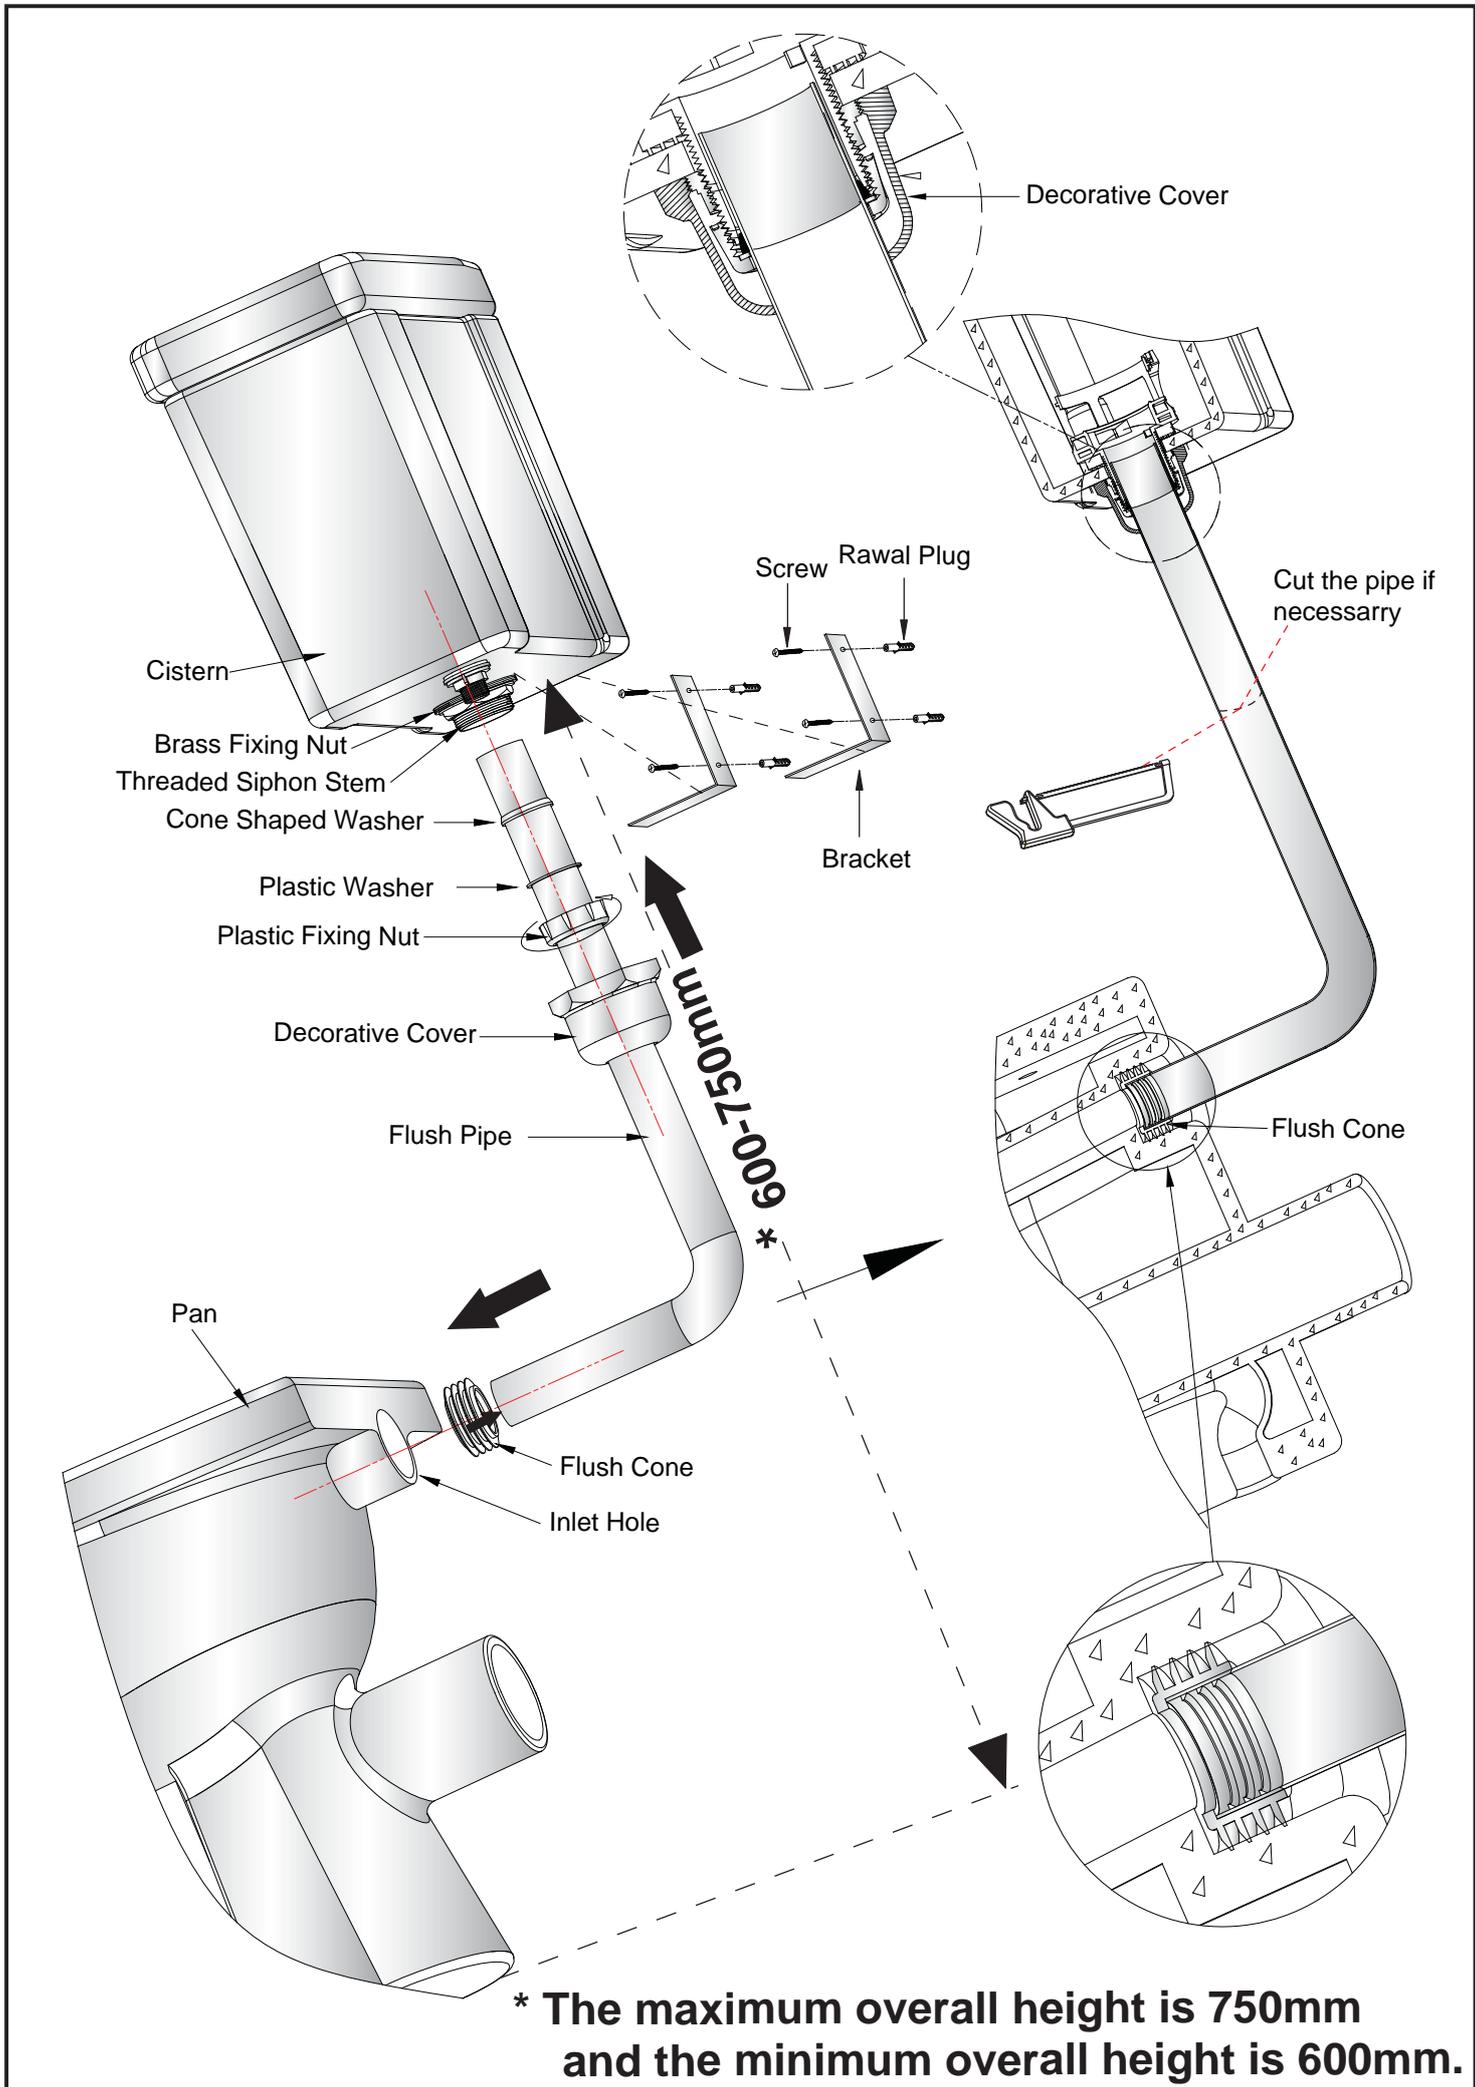


Parts supplied:

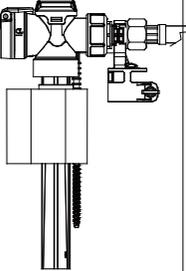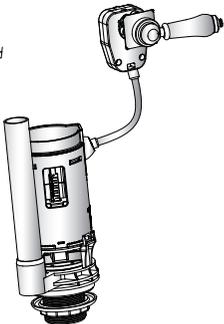					
Inlet Valve	Flush Valve	Plug	Bolt	Flush Cone	Fixing Nut
1x	1x	1x	2x	1x	1x
					
		Lever	Plastic Washer	Cone Washer	Flush Cone
		1x	1x	1x	1x

- Please read these instructions carefully to avoid damage to the valves, and to ensure correct installation.
- Do not use bleach or bleach based cleaning products in the cistern, as these will cause damage to the seals. We cannot be held responsible or liable for any failure which results from the use of bleach based products.
- Water temperature range +2C to +45C.
- Water pressure 0.2 to 8 bar.

1: Flush Valve installation

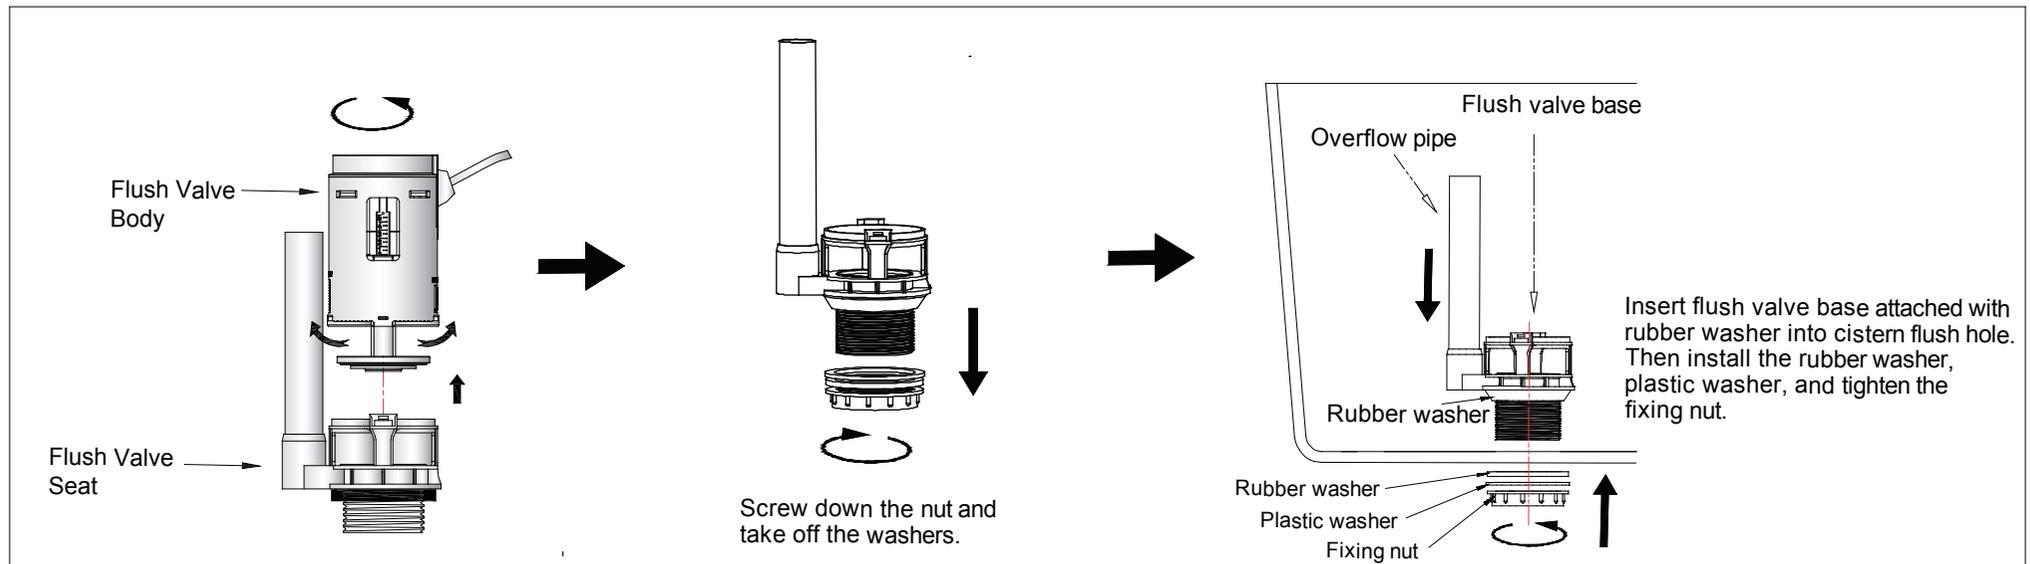

2: Flush Valve scale and adjustment setting

Note: The Flush Valve should be adjusted for the required flush volume.

The diagram "A" below indicates the correct setting for 6L full flush and 3L half flush.

The diagram "B" below indicates the correct setting is for 4.5L full flush and 2.6L half flush.

C24 Burlington 510mm close coupled cistern tank			
A 6L full flush and 3L half flush		B 4.5L full flush and 2.6L half flush	
① Half Flush Float : should be set on the 1 mark.	② Full Flush Adjustor : should be set at 2 mark.	③ Half Flush Adjustor : should be set at 1.5 mark.	
A 6L full flush and 3L half flush		B 4.5L full flush and 2.6L half flush	
① Half Flush Float : should be set on the 2.5 mark	② Full Flush Adjustor : should be set on the 5 mark	③ Half Flush Adjustor : should be set at 1.5 mark	
A 6L full flush and 3L half flush		B 4.5L full flush and 2.6L half flush	
① Half Flush Float : should be set on the 2 mark	② Full Flush Adjustor : should be set on the 5 mark	③ Half Flush Adjustor : should be set at 4.5 mark	

Half flush float
① Move float down, flush volume increases.
Move float up, flush volume decreases.

Half flush adjustor
③ Move adjustor down, flush volume increases.
Move float up, flush volume decreases.

Full flush adjustor
② Move adjustor down, flush volume increases.
Move float up, flush volume decreases.

3: Installation Option for Close coupled or Low level

Close Coupled Flush Valve Installation	Low Level Flush Valve Installation
<p>Please use the plug to block the bottom inlet hole.</p> <p>Flush Cone</p> <p>Push the flush cone over the fixing nut, ensure that it is flat, and there is no leakage between cistern and pan.</p>	<p>Cistern</p> <p>Flush Valve</p> <p>Brass nut</p> <p>Please use the plug to block the bottom inlet hole.</p> <p>Use the two white bolts to block the two installation holes.</p> <p>⚠ Use the brass nut from Low Level kit to fix the Flush Valve.</p>

4: Flush Valve trouble shooting


Problem	Reason	Solution
Leakage	1. Incorrect installation. 2. Flush valve seat does not fit flush valve body. 3. Flush valve body is stuck.	1. Install again according to the correct installation procedure. 2. Install again. 3. Disconnect and wash flush valve body.
No flush, low flush or half flush volume	Cable is distorted.	Remove kinks or sharp bends in the cable.
Half flush water level is too high or too low.	Water level is adjusted incorrectly.	Adjust water level.

1: Inlet Valve adjustment settings and Installation


①

C24 Burlington 510mm close coupled cistern tank


Adjust the scale to 16.

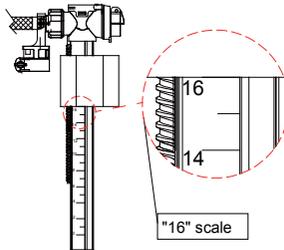


②

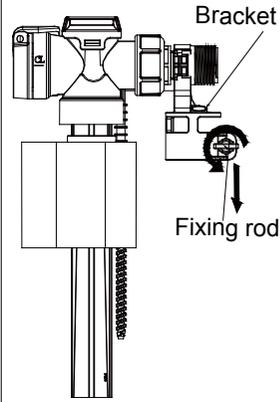

Loosen the fixing rod.

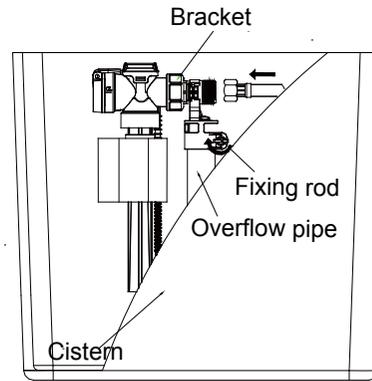

Fix the inlet valve onto the overflow pipe, and tighten the fixing rod.

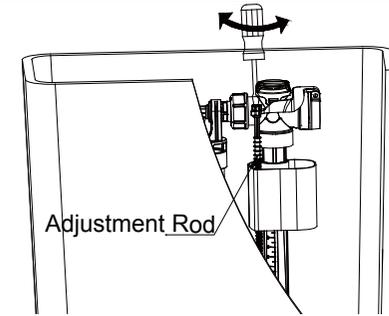

Connect the water supply pipe to the supply end. Open the water supply, Check if the inlet valve works well. If required, the water level could be adjusted.

Adjusting the rod:


A: By adjusting clockwise the water level rises and the flush volume increases.

B: By adjusting anti-clockwise the water level falls and the flush volume decreases.

①


C30 Burlington Extended depth 510mm close coupled cistern tank

6L full flush and 3L half flush, Adjust the scale to 16.
4.5L full flush and 2.6L half flush Adjust the scale to 13.

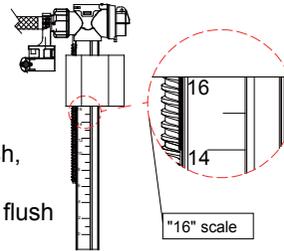


2: Filter cleaning (Please clean periodically)

①

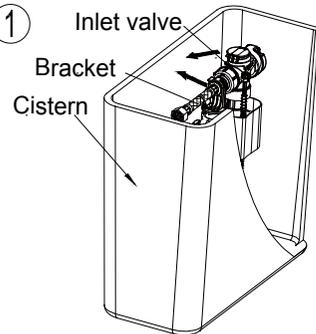


Close the water supply, and take off the inlet valve.

②

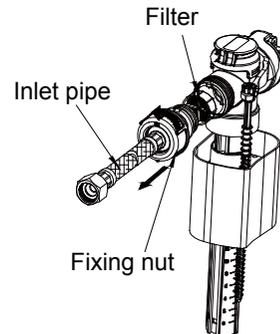


Screw down the fixing nut, and take off the water supply pipe.

③

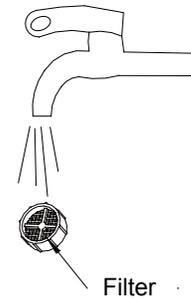

Clean by rinsing the filter.

④

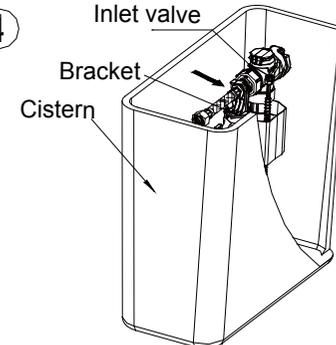


Reinstall the inlet valve.

3: Inlet Valve trouble shooting


Problem	Reason	Solution
Incorrect water level	Incorrect adjustment.	Adjust the Water level correctly.
Inlet Valve does not work	Water supply is closed.	Open the water supply
	The filter is blocked.	Clean the filter.
	The Stop Float is pressed by the tank.	Readjust the direction of the inlet valve.
Leakage	The Inlet Valve fixing nut has not been tightened.	Tighten the nut.

Close Coupled Cistern & Flush Level Installation


1: Install Close Coupled Cistern To Pan

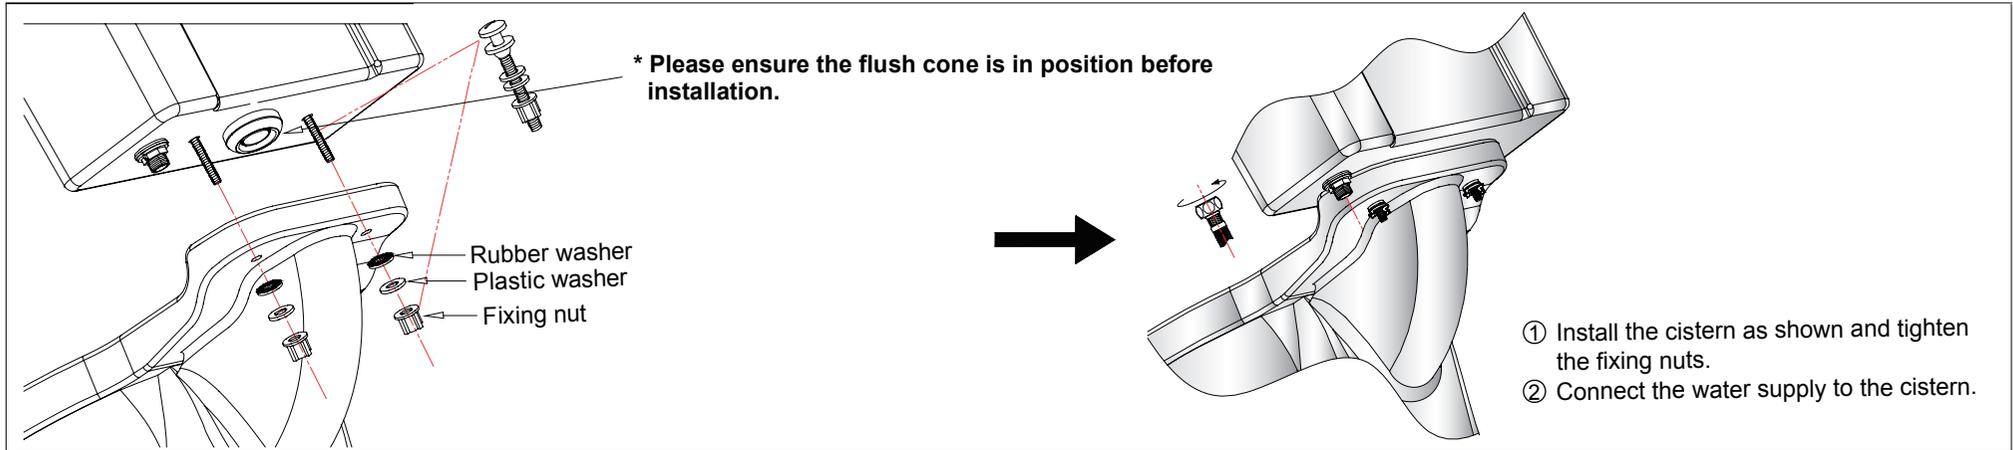

2: Install Lever

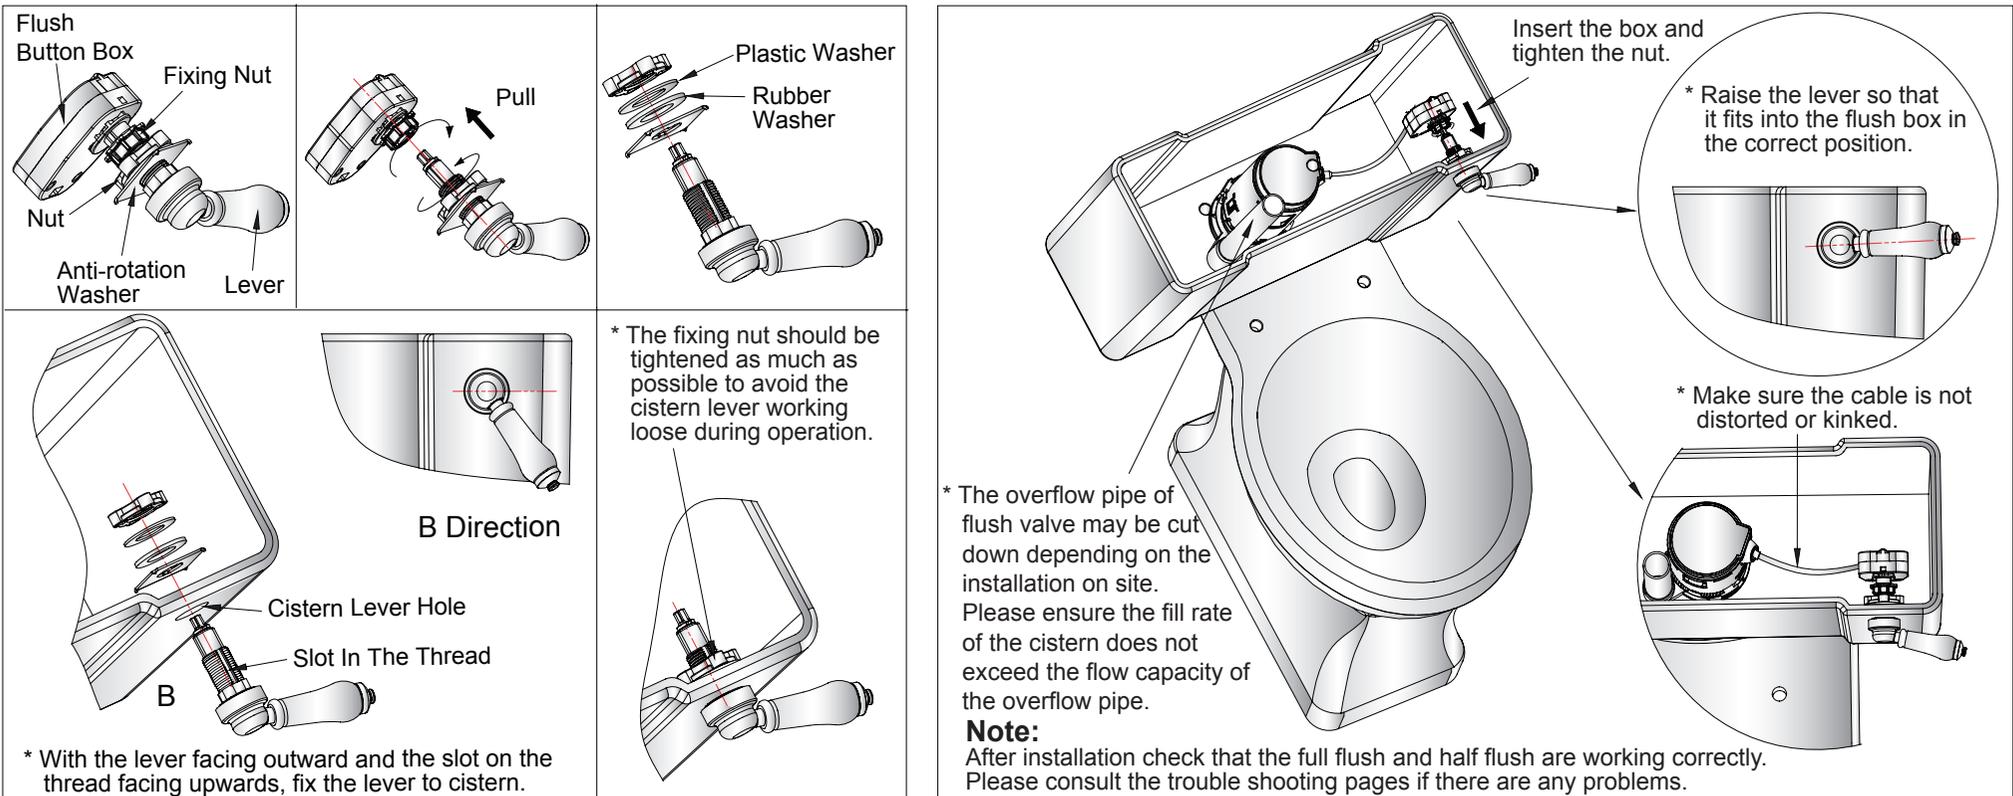

Low Level Cistern Installation

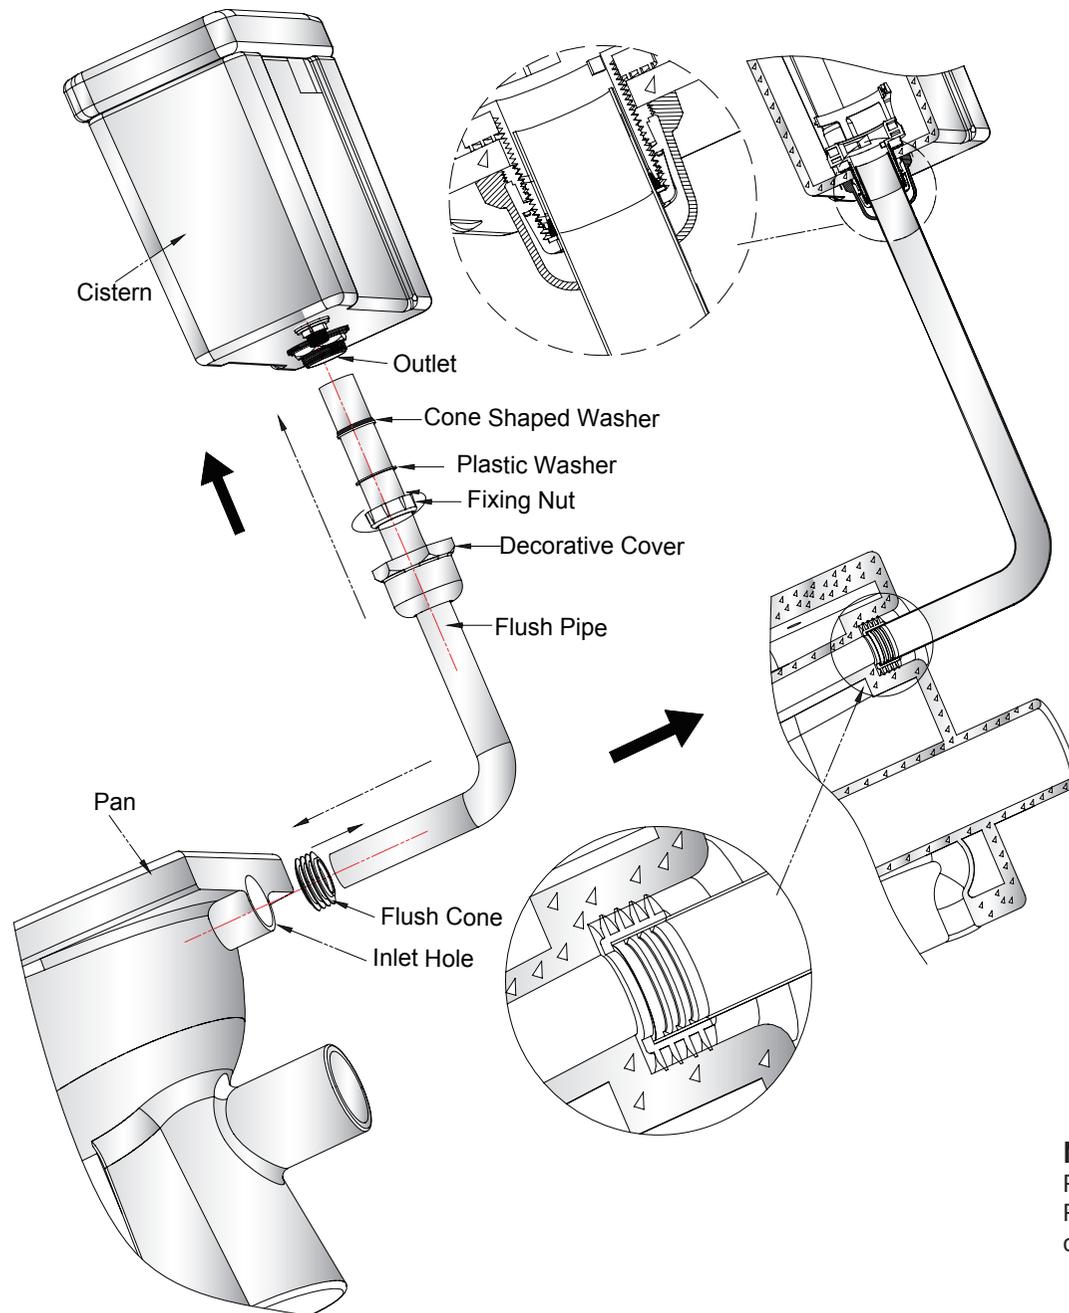

Determine the exact location of the pan and cistern installation, then cut the Flush Pipe accordingly if necessary. Fit the Pipe into the cistern in the sequence shown in the diagram. Then insert the Flush Cone into the pan, followed by the Flush Pipe as shown in the diagram.

Note:
Please carefully check for leaks after installation.
Please use two white bolts to block the two fixing holes on the bottom of cistern, cut the bolts to suitable length if necessary.