


### Drawer Front Adjustment

The drawer fronts can be easily adjusted with a Philips screwdriver.

The height of the drawer front can be adjusted by turning Screw B. Repeat this on the other side of the drawer to make it level. Use a spirit level for guidance. Left and right adjustment can be achieved by loosening Screw A (x2 each side) and sliding the fascia left or right in the slots. Ensure to re-tighten the screws once fascia has been sufficiently adjusted.

### Removing the Drawer Front

Should you need to detach the drawer front then simply turn screw C on both sides until the metal plates loosen. Then gently pull the drawer front away from the metal body. To re-attach; simply slot drawer front back onto the metal body and tighten screw C. Ensure drawer front has been securely re-attached in place and is flush with the metal body.

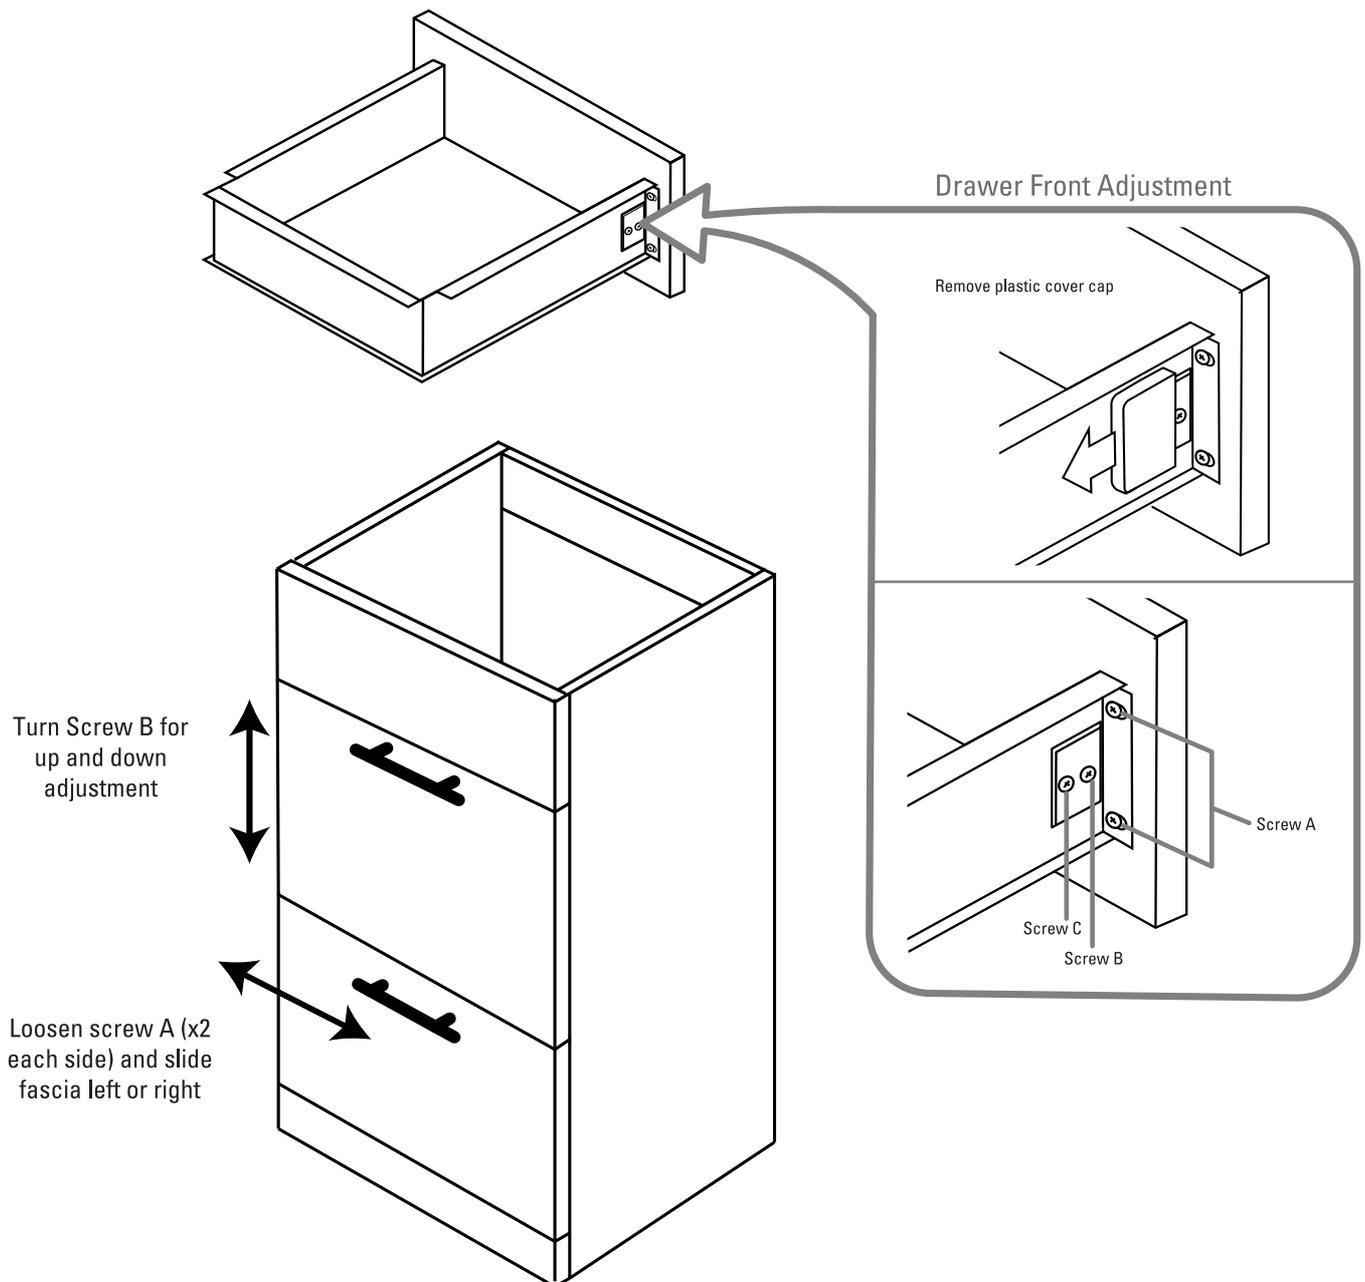


### Installation Notes

- \*Base units can be secured to the wall if required using suitable angle brackets (not supplied).
- \*If you cut any part of the base unit during installation, it is essential that the cut surfaces are resealed with a suitable waterproof varnish, paint or sealant. Failure to adequately reseat may result in water damage for which the manufacturer cannot be held liable.
- \*Ceramic slab basins can be secured to the base units using silicone sealant (not supplied).

### Hinge Adjustment

Hinges may require adjustment for both the doors to fit neatly together. This is achieved with the adjustable soft close hinges using the adjustment screws A and B (see Fig. 1). To access these you may first have to remove the screw cap cover. The hinges also feature a quick release mechanism to quickly and easily detach the door from the furniture frame, this is activated by pressing button C (see Fig. 1).

- To make adjustment 1 (see Fig. 2) tighten/loosen adjustment screw A.
- To make adjustment 2 (see Fig. 2) turn screw B.

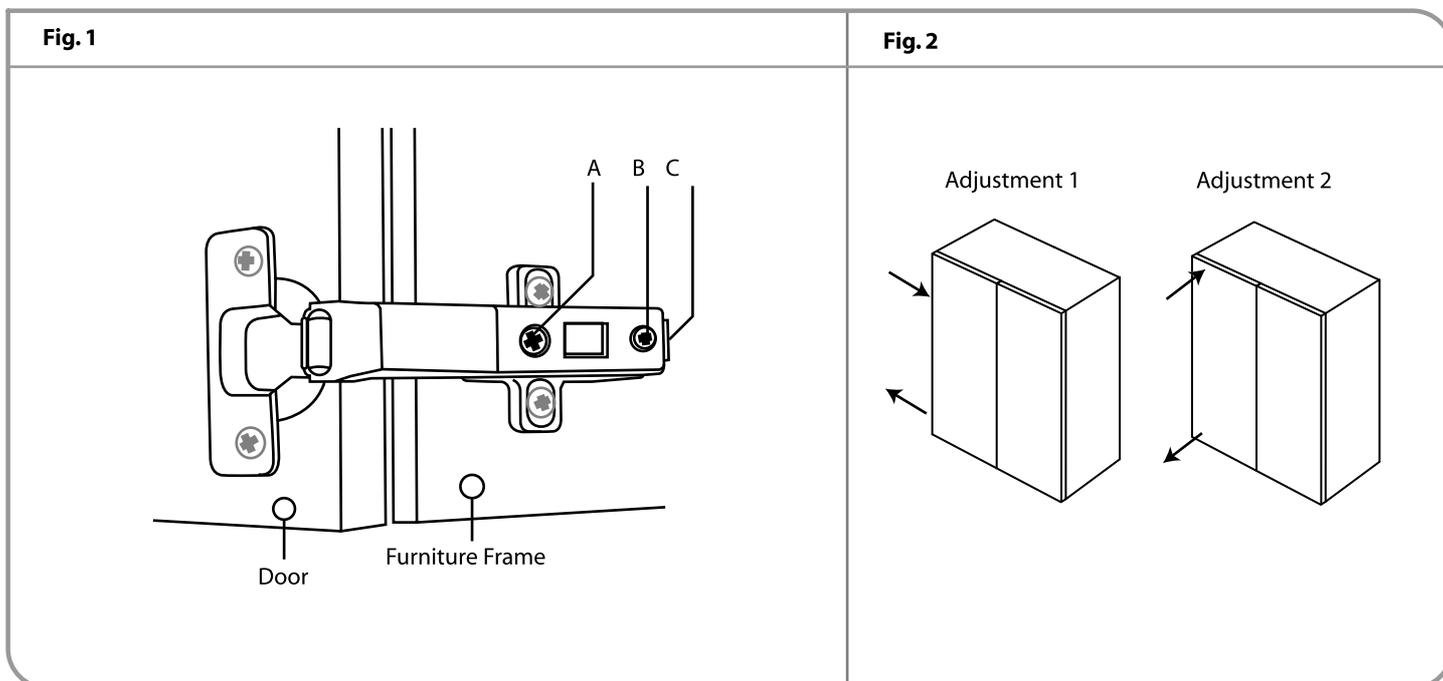

### Fitting handle

The handle can simply be screwed into place using the screws supplied

### Fitting ceramic basin

Once the basin has been plumbed in finish by securing to the washstand using a silicone sealant (not supplied).

### Furniture Aftercare Instructions

As with all wooden furniture, this product should be treated with care.

#### We recommend...

- Wipe away any water splashes or condensation after use. Excessive exposure to water will deteriorate the furniture.
- All bathrooms should be well ventilated with a suitable extractor fan.
- Clean with a soft damp cloth only.
- Use a wax free polish if one must be used.
- For removal of lime scale deposits use a suitable proprietary cleaner. If necessary test on an inconspicuous area first.

#### Please DO NOT...

- Do not scrub or scour
- Do not use abrasive cleaning agents

**Replacement components** - Should you require any replacement components for this product please contact Roper Rhodes using the contact details below.