


SANCTUARY SLIDE RAIL SVRAIL02

SANCTUARY 3 FUNCTION SHOWER KIT SVKIT02

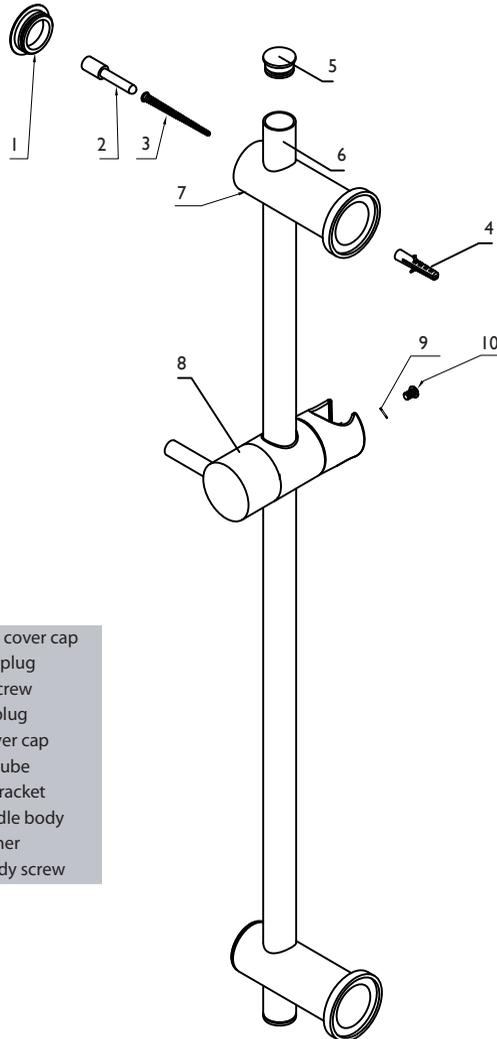

- |    |                        |
|----|------------------------|
| 1  | Wall bracket cover cap |
| 2  | Plastic plug           |
| 3  | Wall screw             |
| 4  | Wall plug              |
| 5  | Riser cover cap        |
| 6  | Riser tube             |
| 7  | Fixing bracket         |
| 8  | Slider handle body     |
| 9  | Washer                 |
| 10 | Handle body screw      |

## INSTALLATION PROCEDURE

1. Establish height of riser rail to suit requirements (see Fig 1).
2. Mark positions on wall for upper and lower fixing brackets ensuring that the hole positions are vertically aligned. Drill holes for both the brackets and plug the wall.
3. Remove the wall bracket cover caps and plastic plugs from the fixing brackets (see Fig 2). Discard the plastic plugs.
4. Place the rail and fixing bracket assembly in position on the wall. Fix the assembly to the wall through the centres of the brackets using the fixings provided.
5. Replace the wall bracket cover caps.

**NOTE:** The notch on the slider handle body fits the conical nut on the shower hose.

## GENERAL NOTES

### Fitting and Maintenance Instructions

Tips: Wear suitable eye protection when drilling. Take care when using power tools near water - the use of a residual current device (RCD) is recommended. Beware of hidden pipes or cables. Take care when drilling on tiled surfaces as the drill may slip. Use a piece of masking tape to prevent the drill from wandering. When working near a bath, shower or basin, to avoid losing small parts, ensure the waste outlets are covered. Take care not to drop parts or tools into the bath, shower or basin.

### Showerhead cleaning instructions:

To ensure optimum performance of the shower, clean the showerhead periodically to remove build-up of limescale or debris.

### Showerhead periodical maintenance:

1. To remove limescale or debris on a daily basis, rub your thumb over the showerhead surface while the water is running.
2. To remove stubborn scale deposits, immerse the showerhead in an appropriate limescale remover. Rinse thoroughly before use.

Fig 1

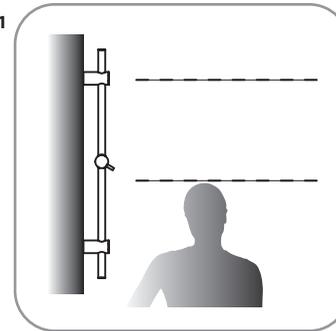


Fig 2

