
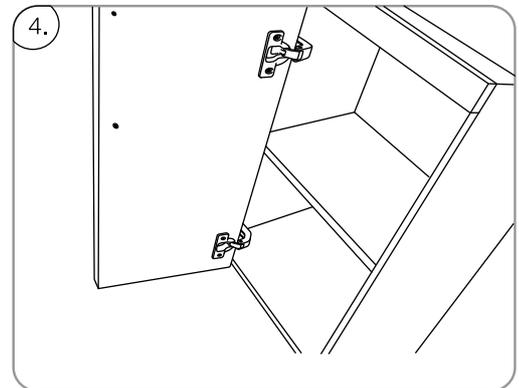
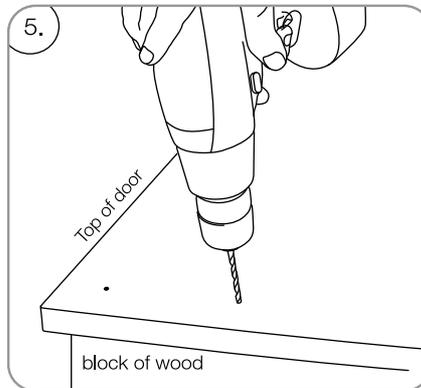
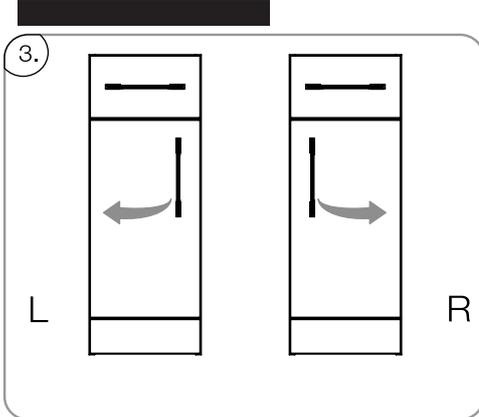


Hinge Adjustment

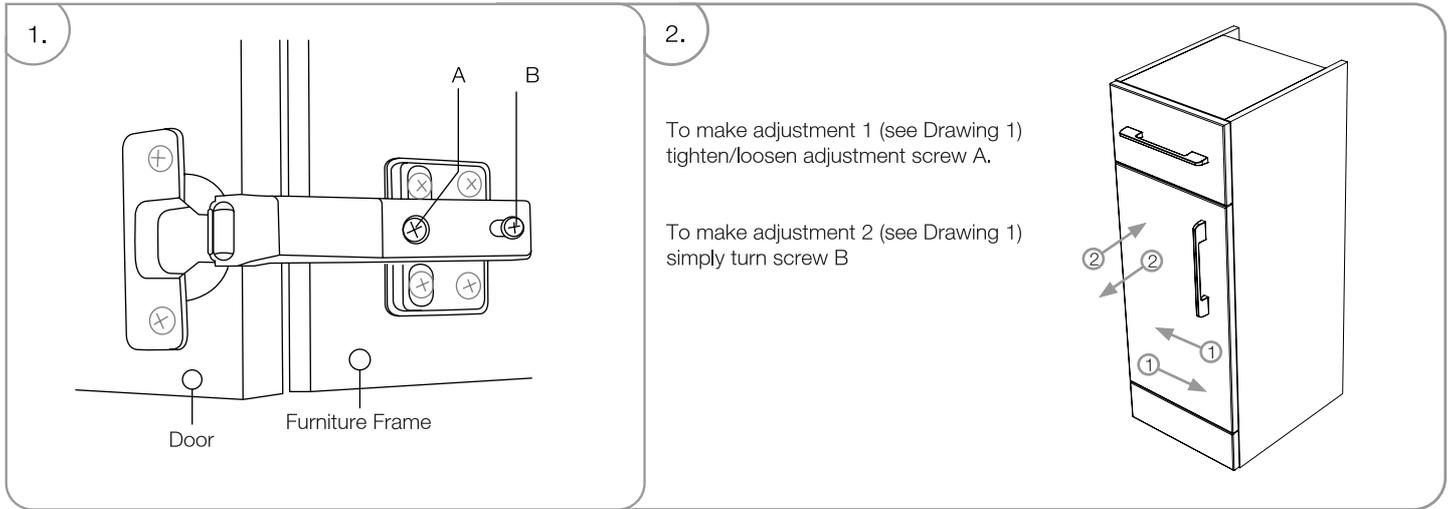

Depending on the intended location of the unit, you have the option of choosing whether you want a left or right hand opening door.

Once the handing has been chosen, remove the door. Place door on to a clean and smooth scrap piece of wood and carefully drill out the selected holes for the handle bolts. There are pilot holes to allow the handle to be fitted for left or right handing

Reattach the door to the chosen side and fit handle

Furniture Aftercare Instructions:

As with all wooden furniture, this product should be treated with care.

We recommend...

- Wipe away any water splashes or condensation after use. Excessive exposure to water will deteriorate the furniture.
- All bathrooms should be well ventilated with a suitable extractor fan.
- Clean with a soft damp cloth only.
- Use a wax free polish if one must be used.
- For removal of lime scale deposits use a suitable proprietary cleaner. Test on an inconspicuous area first.

Please DO NOT...

- Do not scrub or scour
- Do not use abrasive cleaning agents

Replacement components - Should you require any replacement components for this product please contact Tavistock using the contact details below.