



## **Towel Rail Installation**


- . review instructions carefully before installation
- . installation should be completed by a suitably qualified person
- . please dispose of packaging in a responsible manner

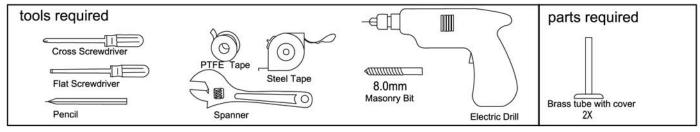


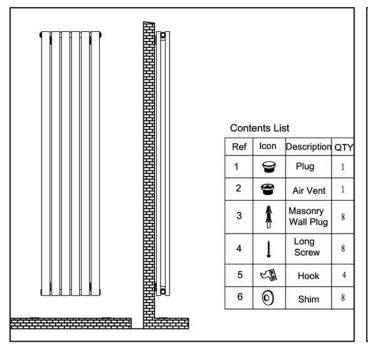


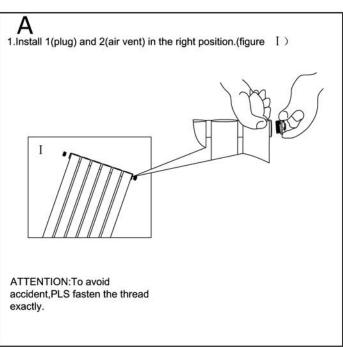


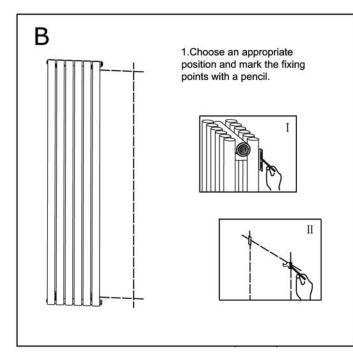

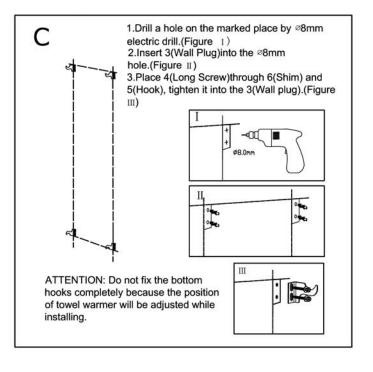

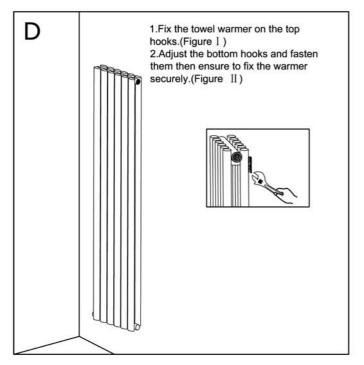

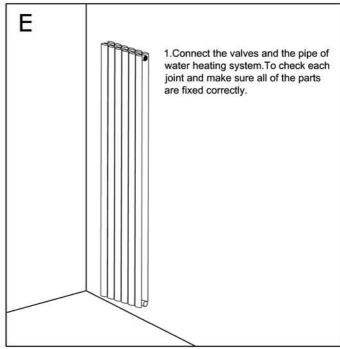

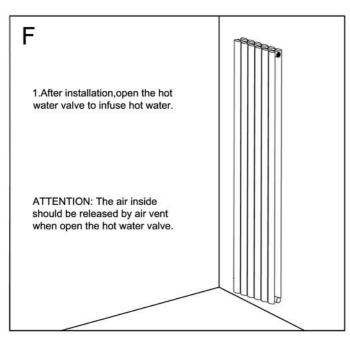

## After installation . . .

- Use a screwdriver to open the air vent, open the valve and let the water rush into the towel warmer. Check all connections for leaks.
- Once water overflows from the air vent, there is no air in the tube.
- Use a screwdriver to close the air vent, turn on the valve and the towel warmer is ready for use.

## After care . . .

 Classic towel warmers are made from steel with chrome plating, and should not be cleaned with corrosive or scouring cleaning agents.

## Please note . . .

- . This product can only be used at PN ≤1MPa (10g/cm², 10 Bar), It should only be filled with water, and at a temperature below 100 °C (212 °F). See table below for installation requirements.
- · If the temperature exceeds 48 °C (or 120 °F), please show a warning sign near the product to avoid burning and scolding accidents.

Fill 3/4 Full	Pressure	Temperature	Comments
water only	PN <b>≼</b> 1Mpa	0° C < t <b>≤</b> 100 °C	If ambient temperature drops below1°C, drain out the water to prevent freezing.