


# AREZZO

## Floor Standing Space-Saving Heated Towel Rail

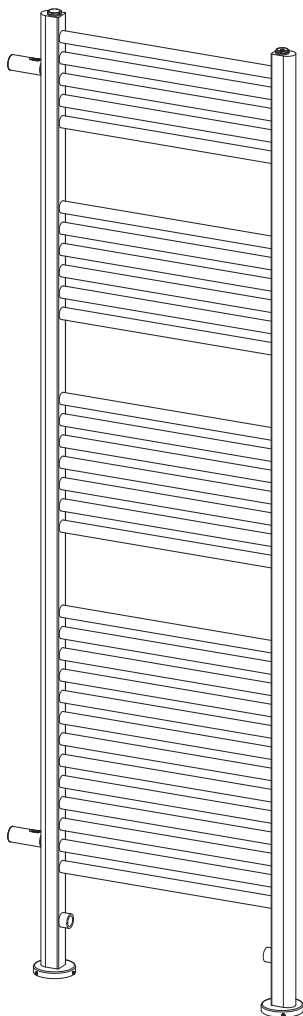

## Fitting Instructions

Please follow them carefully and  
leave this manual with end user

# Important Information

## Before installation, please read this guide carefully.

- A fully qualified and competent person should install this product.
- Observe all local plumbing and building codes.
- Shut off the main water supply.
- Operating temperature maximum 100°C. Please install a warning sign near the product to avoid burning and scalding accidents.
- Select the desired location for the radiator ensuring the chosen wall is both strong enough and suitable to carry the weight of the radiator when full of water.
- The provided fixings are for masonry walls only, if installing on any other surface please check that it will safely support the product and purchase suitable fixings
- When cleaning, never use abrasive cleaners on this product as they will damage the surface. Wipe the surface clean with a soft, damp cloth.
- Manufactured to BS EN 442-1 Radiators and convectors.
- The pipework must be flushed out to remove any debris which can affect the function of this product.
- We update our product information and instructions regularly: for the latest product information and instructions please look up your product by using search bar on the website [www.victorianplumbing.co.uk](http://www.victorianplumbing.co.uk)

---

## Child Safety Notices

Please note that you are 100% legally responsible for your own child's safety at home. Once installed, the radiator can become a hazard for children as this radiator is not designed to support unreasonable extra weight, such as that of a child and the radiator becomes hot during use. We must stress that you should not allow children to climb/grab/play with the radiator or rails, as this can cause accident or injury for the child from heat, falling, or the radiator being pulled off the wall.

---

 
## Check & Inspect

Here at Victorian Plumbing, we pride ourselves on selecting products from reputable manufacturers who manufacture to our exacting standards and quality control measures. All our products are well packaged and should reach you in pristine condition. Please check this product carefully prior to install as we must be notified of any shortages or damage within 30 days of delivery. For further information please see terms and conditions.


## Tools required for installation (not supplied)



Pencil



Tape Measure

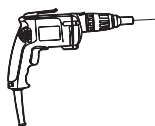

Power Drill



Spirit Level



PTFE Tape



Screwdriver




Adjustable  
Wrench




Gloves

---

## Please check you have all the items below:

 


Wall Plug x2

 

Wall Bracket x2



 
Washer x2



Wall Screw x2



Spacer Screw x2

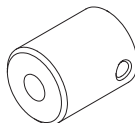


Spacer x2




Bracket Screw x2



 Fixing Plate x2



Floor Plug X8

 


Floor Screw X8



Grub Screw x6



 Plug x1




Air-Vent x1

Diagrams are for illustration purposes only. Your radiator may superficially differ from this drawing however the installation guide steps still apply.


## Step 1:

Screw in the 'Spacers' to the towel radiator using the 'Spacer Screws' and tighten with a screwdriver as seen in below image.

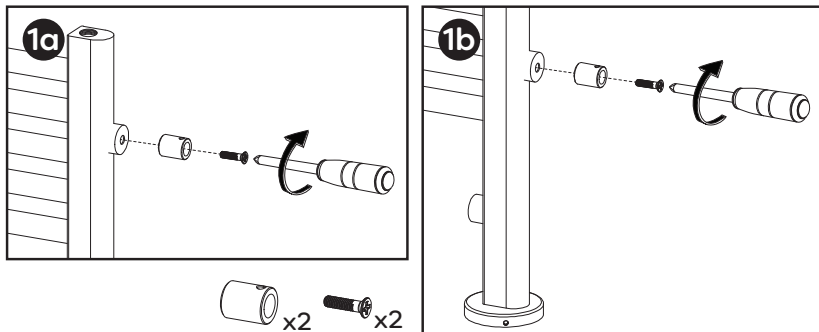

## Step 2:

Position the radiator on your chosen wall and using a spirit level check that the radiator is level both vertically and horizontally. Using a pencil, mark the top & bottom fixing brackets ready for drilling & securing. Drain down the heating system in preparation to connect the radiator.

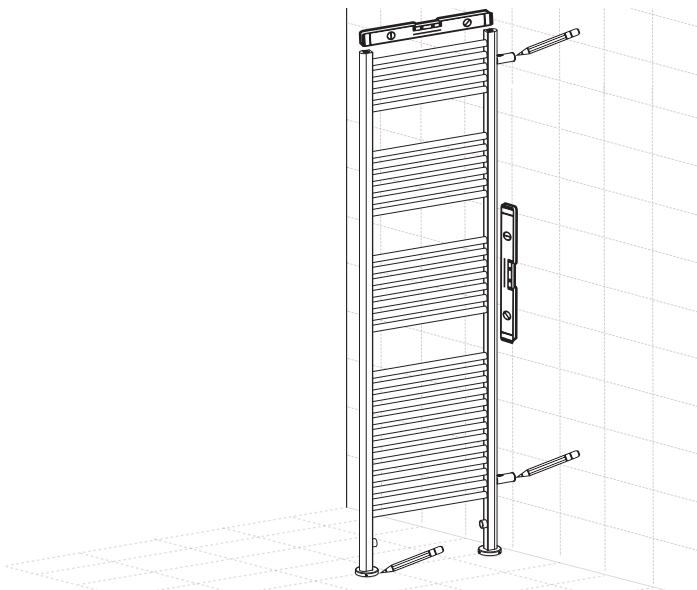


Allow enough room for the installation of valves or thermostatic controls

Before installation place a dust sheet on the floor to prevent losing any small parts.

## Step 3:

Place the 'Fixing Plates' over the markings on the floor, using a pencil mark the points ready for drilling.

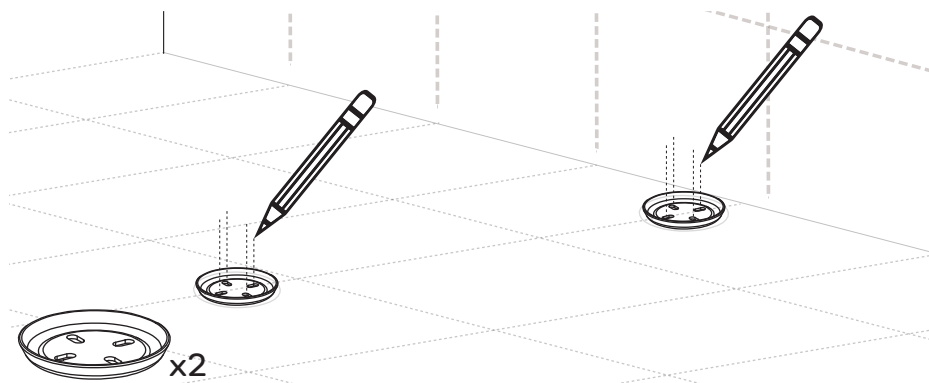


## Step 4:

Place the radiator and fixing plates to one side. Using an appropriate sized drill bit, carefully drill the holes in the wall and floor. Ensuring that there are no hidden pipes or cables behind the wall/floor. Insert the 'Wall and Floor Plugs' provided into the drilled holes.





**Warning:**

Check the chosen wall space for any pipes/cables prior to drilling!


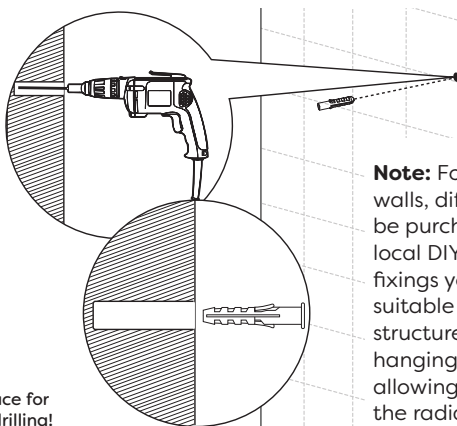


**Note:** For false or studded walls, different fixings can be purchased from your local DIY store. Ensure the fixings you choose are suitable for the type of wall structure to which you are hanging the radiator, also allowing for the weight of the radiator when both empty and filled with water.

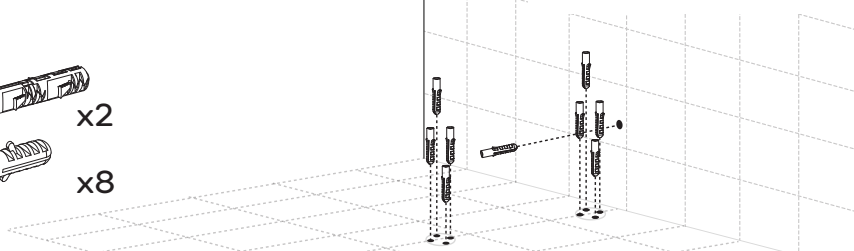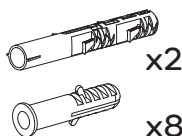



## Step 5:

Place the 'Wall Brackets' and 'Fixing Plates' over the drilled holes. Secure the brackets and plates into position using the 'Wall and Floor Screws' provided. Tighten with a screwdriver.

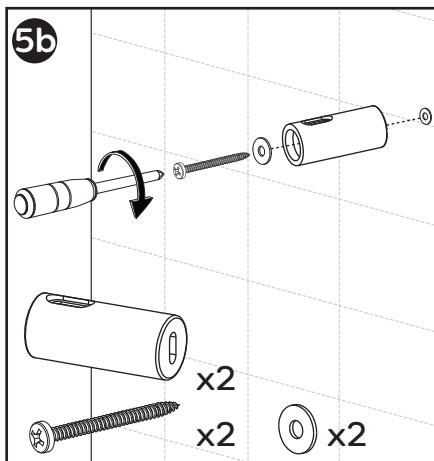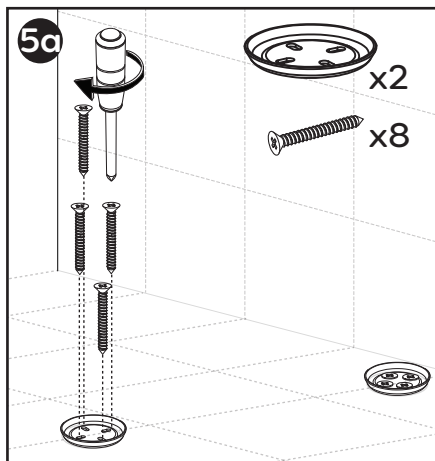



## Step 6:

Mount the radiator to the 'Brackets' and 'Fixing Plates', secure in place using the 'Bracket Screws' and 'Grub Screws' provided, tighten with a screwdriver. Using a spirit level re-check to ensure the radiator is level.

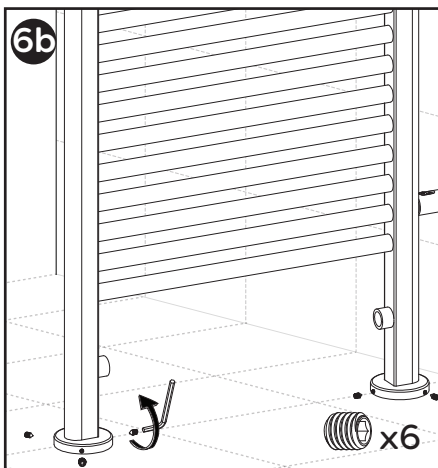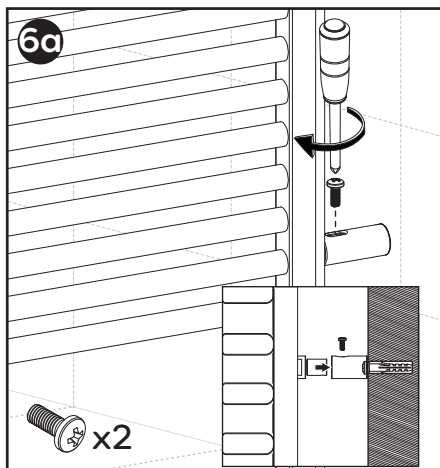

## Step 7:


Wrap PTFE tape around the 'Blank Plug' and 'Vent Plug' threads then proceed to insert into the top of the radiator tightening with a spanner. Repeat the procedure and install the radiator valves in the bottom tapping's.

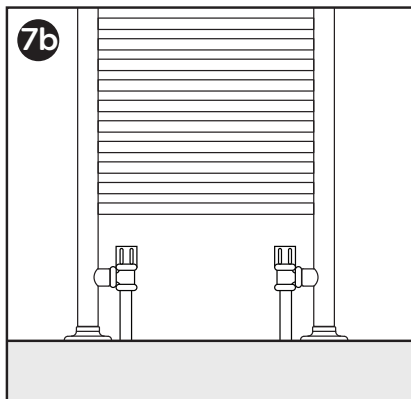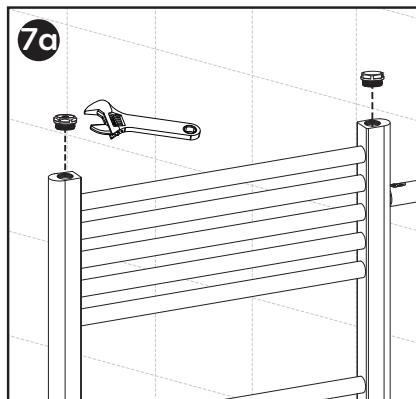

\*Valves Not Included\*

## Step 8:

Switch on the central heating and bring the radiator up to full heat. Check all joints for leaks.

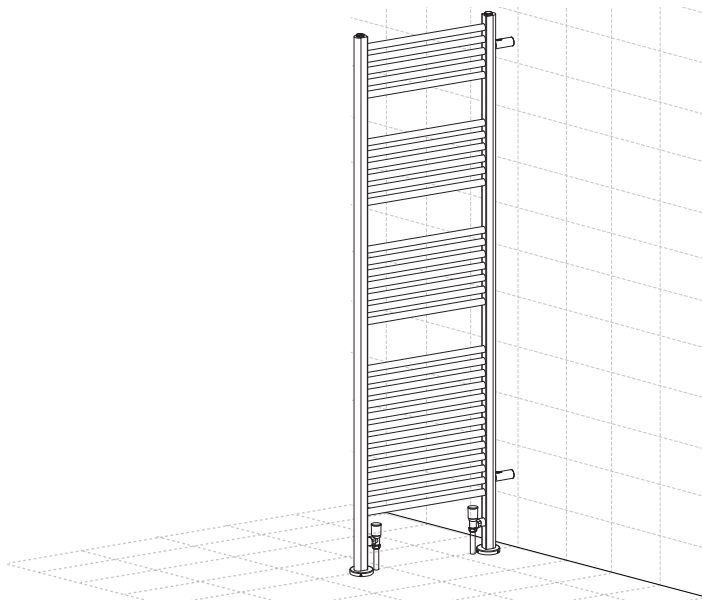

## After installation

- Use a screwdriver/vent key to open the air vent, open the valve and let the water rush into radiator.
- Check all connections for leaks.
- Once water overflows from the air vent, the radiator is fully purged of air.
- Use a screwdriver/vent key to close the air vent, turn on the valve and the radiator is ready for use.

## Recycling and disposal

Please recycle the packaging in accordance with your local government regulations on waste handling, and follow the same advice at the end of the products life.

Product - Steel

Packaging - Cardboard, plastic, steel

## Troubleshooting

When your radiator does not function, knowing the basic radiator troubleshooting can save you from the stress and the hassles of a non-functioning radiator. Here is a guide to solve the most common problems.

Problem	Cause	Action
Cold spots on the radiator	Water is not flowing through the radiator properly	<ul style="list-style-type: none"><li>• Check to make sure there is no trapped air inside the radiator. "Bleed" the radiator to release the air</li><li>• Make sure the valves are fully open to allow water to move freely.</li></ul>
Leak on the radiator	Valve nut is loose	Tighten the valve nut
Sound of whistling or water whooshing	Radiator was not perfectly balanced when it was installed	Re-Balance all radiators on the heating system
Clanking sound	The radiator was installed a space that does not allow for pipe expansion	Re-Check the pipework