


AREZZO

Freestanding Bath Shower Mixer Tap

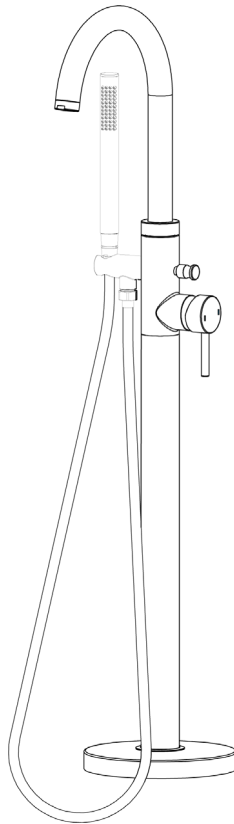

Fitting Instructions

Please follow them carefully and
leave this manual with end user

Before you begin:


1. We recommend that this product is installed by a qualified accredited tradesperson, Victorian Plumbing Ltd. accept no liability for products incorrectly installed, or where the correct testing procedures have not been adhered to, thus resulting in the escape of water and consequential damage.
2. Ensure the incoming mains water supply is switched off prior to commencing the installation.
3. Observe all local plumbing and building codes & regulations.
4. Carefully inspect the product for damage. If any damage is found, immediately contact our Customer Relations Team.
5. Make sure that the two G1/2 male connectors are pre-installed under the floor.

Installation:

1. Prepare a circular hole in the floor 100mm (4") minimum, 150mm (6") maximum, 75mm (3") deep.
2. Decorate the floor. (Pay attention to the size of the holes.)
3. Unscrew and take off lock nut **(3)**, push decorative cover **(1)** onto the lower position of tube **(2)**, then screw the lock nut **(3)** on to the thread as far as it will go.
4. Screw the mounting flange **(4)** onto the tube.
5. Tighten screw the lock nut **(3)** on to the mounting flange **(4)**.
6. Connect cold / hot inlet pipe **(7)** to two G1/2 male connectors, which is water supply pipe.
7. Use screws **(5)** and expansion screws **(6)** to fix Flange **(4)** to the floor.
8. Push the decorative cover **(1)** onto the floor.
9. Screw Outlet pipe **(8)** to Tube **(2)**, tighten Round Screw nut **(9)** by hand (**Note**; make sure the two plastic washers **(10)** are in place).
Fit the hose **(15)** to the outlet pipe, and the handset **(12)** to the hose, ensuring sealing washers **(13)** are in place.
10. Open the hot and cold water supply, check all the joints and connections for any leakage before use.

Aftercare:


When installing or using tools, extra care must be taken to avoid damaging the finish or fitting. To maintain the appearance, please ensure it is cleaned regularly using a clean soft damp cloth only. Abrasive cleaners or detergents must not be used as they may cause surface deterioration.

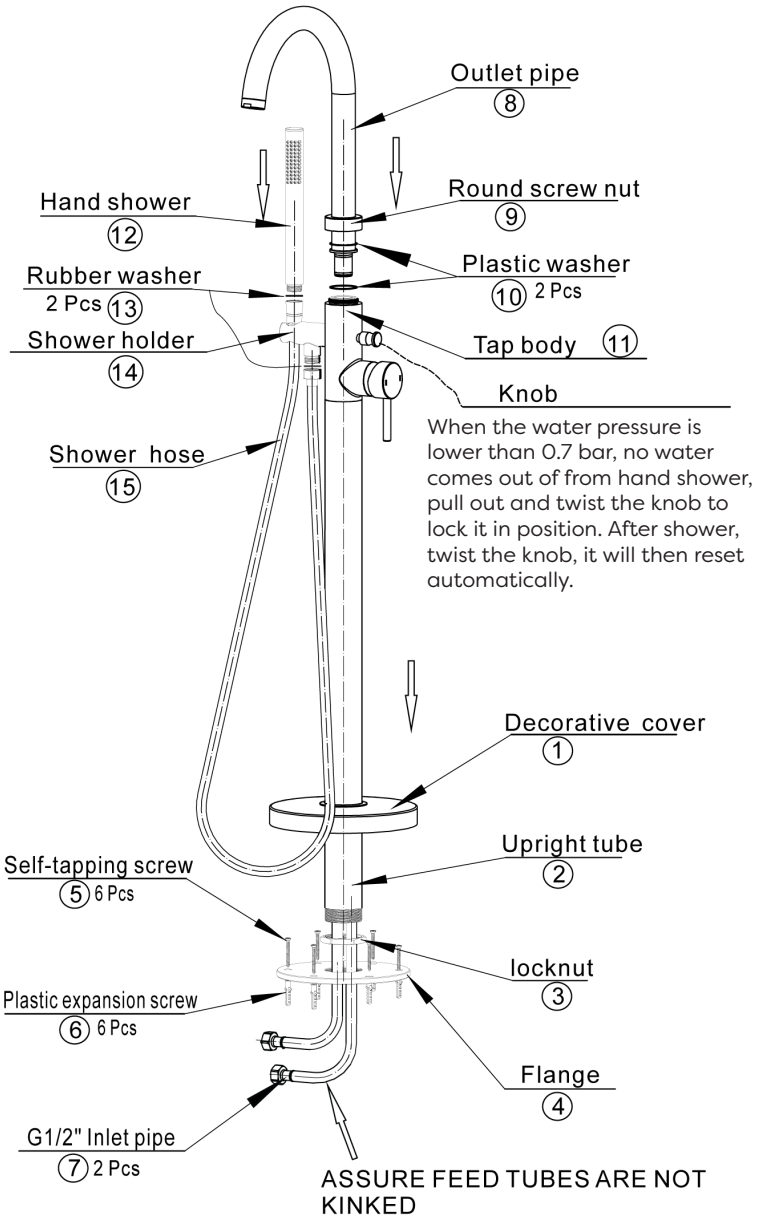

Diagrams are for illustration purposes only. Your shower head and arm may superficially differ from this drawing however the installation guide steps still apply.

Flexible Connecting Pipes:

When installing the flexi-pipes to the household pipework. Special care must be taken to ensure they do not bend sharply causing a kink or twist. Failure to do so may result in poor performance and damage to the flexi-pipes.

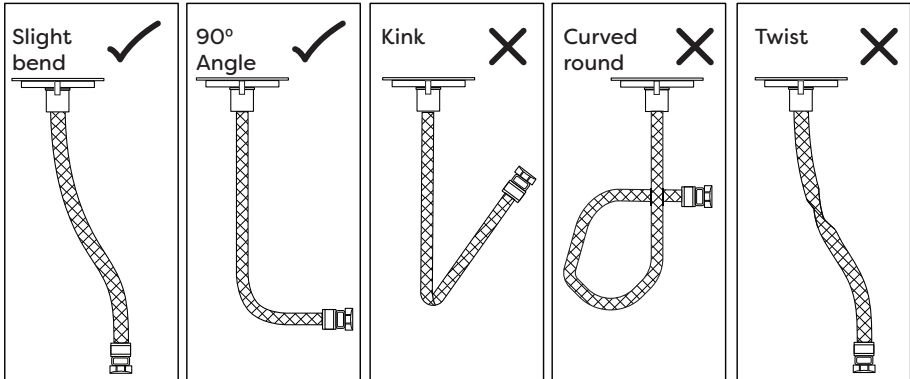

Troubleshooting

FAULT	POSSIBLE CAUSE
Taps do not turn on	<ol style="list-style-type: none"> 1. Closed isolation valve. 2. Mains water supply turned off.
Water dripping from taps	<ol style="list-style-type: none"> 3. This is normal for a short time after using the taps. 4. If water continues to drip, possible build up of limescale in the cartridge valve.
Low or no flow rate	<ol style="list-style-type: none"> 5. Partially closed isolation valve. 6. Instantaneous water heater cycles on and off as flow rate pressure is too low. 7. Head of water is below the minimum distance required. 8. Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes. 9. Airlock or partial blockage in the supply pipework.