


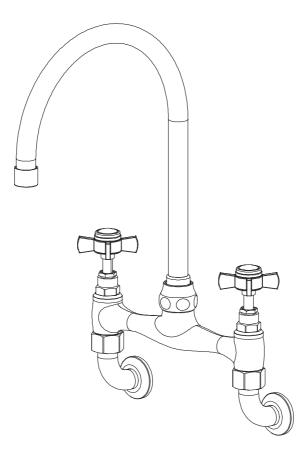

Traditional Wall/Deck Mounted Bridge Mixer Tap




Fitting Instructions

Please follow them carefully and leave this manual with end user

Before you begin:

- 1. We recommend that this product is installed by a qualified tradesperson, Victorian Plumbing Ltd. accept no liability for products incorrectly installed, or where the correct testing procedures have not been adhered to, thus resulting in the escape of water and consequential damage.
- 2. Ensure the supply pipes have been thoroughly flushed to remove any debris.
- 3. Ensure the incoming mains water supply is switched off prior to commencing the installation.
- 4. For the following instructions, it is assumed that the in-wall/floor plumbing for the hot & cold outlet pipes has already been prepared.
- 5. Observe all local plumbing and building codes & regulations.
- 6. Unpack the product then read these instructions before proceeding. Inspect the product for damage. If any damage is found, contact our Customer Relations team.


Wall installation:

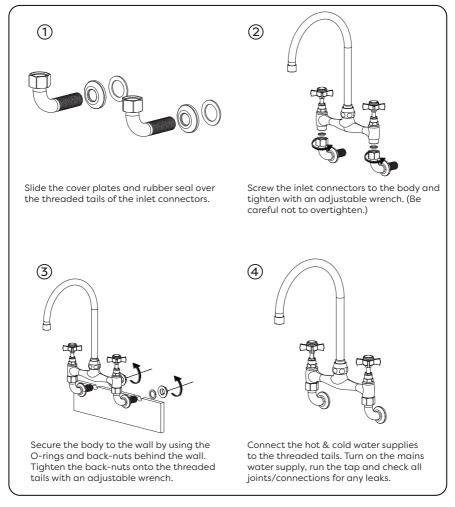

Note: Diagrams are for illustration purposes only. Your tap may differ from these drawings however the installation guide steps still apply.

plumbing.co.uk

Deck installation:

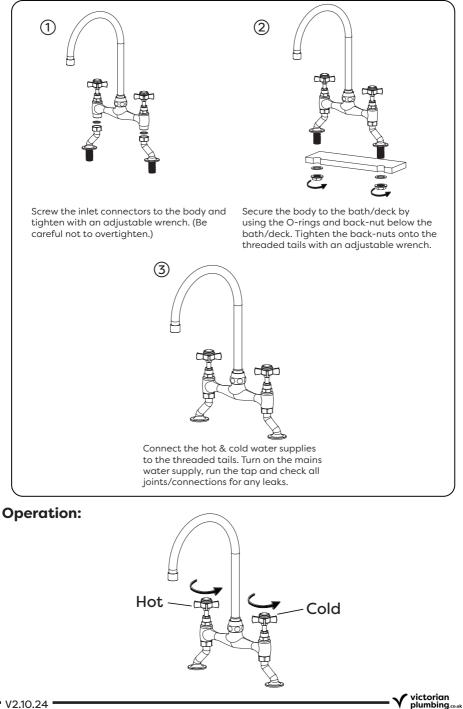

Aftercare:

Always clean the surface of tap to keep it bright. **Attention:** please do not use inappropriate tools such as sharp brushes, rough sponges, scouring pads or corrosive detergent to clean the tap. Please clean the shower valve by wet cloth and soapy water. Then rinse the soap out with clean water and dry with a soft cotton cloth.

FAULT	POSSIBLE CAUSE
Taps do not turn on	Closed isolation valve.
	Mains water supply turned off.
Water dripping from taps	 This is normal for a short time after using the taps.
	If water continues to drip, possible build up of limescale in the cartridge valve.
Low or no flow rate	Partially closed isolation valve.
	Instantaneous water heater cycles on and off as flow rate pressure is too low.
	Head of water is below the minimum distance required.
	 Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.
	Airlock or partial blockage in the supply pipework.

Troubleshooting

www.victorianplumbing.co.uk

victorian plumbing.co.uk