

**VO0004RC** 

Built-in shower mixer

The manufacturer reserves the right to make technical modifications without prior notice. Or visit our web-site at www.crosswater.co.uk For any further information please contact Crosswater on: 0845 873 8840

Engineering Technician EngTech status with the Engineering Council (UK). in membership with the Institute for five years as a Member MIPHE) gain they have the relevant experience as well. Those with S/NVQ Level 3 can (once

Certificate, which only those attaining Level 3 or equivalent can reach as long as

Reaching Level 3 has other advantages. The Institute runs a Master Plumber reach a minimum of Level 3.

Heating Engineering, and the industry as a whole recommends that all plumbers your own business, this is the level to reach. The Institute of Plumbing and you want to one day set up

domestic, commercial and industrial plumbing along with aspects such as gas - if plumbing to a satisfactory level. Level 3 is more comprehensive and deals with you the foundation you need for a career in plumbing and teach you domestic hold S/NVQ Level 2 as basic with Level 3 as the preferred level. Level 2 will give The S/NVQ qualification works in levels. All recently qualified plumbers should many students organise it themselves.

working plumber. Colleges should help students find a work placement, although classroom/purpose built training facility and work based experience with a Scotland). These qualifications are made up of theory and practical work in the Qualification (MVQ) route (Scottish National Vocational Qualification - SNVQ - in At present, to be a plumber you need to follow the National Vocational

### THE QUALIFICATIONS

in your area please visit the Institute of Plumbers website - www.iphe.org.uk. credentials can be required. For further information or to find a qualified installer For a claim made under our warranty written certification of your installers guarantee may be considered invalid.

Level 3. Should the installation be completed by a non-qualified person then the Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) This product should only be fitted by a qualified plumber to NVQ (National



# INTRODUCTION

Please read these instructions carefully and keep in a safe place for future reference.

The installation must comply with regulations of the Local Water Authority as contained in their bylaws. All of the taps in this range are double flow (the hot and cold water are separated) and should therefore be supplied with hot and cold water at balanced pressures, both from the tank or both from the mains (via a combination boiler for example). If the taps are not supplied at balanced pressures then the tap will not function correctly. It will also be necessary to fit non-return valves on both hot and cold feeds. It is very important that all pipe work is flushed thoroughly after installation to avoid damaging the

#### Standard specifications

- 1. Recommended working pressure: ..... 2. Maximum test pressure: ..... 3. Maximum hot water temperature : ......
- 4. We recommend installing filters to this product.
- 5. Warning
- if the above mentioned conditions (see points 1,2,3,4) are not observed, the product may not correctly work or not work
- On receipt of this product the chrome finish must be checked for blemishes. Defects notified after fitting may be regarded as damage resulting from the installation process, incorrect maintenance or misuse and as a result not be claimable under

# <u>Approvals</u>

All products are manufactured using materials tested and approved under the Water Bylaws Scheme and comply with requirements of British Standard 5412:1996 where applicable

## Preparation and bylaw requirements

These taps are double flow. Water bylaws require that where the hot water is supplied from a tank and cold from the mains, non return valves are fitted on both hot and cold pipes as dose as possible to the tap. These are not supplied. Where combination boilers are fitted it is only necessary to shut off the incoming mains and turn the boiler off and non return


#### WARNING


- Installation Performed By Qualified Personnel Only!
- Clean Carefully The Water Pipes Before Installing The Tap.



# **DIMENSIONS**

**VO004RC** 

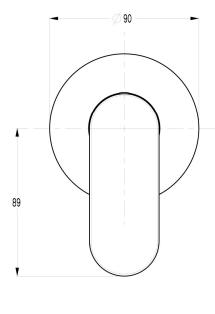

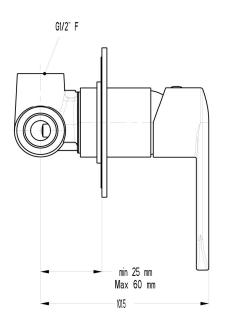

pipes are empty (the hot water storage cylinder airways remains full). Where combination boilers are fitted it is only necessary to turn off the boiler and shut off the Lowest hot and cold taps in the house and allow to run until the cold storage tank and First shut off your water heating system then, with you remains stop cock closed, open

Fitting isolating valves to the inlet feeds is recommended for ease of maintenance. the incoming mains.



Flush the piping with plenty of water prior to installation. Remember to turn off the mains water supply before connecting to any existing pipe work.

sufficient to accommodate the Mixer body, whose supply pipe work and the outlet pipe work. Mark an opening can operate, determine the route for the incoming cold/hot Decide on a suitable position for the Mixer where all users

• Install the Hot and Cold Supply (2). Use the upper outlet dimension is to be smaller than concealing plate (1).

remove the Shroud (4), insert the concealing plate (5) wall is not completed finished. When Tiles have set, • Keep the Plastic Shroud (3) on the Built-in Mixer till the way for head shower.

smooth side against the wall. Fit the Lever Assembly in

place hand tighten it to secure the concealing plate.


×


CLEANING


or peel.


photographic chemicals can cause the surface to go black disinfectants, denture cleaners, hair dyes, wine making and strong substances such as household cleaners, cloth. All finishes are vulnerable to acid attack and some followed by rinsing with clean water and drying with a soft They should be cleaned only with warm soapy water nevertheless care should be taken when cleaning them. The chrome plate we use on our taps is very durable,

7

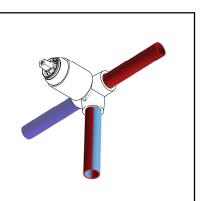


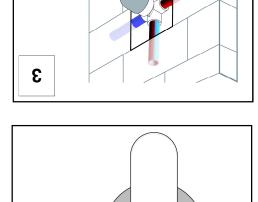

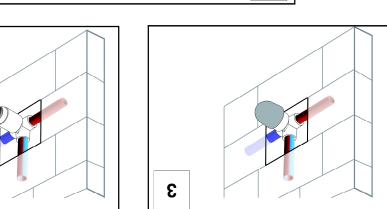

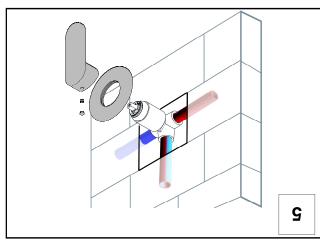

**MAINTENANCE VO0004RC** 

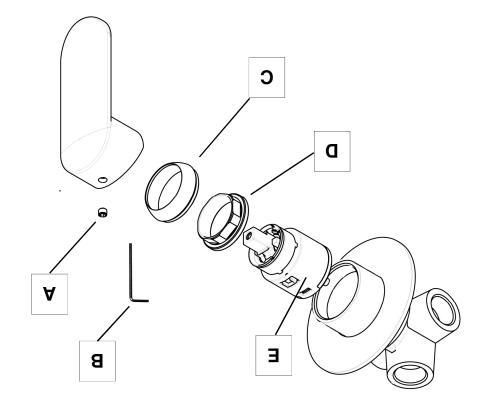

The concealed cartridge should give trouble free service, but in the event CLEANING THE CARTRIDGE

cartridge, retaining nut, cartridge cover followed by the handle. lightly grease the seals (only use silicone grease) and replace the and make sure that any trapped debris have been removed. Dry and remove the cartridge (E). Wash the cartridge with clean running water carefully using a correct size spanner unscrew the retaining nut (D) an d not remove it. Take off the handle, unscrew the cartridge cover (C) and First shut off the water supply to the tap. Pull out the cap (A) from the handle and with an allen (B) key loosen the grub screw in handle, but do of any problems, servicing is straight forward.



9