
INSTALLATION INSTRUCTIONS

xnatemseoro

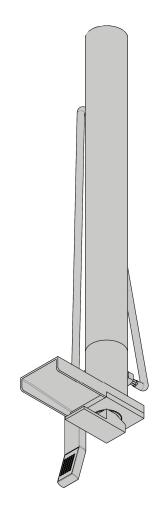

M2412FC

EXTERNAL STANDING BATH MIXER

For any further information please contact Crosswater on: **0845 873 8840**Or visit our web-site at www.crosswater.co.uk

The manufacturer reserves the right to make technical modifications without prior notice.

reach a minimum of Level 3. Reaching Level 3 has other advantages. The Institute runs a Master Plumber Certificate, which only those attaining Level 3 or equivalent can reach as long as they have the relevant experience as well. Those with S/NVQ Level 3 can (once in membership with the Institute for five years as a Member MIPHE) gain Engineering Technician EngTech status with the Engineering Council (UK).

you want to one day set up your own business, this is the level to reach. The Institute of Plumbing and Heating Engineering, and the industry as a whole recommends that all plumbers

many students organise it themselves. The S/NVQ qualification works in levels. All recently qualified plumbers should hold S/NVQ Level 2 as basic with Level 3 as the preferred level. Level 2 will give you the foundation you need for a career in plumbing and teach you domestic plumbing to a satisfactory level. Level 3 is more comprehensive and deals with domestic, commercial and industrial plumbing along with aspects such as gas - if domestic, commercial and industrial plumbing along with aspects such as gas - if

At present, to be a plumber you need to follow the National Vocational Qualification (NVQ) route (Scottish National Vocational Qualification - SNVQ - in Scotland). These qualifications are made up of theory and practical work in the classroom/purpose built training facility and work based experience with a working plumber. Colleges should help students find a work placement, although

THE QUALIFICATIONS

guarantee may be considered invalid.

For a claim made under our warranty written certification of your installers credentials can be required. For further information or to find a qualified installer in your area please visit the Institute of Plumbers website - www.iphe.org.uk.

This product should only be fitted by a qualified plumber to NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3. Should the installation be completed by a non-qualified person then the



INTRODUCTION

Please read these instructions carefully and keep in a safe place for future reference.

General Installation Requirements

The installation must comply with regulations of the Local Water Authority as contained in their bylaws. All of the taps in this range are double flow (the hot and cold water are separated) and should therefore be supplied with hot and cold water at balanced pressures, both from the tank or both from the mains (via a combination boiler for example). If the taps are not supplied at balanced pressures then the tap will not function correctly. It will also be necessary to fit non-return valves on both hot and cold feeds. It is very important that all pipe work is flushed thoroughly after installation to avoid damaging the ceramic disc.

Standard specifications

- 4. We recommend installing filters to this product.
- 5. Warning:
- if the above mentioned conditions (see points 1,2,3,4) are not observed, the product may not correctly work or not work at all.
- On receipt of this product the chrome finish must be checked for blemishes. Defects notified after fitting may be regarded as damage resulting from the installation process, incorrect maintenance or misuse and as a result not be claimable under the warranty.

<u>Approvals</u>

All products are manufactured using materials tested and approved under the Water Bylaws Scheme and comply with requirements of British Standard 5412:1996 where applicable.

Preparation and bylaw requirements


These taps are double flow. Water bylaws require that where the hot water is supplied from a tank and cold from the mains, non return valves are fitted on both hot and cold pipes as dose as possible to the tap. These are not supplied. Where combination boilers are fitted it is only necessary to shut off the incoming mains and turn the boiler off and non return valves are not required.

WARNING

- Installation Performed By Qualified Personnel Only!
- Clean Carefully The Water Pipes Before Installing The Tap.

DIMENSIONS

WS415FC

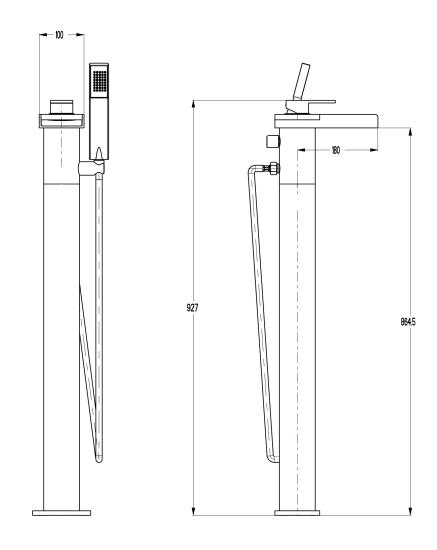



D

C

A

В

the handle.

is straight forward.

CLEANING THE CARTRIDGE

cartridge, retaining nut, cartridge cover followed by

the seals (only use silicone grease) and replace the debris have been removed. Dry and lightly grease running water and make sure that any trapped the cartridge (E). Wash the cartridge with clean evomer unscrew the retaining nut (D) and remove eartridge cover (C) and carefully using a correct size key (B) loosen the grub screw in handle, but do not remove it. Take off the handle, unscrew the nells mm2,5 ns diw bns elbnsd eth mori (A) qso First shut off the water supply to the tap. Pull out the

service, but in the event of any problems, servicing The concealed cartridge should give trouble free

9 7 120

63

3 9

WS415FC

ANAMATAN

3

cleaners, hair dyes, wine making and photographic chemicals can substances such as household cleaners, disinfectants, denture a soft cloth. All finishes are vulnerable to acid attack and some strong warm soapy water followed by rinsing with clean water and drying with should be taken when cleaning them. They should be cleaned only with

cause the surface to go black or peel.

The chrome plate we use on our taps is very durable, nevertheless care

CLEANING


9

×

x najewseono

- At last insert the cover (7) screw (6), please tighten well.
- Then, screw well the flange (5) on the connection box with the care to tighten well.
- set, screw up the flexi tails (3) to the connection 3/8" (4), taking necessary to insert screw and flexible 2). When floor tiles have
- the plate can lay down on ready floor (foresee a sufficient window • The frame must be built in the floor deep (max 20mm) so that
- to connect at the connection box (1). • Arrange two F 1/2" pipe under the floor (cold and warm water)
- - Firstly verify correct position where install the standing mixer.

Flush the piping with plenty of water prior to installation.

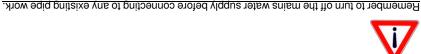

Fitting isolating valves to the inlet feeds is recommended for ease of maintenance.

the incoming mains. Where combination boilers are fitted it is only necessary to turn off the boiler and shut off pipes are empty (the hot water storage cylinder airways remains full). the Lowest hot and cold taps in the house and allow to run until the cold storage tank and First shut off your water heating system then, with you remains stop cock closed, open

M2412EC