


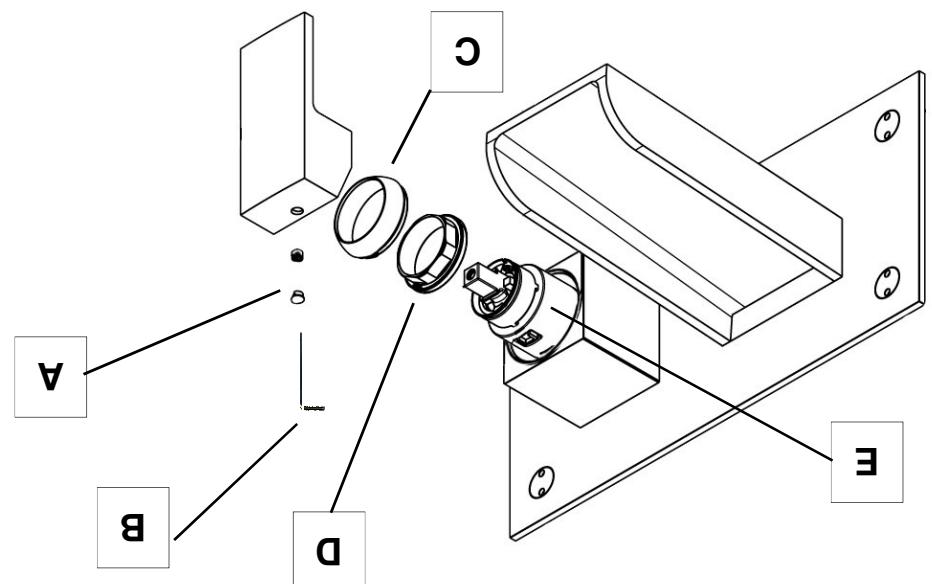

The concealed cartridge gives trouble free service, but in the event of any problems, servicing is straightforward. First shut off the water supply to the tap. Pull out the cap (A) from the handle and with an allen key 2,5mm (B) loosen the grub screw in handle, but do not remove it. Take off the handle and unscrew the cartridge cover (C) and carefully using a correct size spanner unscrew the retaining nut (D) and remove the cartridge (E). Wash the cartridge with clean running water and make sure that any trapped debris have been removed. Dry and lightly grease the seals (only use silicone grease) and replace the cartridge, retaining nut, cartridge cover followed by the handle.

CLEANING THE CARTRIDGE



The chrome plate we use on our taps is very durable, nevertheless care should be taken when cleaning them. They should be cleaned only with warm soapy water followed by rinsing with clean water and drying with a soft cloth. All finishes are vulnerable to acid attack and some strong substances such as household cleaners, strong disinfectants, denture cleaners, hair dyes, wine making and photographic chemicals can cause the surface to go black or peel.

CLEANING

WS121WNC

MAINTENANCE



- Decide on a suitable position for the Mixer where all users can operate; determine the route for the incoming cold-hot supply pipe work.
- Mark an opening sufficient to accommodate the Mixer body, whose dimension like the template (1).
- Screw up the two flexi tails (2) to the mixer body, taking care to tighten well.
- Connect the flexi tails (2) at the Hot and Cold Supply.
- Screw the plate (3) using the special supplied key.

Remember to turn off the mains water supply before connecting to any existing pipe work. Flush the piping with plenty of water prior to installation.



Fitting isolating valves to the inlet feeds is recommended for ease of maintenance. Where combination boilers are fitted it is only necessary to turn off the boiler and always remains full. First shut off your water heating system then, with you remains stopcock the cold storage tank and pipes are empty (the hot water storage cylinder always remains full).

