SOFT CLOSE HINGE

ASSEMBLY INSTRUCTIONS

Wipe around the pan, cistern, seat and cover with a soft damp cloth.

DO NOT use scouring powder, scouring pads or abrasive cloths as this may scratch the surface of the seat.

The seat should be cleaned using warm soapy water.

The hinges should be cleaned using soap, or a mild detergent.

After cleaning, the hinges should be rinsed with

clean water and dried.


Never use bleach, concentrated cleaners or acids on the hinges as this will cause discolouring and pitting.

Take care not to splash the hinges when using bleach in the toilet bowl.

Due to continuing product development, we reserve the right to update and amend technical details without prior notice.

For more information visit www.celmac-wirquin.co.uk



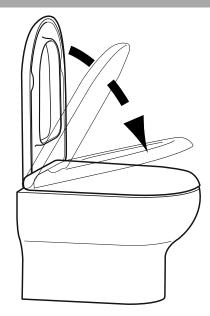

IMPORTANT

Before starting work, please...

Read these instructions carefully.

Remove all packaging from the pottery and toilet seat and check for surface damage or defects. No responsibility can be accepted for obvious defects after installation.

Prepare a clear working area for seat assembly, ensuring that all products are **prevented from being scratched**.

Read the care label attached to the seat.


Ensure that the WC is fully **assembled** and **secured** in position **before** attempting to fit the seat.

WARNING


Failure to follow the fitting instructions correctly may result in an unstable installation and may invalidate our guarantee.

| Code: | GIN80XX |
|----------|-----------|
| Date: | July 2017 |
| Version: | 3 |




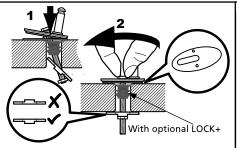


1. Assemble the hinge and gasket and slide the tab and bolt through the pan until it engages on the underside. Finger tighten only. Ensure the tab is the correct way up.

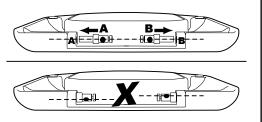


2. Push the hinge pins into the seat/cover lugs. Please ensure that the pins marked A&B are in the correct side. The holes in the pins should line up correctly.

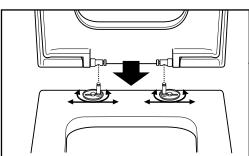


3. Lower the seat/cover onto the pan, engaging the hinge pins with the hinge bases. The position of the hinge bases may need to be adjusted to allow this.

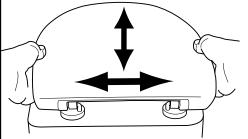


4. Adjust the hinges to centralise the seat on the pan and to allow the correct degree of seat/cover overhang at the front.

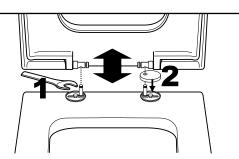


5. Once adjusted, remove the seat/cover and tighten the bases with a spanner or screwdriver. Clip the hinge covers in place before replacing the seat/cover. Care should be taken not to overtighten the fixings.

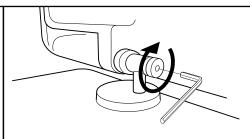


6. Use the hexagon key to tighten the hinge pins. Check that the seat and cover are secure before use.

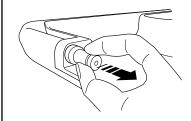


  To adjust the speed that the seat and cover fall, remove the hinge pins, rotate them and replace them as in the illustrations to the right.





 Rotating so that the hole in the hinge pin is further from the front of the seat will make the seat and cover close more slowly.



Rotating so that the hole in the hinge pin is closer to the front of the seat will make the seat and cover close more quickly.



