
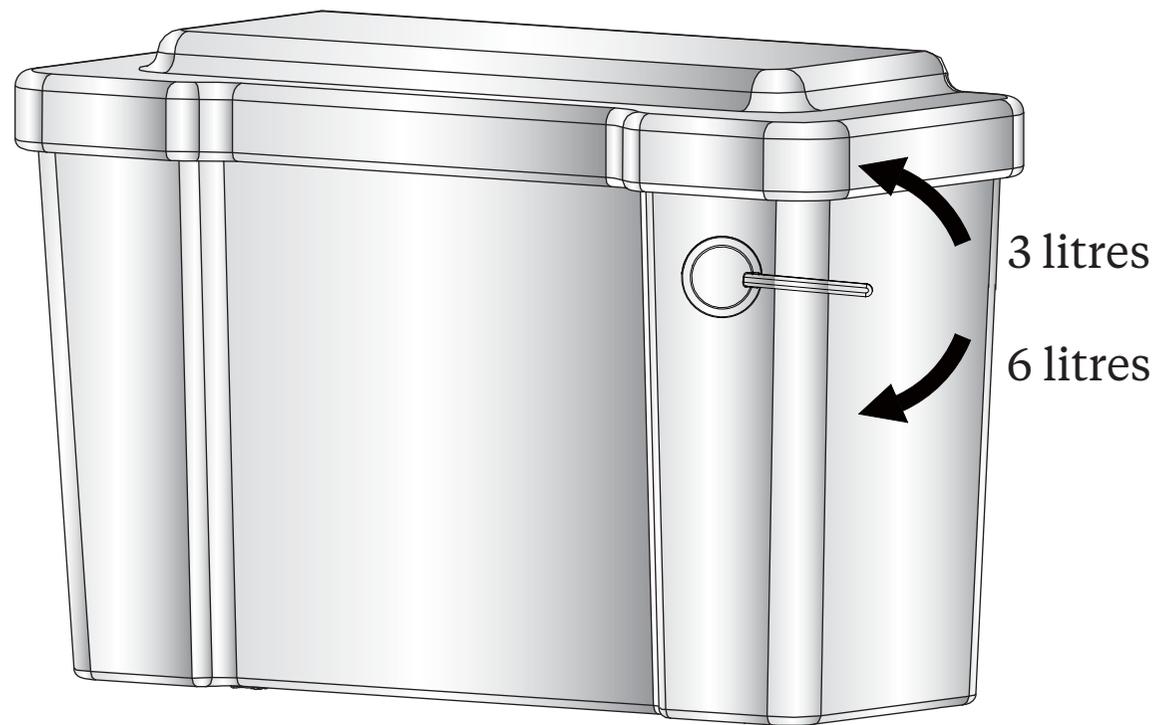
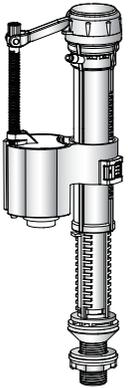
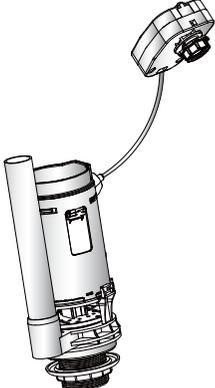


All WC's come with a 3/6 litre flush as standard which can be reduced to a 2.5/4.5 litre flush for the slimline cisterns
On the Close Coupled WC you must press the lever down lightly for the 6 litre flush and lightly lift the lever for the 3 litre flush

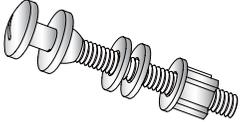

Please note that it is imperative that there are no loops or kinks in the yellow tube when installed and that the lever is not operated with excessive force as this will damage the cable inside the tube that lifts and lowers the flush valve causing the flush to fail beyond repair


Parts supplied:

| | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
| Inlet Valve | Flush Valve | Bolt | Rubber Doughnut | Fixing Nut |
| 1x | 1x | 2x | 1x | 1x |
| | |  |  |  |
| | | Lever | Plastic Washer | Cone Washer |
| | | 1x | 1x | 1x |
| | | |  | |
| | | | Flush Cone | |
| | | | 1x | |

- Please read these instructions carefully to avoid damage to the valves, and to ensure correct installation.
- Do not use bleach or bleach based cleaning products in the cistern, as these will cause damage to the seals. We cannot be held responsible or liable for any failure which results from the use of bleach based products.
- Water temperature range +2C to +45C.
- Water pressure 0.2 to 8 bar.


1: Inlet Valve scale and adjustment settings

6L/3L

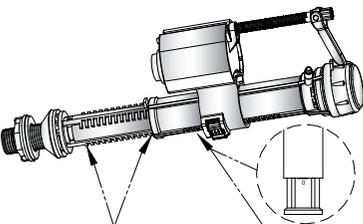

Exposed "12" steps "0" scale

4.5L/2.6L

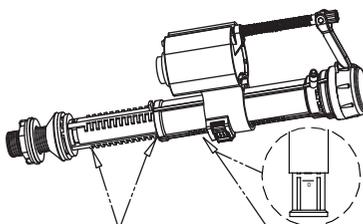


Exposed "12" steps "1" scale

Note:
The inlet valve is preset for 6L full flush and 3L half flush. The above diagram indicates the correct setting for 6L/4.5L full flush and 3L/2.6L half flush. For adjustment method, please refer to the right diagram.

A: Major water level adjustment


①

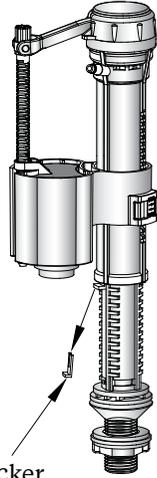

Locker


Take off locker

②

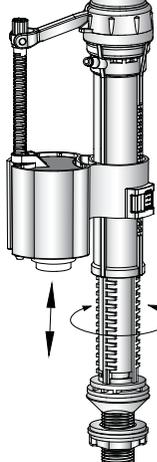

Loosen the inlet body by turning slightly anti-clockwise, Adjust it up or down to correct position and tighten clockwise.






③

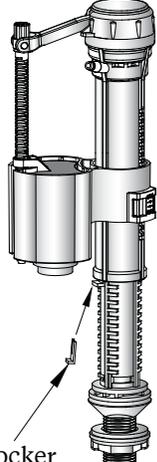



Locker

Re-insert the locker




B: Minor water level adjustment

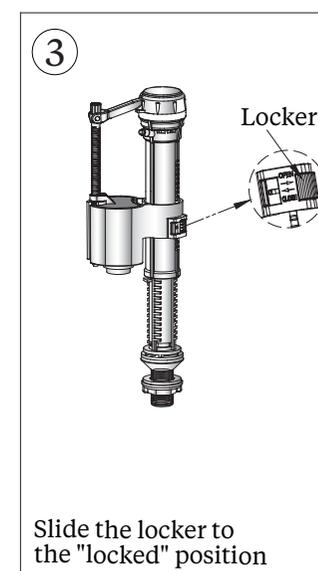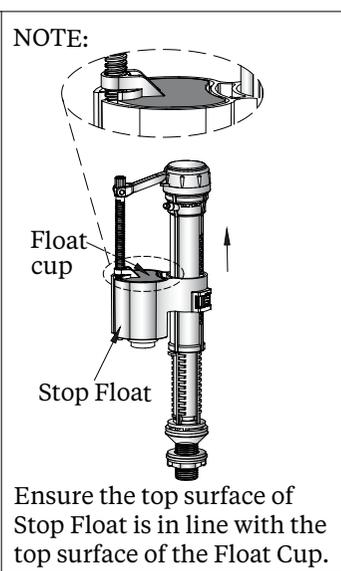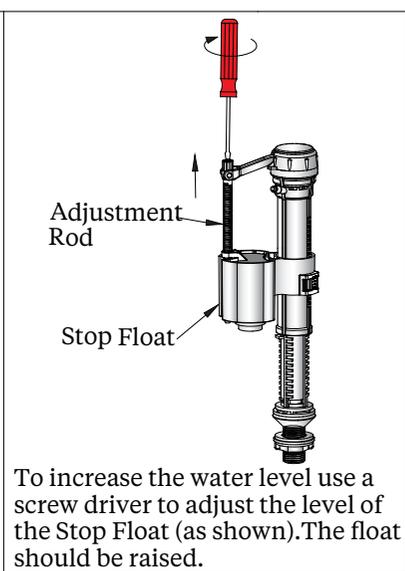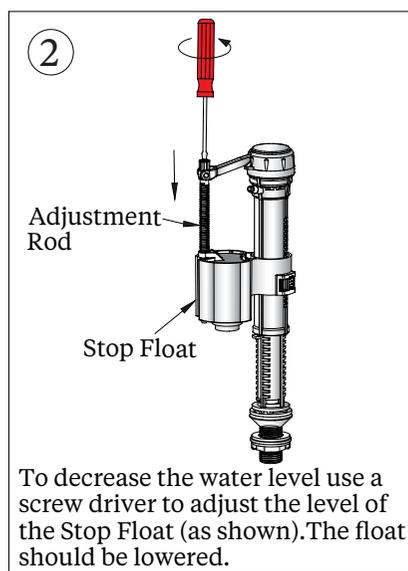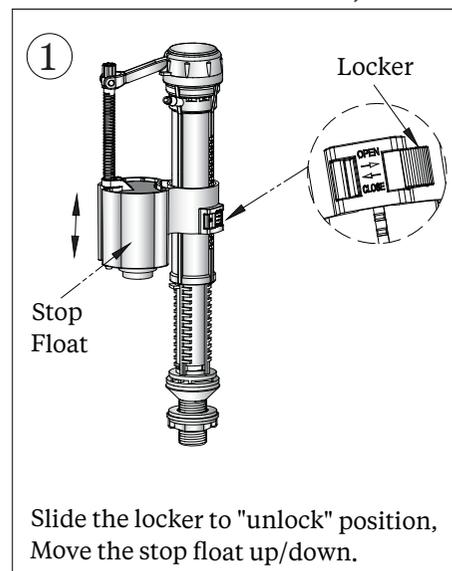

2: Inlet Valve installation

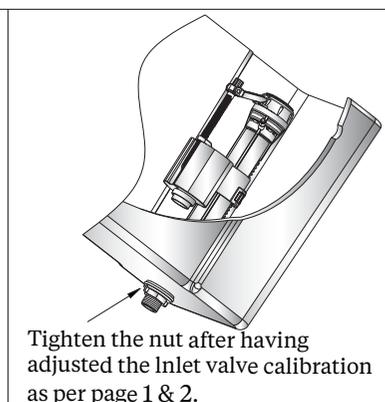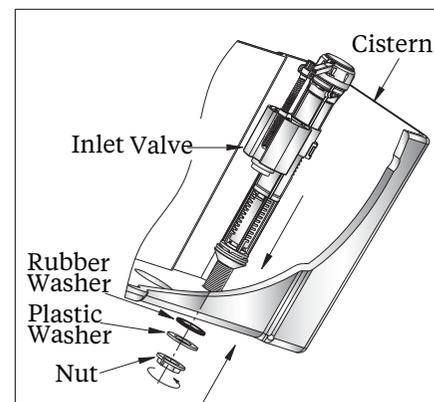

3: Filter cleaning (Please clean periodically)

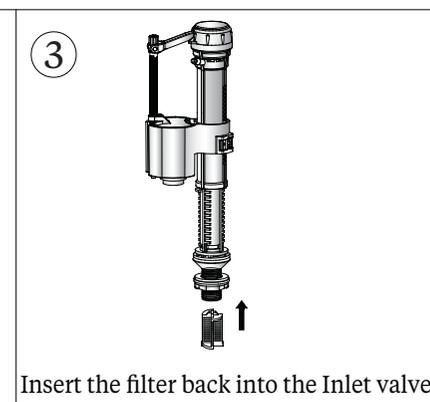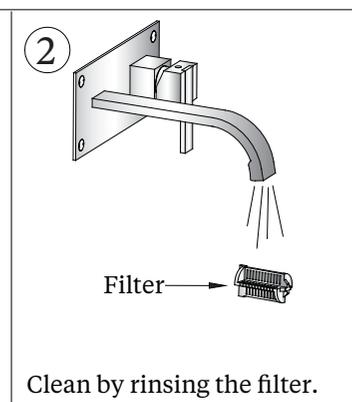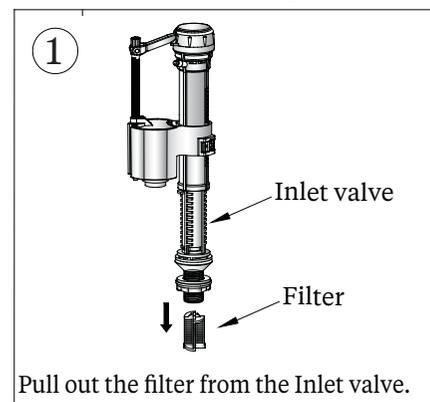

4: Inlet Valve trouble shooting

| Problem | Reason | Solution |
|---------------------------|---|---|
| Incorrect water level | Incorrect adjustment. | Adjust the Water level correctly as per page 1 & 2. |
| Inlet Valve does not work | Water supply is closed. | Open the water supply |
| | The filter is blocked. | Clean the filter. |
| | The Stop Float has been over adjusted beyond its operational range. | Reconnect the Adjustment Rod, and adjust the water level as per A on page 1 . |
| Leakage | The Inlet Valve fixing nut has not been tightened. | Tighten the nut. |

Flush Valve Installation And Problem Solving


1: Flush Valve scale and adjustment setting

Note: The Flush Valve is preset for 6L full flush and 3L half flush.

The diagram "A" below indicates the correct setting for 6L full flush and 3L half flush.

The diagram "B" below indicates the correct setting for 4.5L full flush and 2.6L half flush.

A

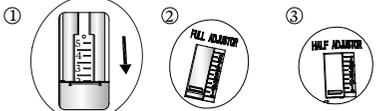


- ① Half Flush Float : should be set on the 2.5 mark
- ② Full Flush Adjustor : should be set on the 1.5 mark
- ③ Half Flush Adjustor : should be set on the 1 mark

B



- ① Half Flush Float : should be set on the 3 mark
- ② Full Flush Adjustor : should be set on the 3 mark
- ③ Half Flush Adjustor : should be set on the 1.5 mark

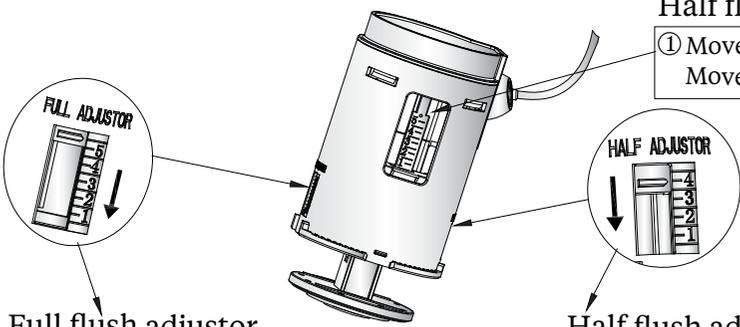

Half flush float

- ① Move float down, flush volume increases.
Move float up, flush volume decreases.


Full flush adjustor

- ② Move adjustor down, flush volume increases.
Move float up, flush volume decreases.

Half flush adjustor

- ③ Move adjustor down, flush volume increases.
Move float up, flush volume decreases.

2: Flush Valve installation

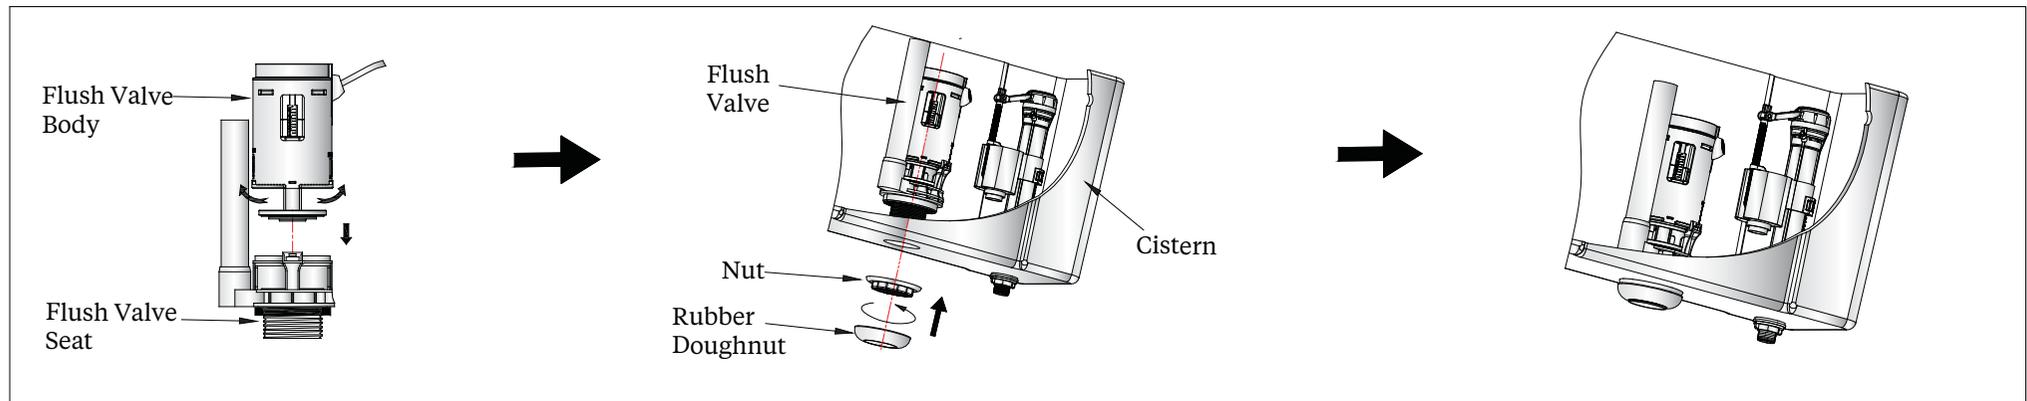


3: Flush Valve trouble shooting

| Problem | Reason | Solution |
|--|---|---|
| Leakage | <ol style="list-style-type: none"> 1. Incorrect installation. 2. Flush valve seat does not fit flush valve body. 3. Flush valve body is stuck. | <ol style="list-style-type: none"> 1. Install again according to the correct installation procedure. 2. Install again. 3. Disconnet and wash flush valve body. |
| No flush, low flush or half flush volume | Cable is distorted. | Remove kinks or sharp bends in the cable. |
| Half flush water level is too high or too low. | Water level is adjusted incorrectly. | Adjust water level. |

Close Coupled Cistern & Flush Level Installation

1: Install Close Coupled Cistern To Pan

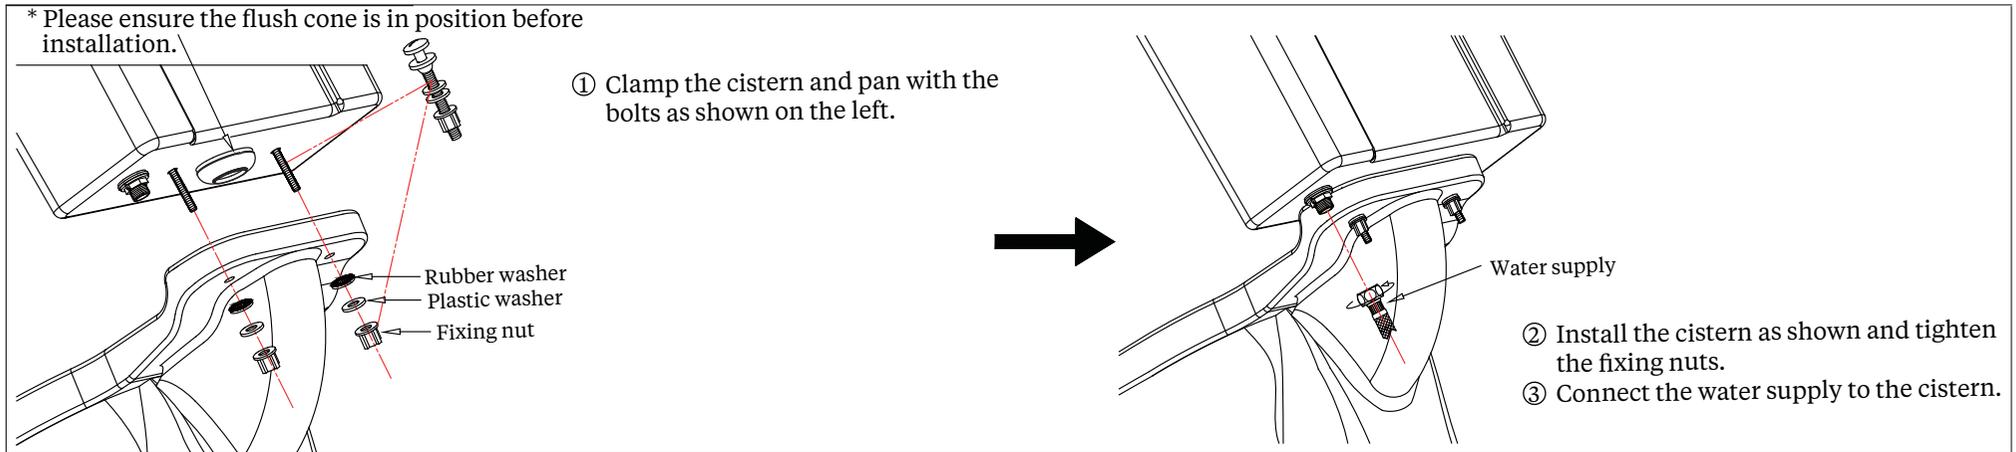

2: Install Lever

