


# Aquacapri Spa Shower set


## Fitting instructions



### Pack contents

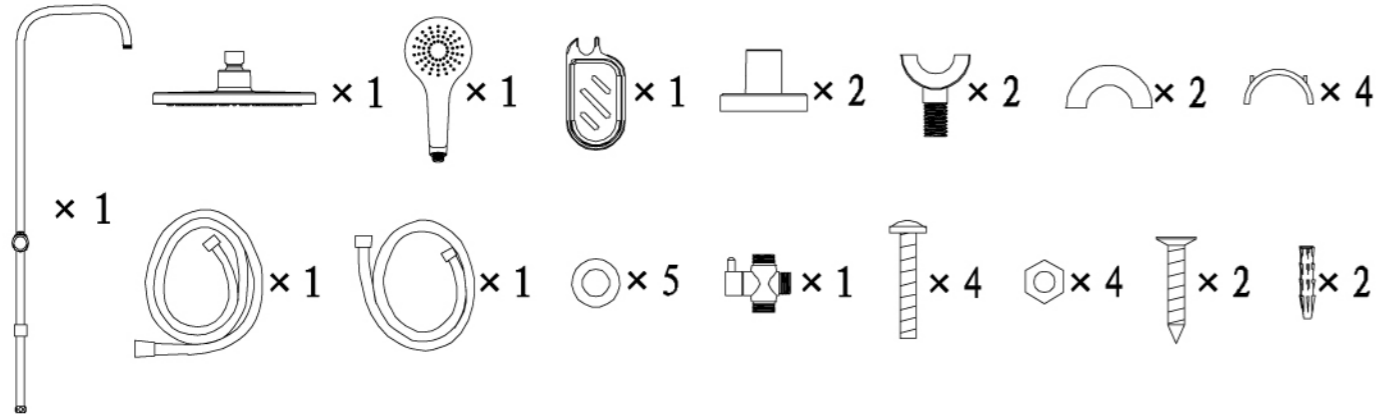

### Tools required

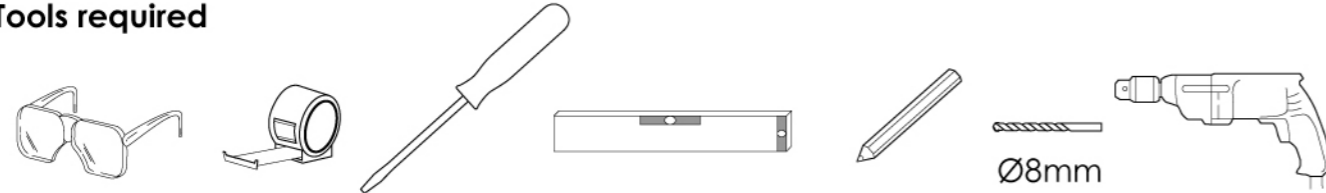

KEEP DIY TOOLS OUT OF THE REACH OF CHILDREN

### SAFETY ADVICE

- Do check for hidden cables and pipework before drilling.
- Do make sure the area is dry and take special care when using power tools in the bathroom.
- Do use a ceramic drill bit if drilling into ceramic tiled walls.
- Do use suitable safety eye protection when drilling.
- Do use masking tape to cover the area you are going to drill.

