






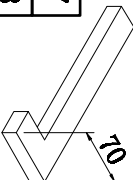





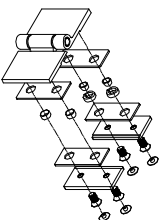
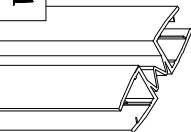

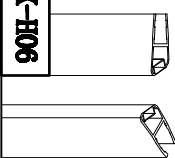




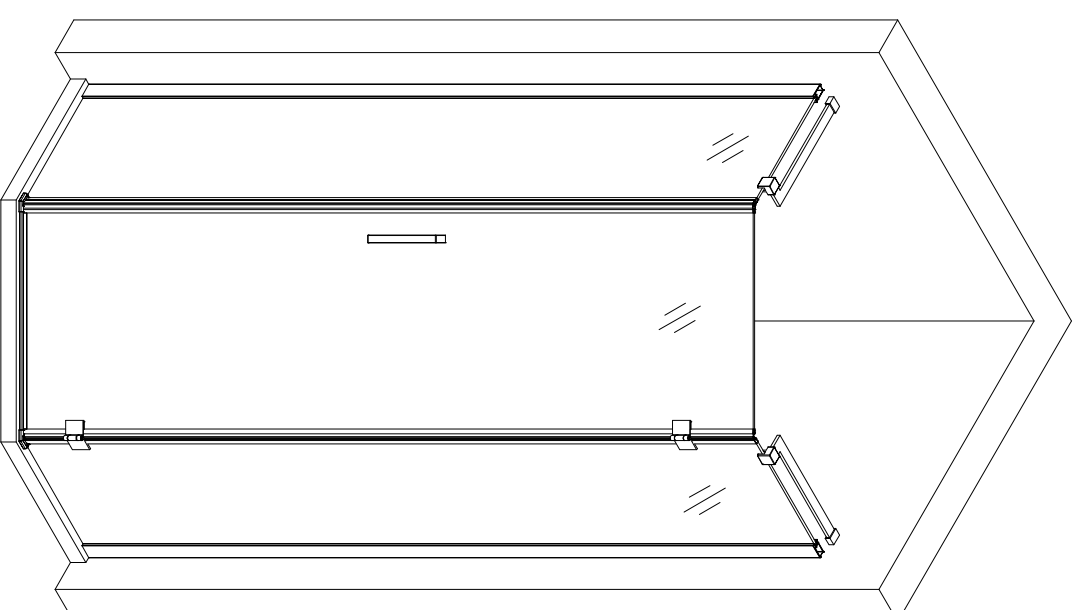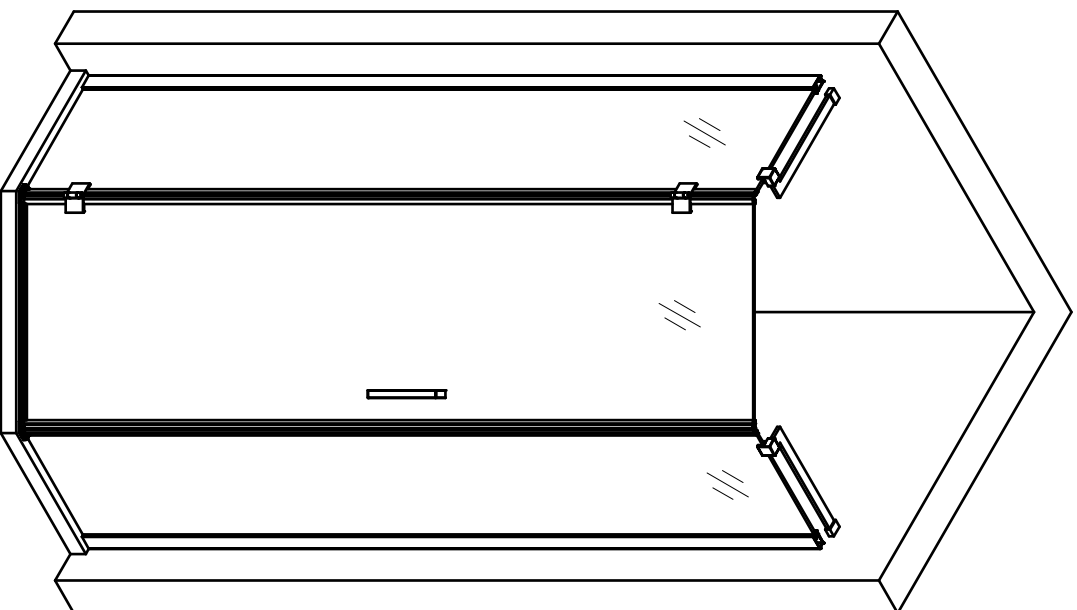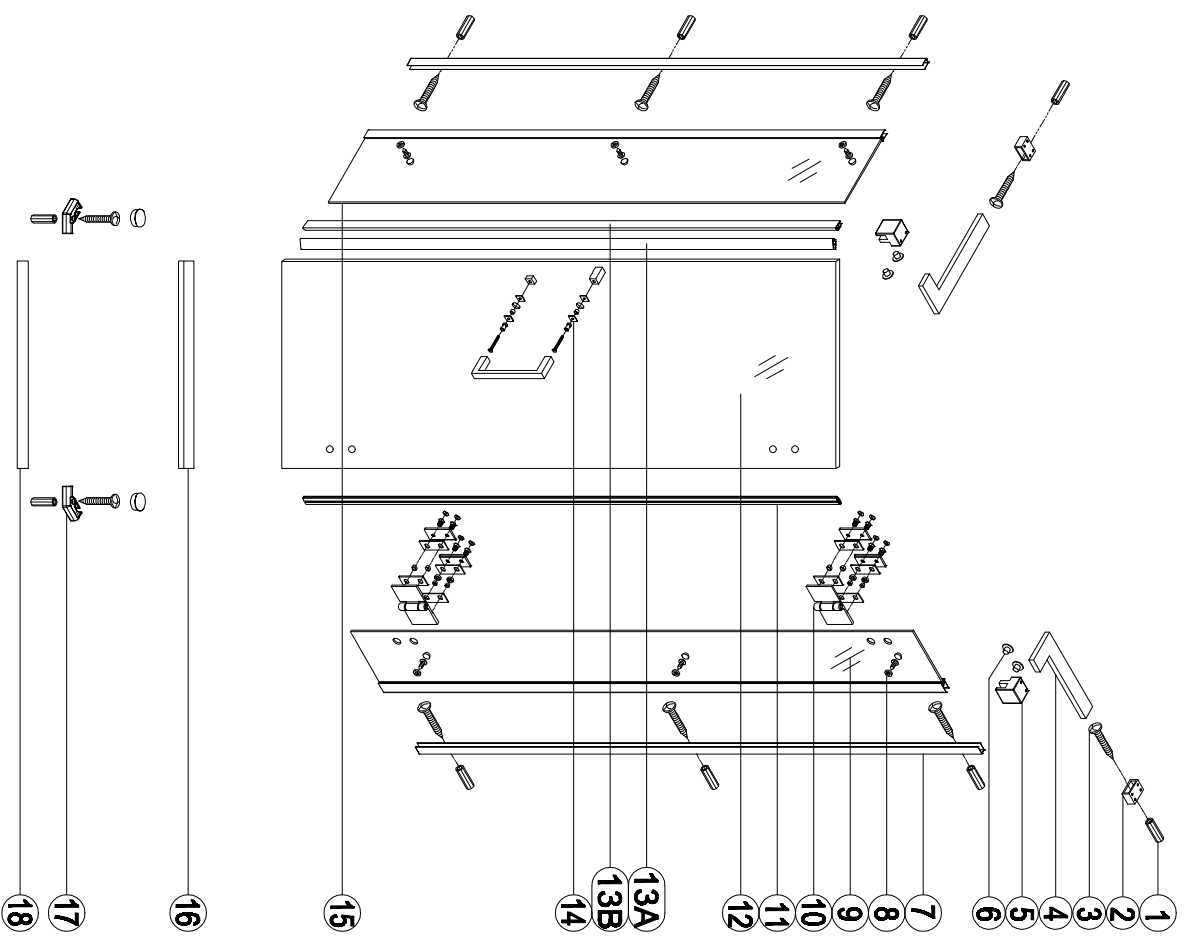
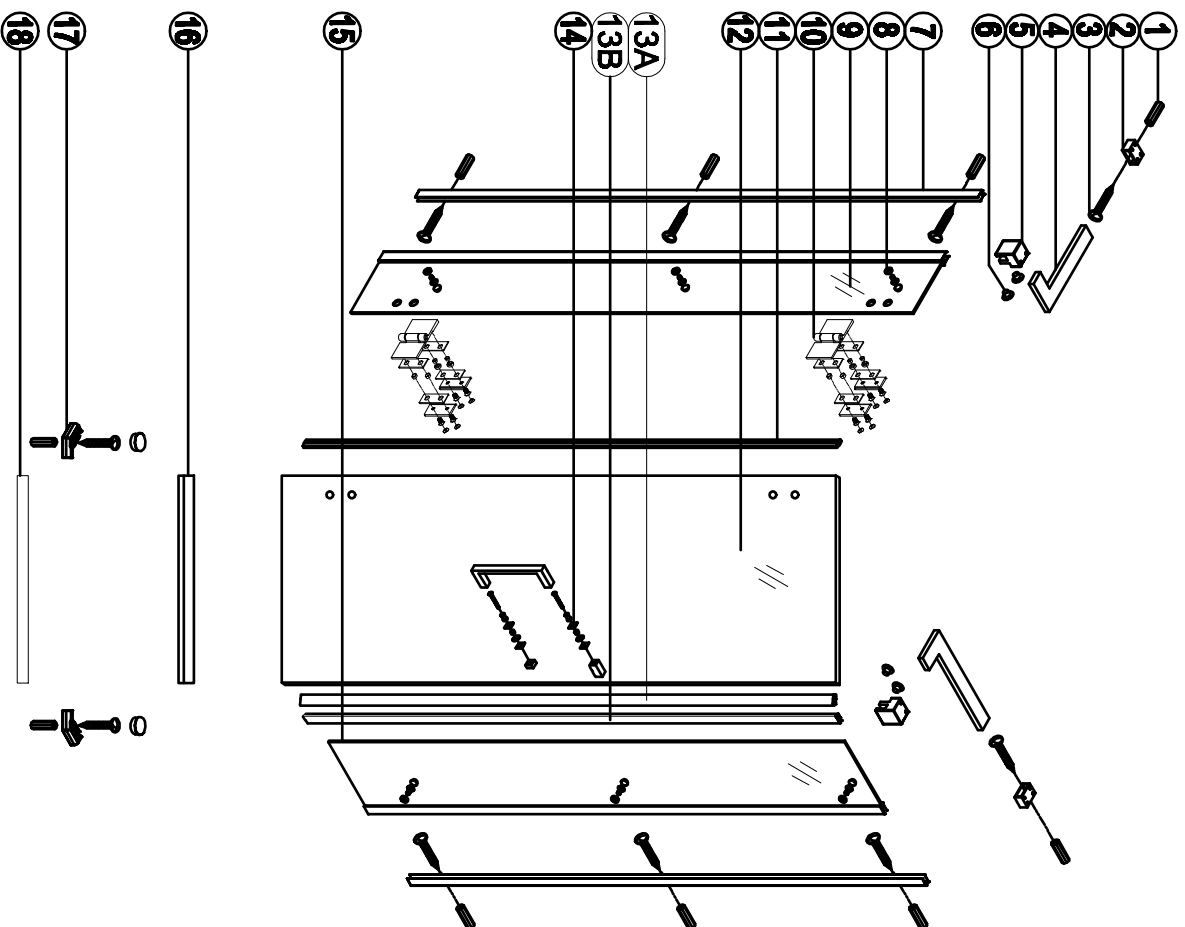





# INSTALLATION MANUAL

SE001-V3 / SE002-V3 / SE1100-V3





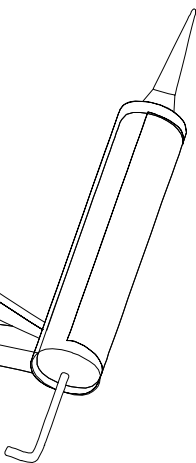1		2		3	ST4X30 	4	 WX-D07 WX-D08 WX-D10	5		6	
7		8	ST4X12 	9		10		11		12	
13	A B 	14		15		16		17	L R 	18	
WX-B01	2Pcs	ST4X12	6Pcs	1Pc	WX-D03	2Pcs	WX-H01	1Pc			
WX-H06	1Pair	WX-D04	1Pc	1Pc	WX-H05	1Pc	WX-S02	2Pcs	WX-B05	1Pc	
800*800		900*900		1100*1100		Tools: 					
WX-D07		WX-D08									
4											

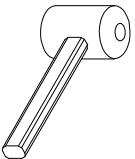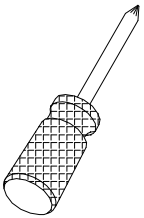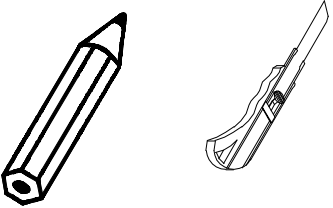



2 mm

2.5 mm


4 mm

Ø6mm

Ø3.2mm

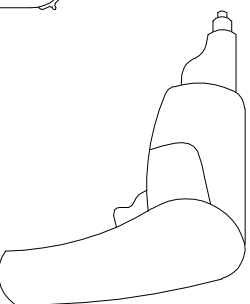

1

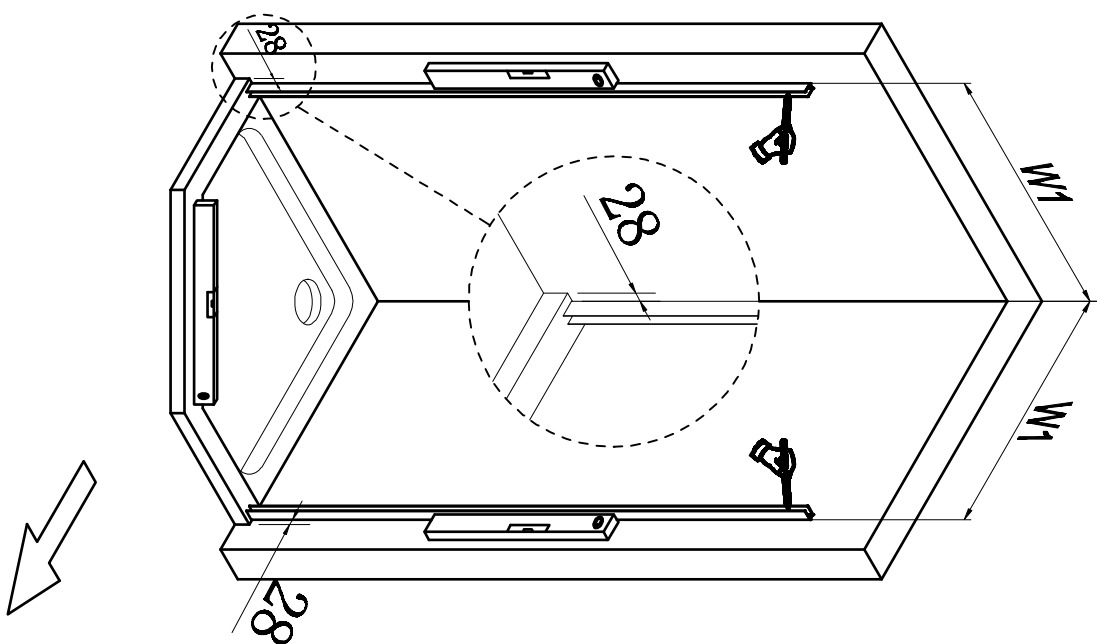


		W1	W2
1	800	752-772	760-780
2	900	852-872	860-880
3	1100	1052-1072	1060-1080


W2 ( Outside of clip )  
W1 ( Wall profile )



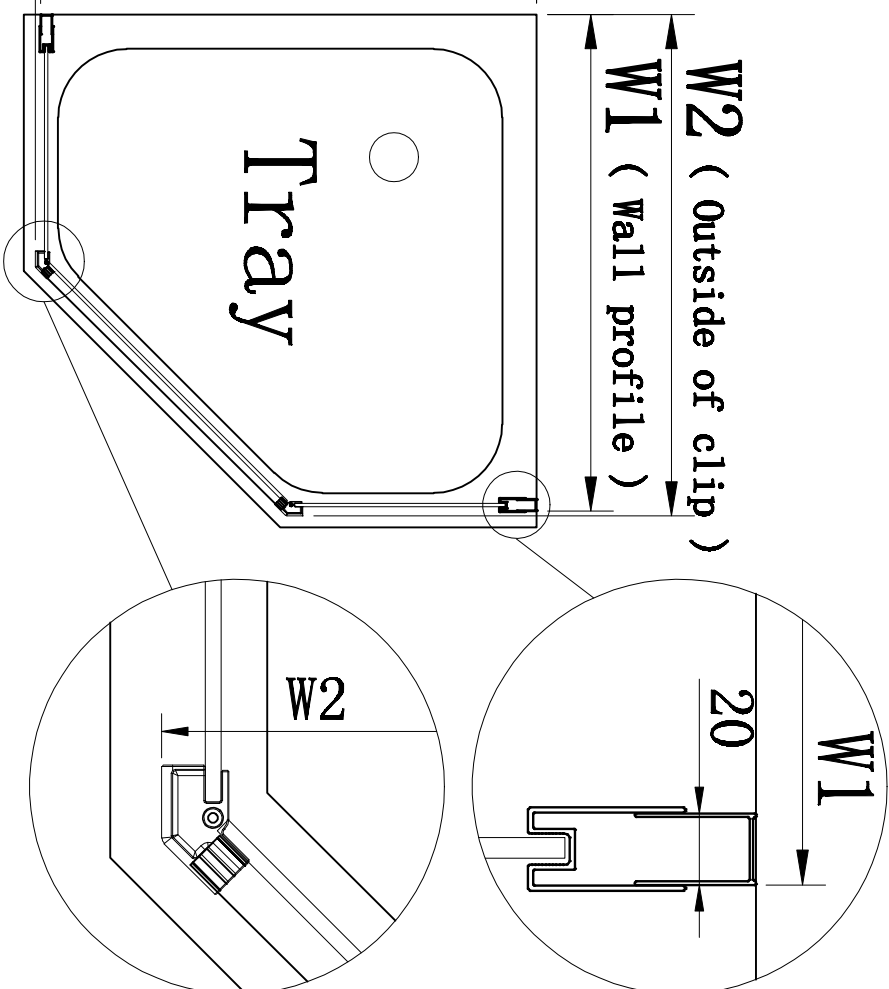

W2 ( Outside of clip )  
W1 ( Wall profile )

Tray

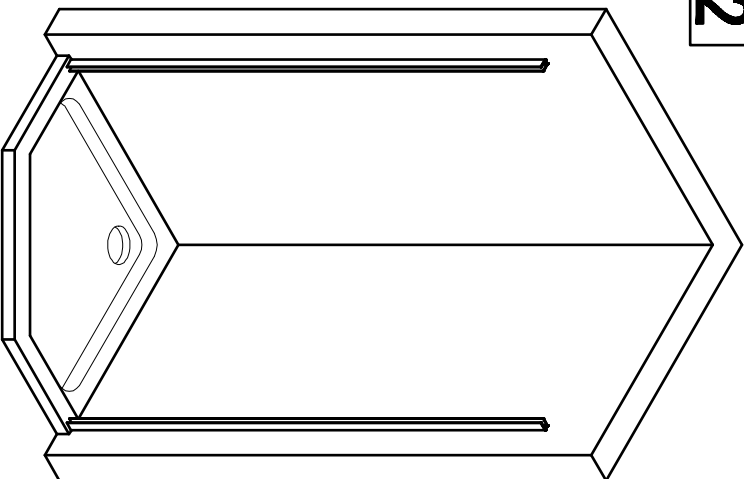






2



2-1		Øx2
2-2		Ø6X40mm
2-3		①x6
2-4		③x6

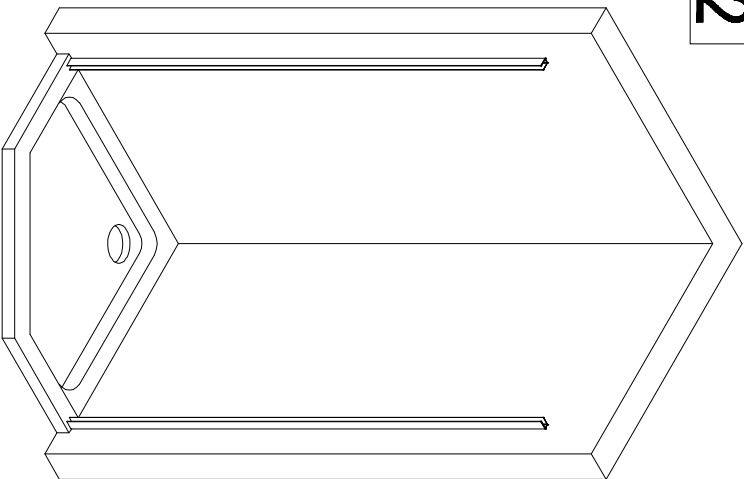2



2-1		Øx2
2-2		Ø6X40mm
2-3		①x6
2-4		③x6

2-5

⑨x1


Inside Outside

2-6


⑮x1

Outside Inside

2-7



THE PROFILES  
AND THE GLASS  
SHOULD BE SET  
TRUE & LEVEL  
WITH A SPIRIT  
LEVEL.

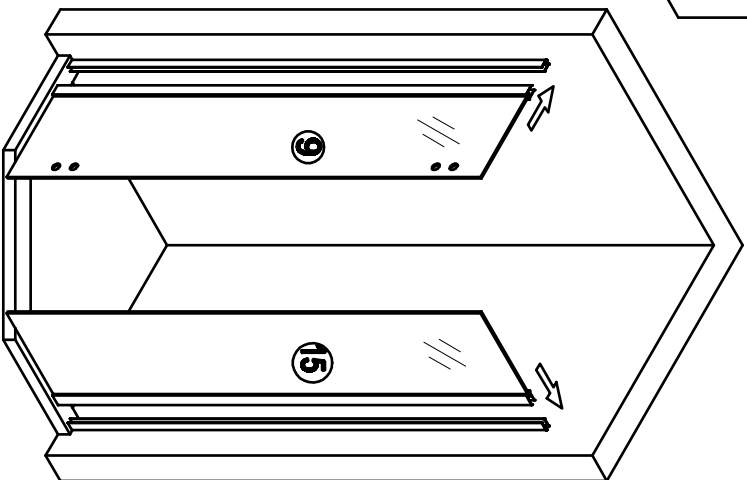

2-5

⑨x1


Inside Outside

2-6


⑮x1

Outside Inside











2-7



THE PROFILES  
AND THE GLASS  
SHOULD BE SET  
TRUE & LEVEL  
WITH A SPIRIT  
LEVEL.










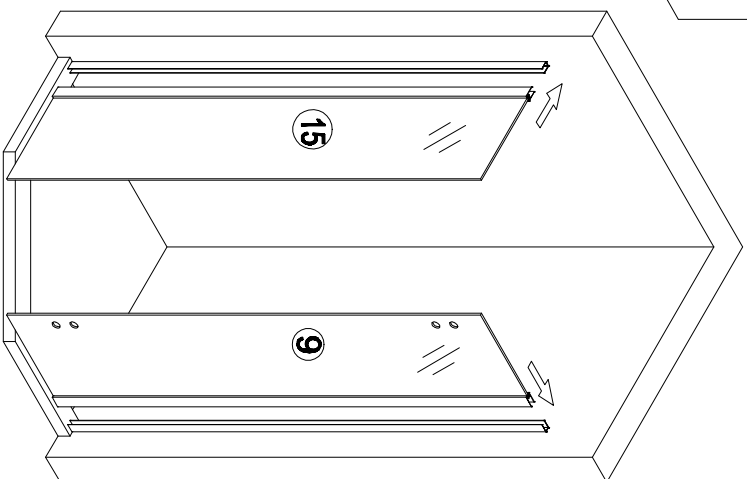


3

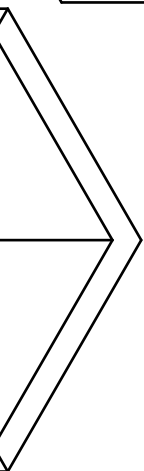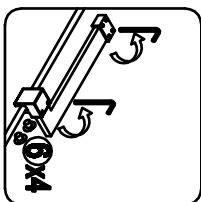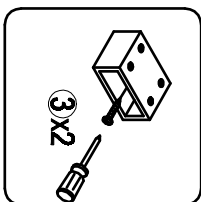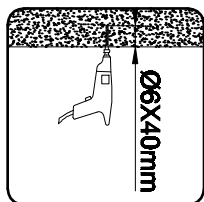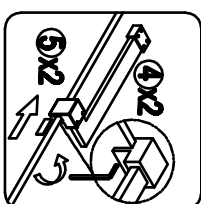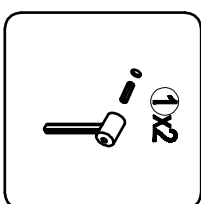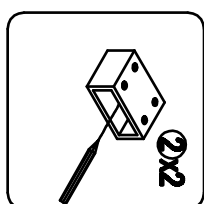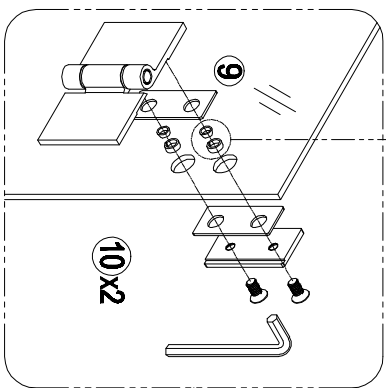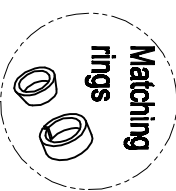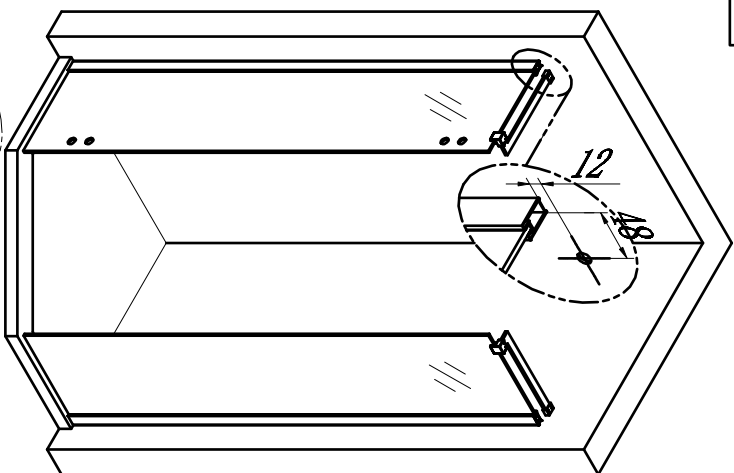



	X	Y
800*800	610	610
900*900	610	610
1100*1100	680	680

3

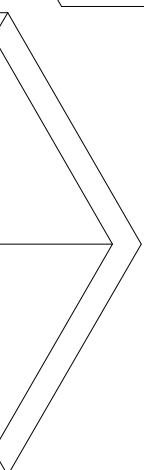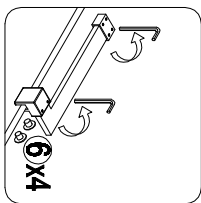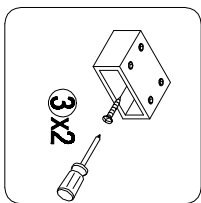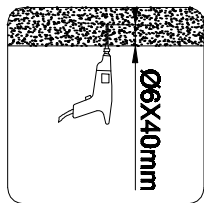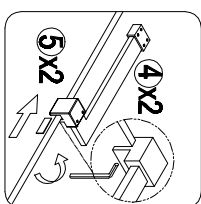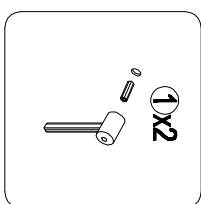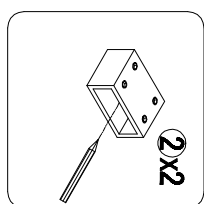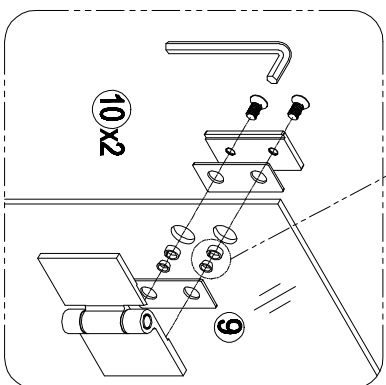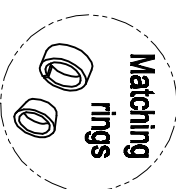
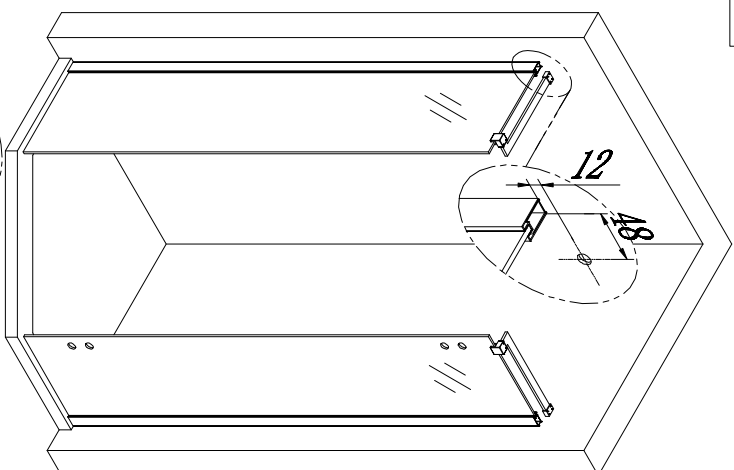




	X	Y
800*800	610	610
900*900	610	610
1100*1100	680	680

4

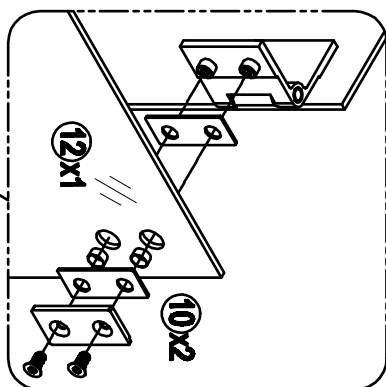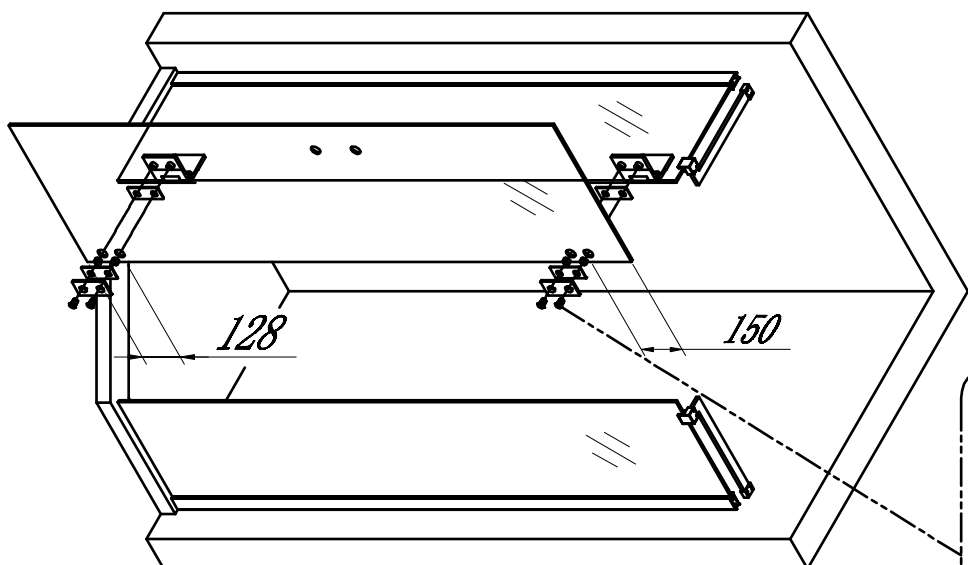

4

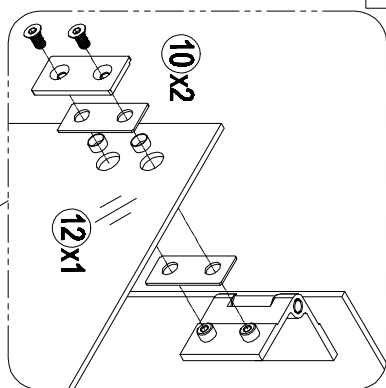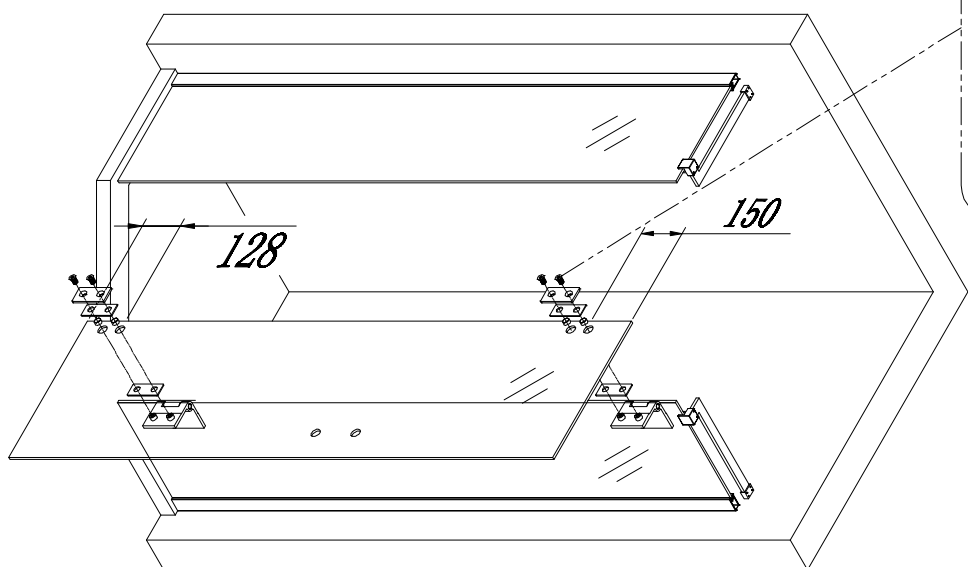

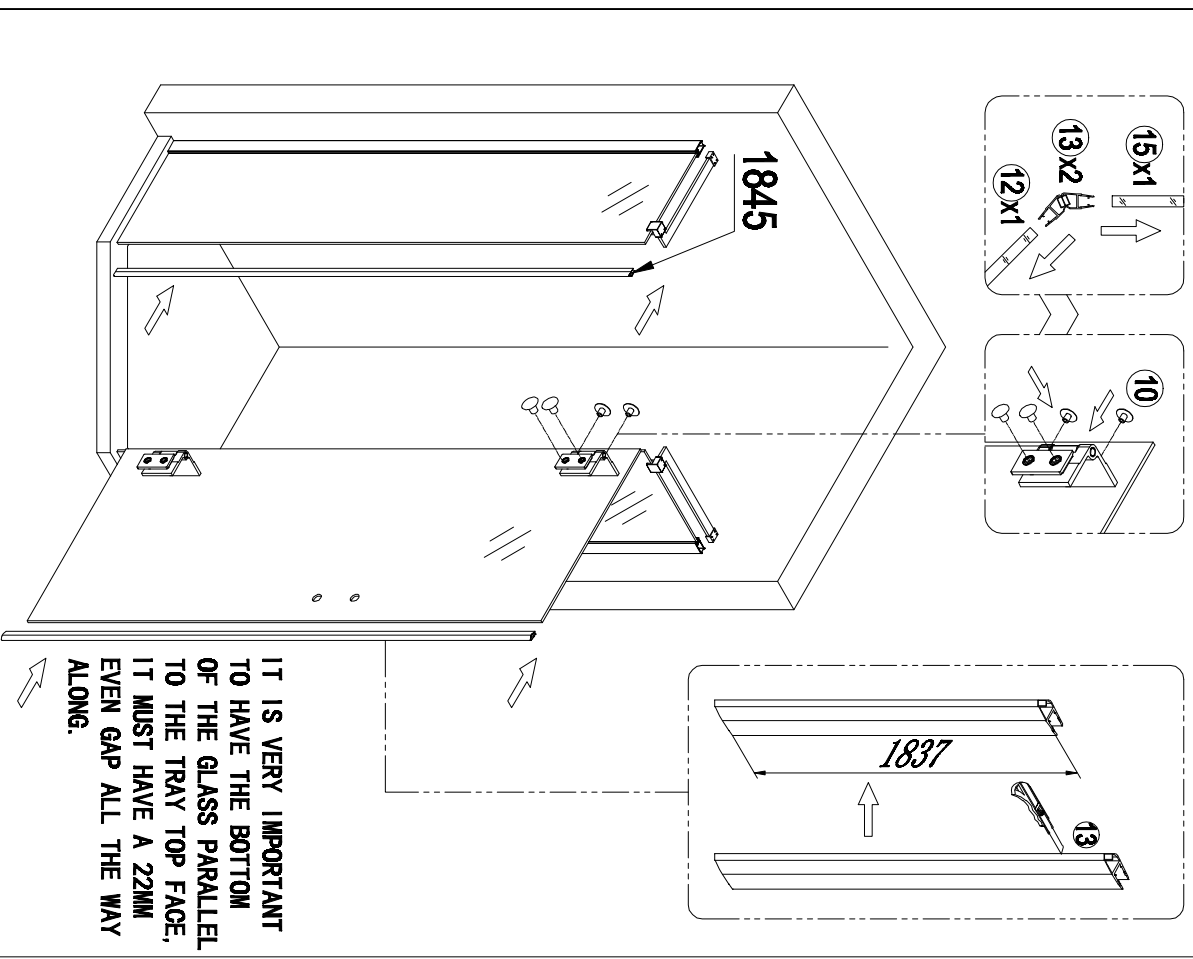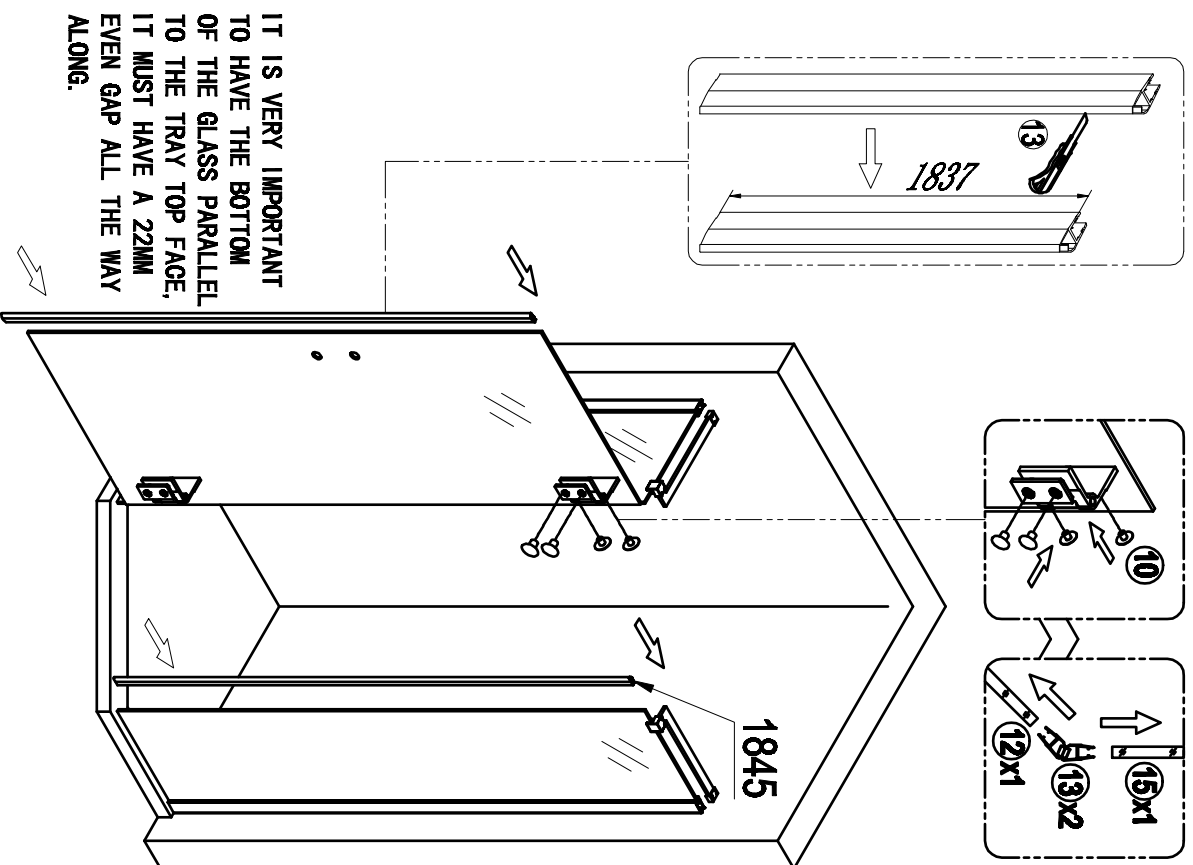





6

Fixed glass  
Door glass


DRILL THROUGH THE PRE-DILLED HOLES IN THE WALL PROFILES (SHOWN RIGHT). USE 3mm DRILL AND MAKE SURE YOU ONLY DRILL THROUGH ONE WALL THICKNESS.

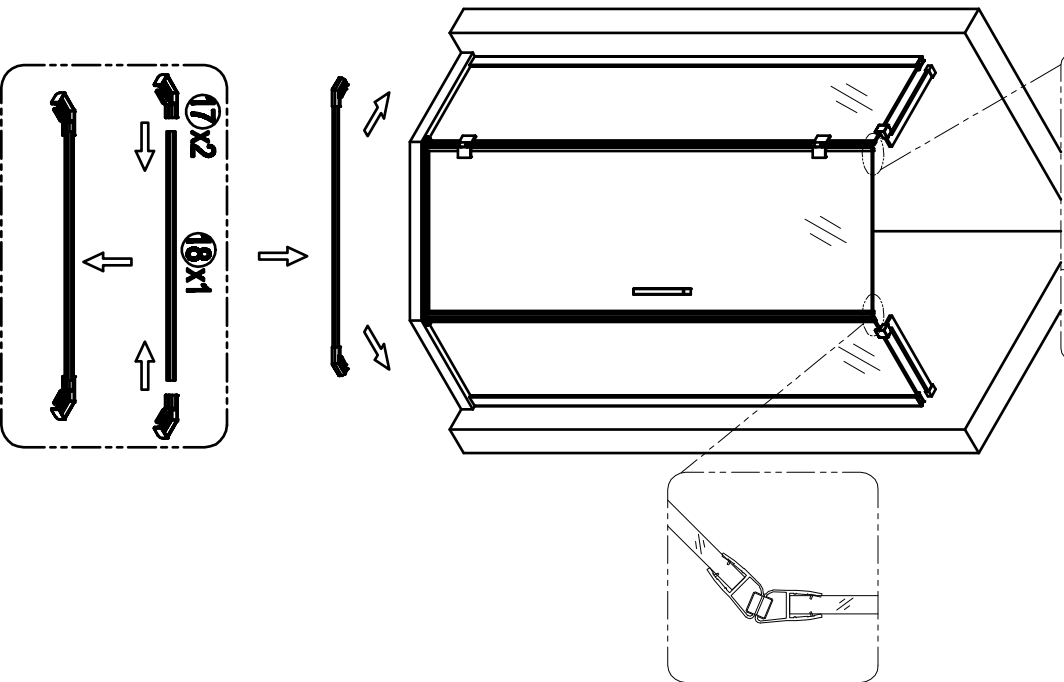

6-1 Ø3.2mm

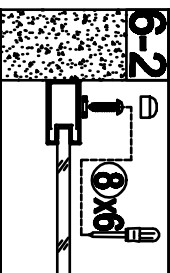

6-2

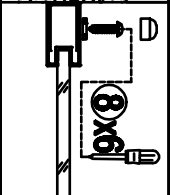

6-3



6-4




6-5



6-6




6-7




6

Door glass  
Fixed glass


DRILL THROUGH THE PRE-DILLED HOLES IN THE WALL PROFILES (SHOWN RIGHT). USE 3mm DRILL AND MAKE SURE YOU ONLY DRILL THROUGH ONE WALL THICKNESS.

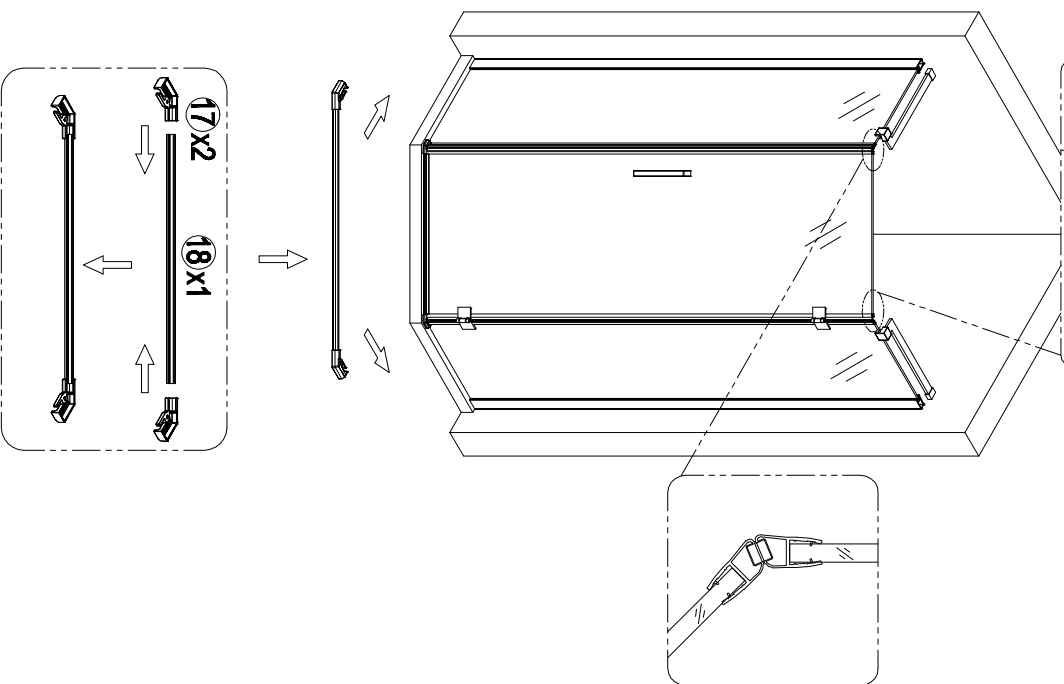


6-1 Ø3.2mm

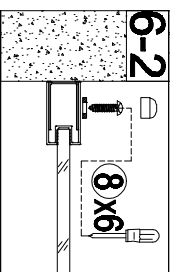

6-2

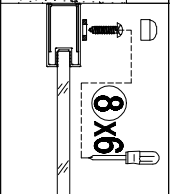

6-3



6-4




6-5





6-6



6-7




7

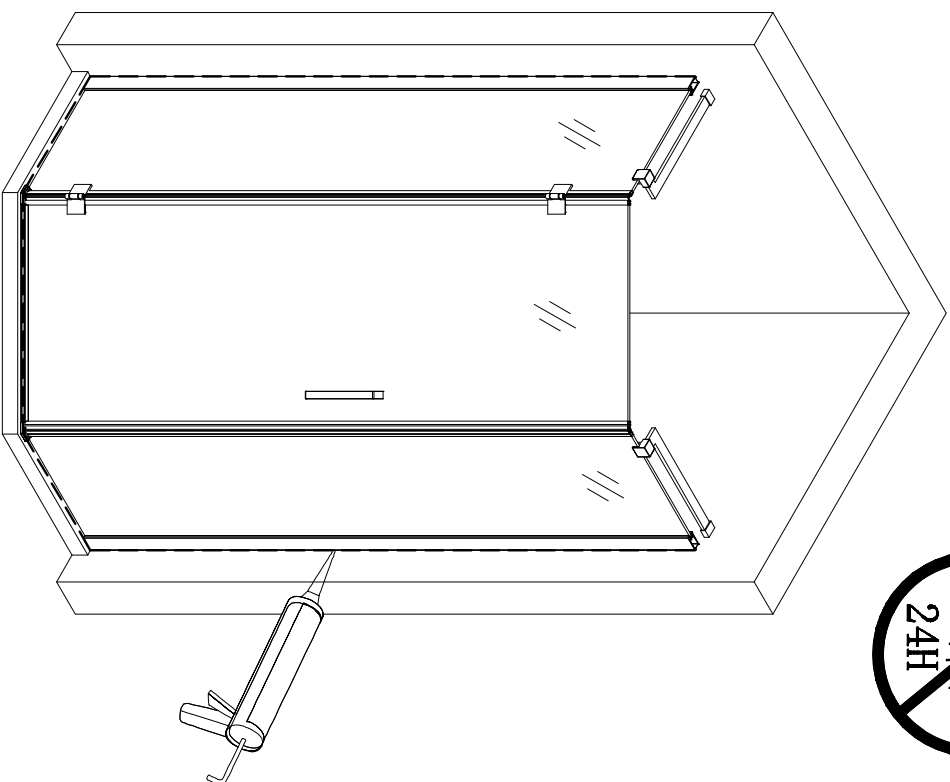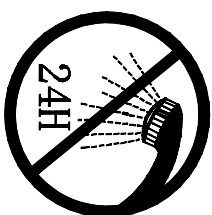

**Care Instructions:**

Do not use your shower enclosure within 24 hours of assembly .  
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

7

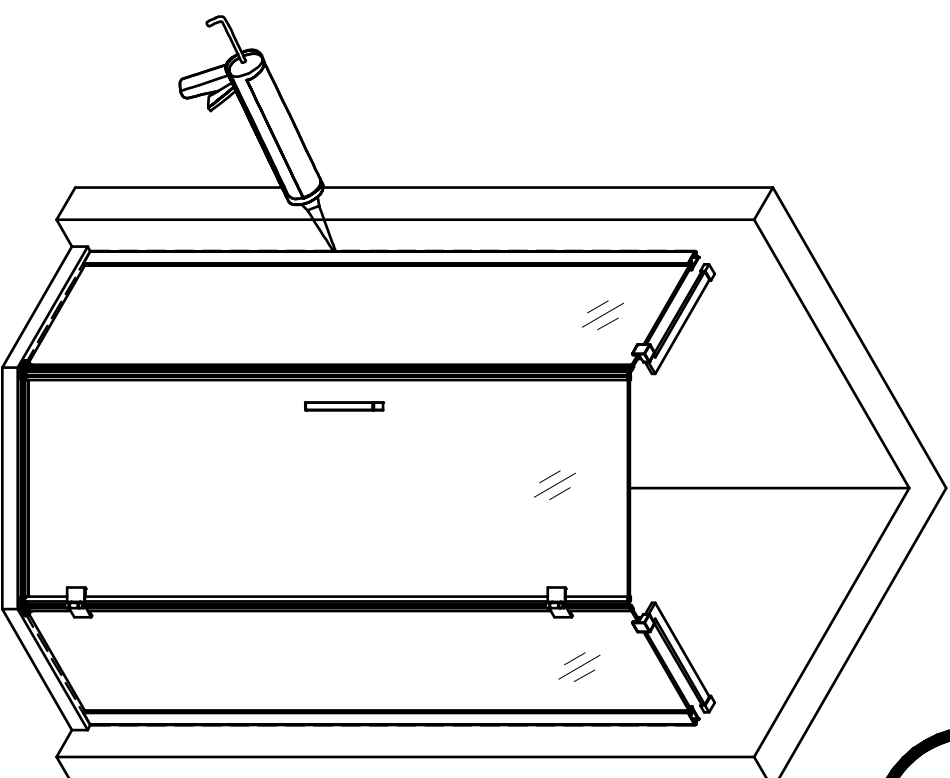

**Care Instructions:**

Do not use your shower enclosure within 24 hours of assembly .  
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.