






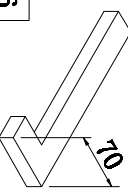












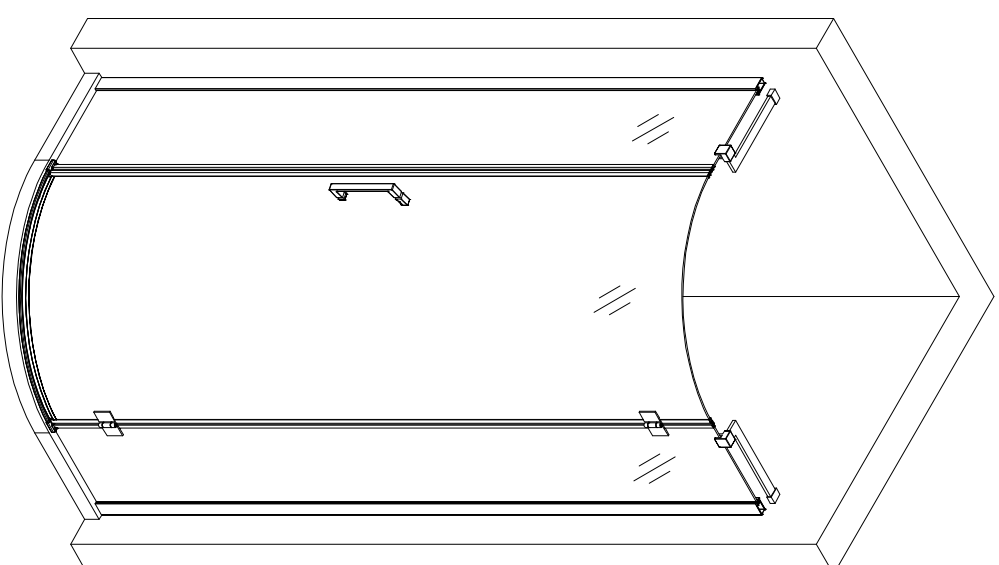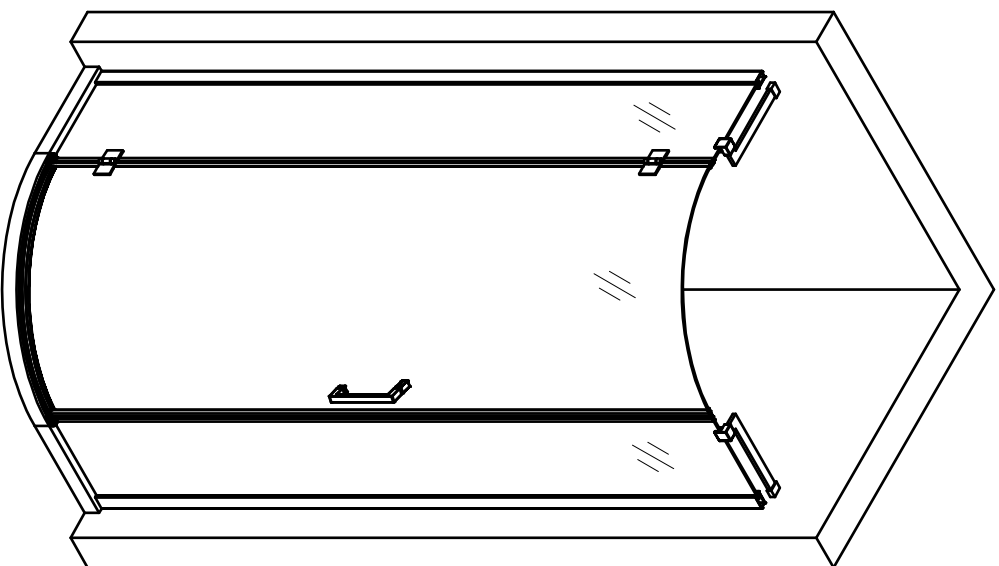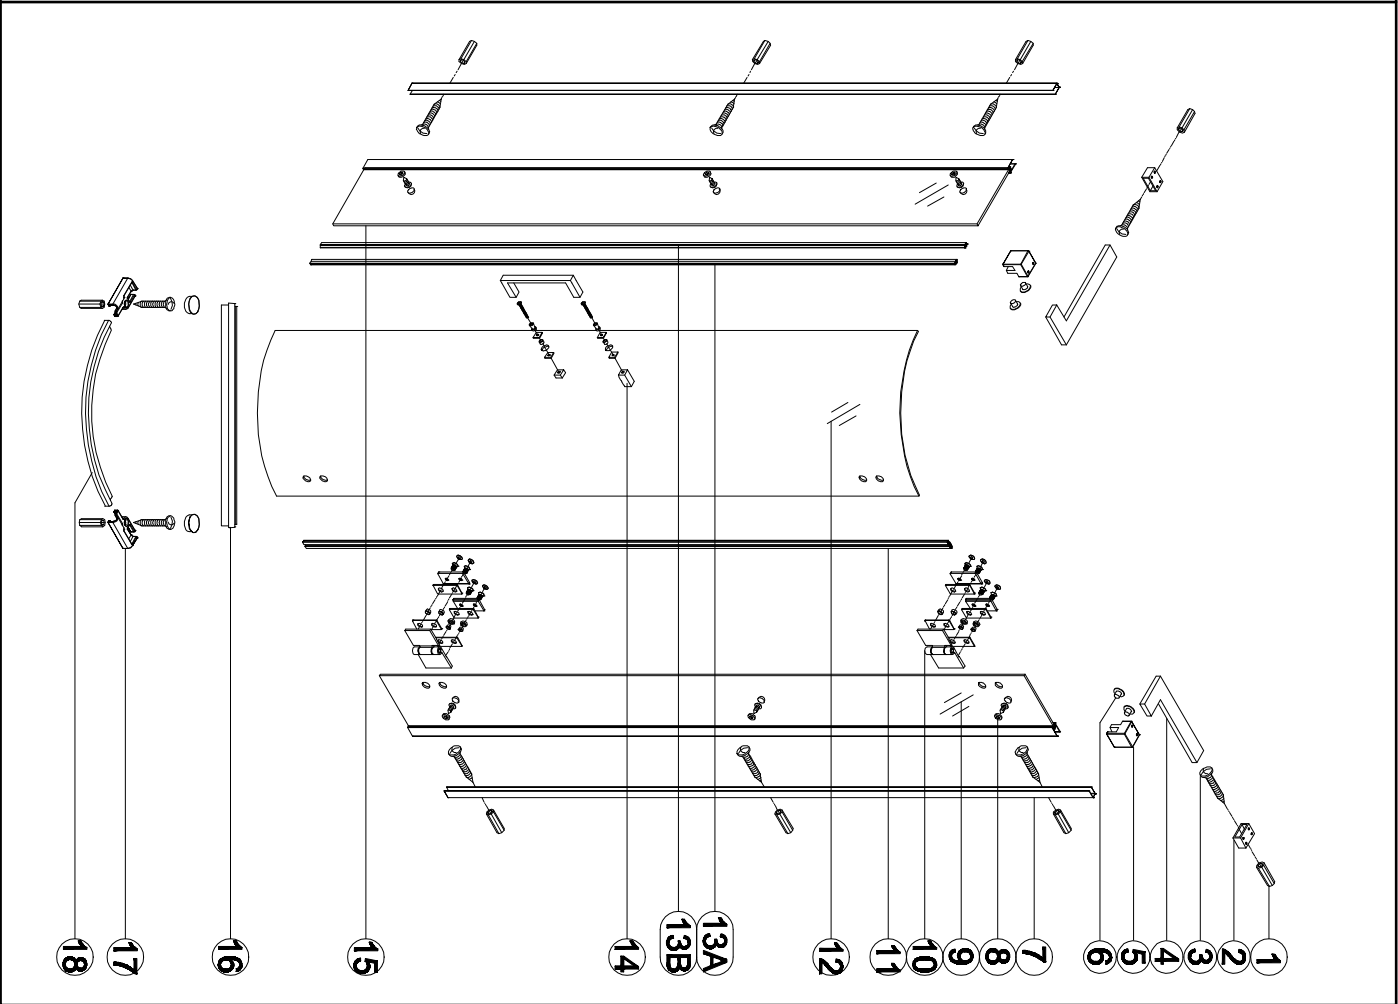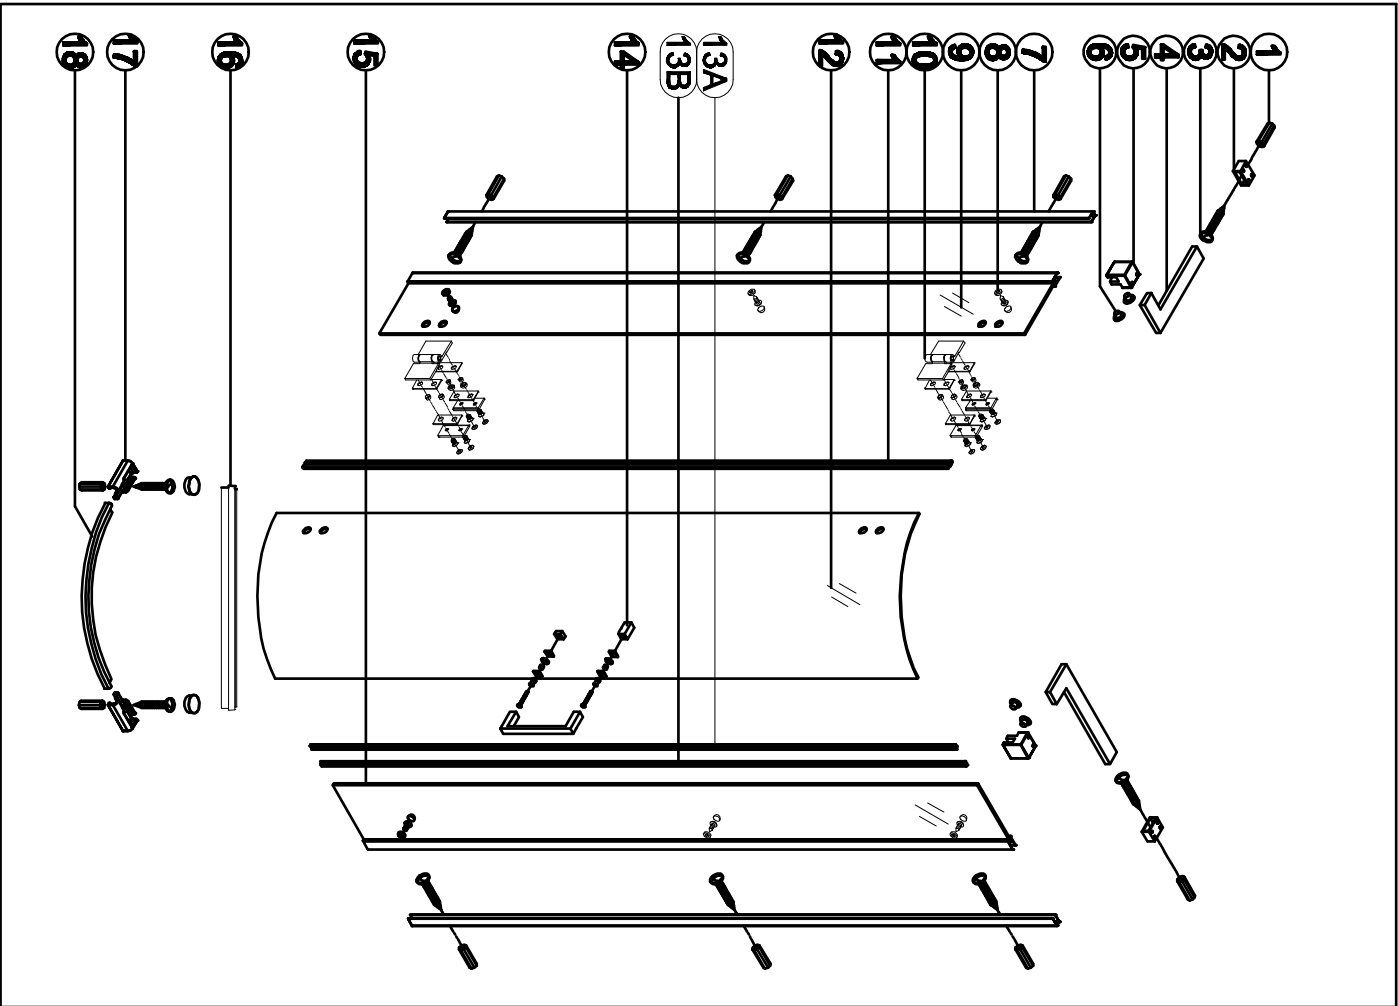




# INSTALLATION MANUAL

SE006-V3 / SE007-V3




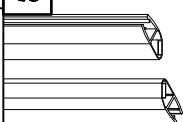



1		2		3	ST4X30 	4	<div>WX-D06</div> <div>WX-D07</div> 	5		6	
7	D6X25 10Pcs	8	WX-D01 2Pcs	9	ST4X30 10Pcs	10	2Pcs	11	WX-D02 2Pcs	12	D4X4 4Pcs
13	WX-B01 2Pcs	14	ST4X12 6Pcs	15		16	WX-D03 2Pcs	17	WX-H01 1Pc	18	
A B 											
WX-H02 1Pair		WX-D04 1Pc		WX-H04 1Pc		WX-S01 2Pcs		WX-B04 1Pc			
800*800		900*900		Tools:							
WX-D06		WX-D07									

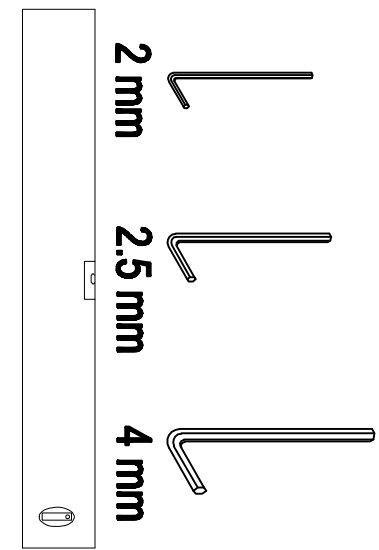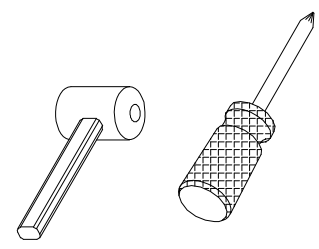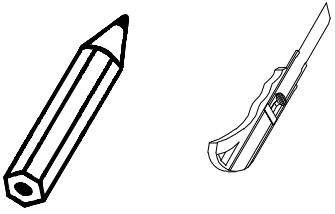


Ø6mm  
Ø3.2mm

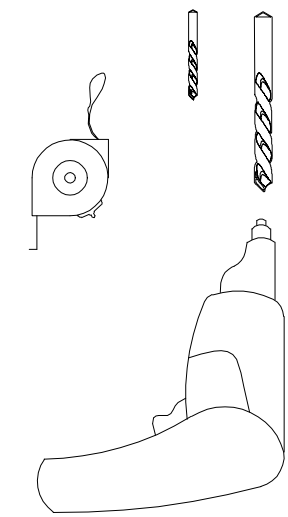

		W1	W2
1	800	752-772	760-780
2	900	852-872	860-880

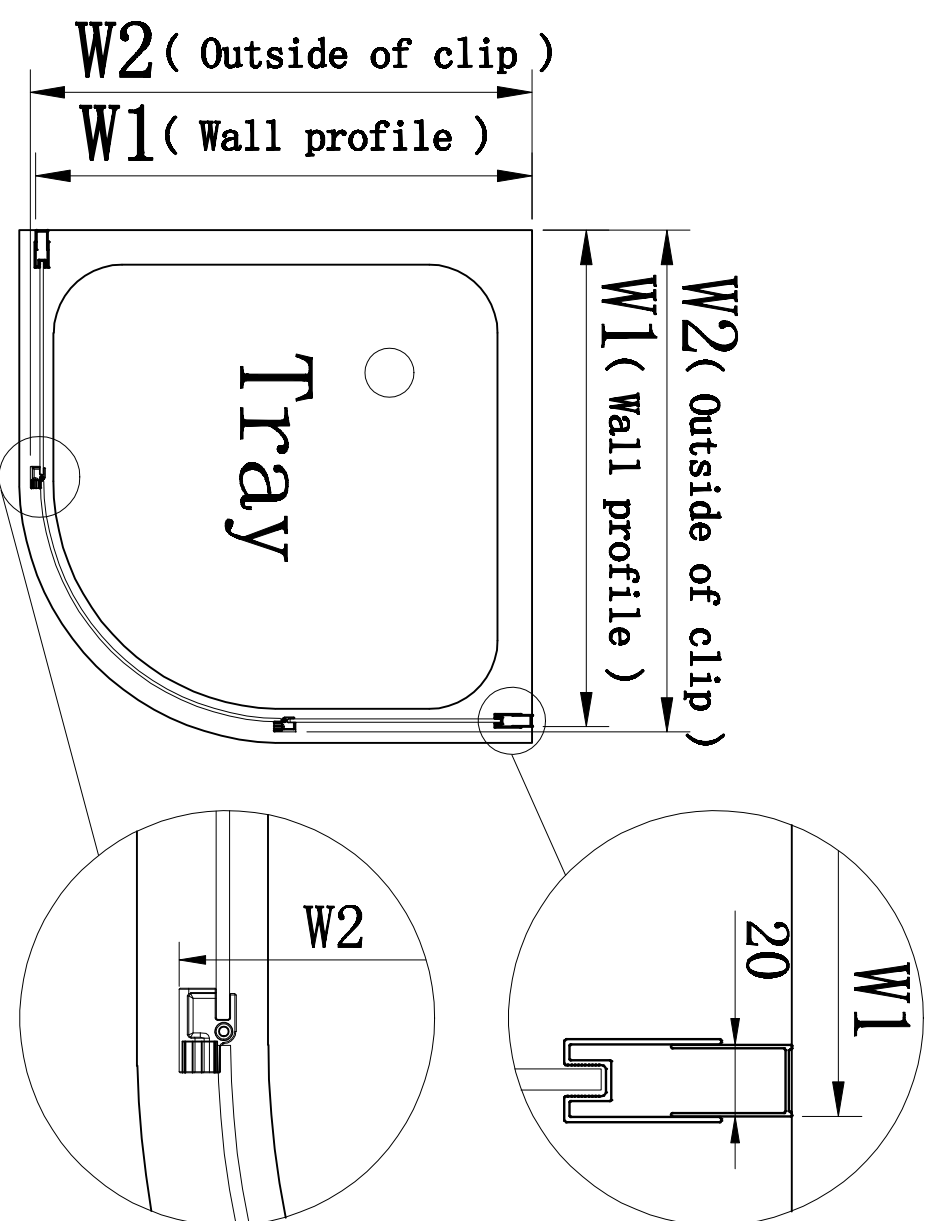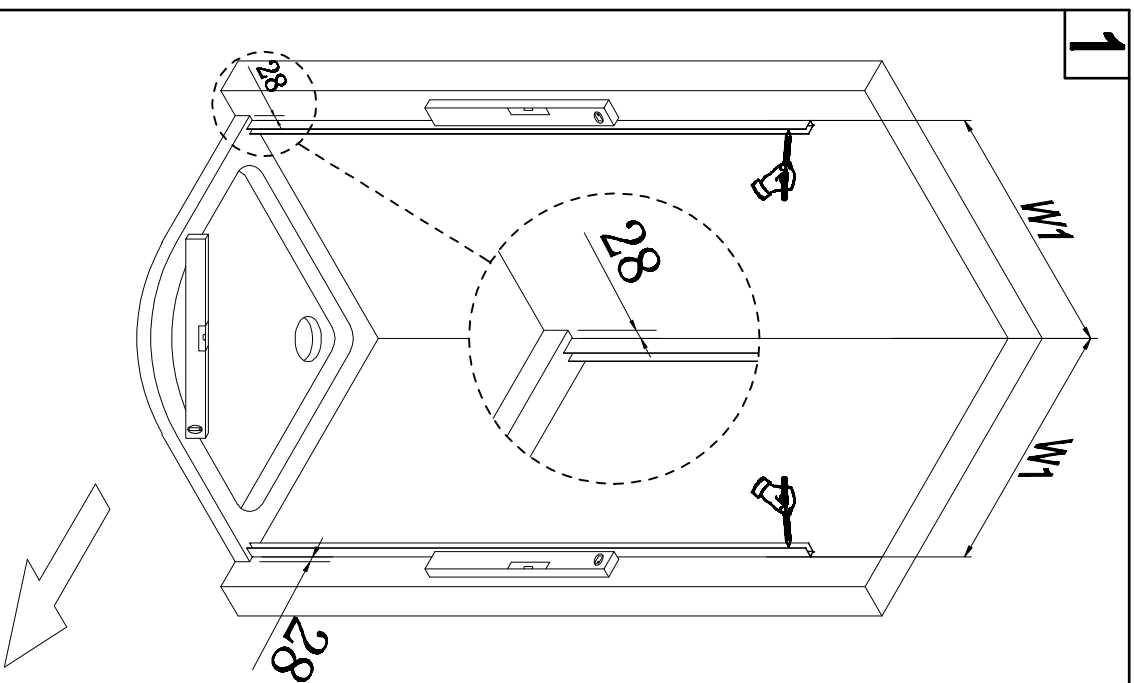


2

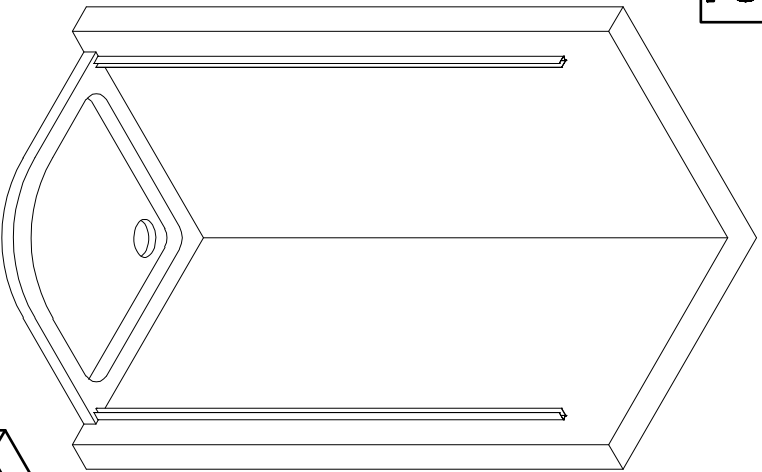

2-1	
2-2	
2-3	
2-4	


2

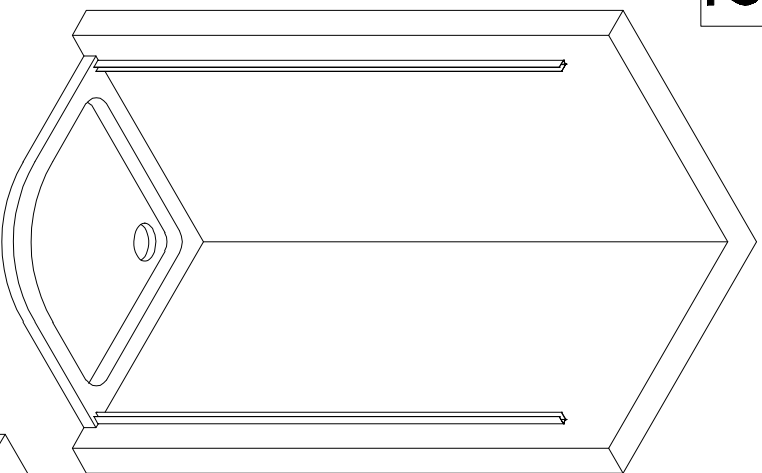


2-1	
2-2	
2-3	
2-4	



2-5	
2-6	
2-7	

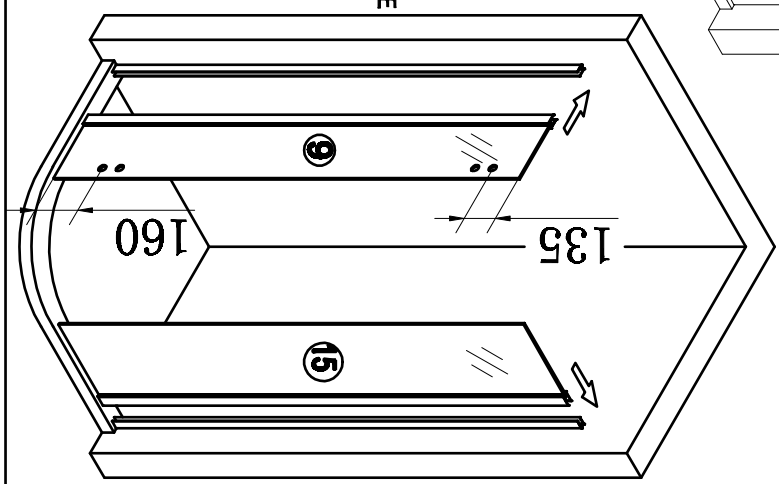

2-5	
2-6	
2-7	

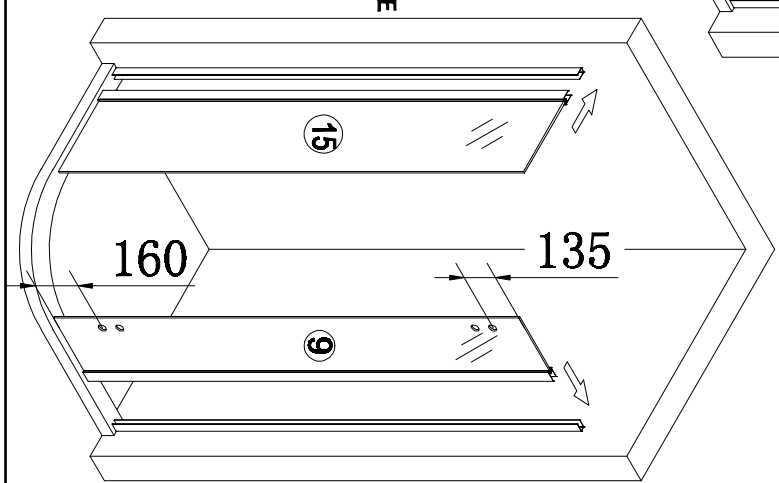











1. PLEASE MEASURE THE HINGE HOLE ON THE FIXED GLASS BEFORE INSTALLATION

1. PLEASE MEASURE THE HINGE HOLE ON THE FIXED GLASS BEFORE INSTALLATION











2. THE PROFILES AND THE GLASS SHOULD BE SET TRUE & LEVEL WITH A SPIRIT LEVEL.

2. THE PROFILES AND THE GLASS SHOULD BE SET TRUE & LEVEL WITH A SPIRIT LEVEL.



3

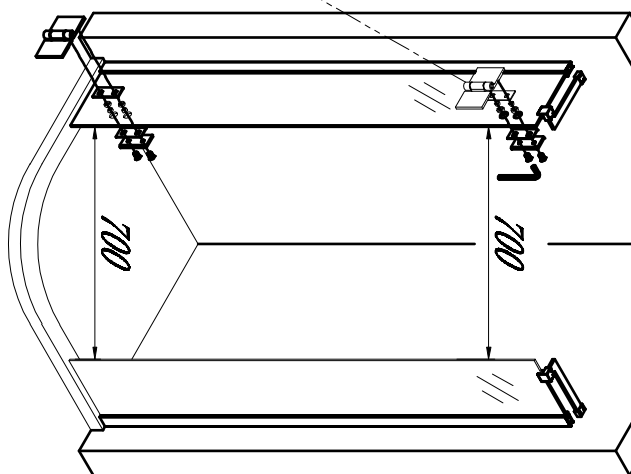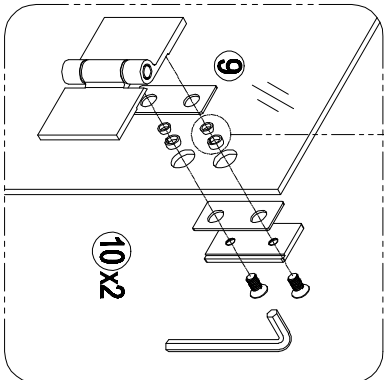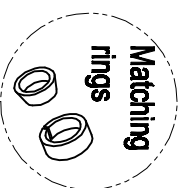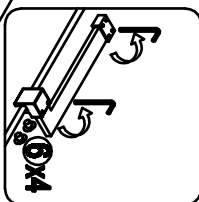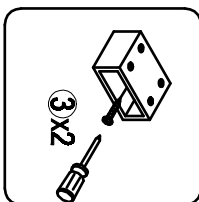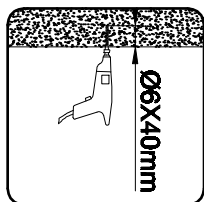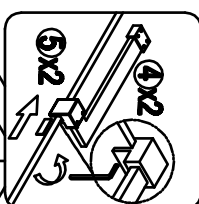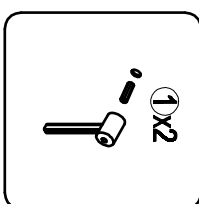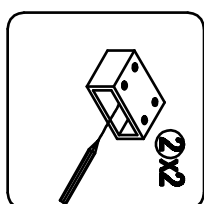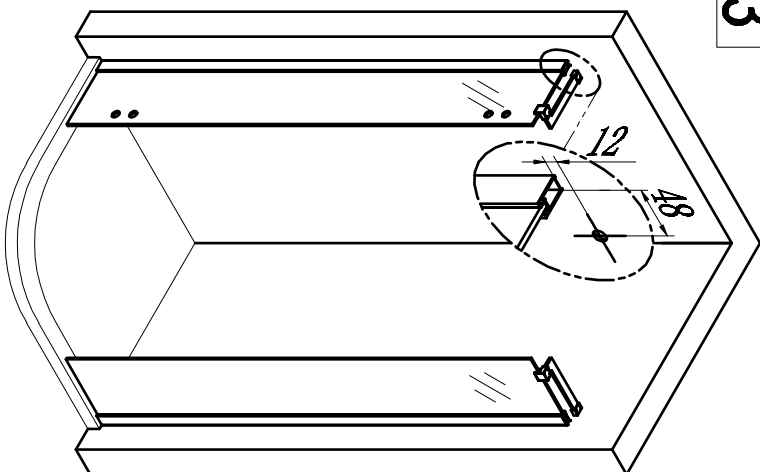



3

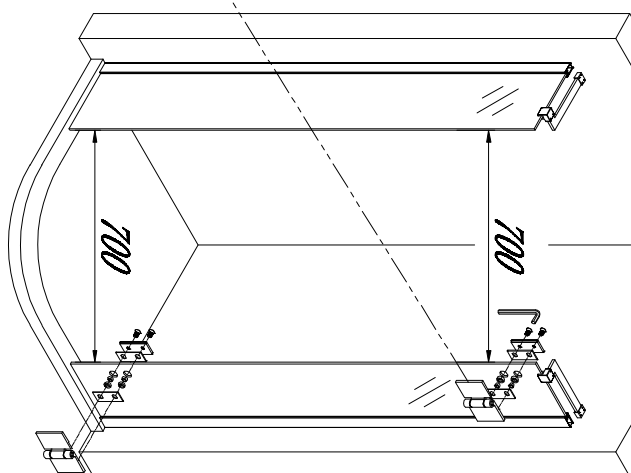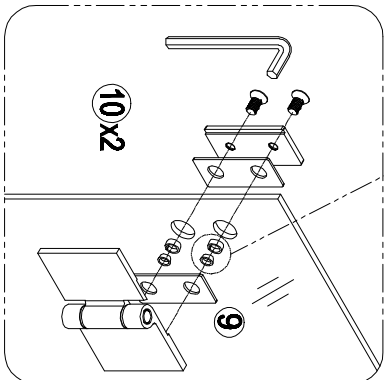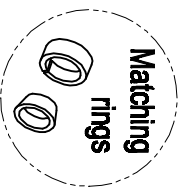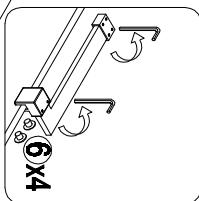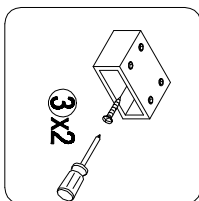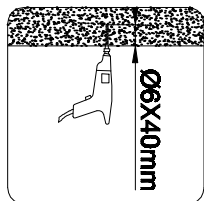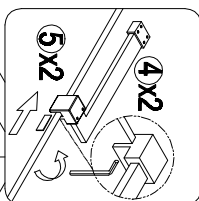
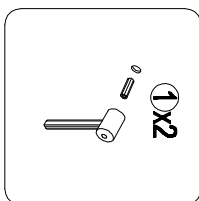
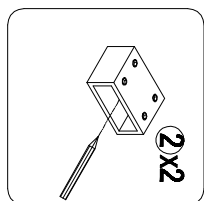
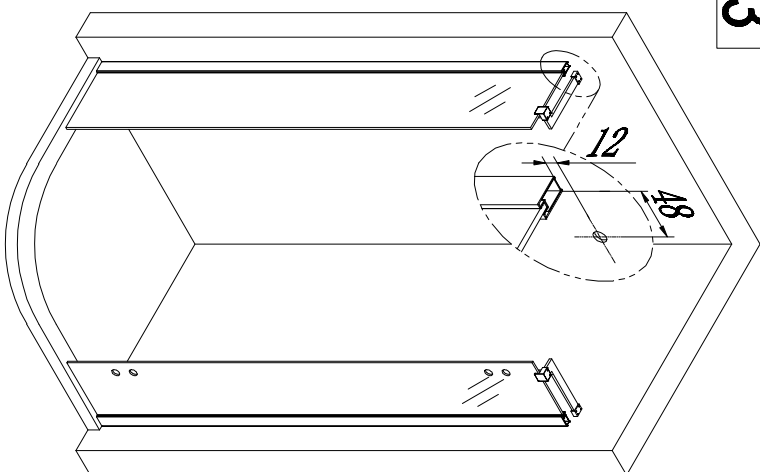


4


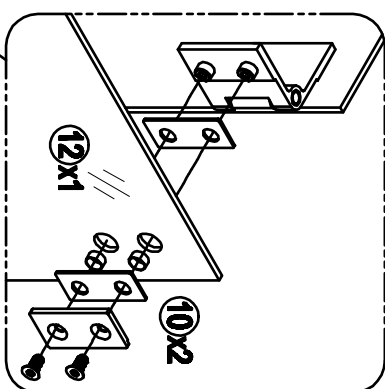
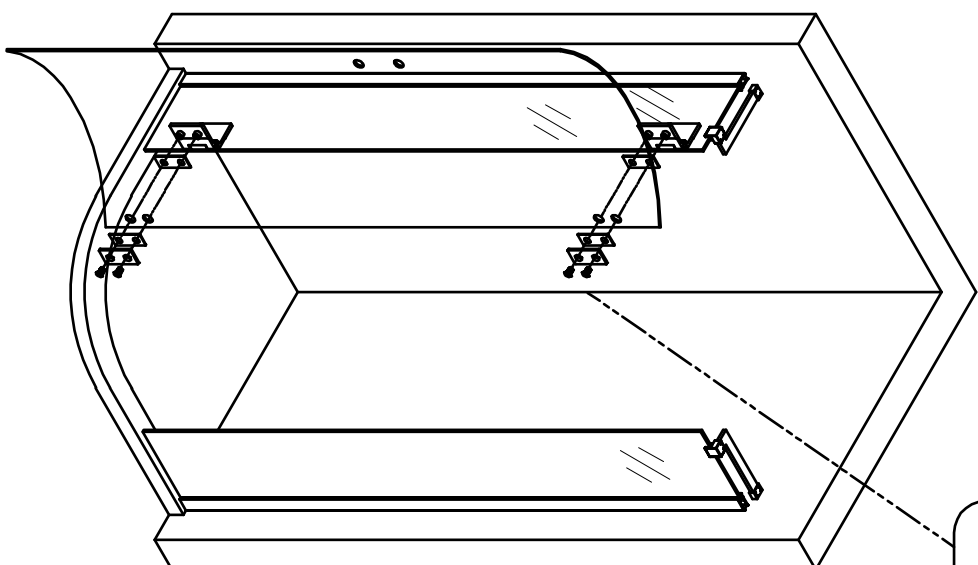


4

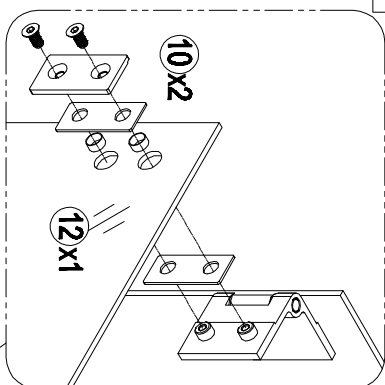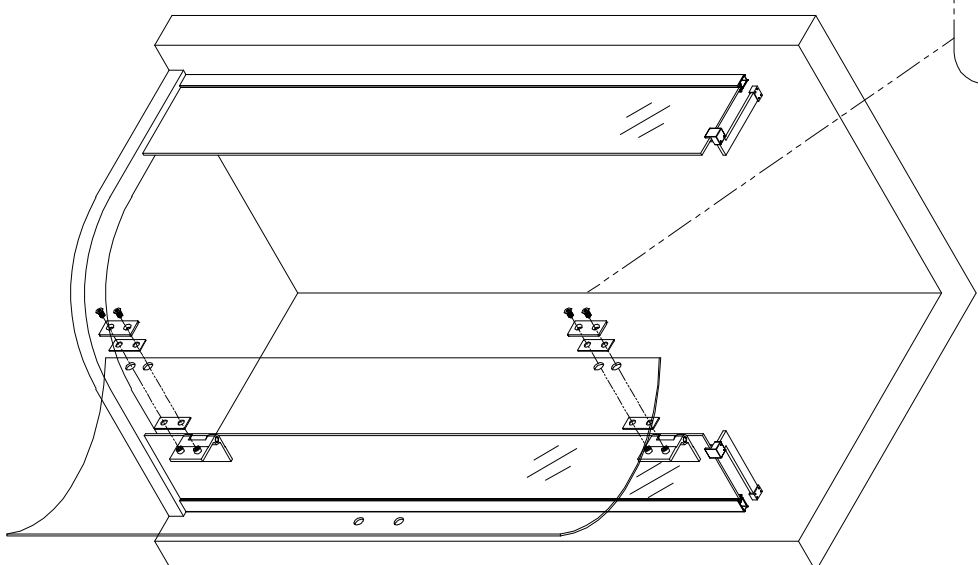

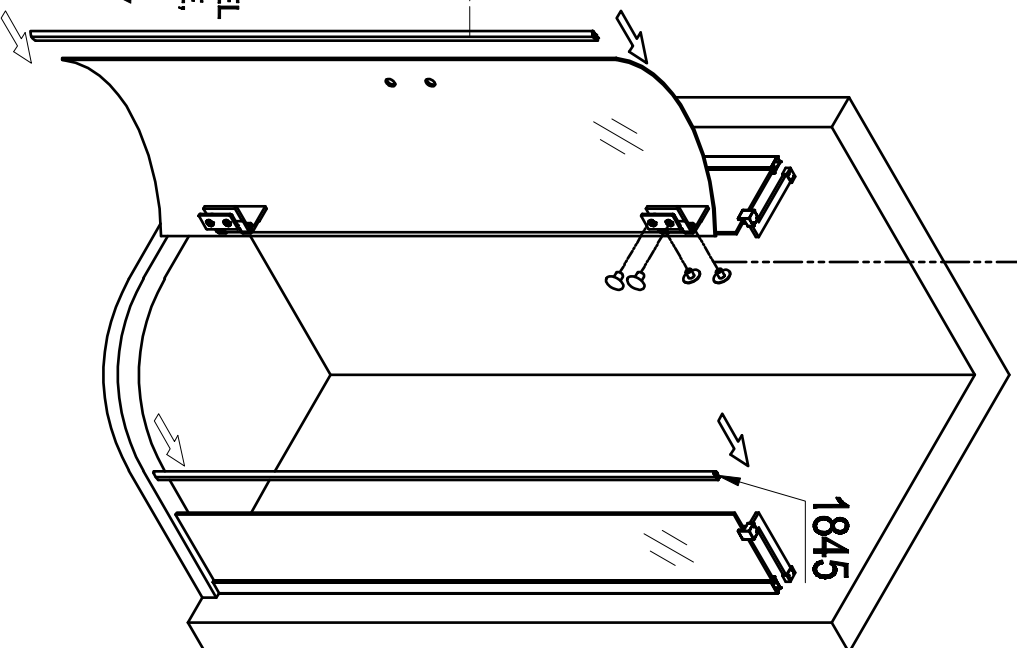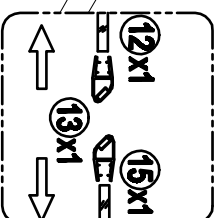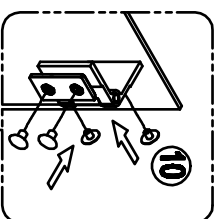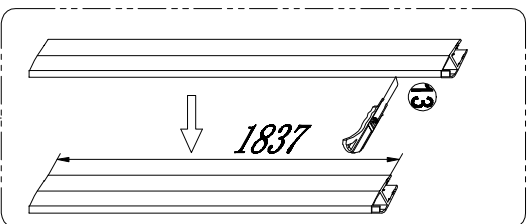

IT IS VERY IMPORTANT  
TO HAVE THE BOTTOM  
OF THE GLASS PARALLEL  
TO THE TRAY TOP FACE,  
IT MUST HAVE A 22MM  
EVEN GAP ALL THE WAY  
ALONG.

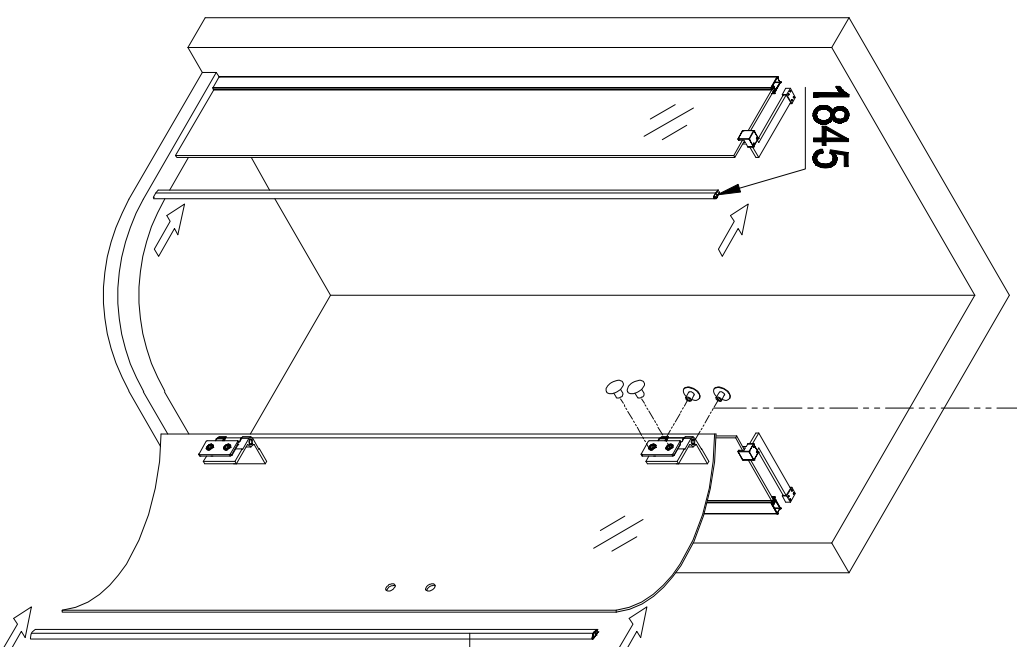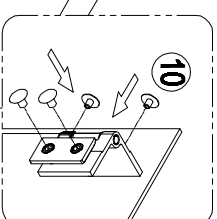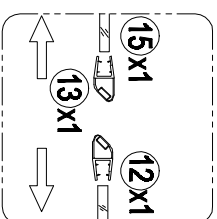

IT IS VERY IMPORTANT  
TO HAVE THE BOTTOM  
OF THE GLASS PARALLEL  
TO THE TRAY TOP FACE,  
IT MUST HAVE A 22MM  
EVEN GAP ALL THE WAY  
ALONG.






6


Fixed  
glass

Door  
glass


DRILL THROUGH THE  
PRE-DILLED HOLES  
IN THE WALL PROFILES  
(SHOWN RIGHT). USE  
3mm DRILL AND MAKE  
SURE YOU ONLY DRILL  
THROUGH ONE WALL  
THICKNESS.

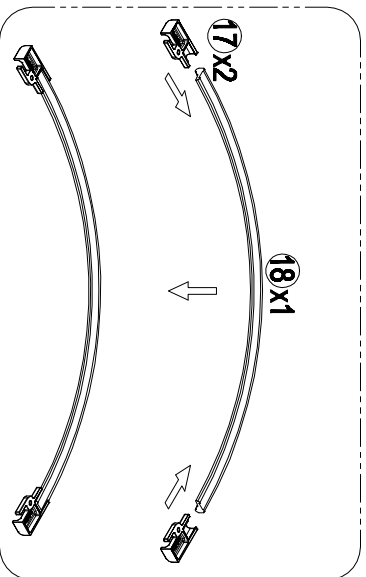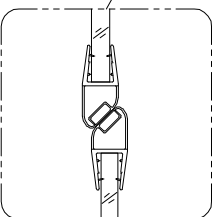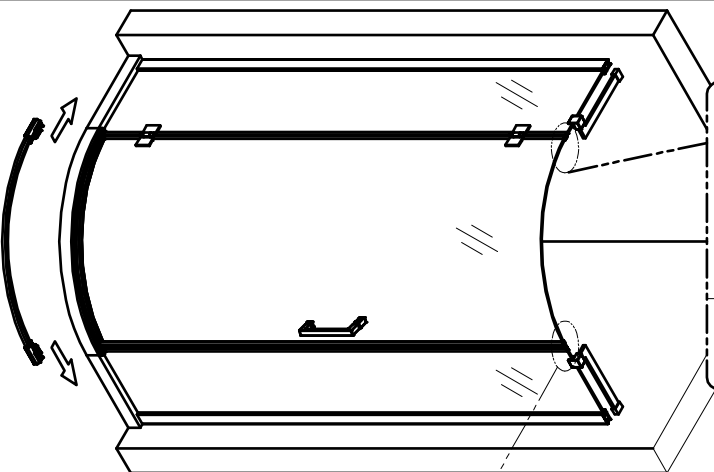

6-1 Ø3.2mm



6-2



6-3



6-4




6-5



6-6



6-7



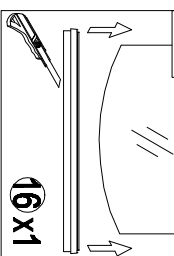


6


Door  
glass

Fixed  
glass


DRILL THROUGH THE  
PRE-DILLED HOLES  
IN THE WALL PROFILES  
(SHOWN RIGHT). USE  
3mm DRILL AND MAKE  
SURE YOU ONLY DRILL  
THROUGH ONE WALL  
THICKNESS.

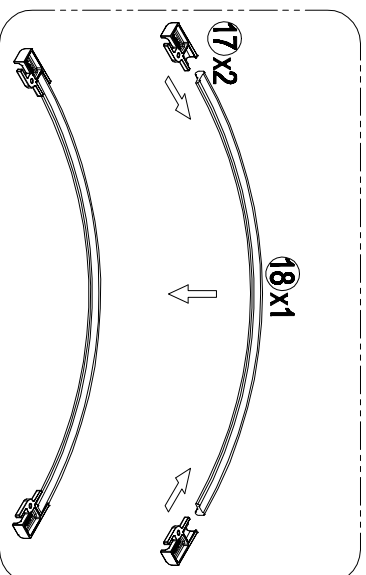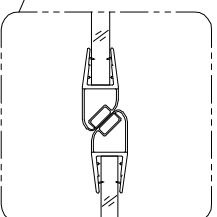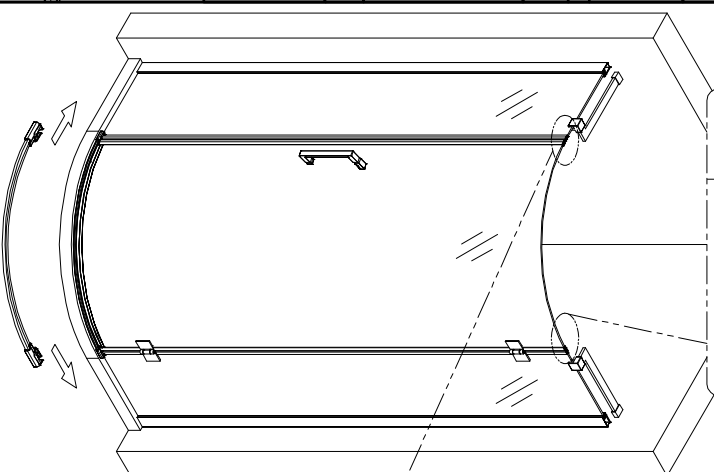


6-1 Ø3.2mm




6-2




6-3




6-4




6-5




6-6





6-7

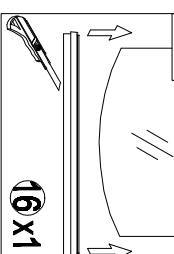

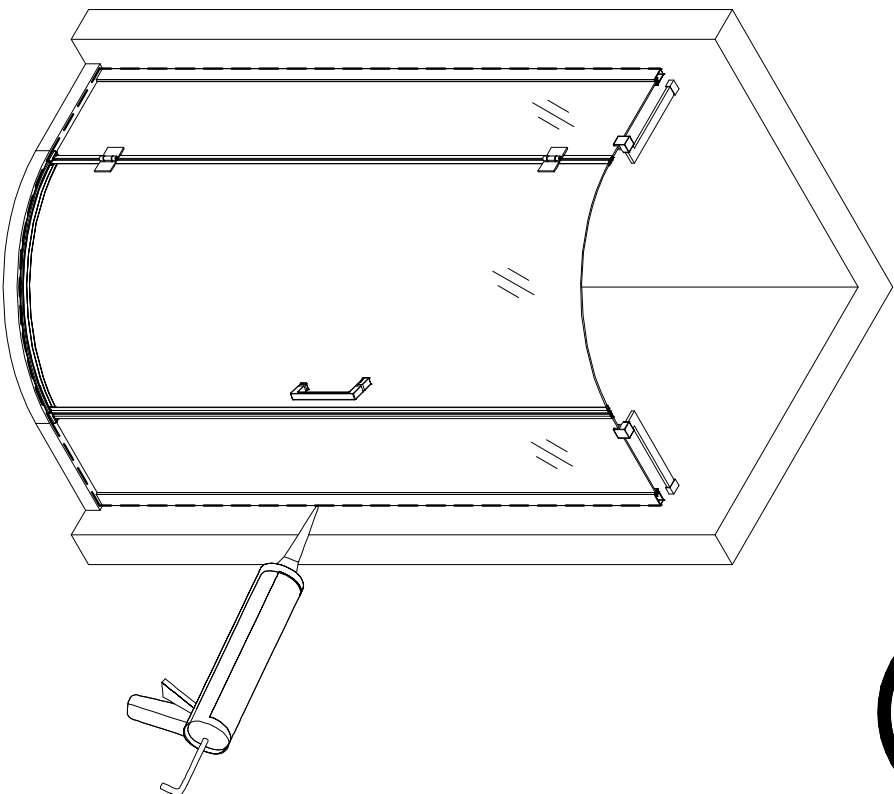

**Care Instructions:**

Do not use your shower enclosure within 24 hours of assembly .  
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

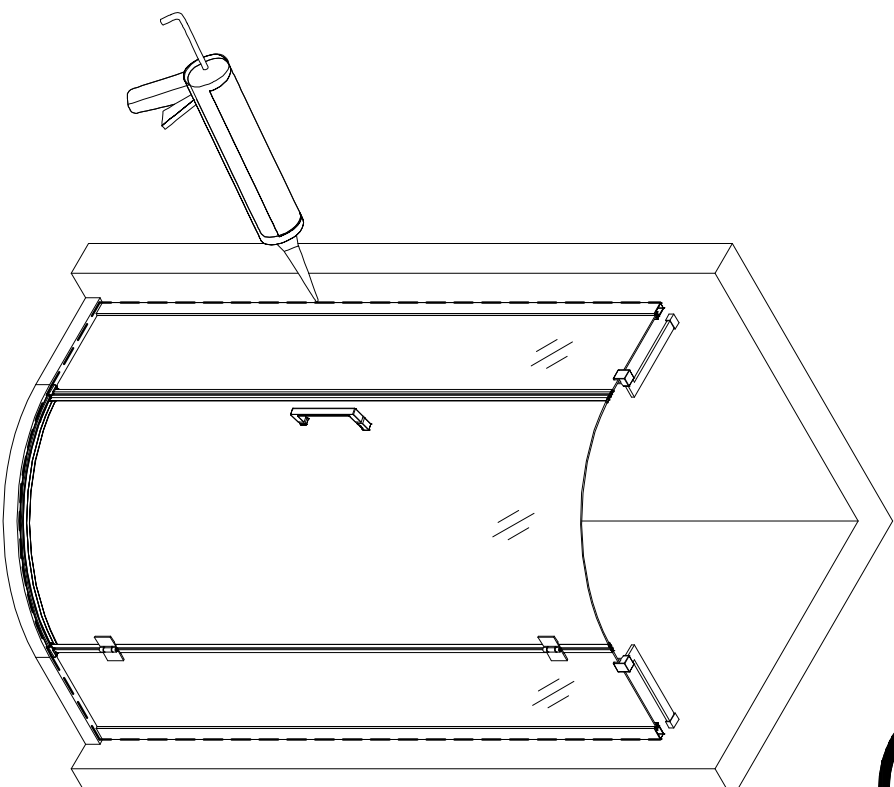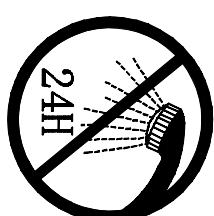

**Care Instructions:**

Do not use your shower enclosure within 24 hours of assembly .  
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.