



# Bath Waterfall Filler

The list is as follows:

**NOTE: FLEXIBLE HOSE NOT INCLUDE**  
**Minimum water pressure 2bar**

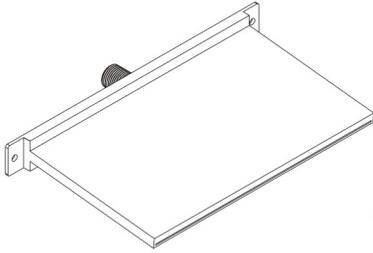


Main body of Bath Waterfall Filler (1 PCS)

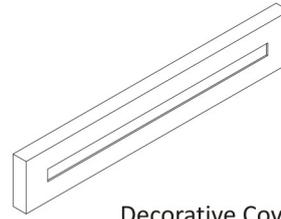


Decorative Cover (1 PCS)

Note: two sides of inside decorative cover have magnet


1

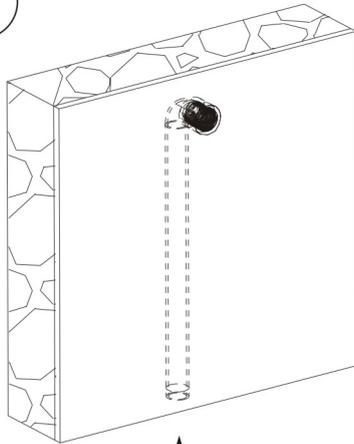

Inlet part




2

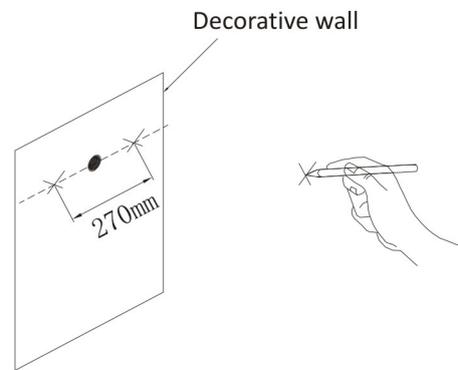


Mark where bath waterfall filler installed  
 Keep the fixed position in line with the center of outlet port

3

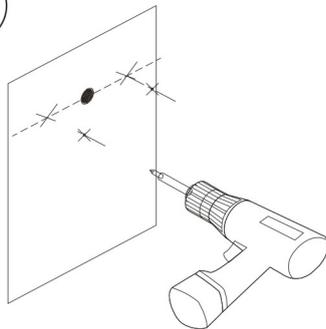


Drill

4

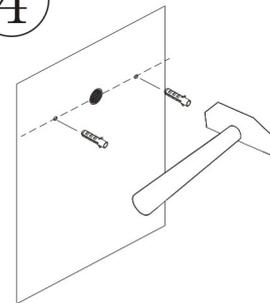


Knock in plastic expansion screw

5

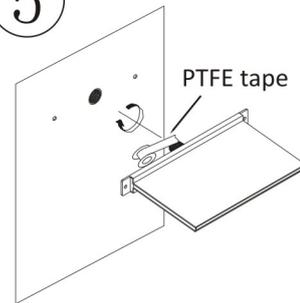


Wrap the PTFE tape around the water inlet joint of waterfall filler and screw it into G1/2 water inlet port. (please test and check sealing after completion)

6

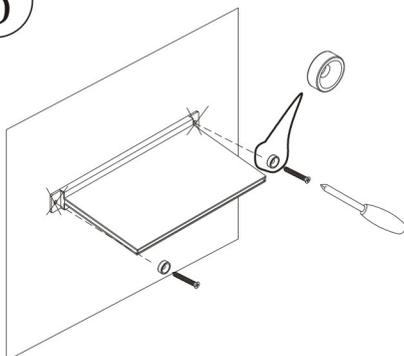


Fixed Bath Waterfall Filler  
 (Note direction of Magnet)

7

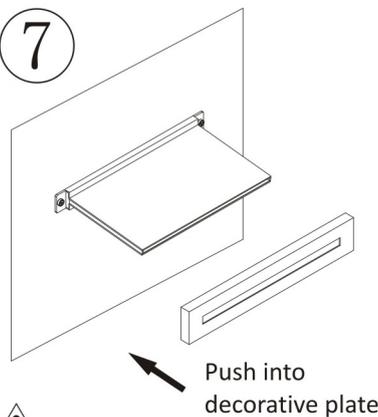

Install carefully to avoid damaging the surface  
 Note: the magnet in the decorative plate is attracted to the magnet fixed on the waterfall filler

8

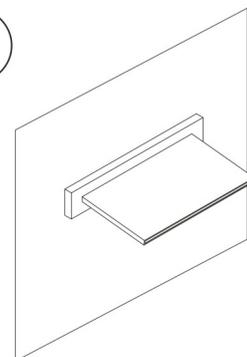

Complete the installation