



CLICK / CLEAR 6 DOUBLE PANE BATH SCREEN

NBDSC1150
CABDSC1150

IMPORTANT

BEFORE STARTING THE INSTALLATION ENSURE ALL THE DOOR SIZE MEASUREMENTS CORRESPOND WITH THE INSTALLATION AREA INCLUDING THE FINISHED TILED/PANELLED WALLS.

RETURNS DUE TO INCORRECT SIZING WILL NOT BE ACCEPTED.

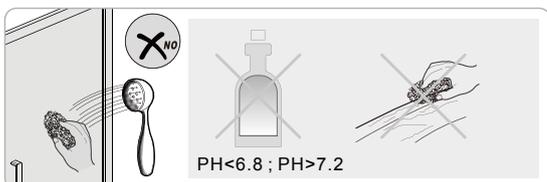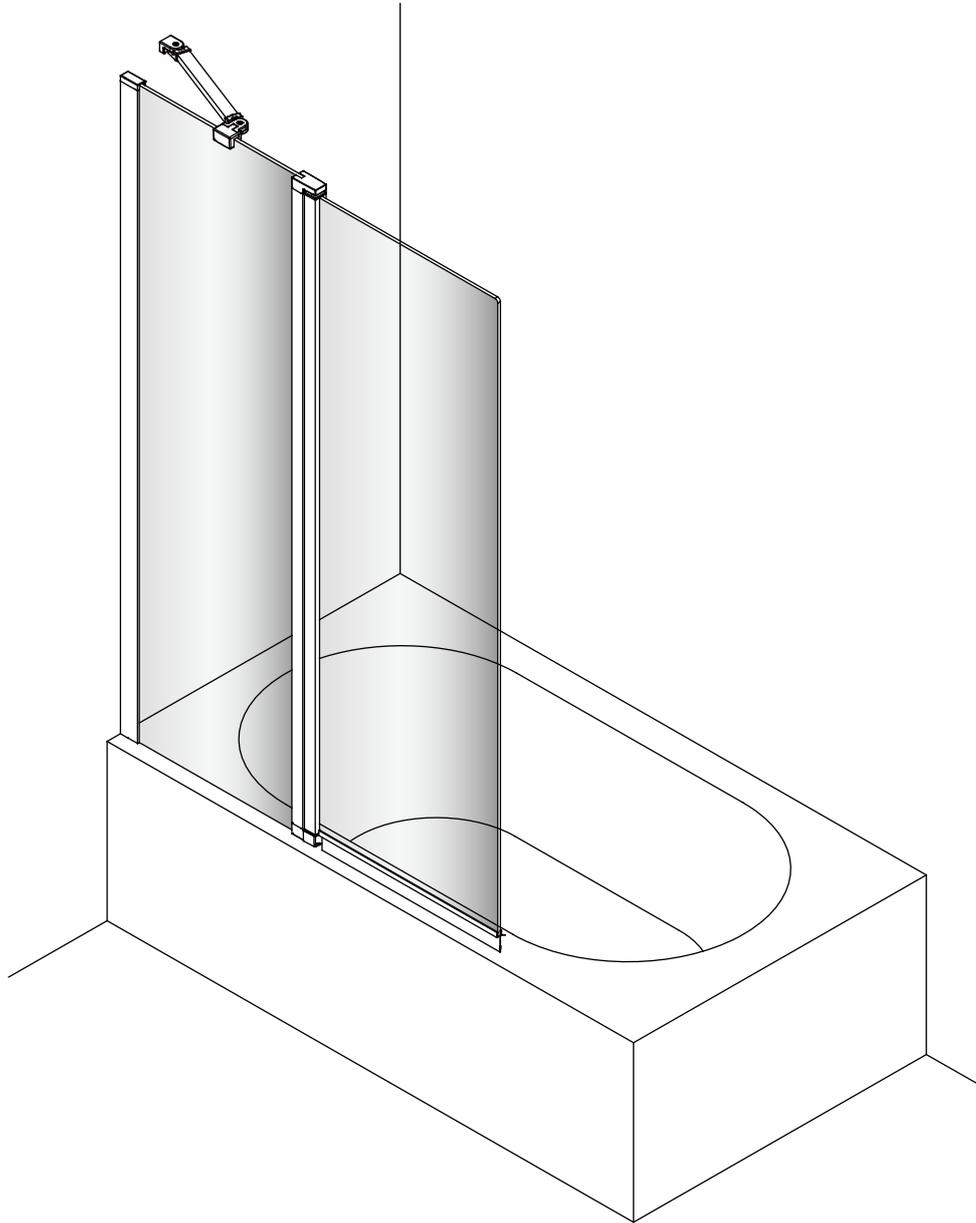

INSTALLATION INSTRUCTIONS

crosswater[®]
SHOWERING

IMPORTANT - Please read before installation

Please read these instructions carefully before starting installation and keep in a safe place for future reference.

Check the contents of the pack carefully before installation. Crosswater will not be held responsible for any de-fit / re-fit costs where faulty product has been fitted.

If any fault is found with materials or workmanship, it must be reported immediately to the manufacturer. Remedial action will be taken, based on information received, on condition that:


1. Full details are supplied to the manufacturer;
2. The bath screen has not been modified or tampered with;
3. The manufacturer is informed of any damage/shortages prior to installation.

We do not accept responsibility for any problems that may occur through incorrect installation.

The success of the installation and operation of any bath screen is, of course, dependant on the squareness, alignment and construction of the walls to which fixing is to be carried out.

VERY IMPORTANT

You must complete all tiling and grouting, and the bath **MUST** be level and fully sealed to the tiles before installation. If you do not fit the bath screen onto a tiled surface, or seal the tiles to the bath before installation, water may soak into the wall behind the wall profiles.

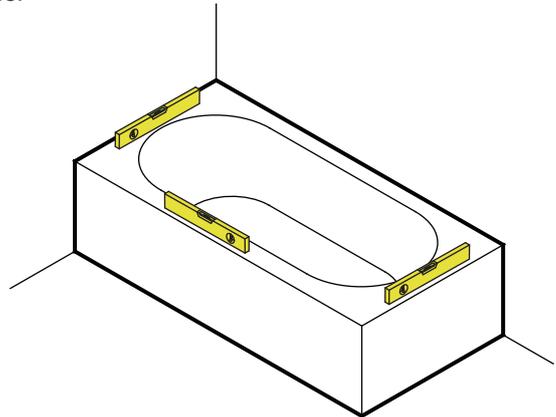

INSTALLATION - Advice and safety

The installation instructions are based on typical use and conditions.

All doors are designed to open outwards and inwards.

These hints have been prepared for your guidance, you must exercise due care at all times.

For Health and Safety 2 people must carry out the installation of this enclosure.

Handle glass with care. Although the glass supplied is toughened safety glass (EN12150), impacts can damage both the glass and the frame.

Warning!

Please check for any hidden pipes or cables before drilling holes in the wall.

When using power tools always follow the manufacturers user instructions.

If the Framework is sealed to the bath on the inside, any water that may get into the framework will not be able to drain back into the bath, this may cause the enclosure to leak.


Leave the silicone sealant to dry for 24 hours before using the enclosure.

CARE AND CLEANING

Do not use solvents or abrasive material or chemicals to clean the bath screen.

Only clean using soapy water and a soft cloth, rinse thoroughly afterwards.

INSTALLATION - Left and Right hand

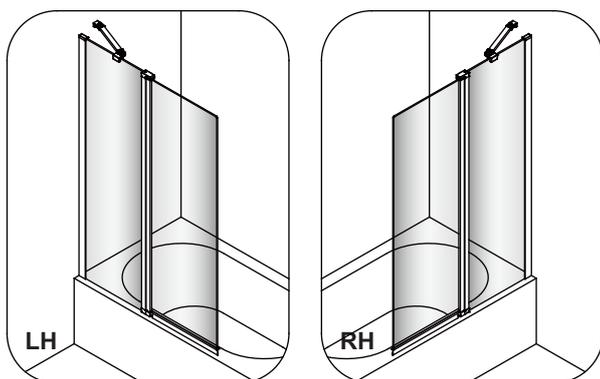





This product is reversible for left or right hand opening. Please follow the diagram, and refer to the detail for your choice of installation.

- Left entry: The parts detailed as “ LH ” should be used.
- Right entry: The parts detailed as “ RH ” should be used.

CONTENTS

CLICK / CLEAR 6 DOUBLE PANE BATH SCREEN

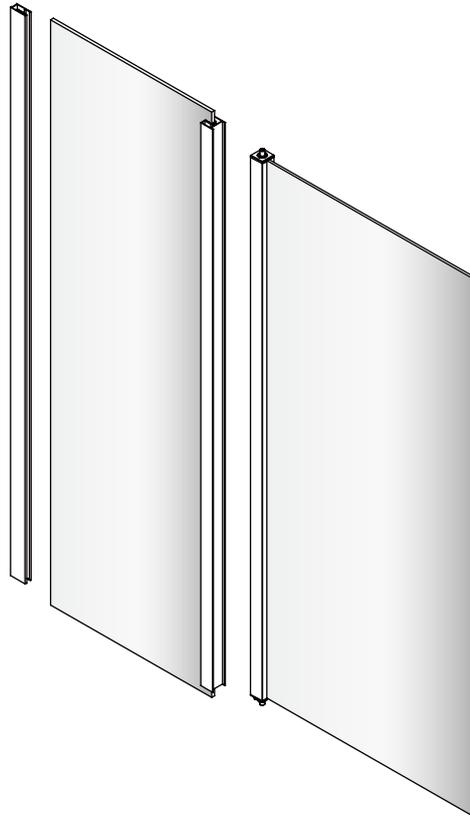


A		ST4 *40mm Screw x 3	H		Seal x 1	O		Cover x 1
B		Wall Plug x 4	I		Top Pivot x 1	P		Cover x 1
C		Bottom Pivot x 1	J		Top Pivot Cover x 1	Q		Waterproof Strip x 1
D		ST3.5*25mm Screw x 2	K		Install Block x 1	R		Cover x 1
E		Bottom Pivot Cover (LH) x 1	L		Support Bar x 1	S		2.5mm Allen Key x 1
F		Bottom Pivot Cover (RH) x 1	N		ST4 *40mm Screw x 1			
G		Sealing Strip x 1	M		Cover x 1			

Tools and equipment needed


Drill, 6mm Masonry drill bit, Tape measure, Knife, Rubber Mallet, Wood, Philips screwdriver, Spirit level, Pencil, Silicone sealant.

 Please follow diagram below for the correct assembly for Left or Right hand installation.


Left Hand (LH)

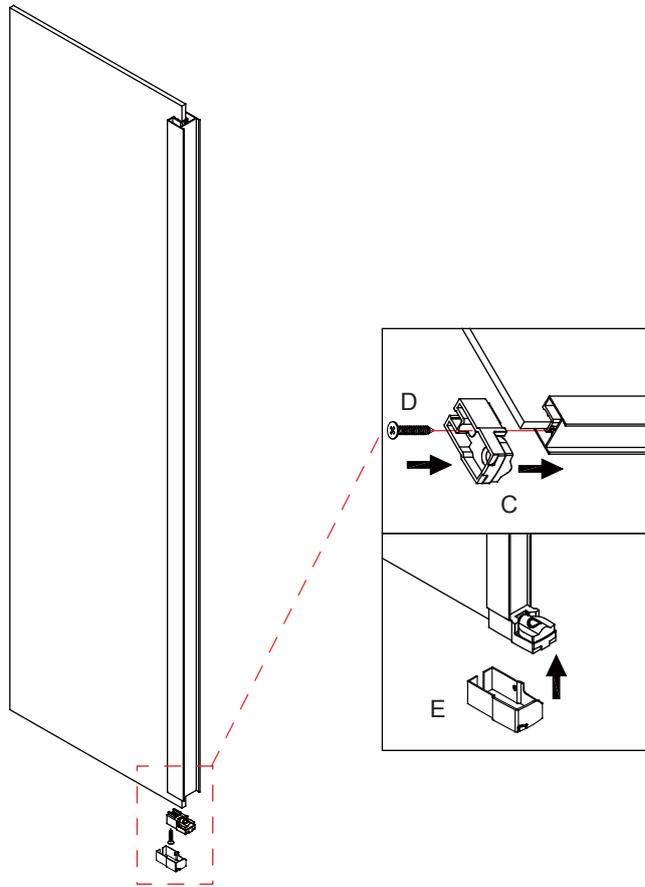

Right Hand (RH)

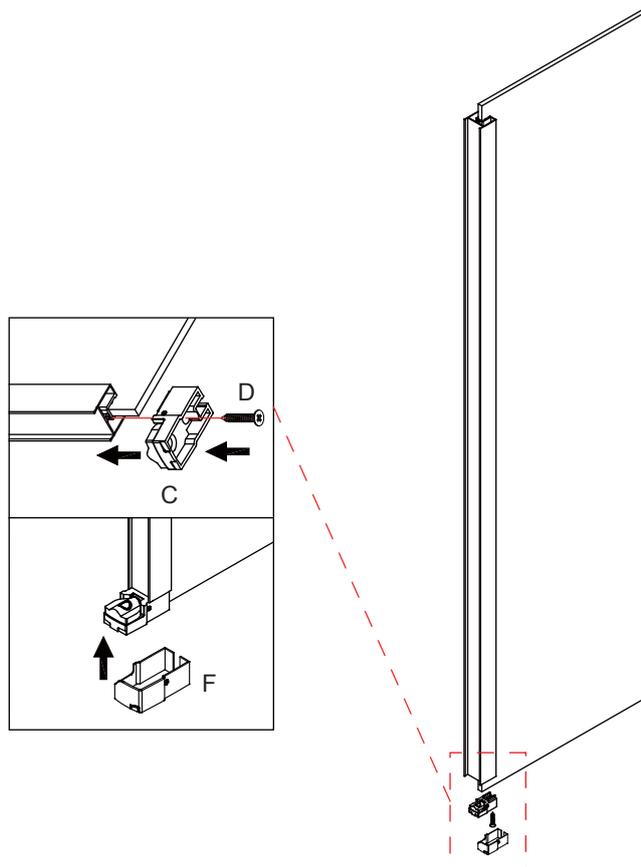

Step 1 - FITTING AND POSITIONING WALL CHANNEL



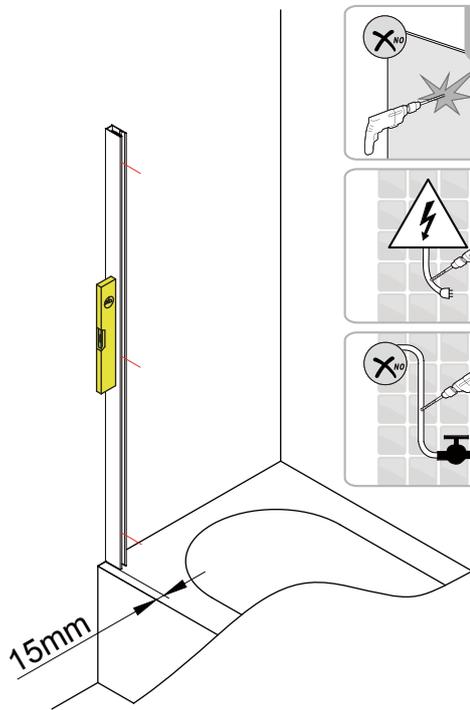


Place wall channel in position on the bath (15mm in from the edge of the bath), use a spirit level to ensure that it is vertical, and mark all 3 fixing holes on the wall.

Drill holes in the positions marked using a 6mm masonry drill bit. Insert wall plugs (B) into all of the holes (beyond the thickness of the tile).




Fix the wall channel to the wall using 3 screws (A).

Note: Inject silicone sealant into the holes before inserting the screws to seal the holes.

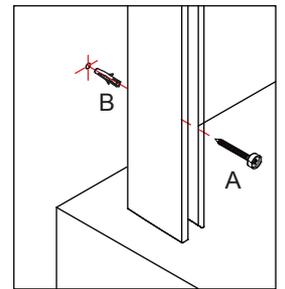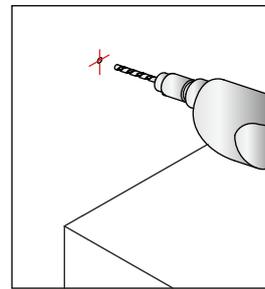
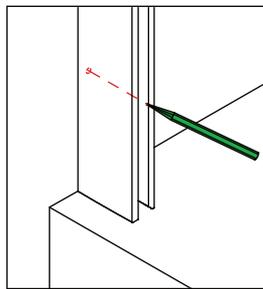


Step 2



Push the pivot door into the wall channel.

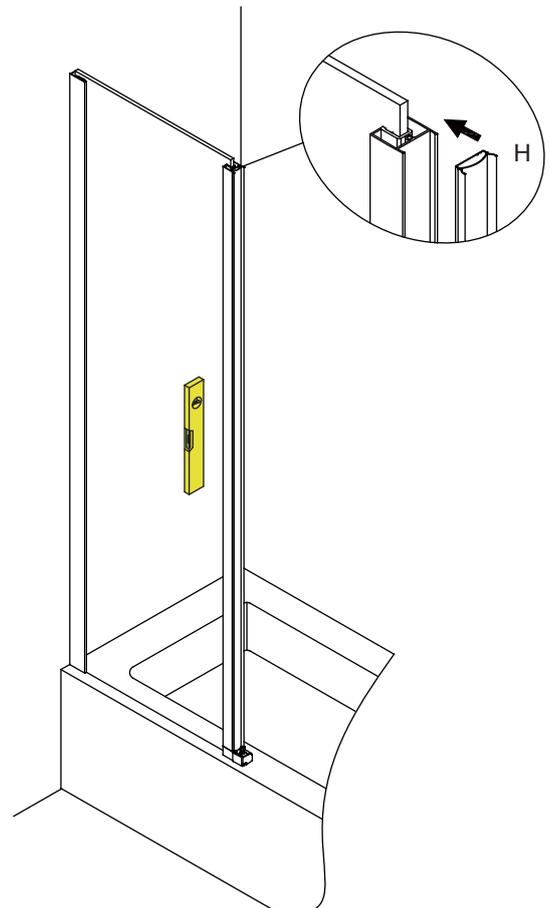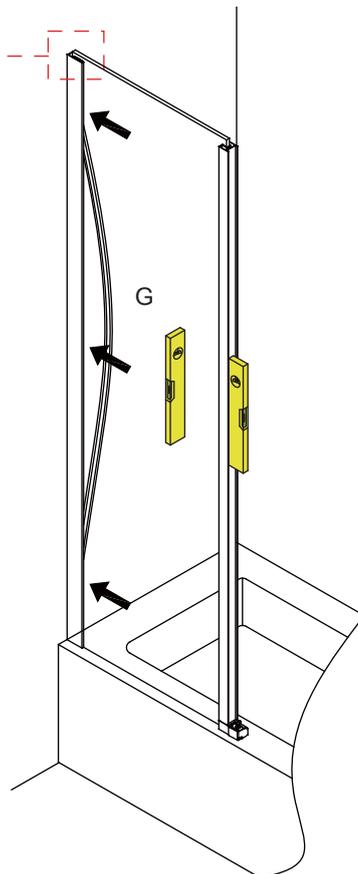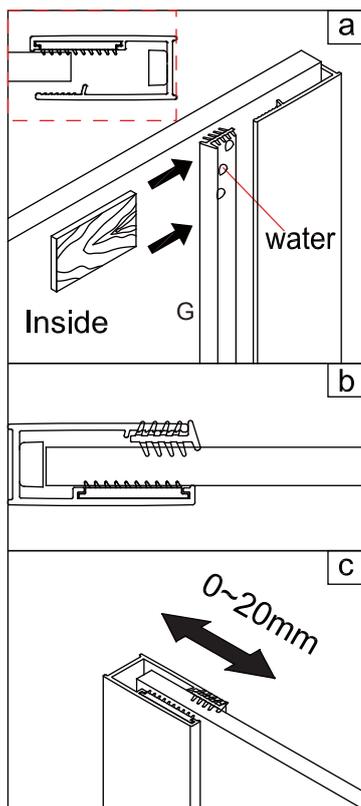

Step 4

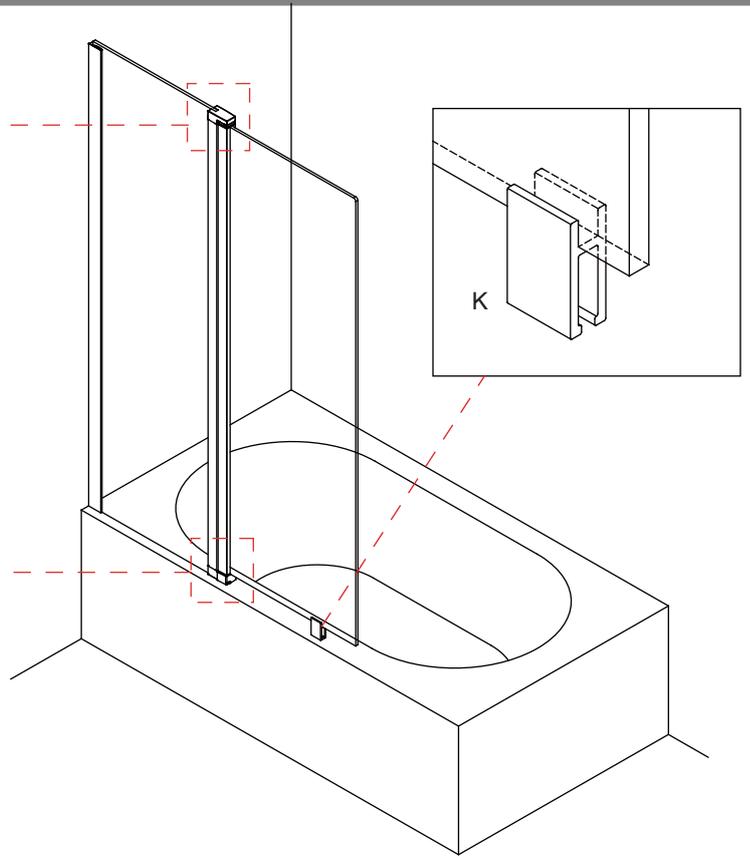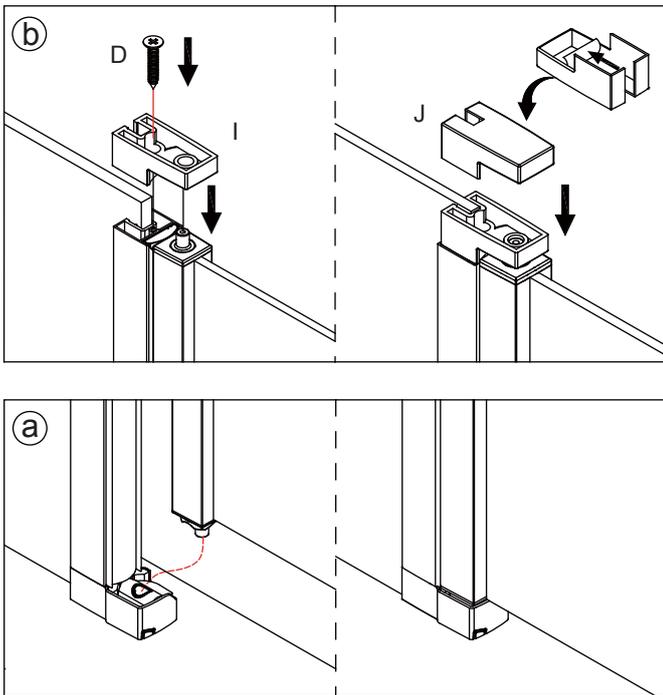

Step 5

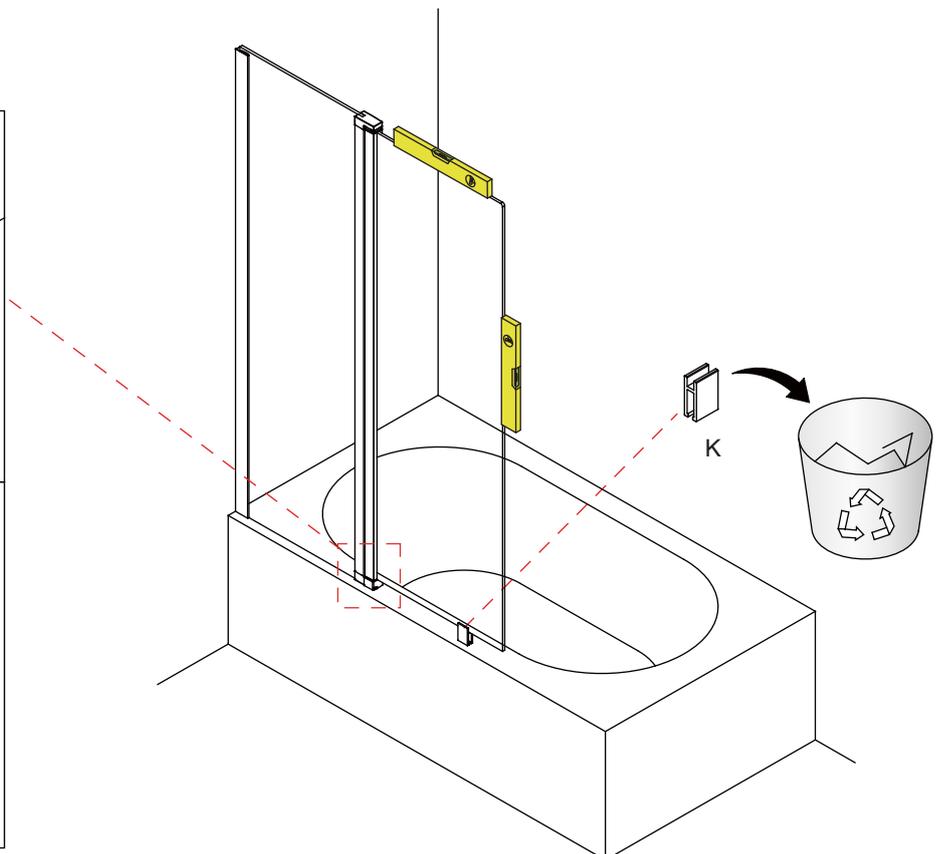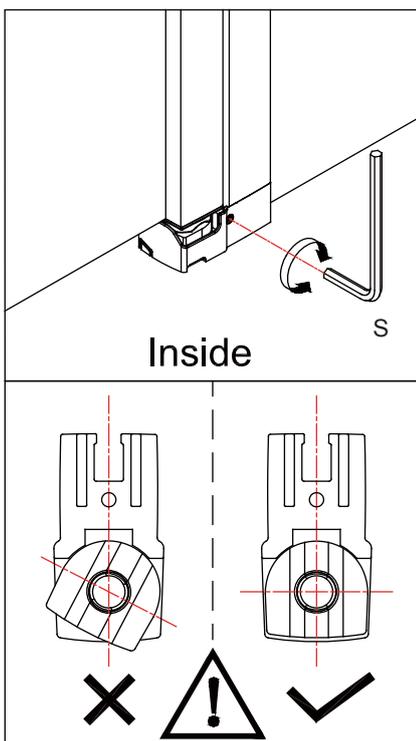



Step 6

Place wall bracket (L) in position


Use a spirit level to check the level.

Mark the hole positions on to the wall.


Drill holes in the positions marked using a 6mm masonry drill bit. Insert wall plugs (B) into the two holes. (beyond the thickness of the tile).

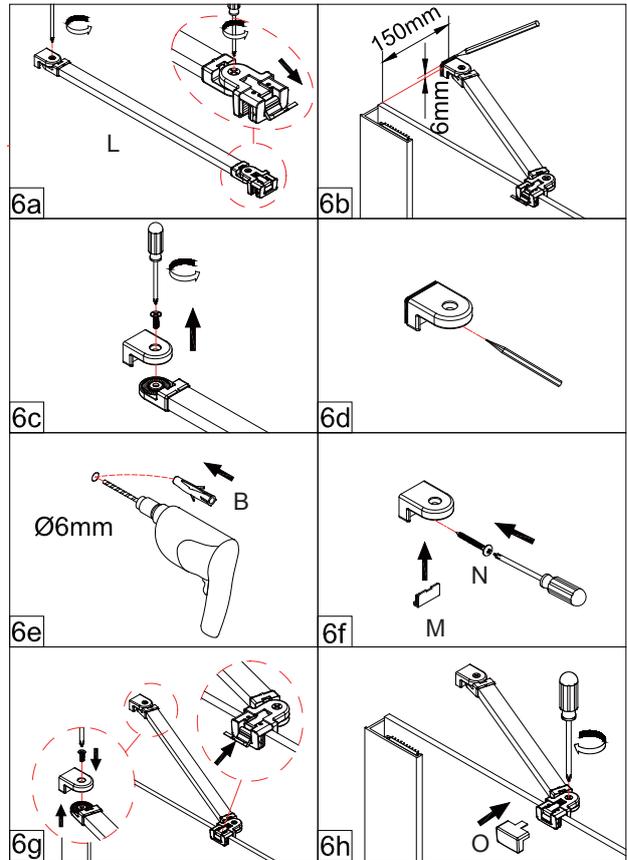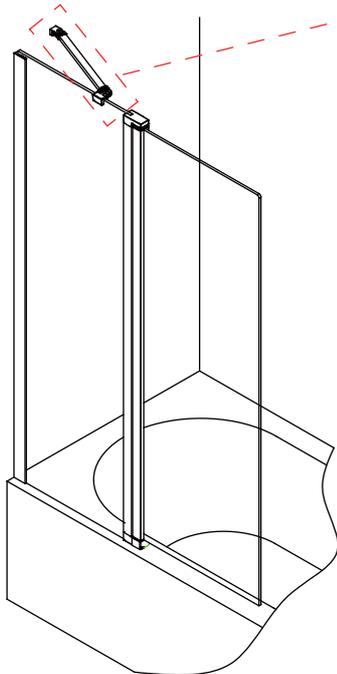

Step 7

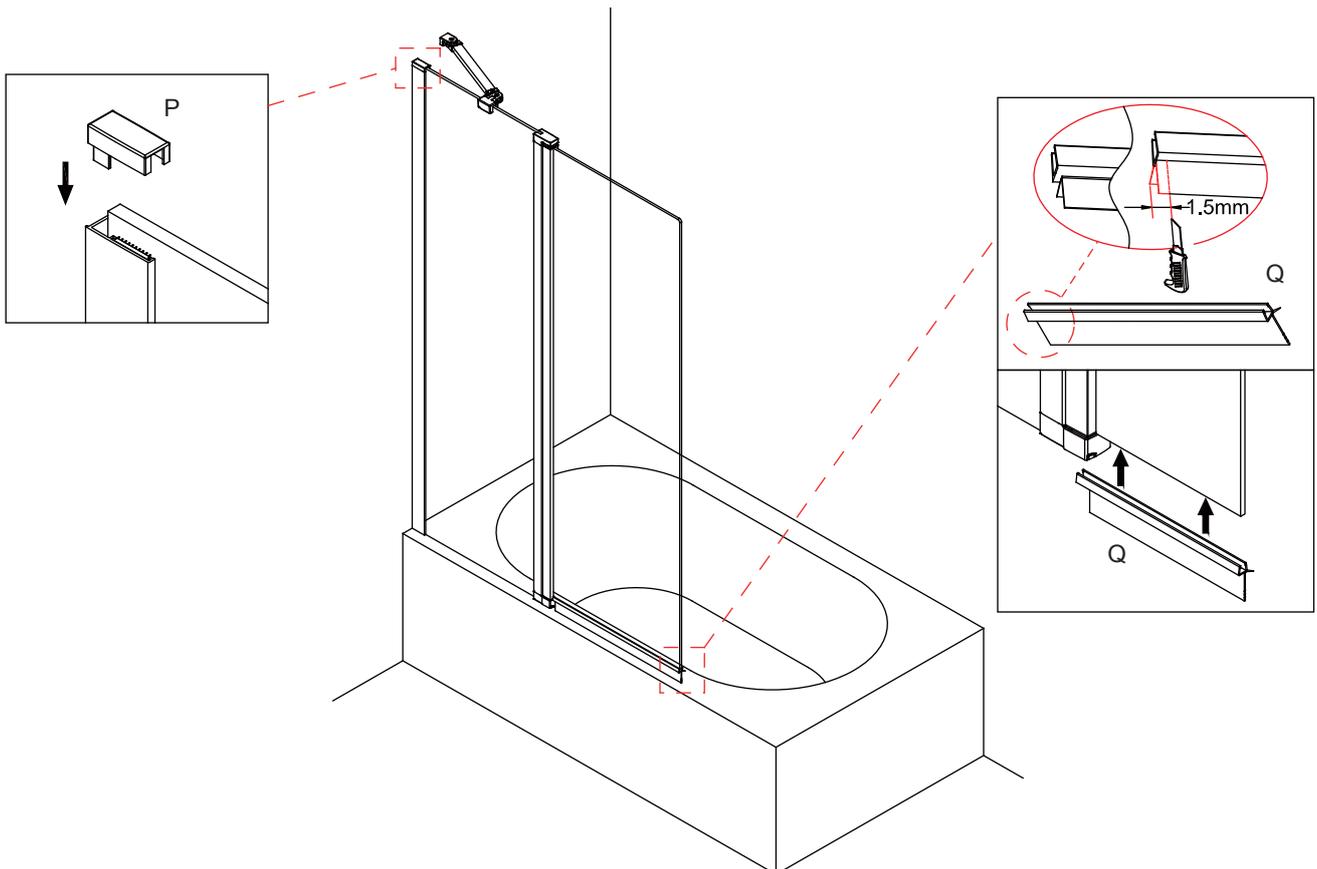

Step 8

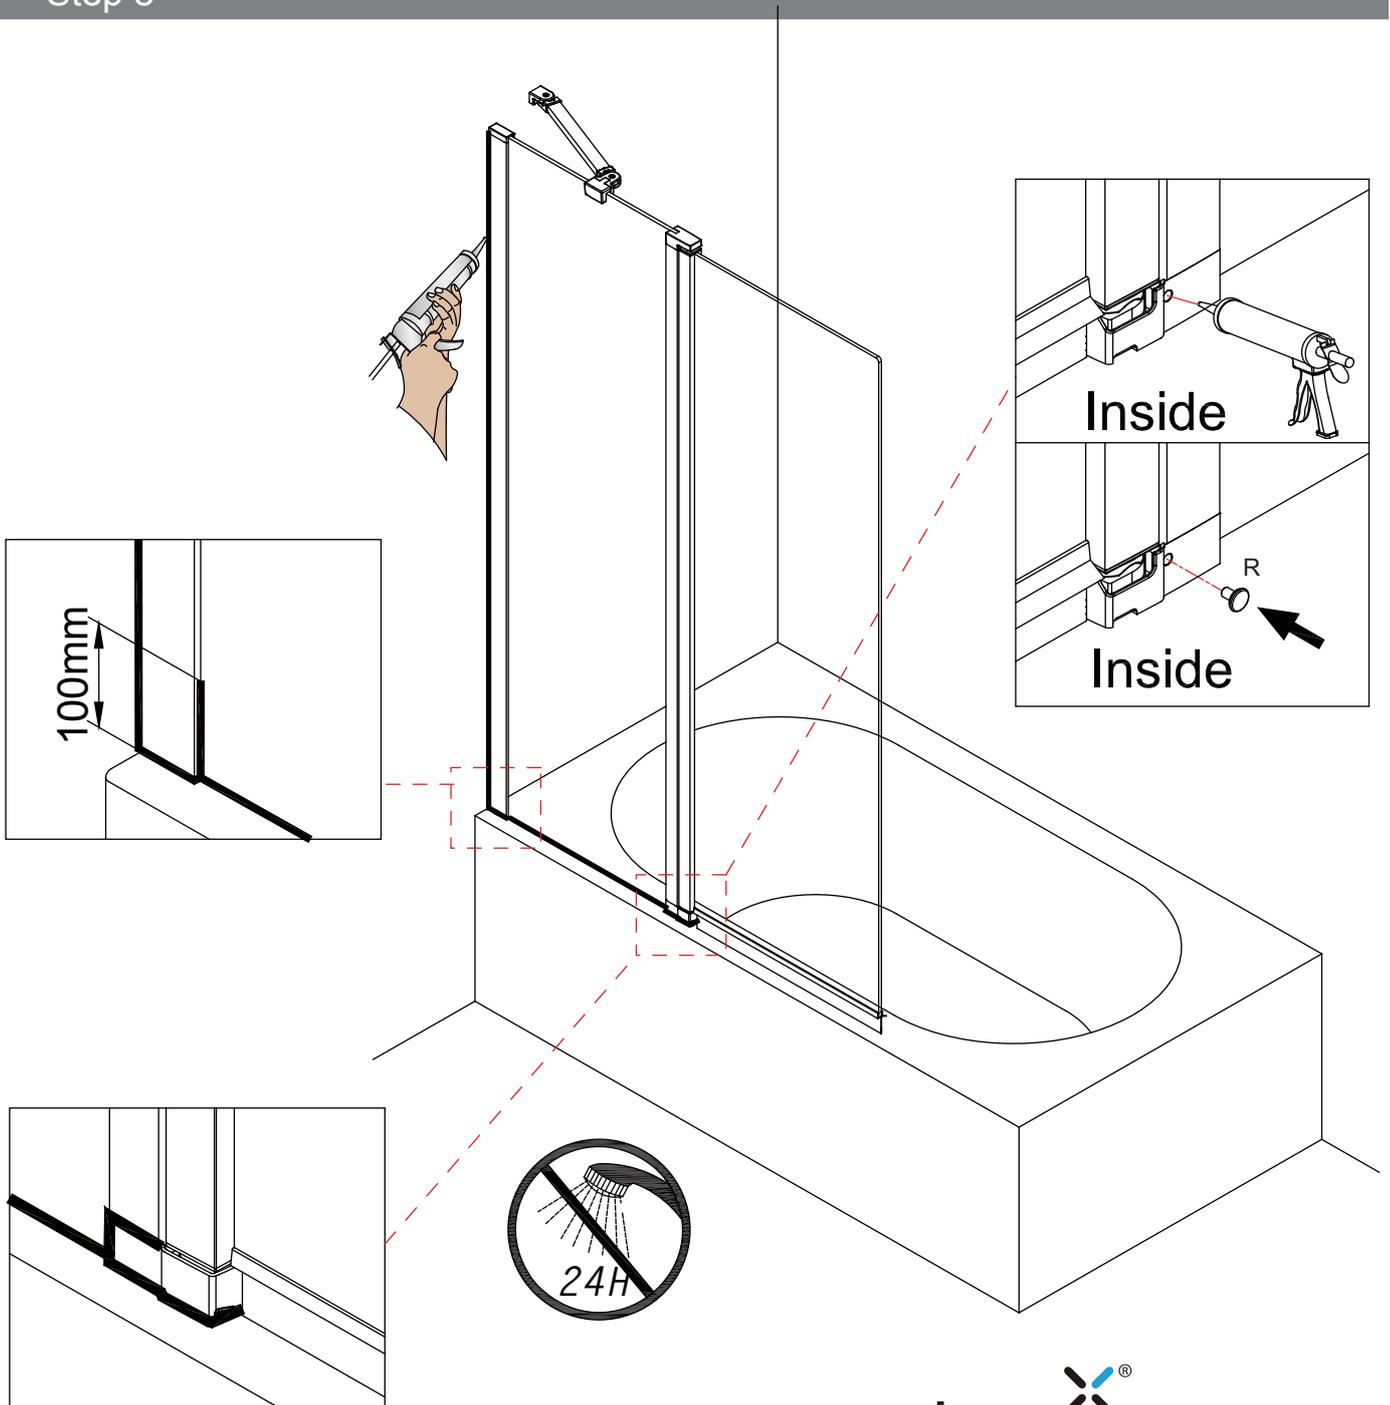

crosswater[®]
SHOWERING

For any further information please contact Crosswater
Phone number, 0345 873 8840
Website, crosswater.co.uk
Email address, sales@crosswater.co.uk
The manufacturer reserves the right to make technical modifications without prior notice.