

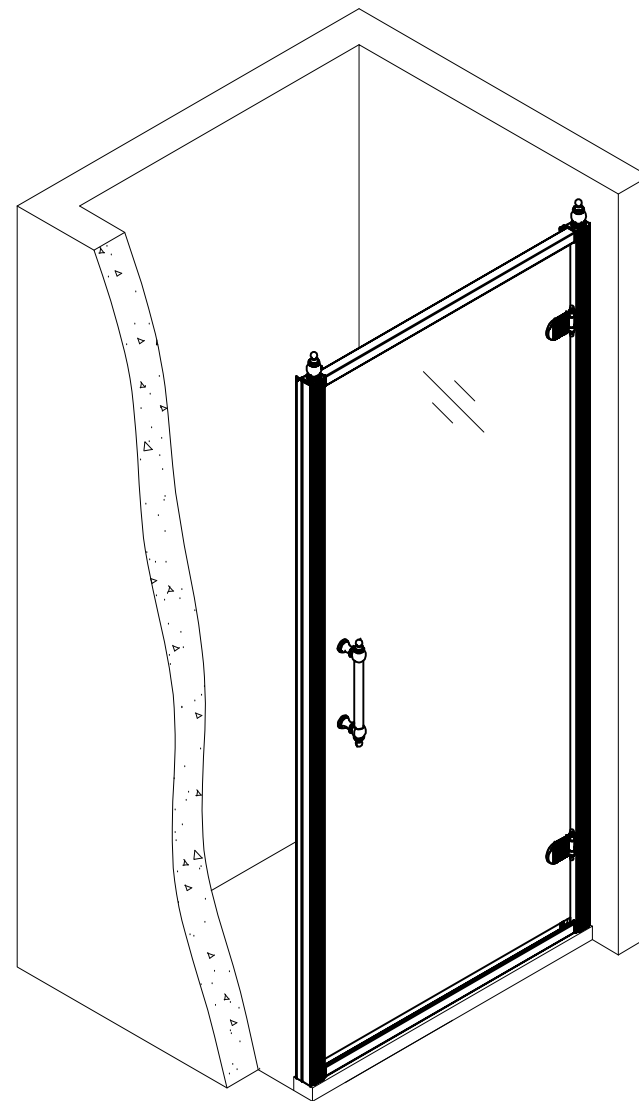
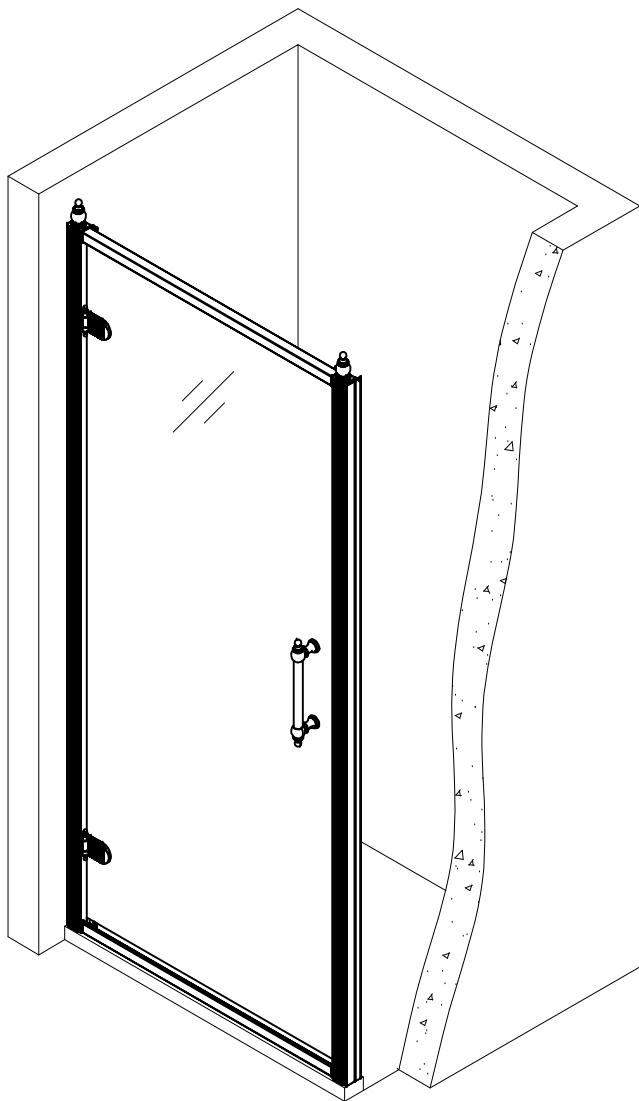
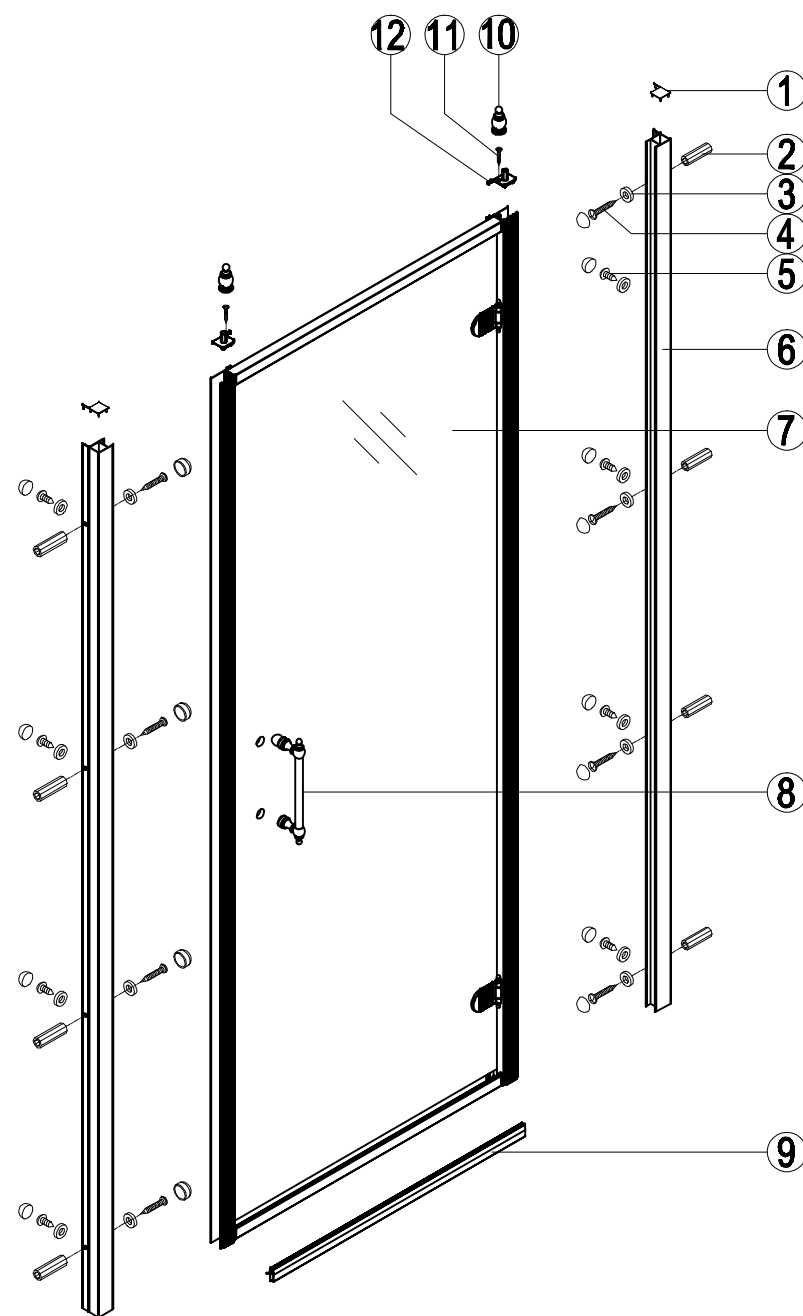
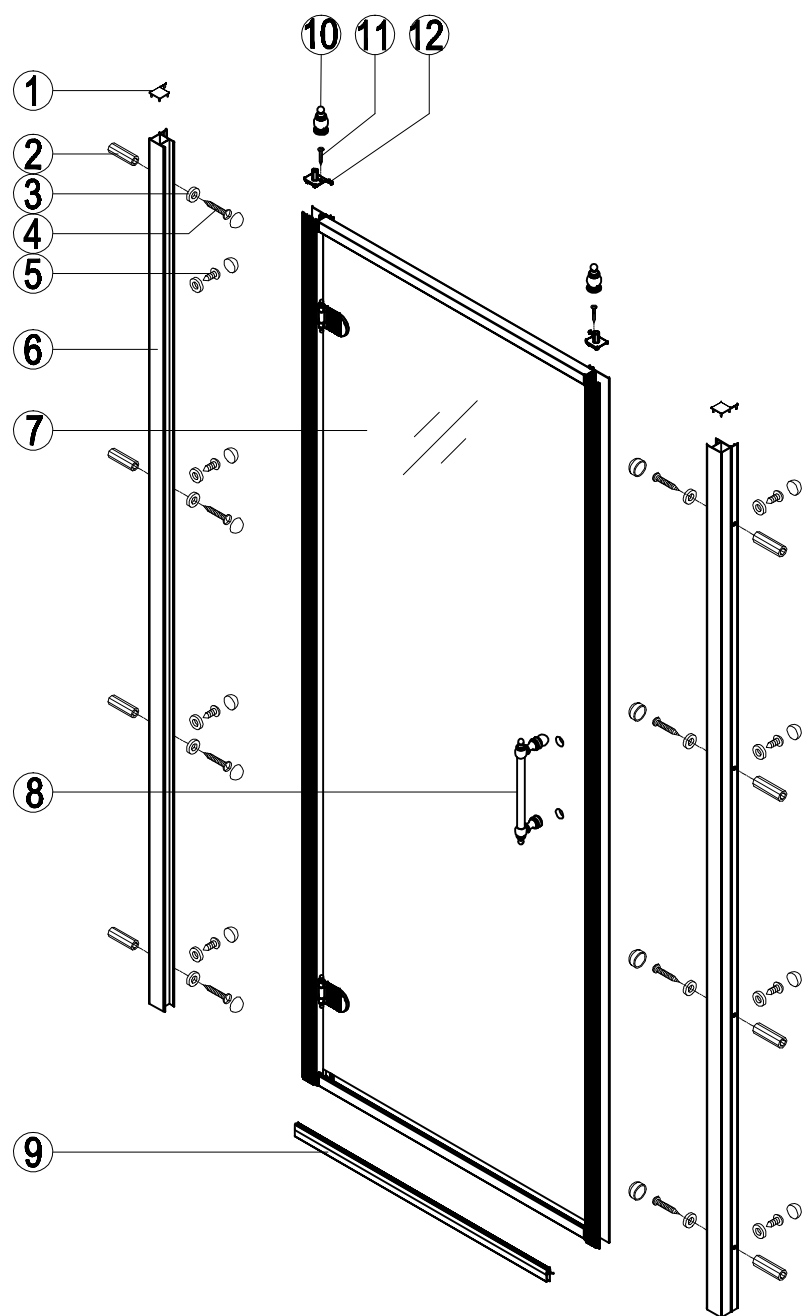

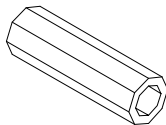
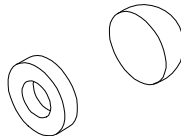
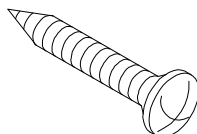



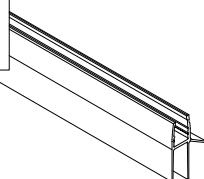



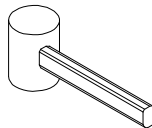
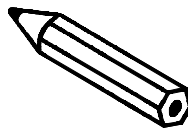
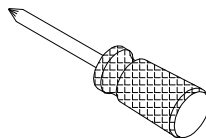
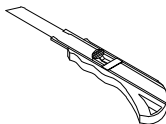





INSTALLATION MANUAL

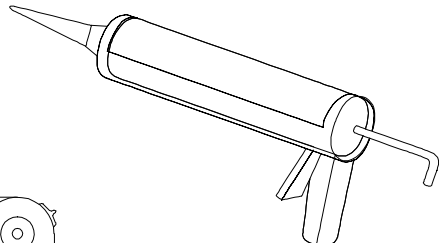

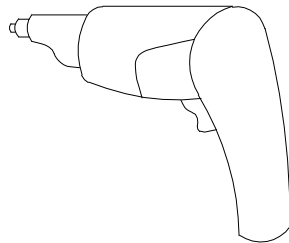


1 L R  MS-4Y011Pair	2  D6x308Pcs	3  Ø12x616Pairs	4  ST4x308Pcs	5  ST4x128Pcs
6  MS-4W012Pcs	7  MS-4X011Pc	8  MS-4X011Pc	9  MS-4Z091Pc	10  MS-4X022Pcs
11  ST4x152Pcs	12 L R  MS-4Y021Pair	Tools: Ø6mm Ø3.2mm   		

1

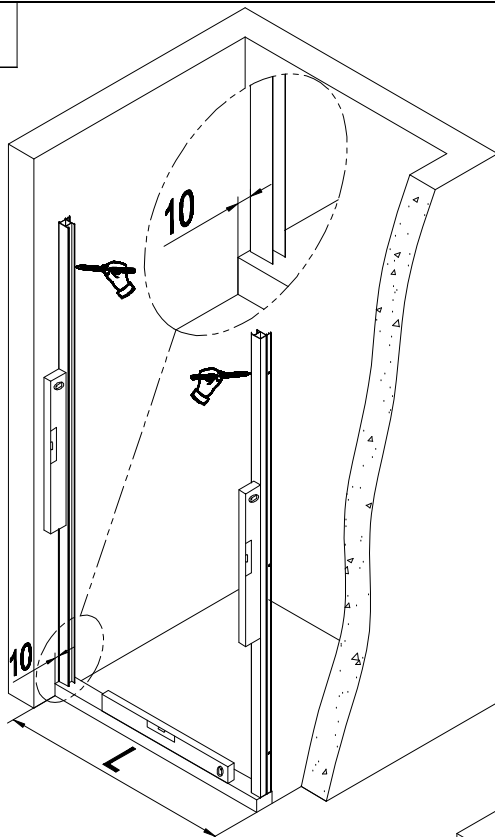


	L		L
800	750-790	800	750-790
900	850-890	900	850-890

1-1




1-2


Ø6x30mm




2x8




1

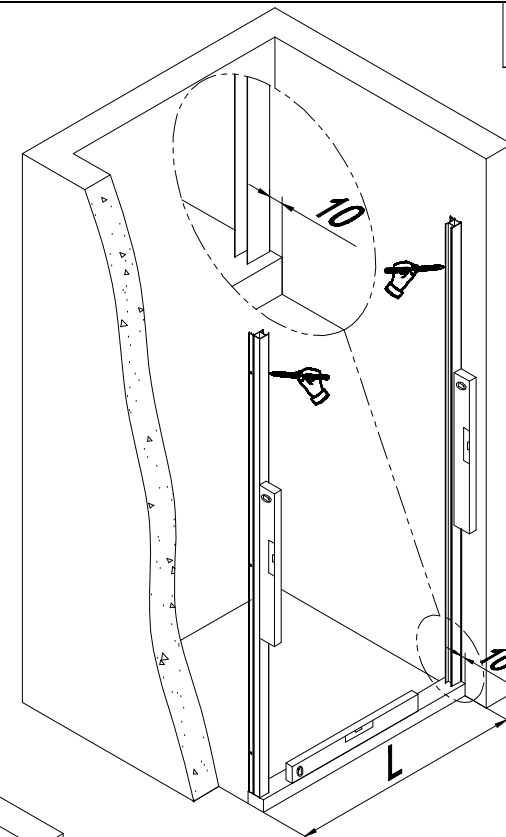


1-1






Ø6x30mm	1-2
---------	-----



2x8




2

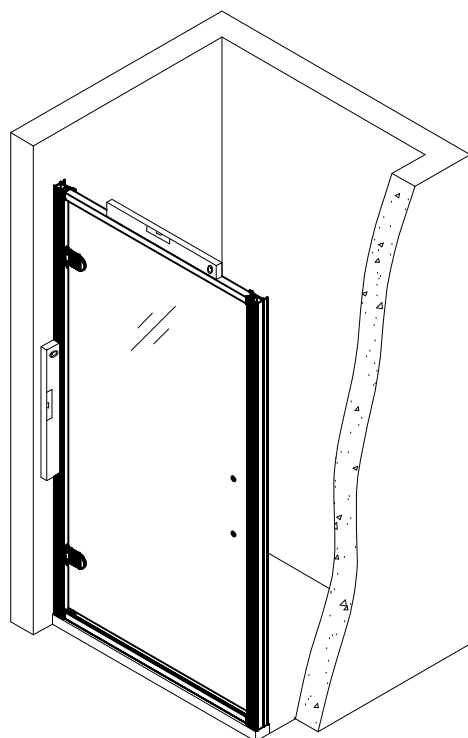

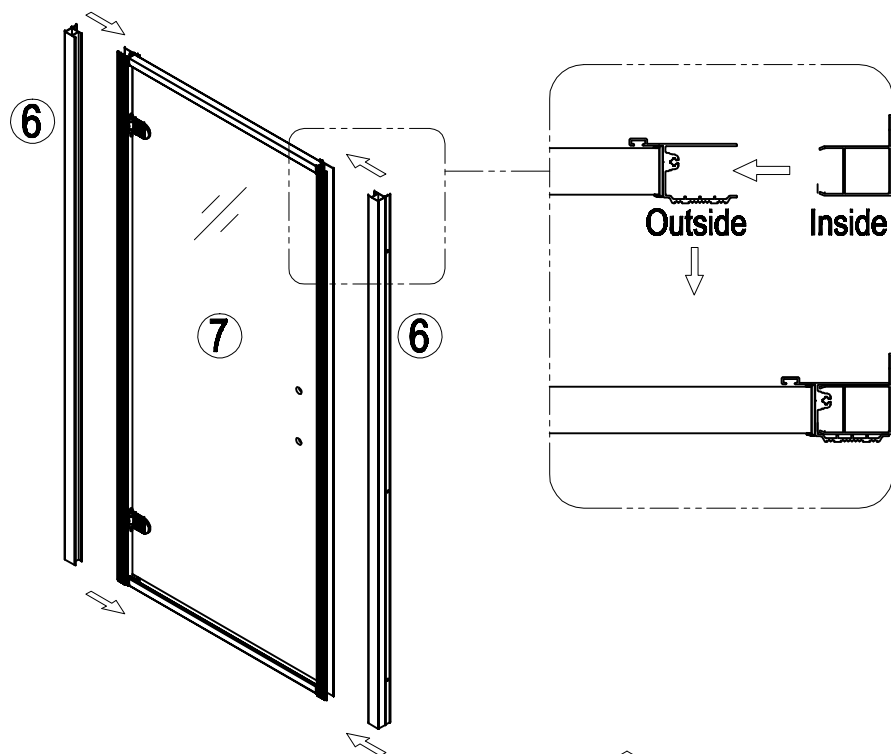


2-1

③x8
④x8

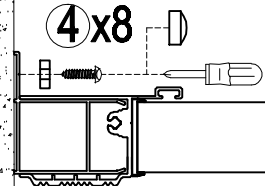


2

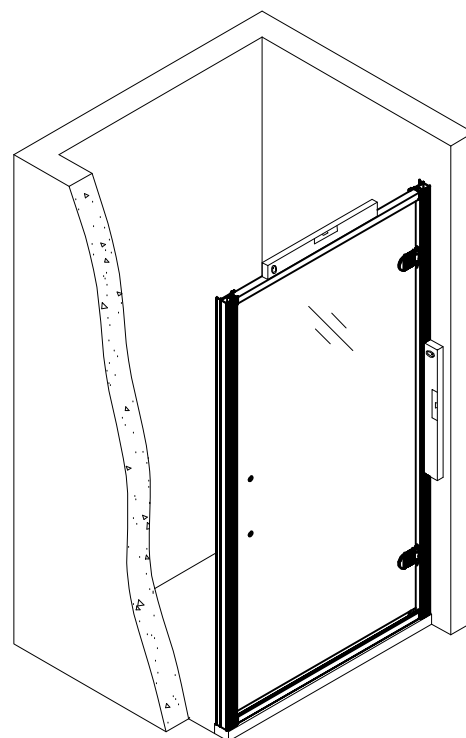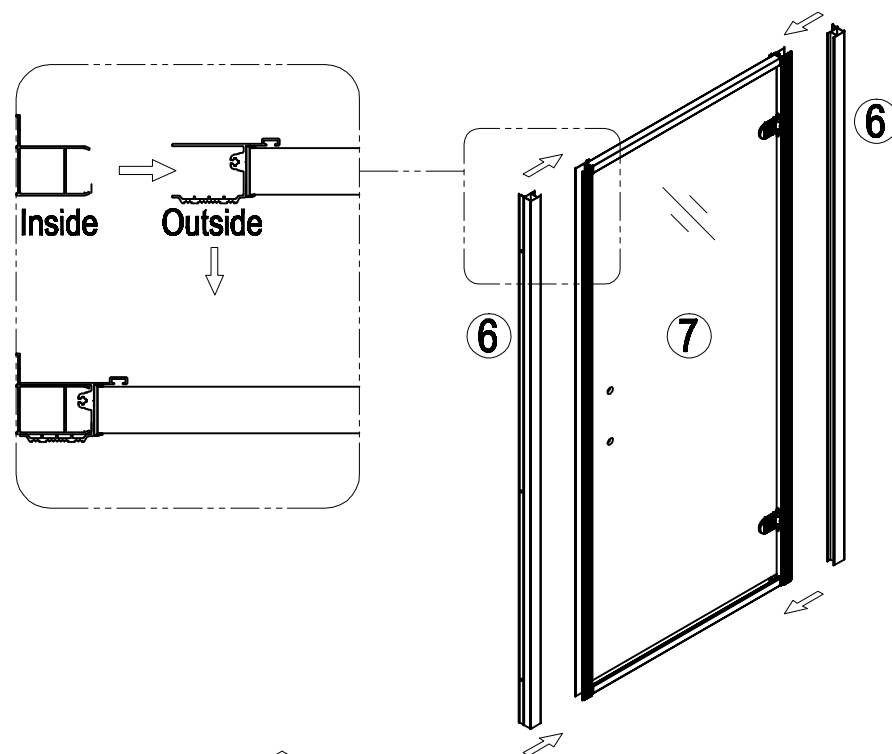


2-1

③x8
④x8

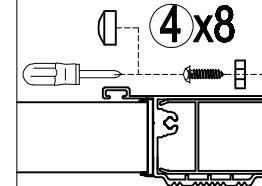

3

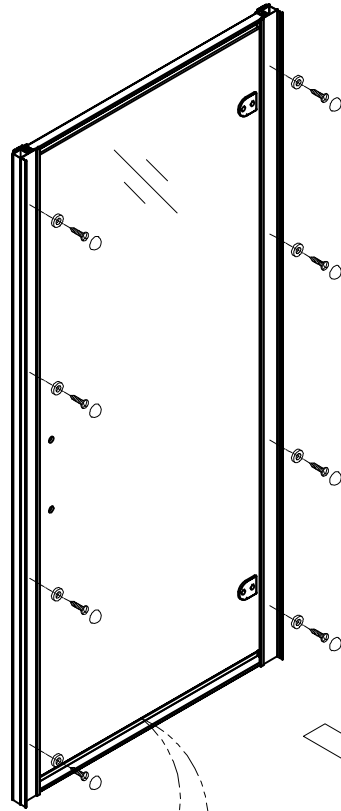

IT IS VERY IMPORTANT
TO HAVE THE BOTTOM
OF THE GLASS PARALLEL
TO THE TRAY TOP FACE,
IT MUST HAVE A 35 MM
EVEN GAP ALL THE WAY
ALONG.

3-1 Ø3.2mm
0-20mm adjust



3-2 3x8
5x8

3-3


3-1 Ø3.2mm
0-20mm adjust

3-2 3x8
5x8

3-3


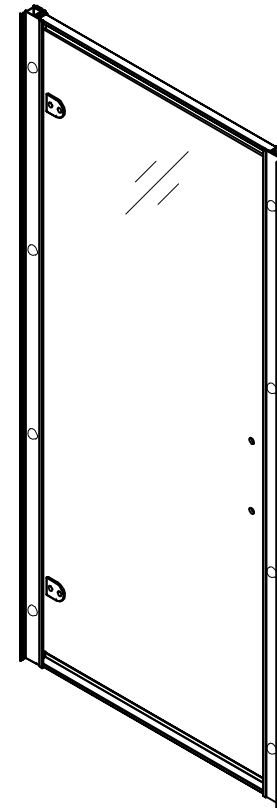
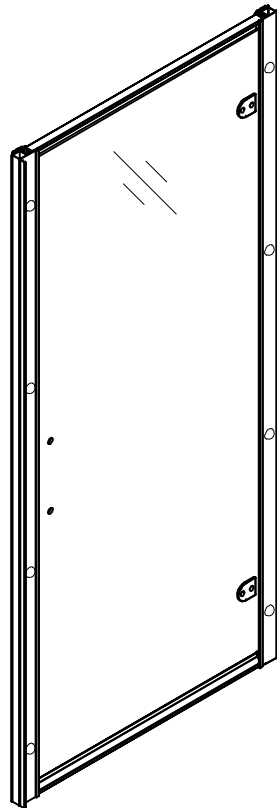


3



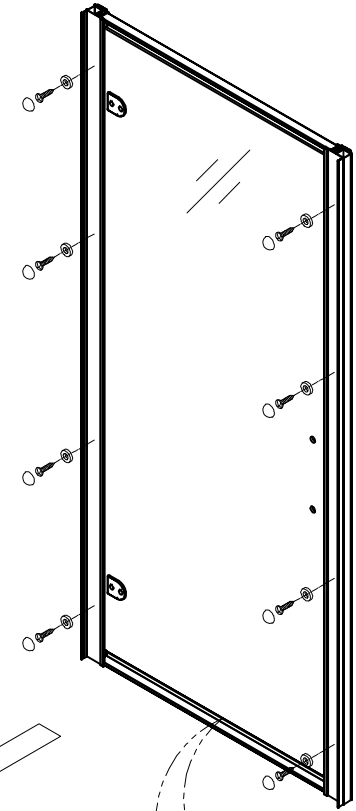


IT IS VERY IMPORTANT
TO HAVE THE BOTTOM
OF THE GLASS PARALLEL
TO THE TRAY TOP FACE,
IT MUST HAVE A 35 MM
EVEN GAP ALL THE WAY
ALONG.





4

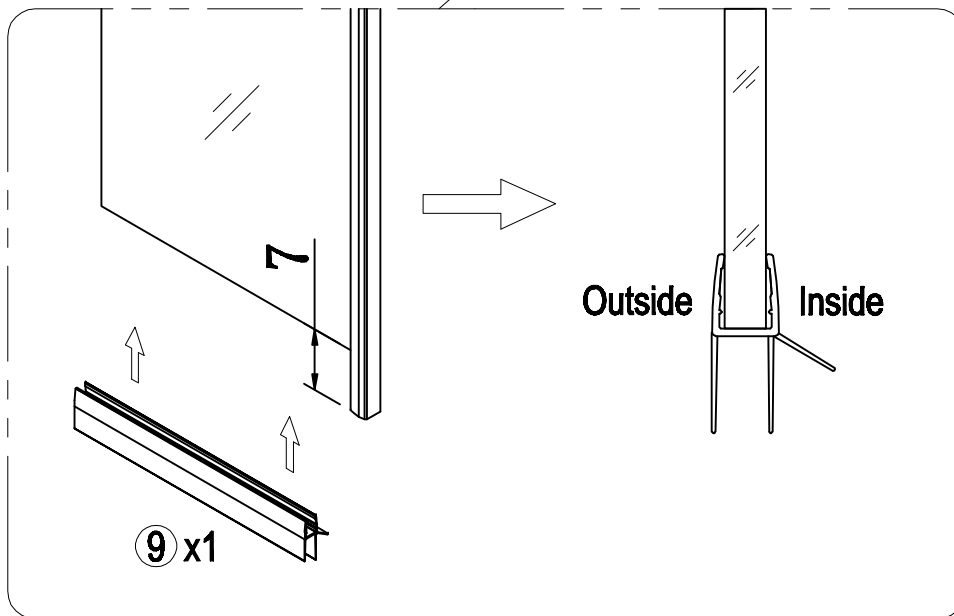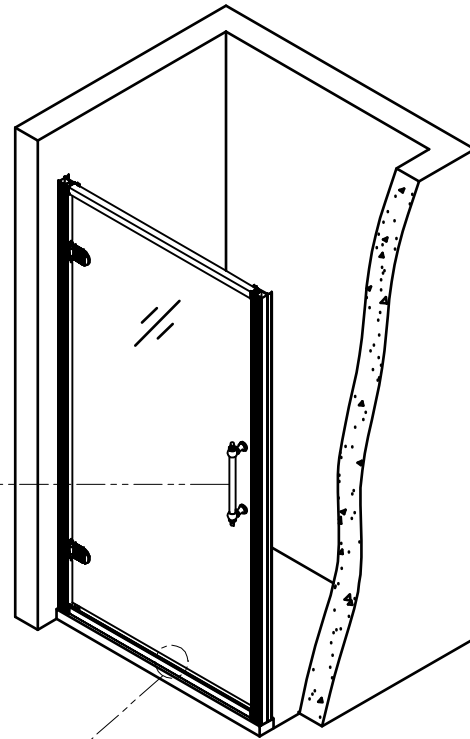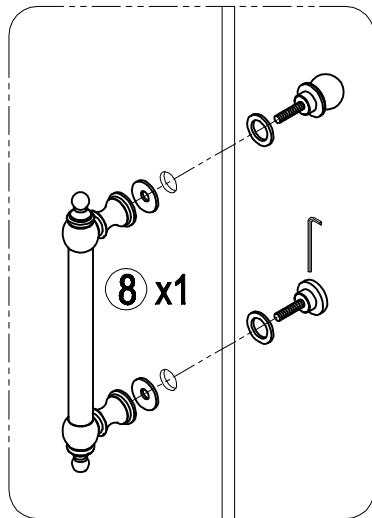




4

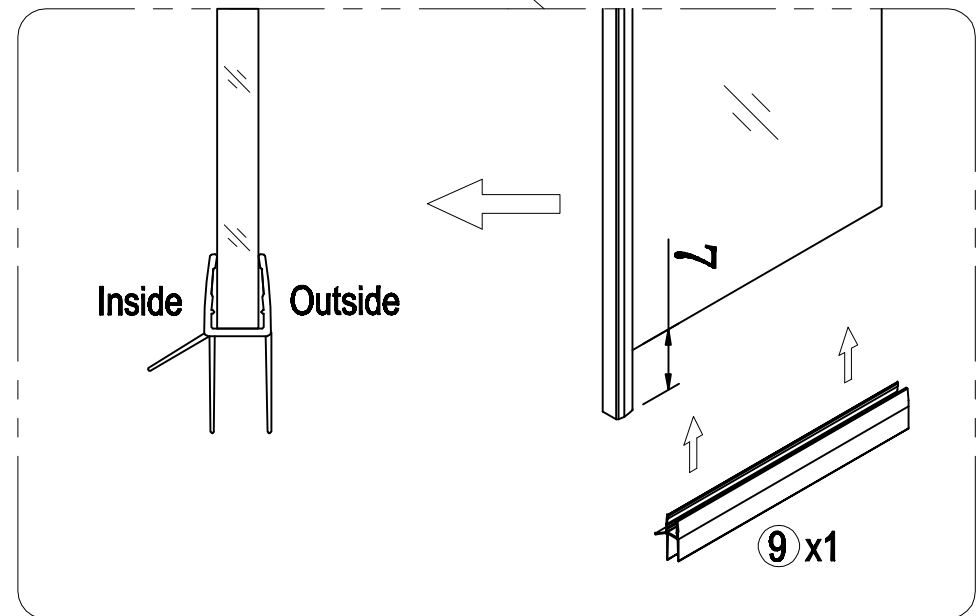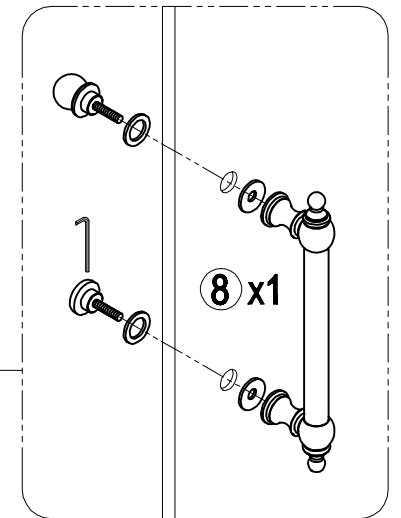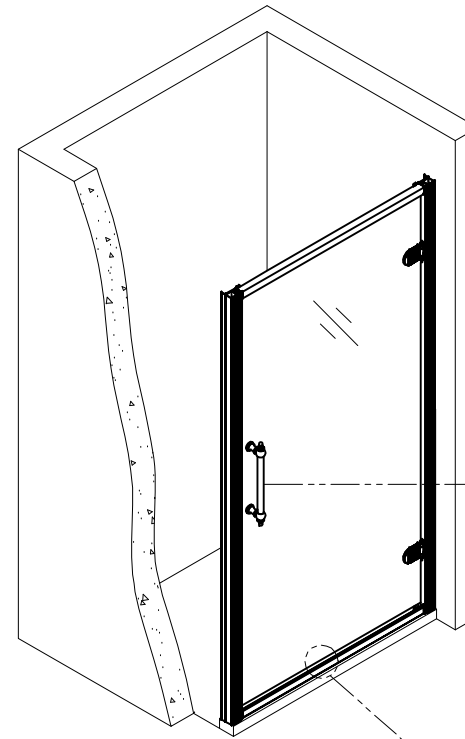

5

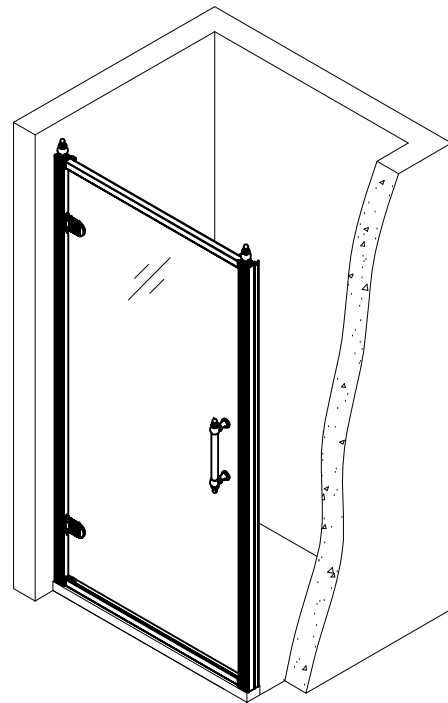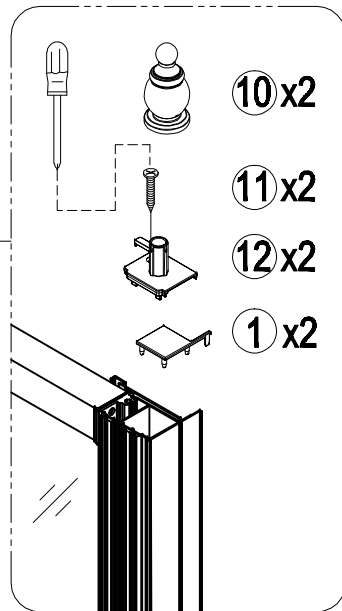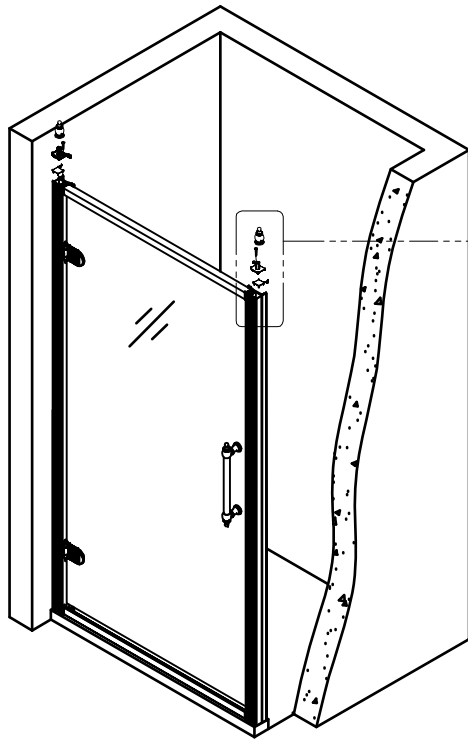


5

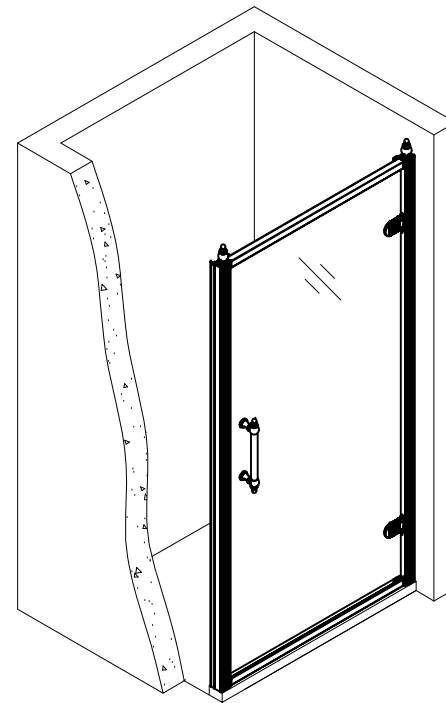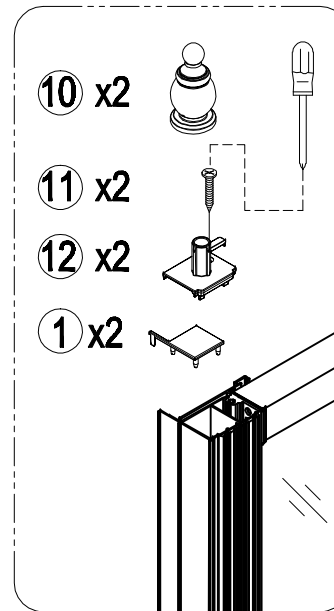

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

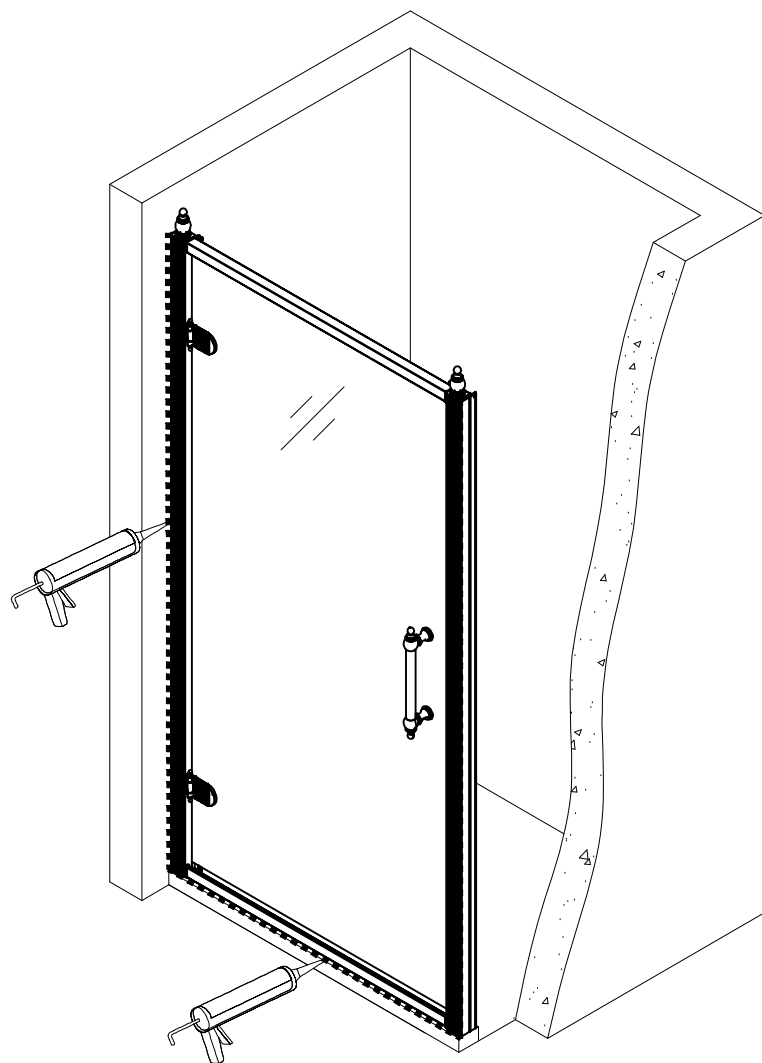**Care Instructions:**

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

