




Flush button fitting instructions.




1. Using holesaw, cut 38mm hole in the surface you want the button

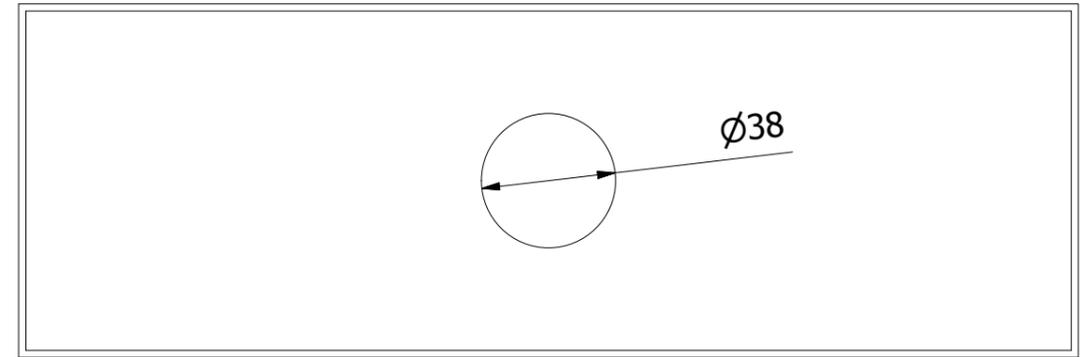

2. Insert base button into hole and align the 1 dot button to the right hand side. Secure base button with lockring, this can be used either way up depending on the thickness of the surface you are connecting the button to.

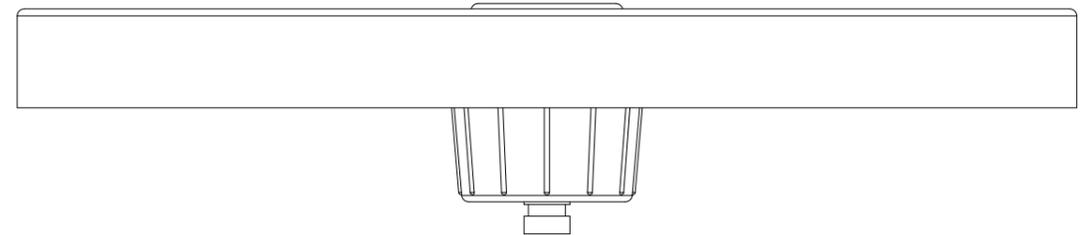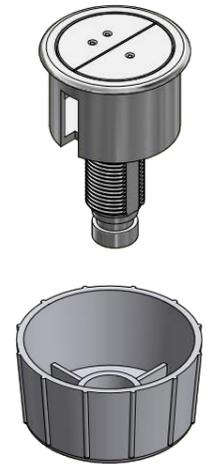


Align 1 dot button to right

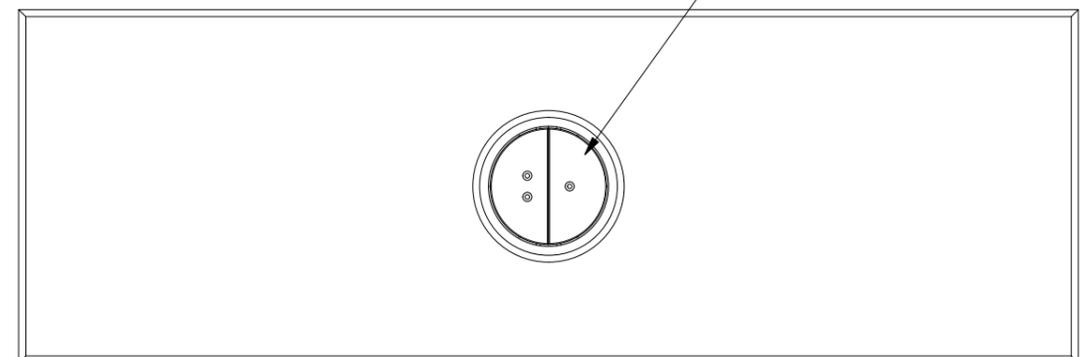





3. Remove spacer block from the button, this is not needed

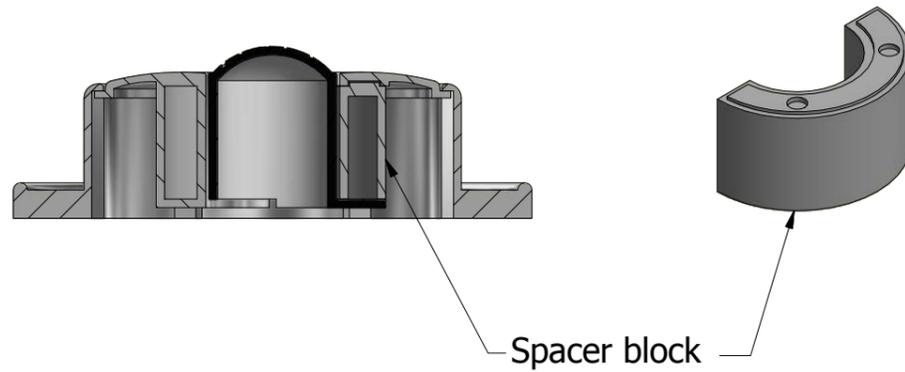

5. Align the rest of the button on top and press both buttons to test if they compress fully. Hold the large button fully compressed and mark the centre of the 3 mounting holes.

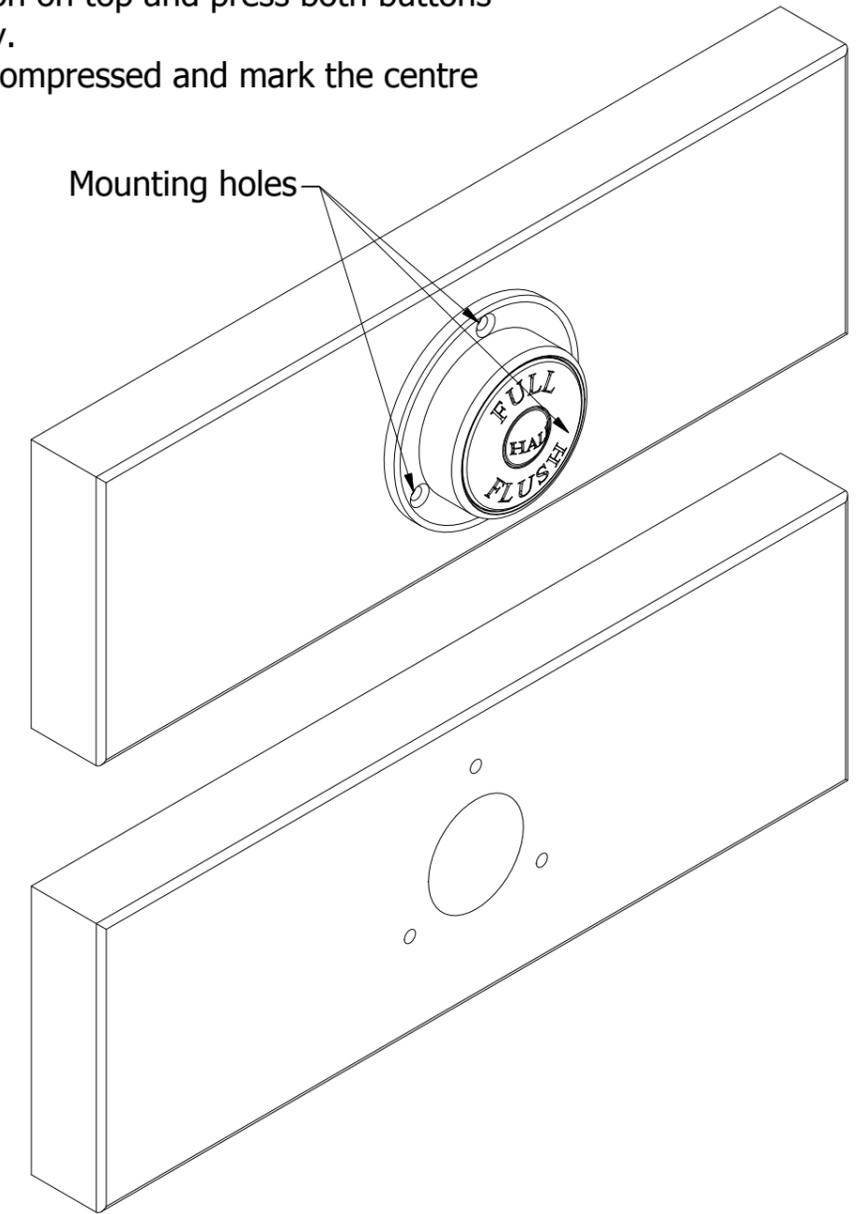

4. Using silicone adhesive, or double sided tape, stick the "half" button onto the one dot button as shown in the image. This aids alignment in the next steps

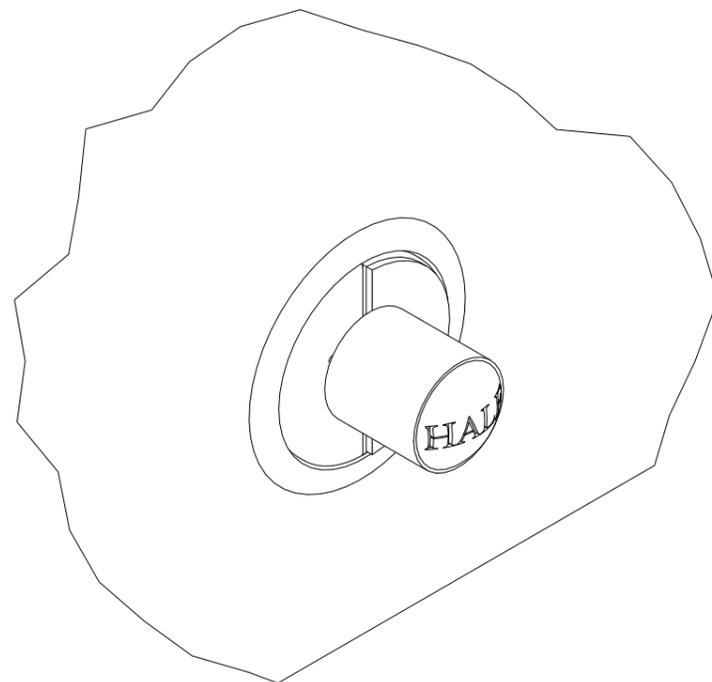

6. Attach the button using screws appropriate for the base material.

