


ABS-ESQ Instruction

Step 1 Wrap PTFE TAPE on long thread part male G 1/2

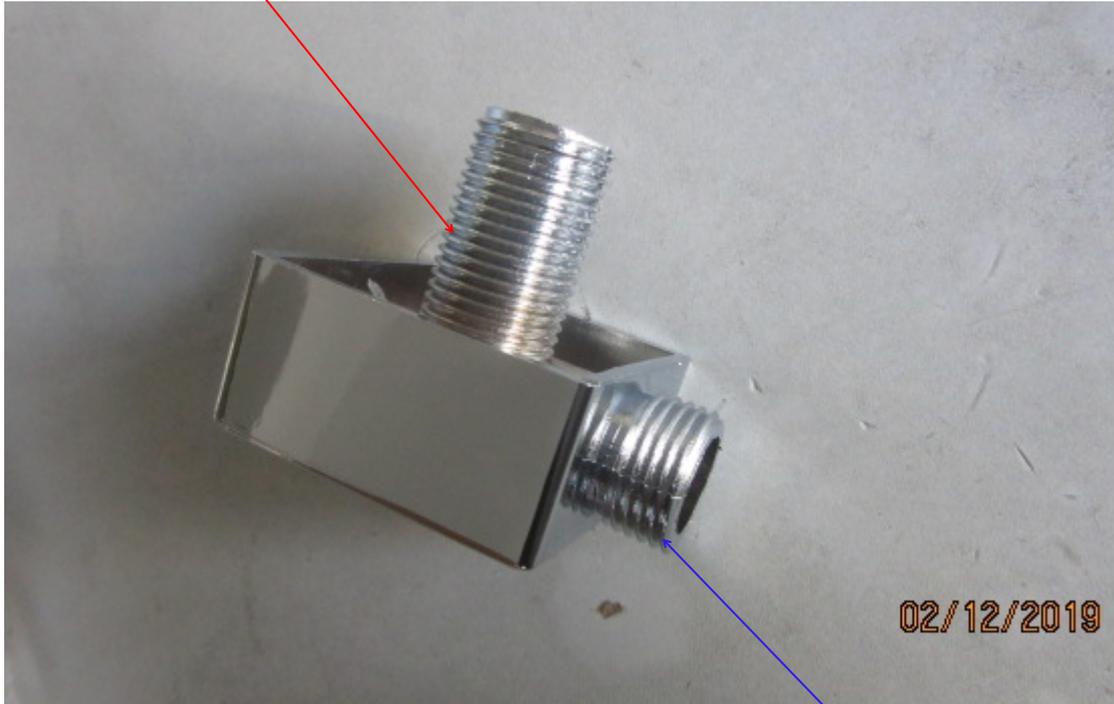

Step 2 Screw to female connector which pre assemble in the wall, make sure short thread G1/2 downwards

Step 3 Connect shower hose to short thread part.