

UNPACK THE BOX AND ENSURE ALL COMPONENTS ARE PRESENT.





NO REFUNDS OR REFITTING COST WILL BE GIVEN IF INCOMPLETE OR DAMAGED GOODS ARE FITTED.


THE TOUGHENED SAFETY GLASS SHOULD BE HANDLED WITH CARE AS IMPACTS WILL DAMAGE THE GLASS OR ENCLOSURE.











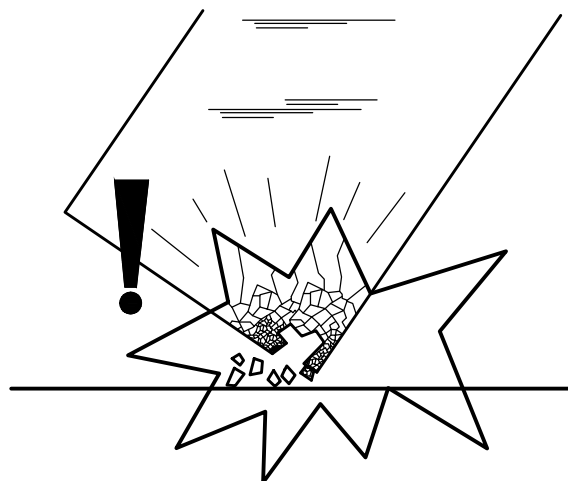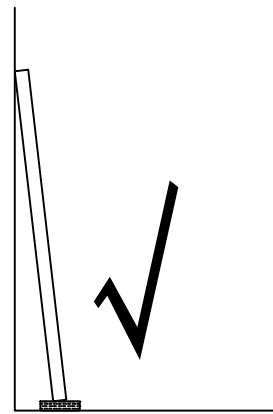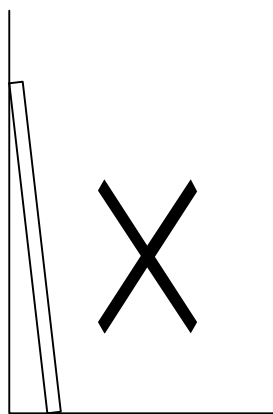
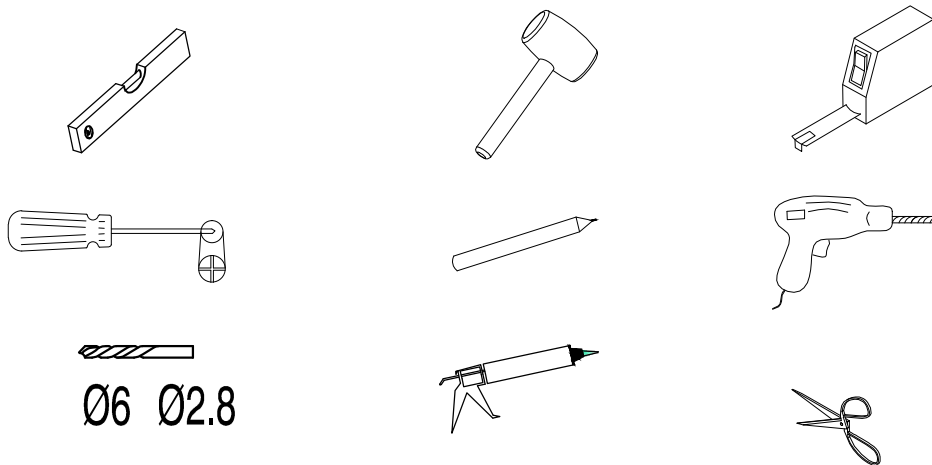


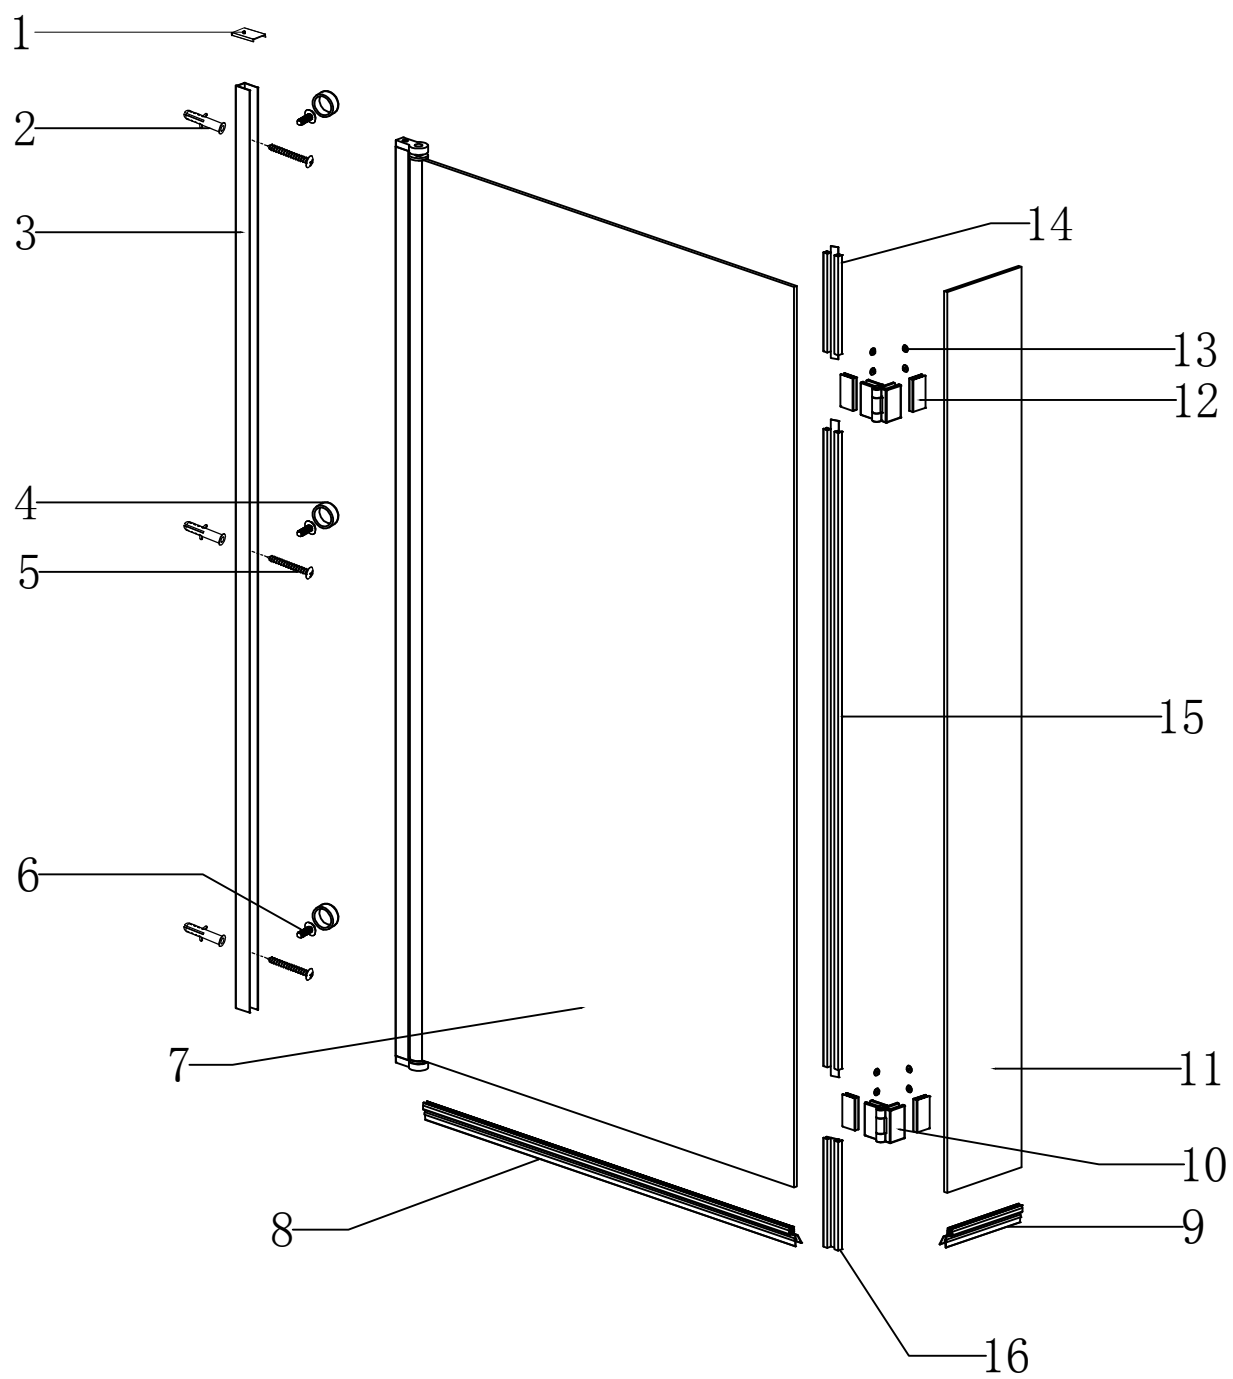


FIT THE BATHTUB AS PER THE MANUFACTURERS INSTRUCTIONS. NOTE: IF THE BATHTUB ISN'T TRUE AND LEVEL, IT MUST BE RECTIFIED BEFORE SILICONING AROUND THE TOP EDGE OF THE BATHTUB WHERE IT MEETS THE TILES.

ALLOW THE SILICONE TO DRY BEFORE FITTING THE ENCLOSURE.


TOOLS REQUIRED POWER DRILL - 6mm
MASONRY DRILL BIT CROSS HEAD SCREW
DRIVER - TAPE MEASURE - PENCIL SILICONE
GUN WITH SANITARY GRADE SEALANT - SPIRIT
LEVEL.







serial number	graphical	name	quantity	remarks
1			1 PCS	
2		Ø6	3 PCS	
3			1 PCS	
4			3 PCS	
5		ST3. 9X35	3 PCS	
6		ST3. 5X9. 5	3 PCS	
7			1 PCS	
8		748mm	1 PCS	
9		150mm	1 PCS	
10			2 PCS	
11			1 PCS	
12			4 PCS	
13			8 PCS	
14		170mm	1 PCS	
15		987mm	1 PCS	
16		175mm	1 PCS	
17		3mm	1 PCS	



Size (mm)	A (mm)
800	800-815




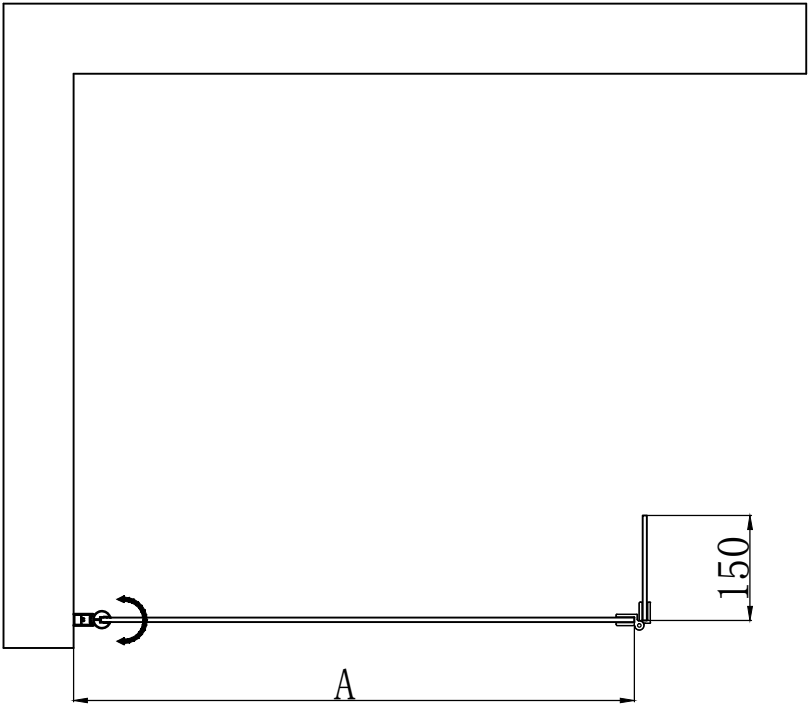




L

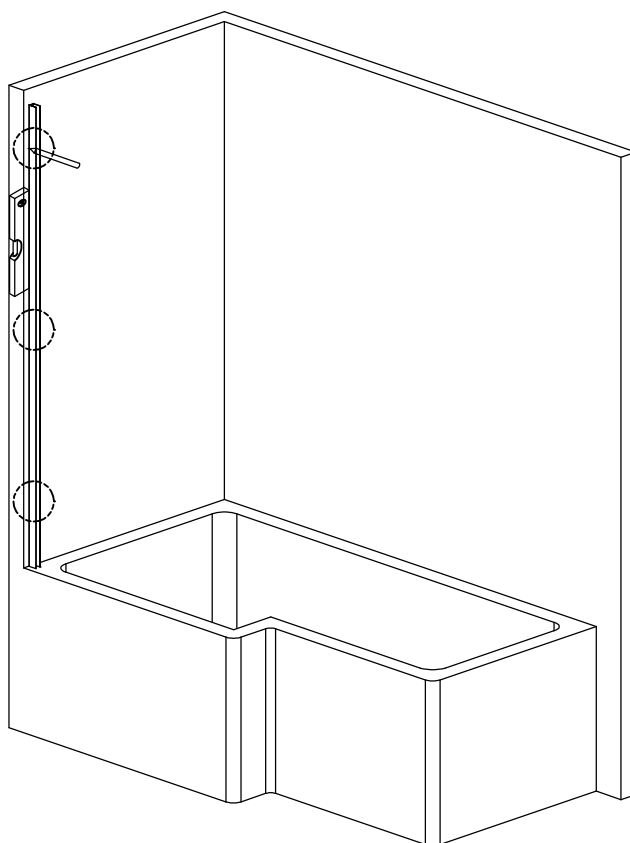
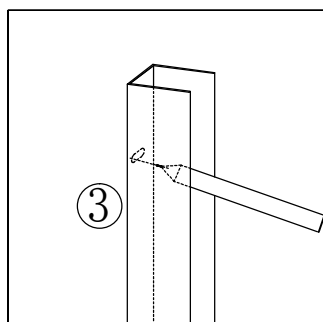





R






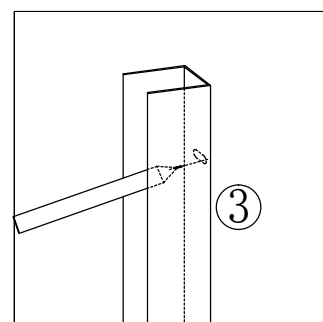
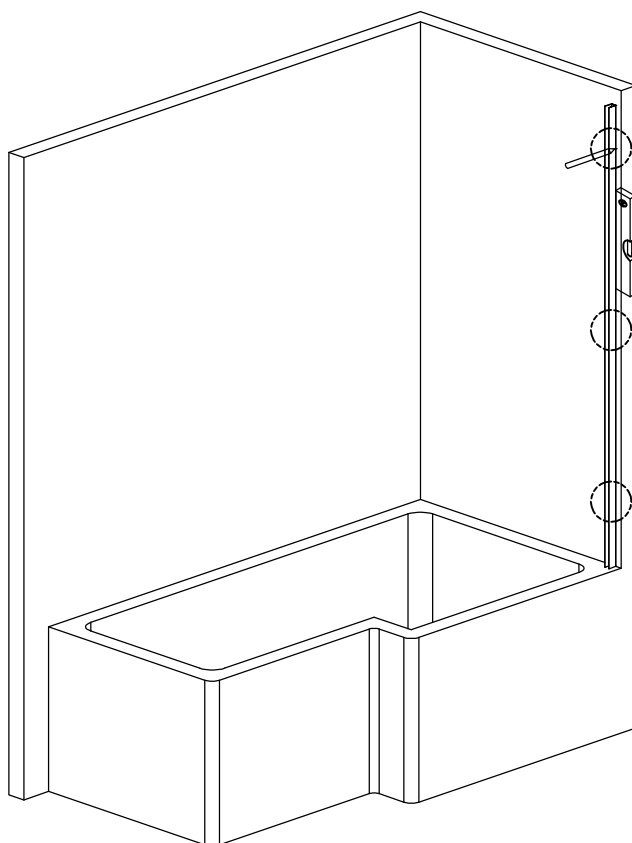


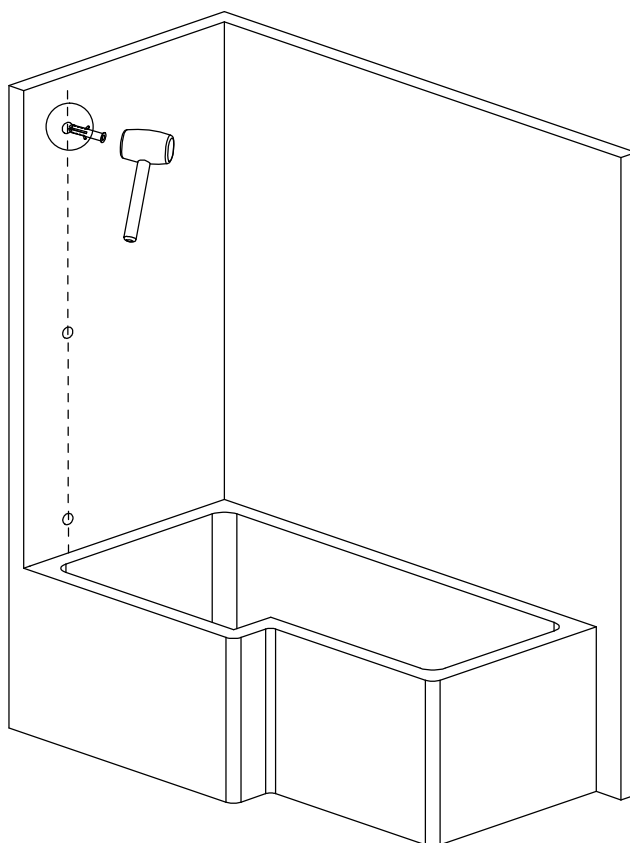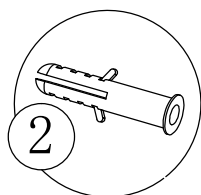
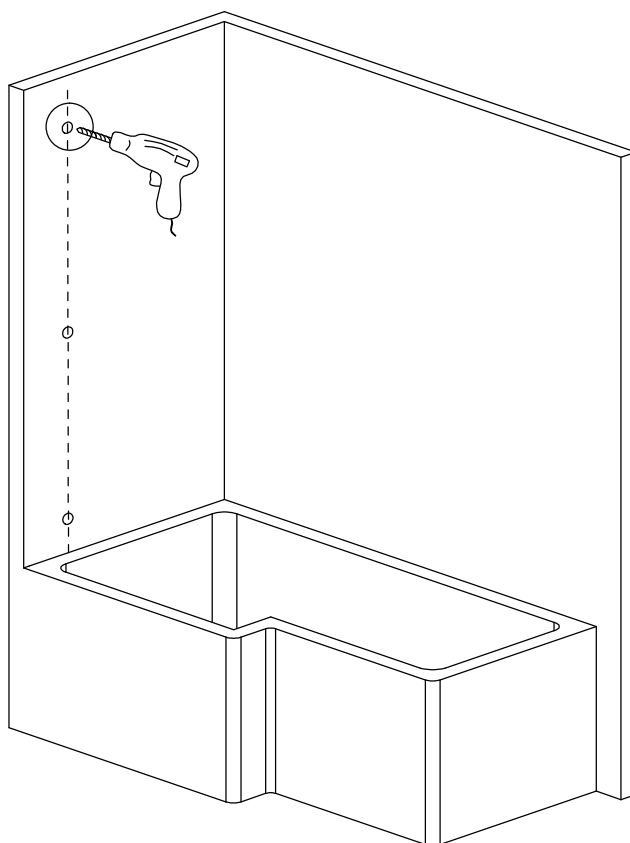
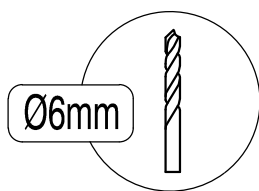





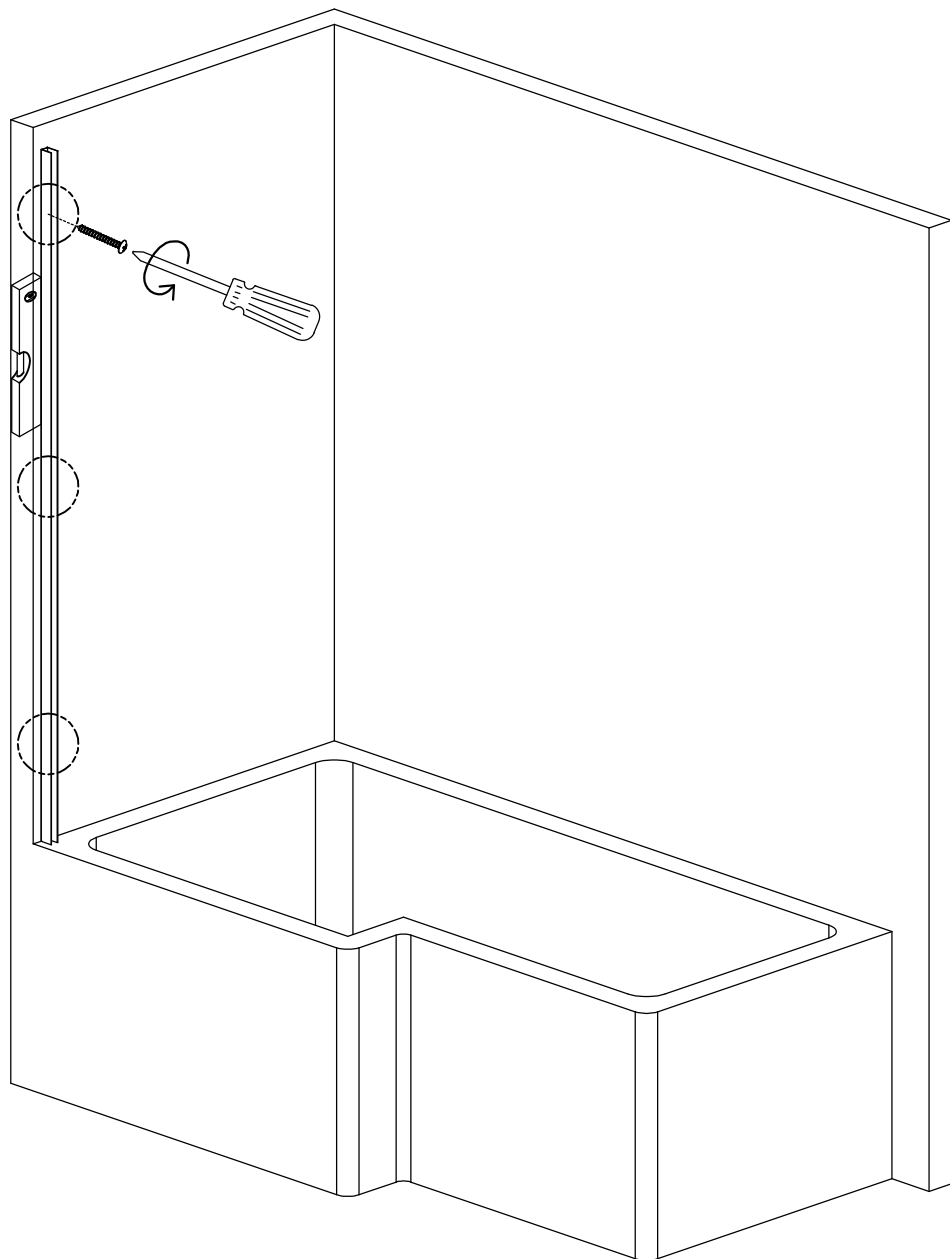
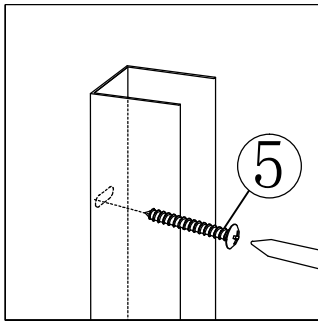



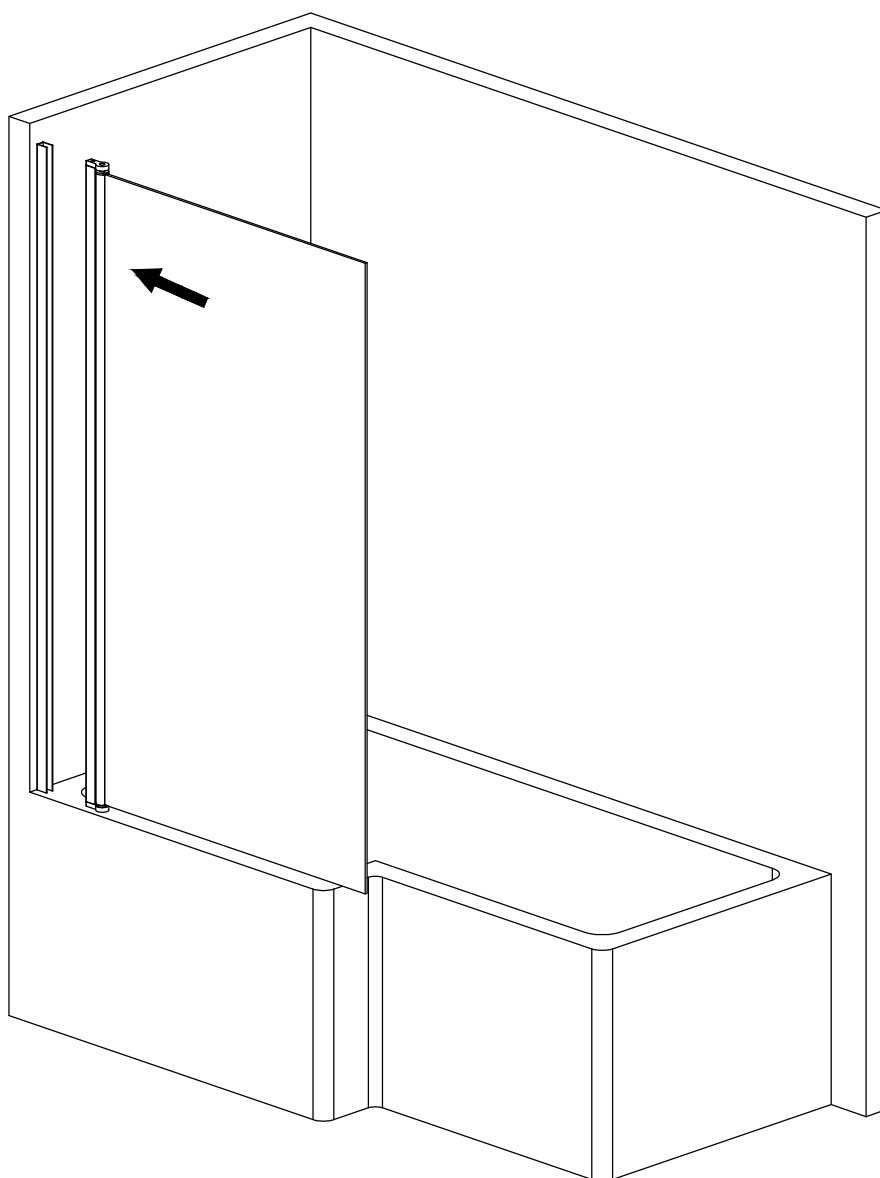
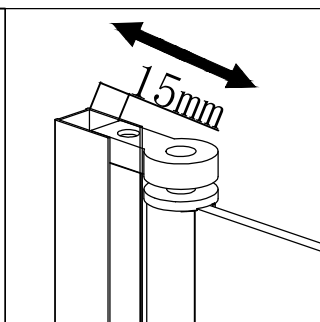


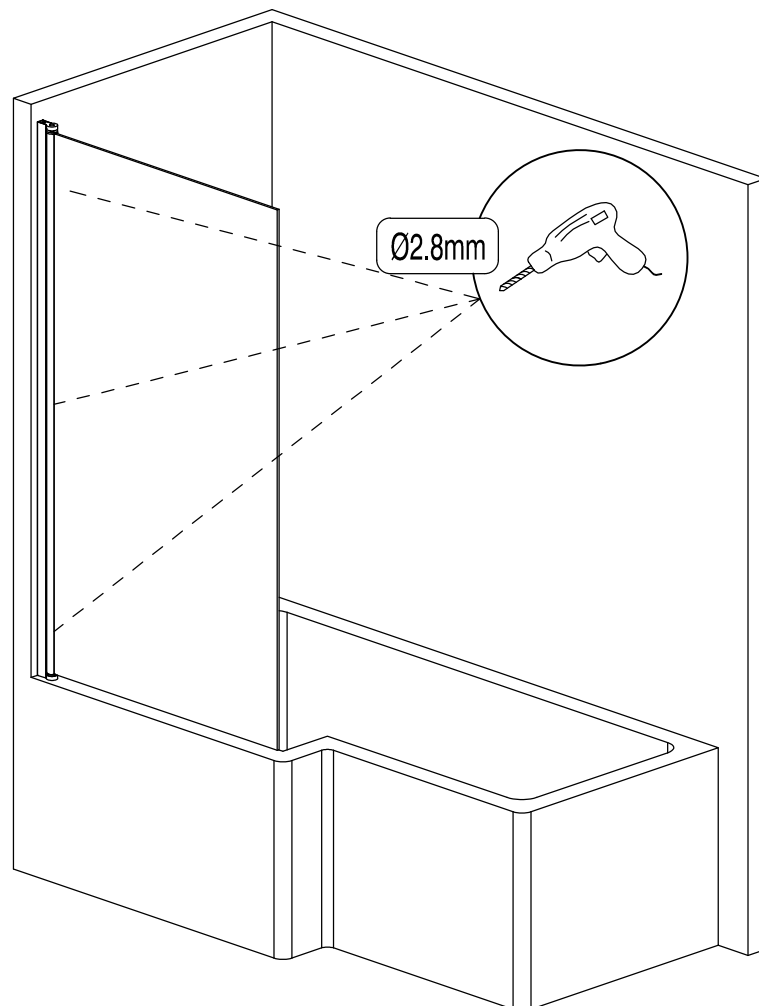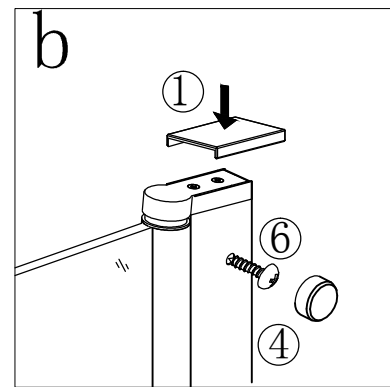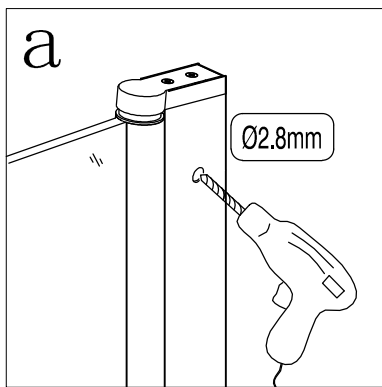

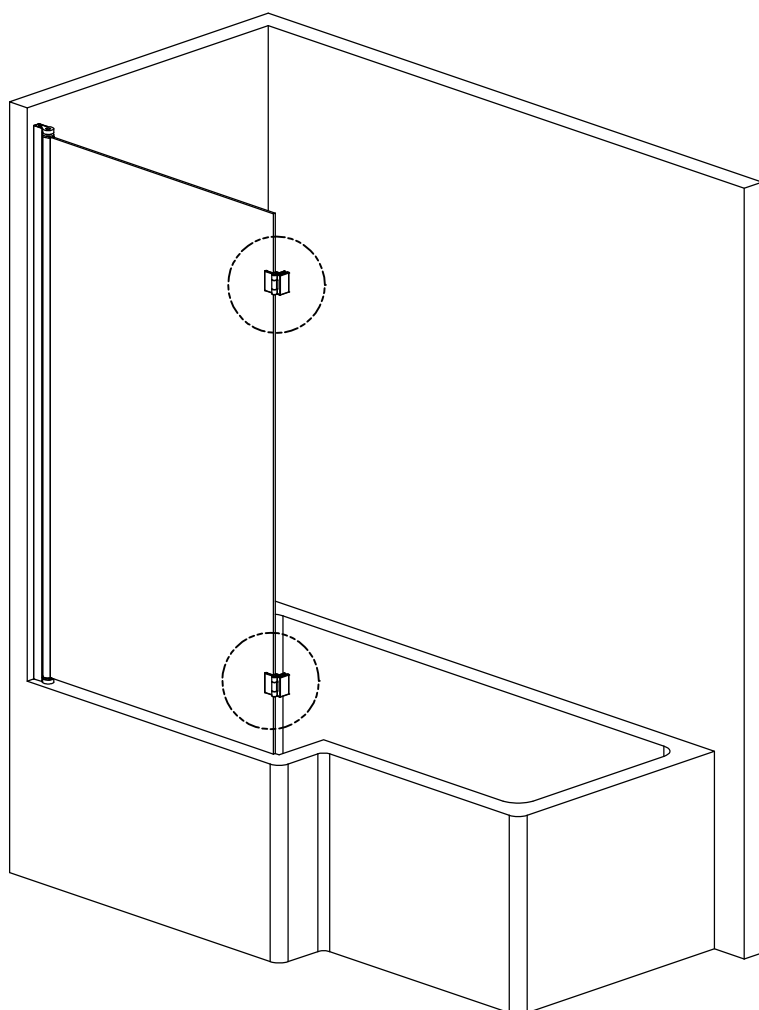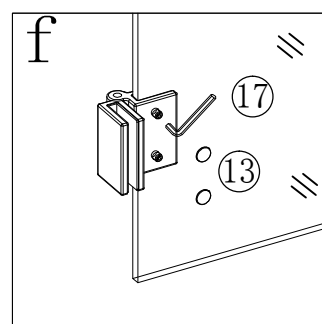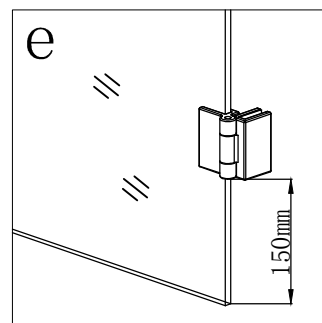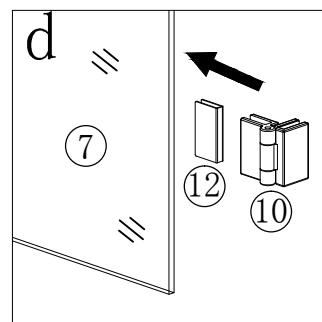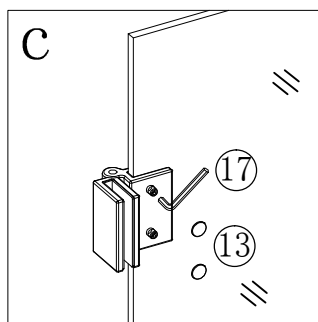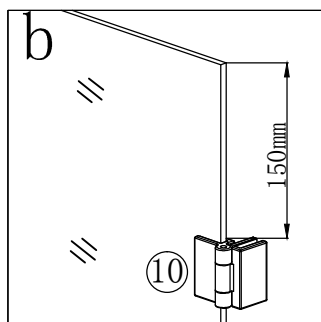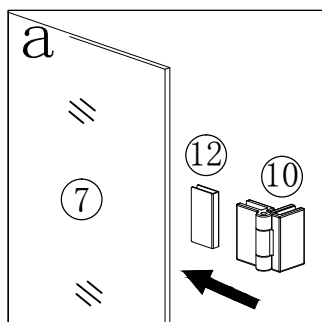

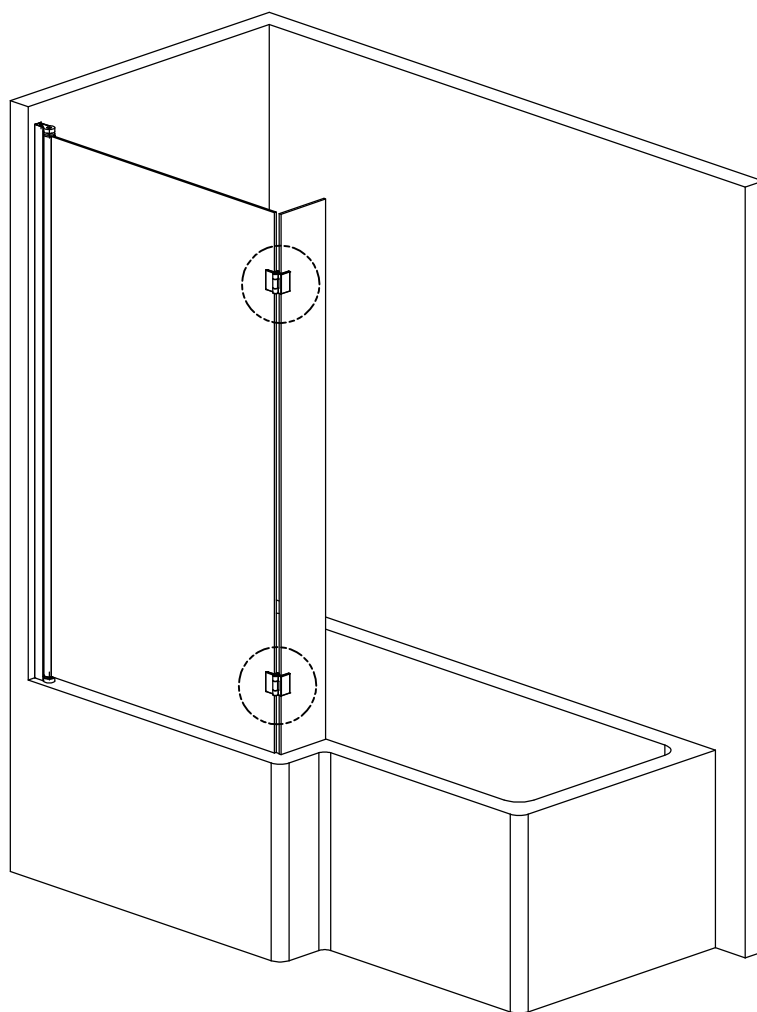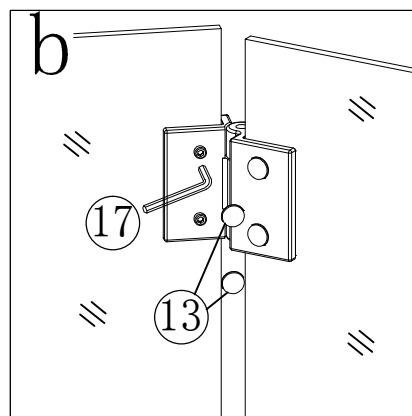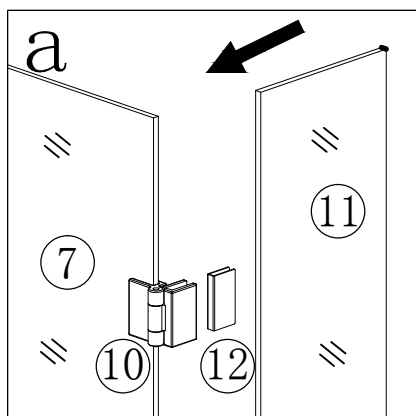

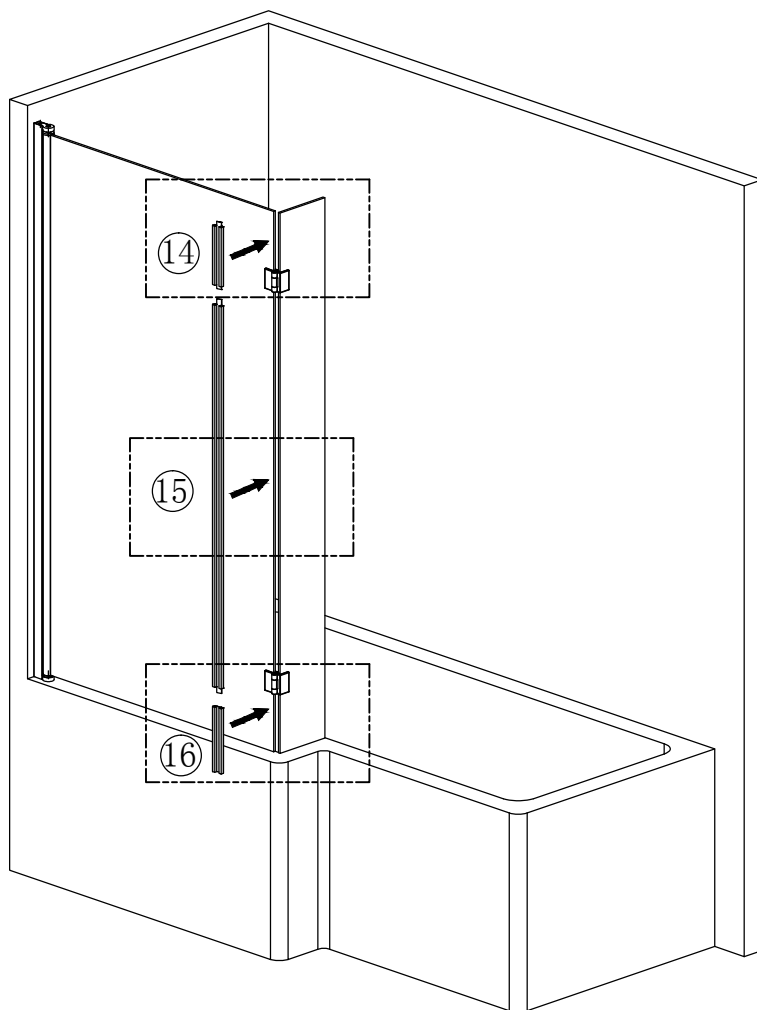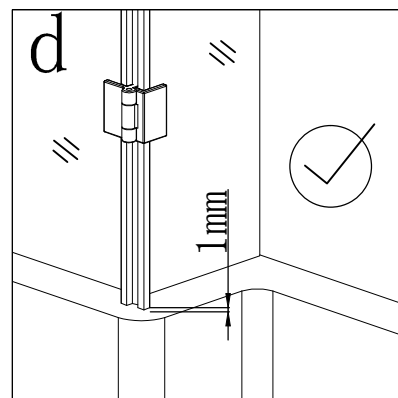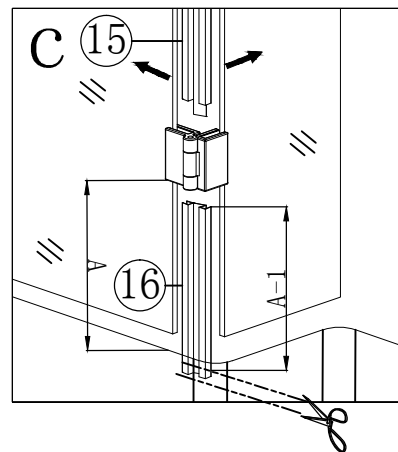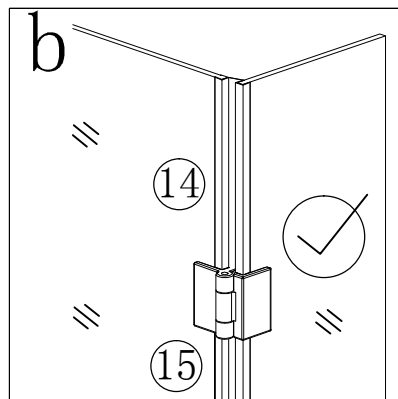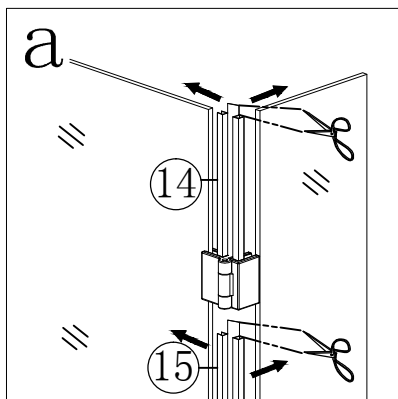

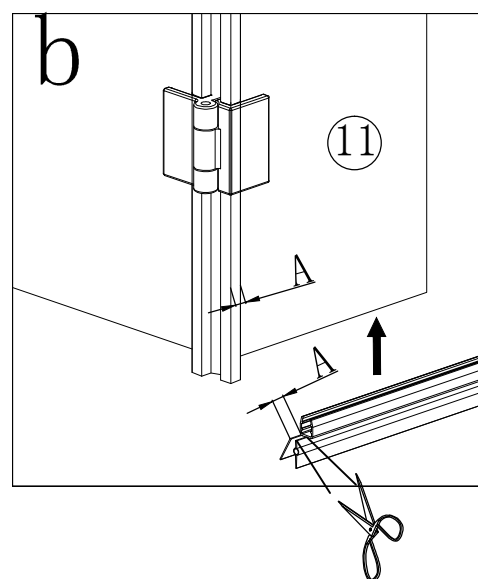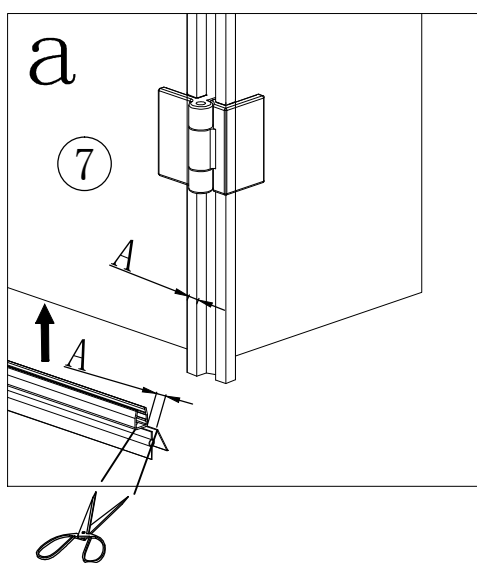
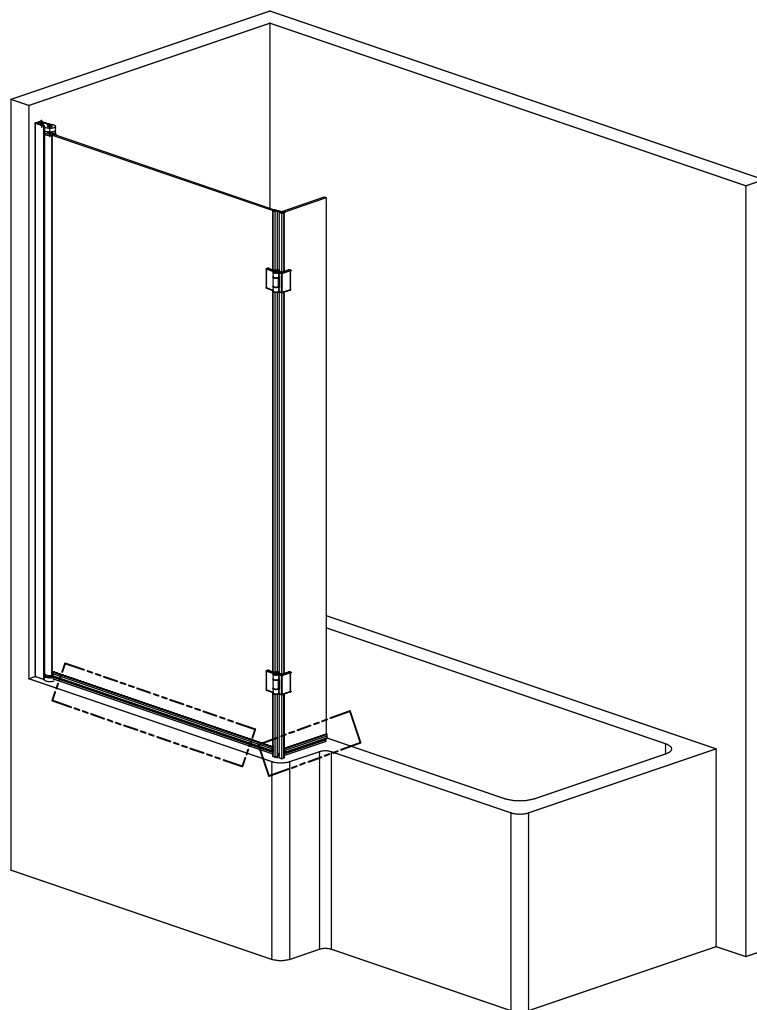


EXTERNALLY SILICONE SEAL THE WALL PROFILE WHERE IT MEETS THE WALL AND ALONG THE BOTTOM OF THE GLASS. ALL IN A CONTINUOUS BEAD. DO NOT SILICONE INSIDE THE ENCLOSURE

ALLOW THE SILICONE AT LEAST 24 HOURS TO FULLY CURE.

AFTERCARE - ENSURE YOU CLEAN YOUR PRODUCT USING A MILD DETERGENT DILUTED IN WATER, REMOVING ANY RESIDUE WITH A SOFT DAMP CLOTH.

MAINTENANCE - ENSURE MOVING PARTS ARE FREE FROM ANY DEBRIS OR SOAP BUILD UP

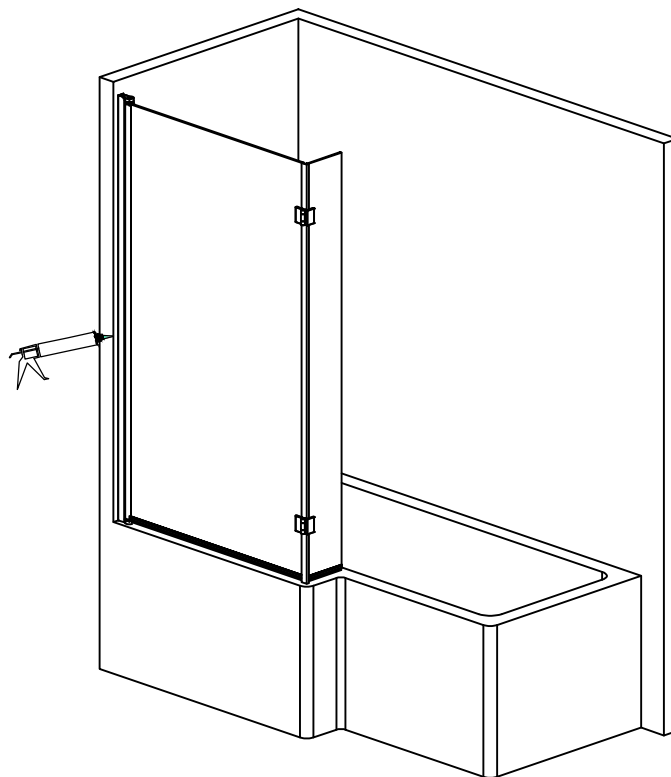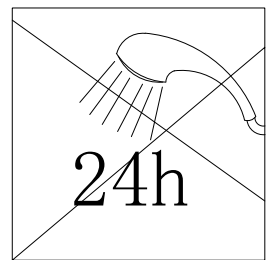

Assembly Instructions

Instructions for installing the bath and the panel

List of elements:

- | | |
|----------------|------------|
| 1. Bath | - 1 item |
| 2. Frame rails | - 2 items |
| 3. Wood screws | - 12 items |
| 4. Bath legs | - 4 pieces |
| 5. Leg nuts | - 12 items |


- | | |
|-----------------------------|-----------|
| 6. Foot with thread | - 4 items |
| 7. Foot stabilization stand | - 4 items |
| 8. Wall plugs | - 4 items |
| 9. Wall brackets | - 4 items |

For mounting the casing:

- | | |
|--------------------|------------|
| 10. Panel | - 1 item |
| 11. Mounting clips | - 8 items |
| 12. Wall plugs | - 4 items |
| 13. Wood screws | - 12 items |
| 14. Floor screws | - 4 items |

Bath installation on the base:

- 1) Base
- 2) Stand



Before You Start.

- Read these instructions carefully.
- Check the pack & make sure you have all parts listed. If not, contact your supplier who will be able to help you.
- When ready to start, ensure that you have all the right tools to hand, plenty of space & a clean dry area for assembly.
- Remove packing & protective film & inspect product prior to the commencement of assembly. Any damages found must be reported to the product supplier immediately.
- Remove & discard any transportation screws as they are not required for installation.

It is recommended that when the bath needs turning 2 people should carry out this operation.

Fitting Instructions

- Turn the bath over so it is sitting on the top face. Ensure that the top face is protected so it cannot be scratched or damaged.

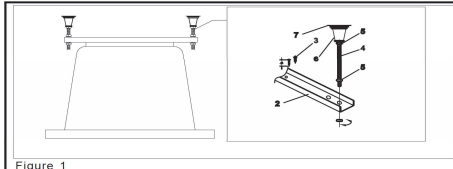


Figure 1

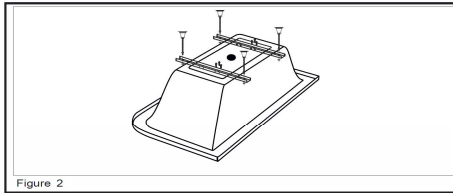


Figure 2

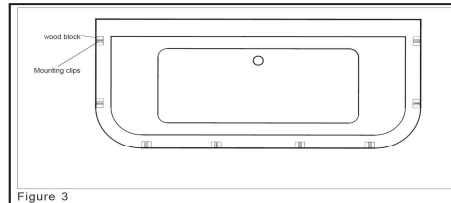


Figure 3





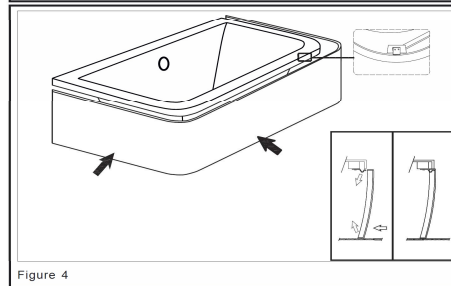


Figure 4




1. Place the bath as in Figure 2. Mount rails (2) to the bath bottom using wood screws (3) Then screw down legs (4). The rails spacing should ensure stability of the installed bath.

Figure 1

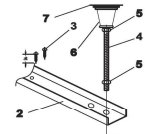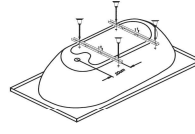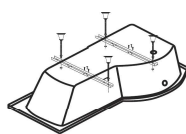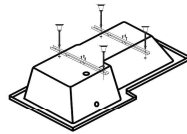


2. Put the bath in the selected place in the bathroom. Then level the bath legs (4). Mark the outline on both walls. Mark the places for brackets (9) (see Figure 3).

Figure 2

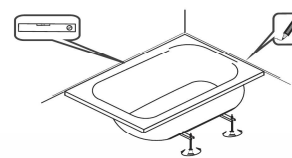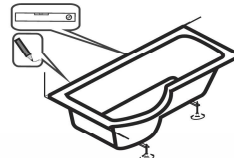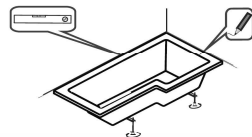

3. Mount the brackets (9) to the walls and slot the bath onto the brackets.

Figure 3

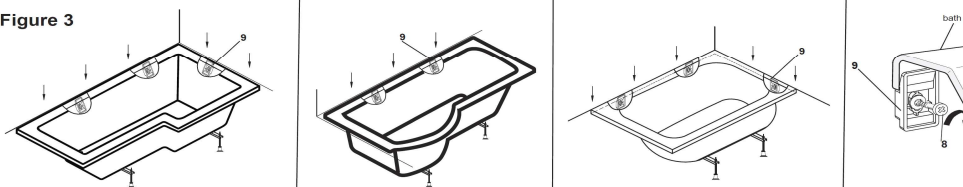

rew.1.1/12/08/15

4.

A. Tighten the clips (11) to the wooden block under the bath rim

B. Tighten the clips (11) to the floor using screw provided (14)

C. Install the panel as shown in Figure 4. If necessary the panel can be trimmed to the required dimensions.
The panel is a separate product.

Figure 4

