


ESQ (TOP FIX) STANDARD HINGE FITTING INSTRUCTION

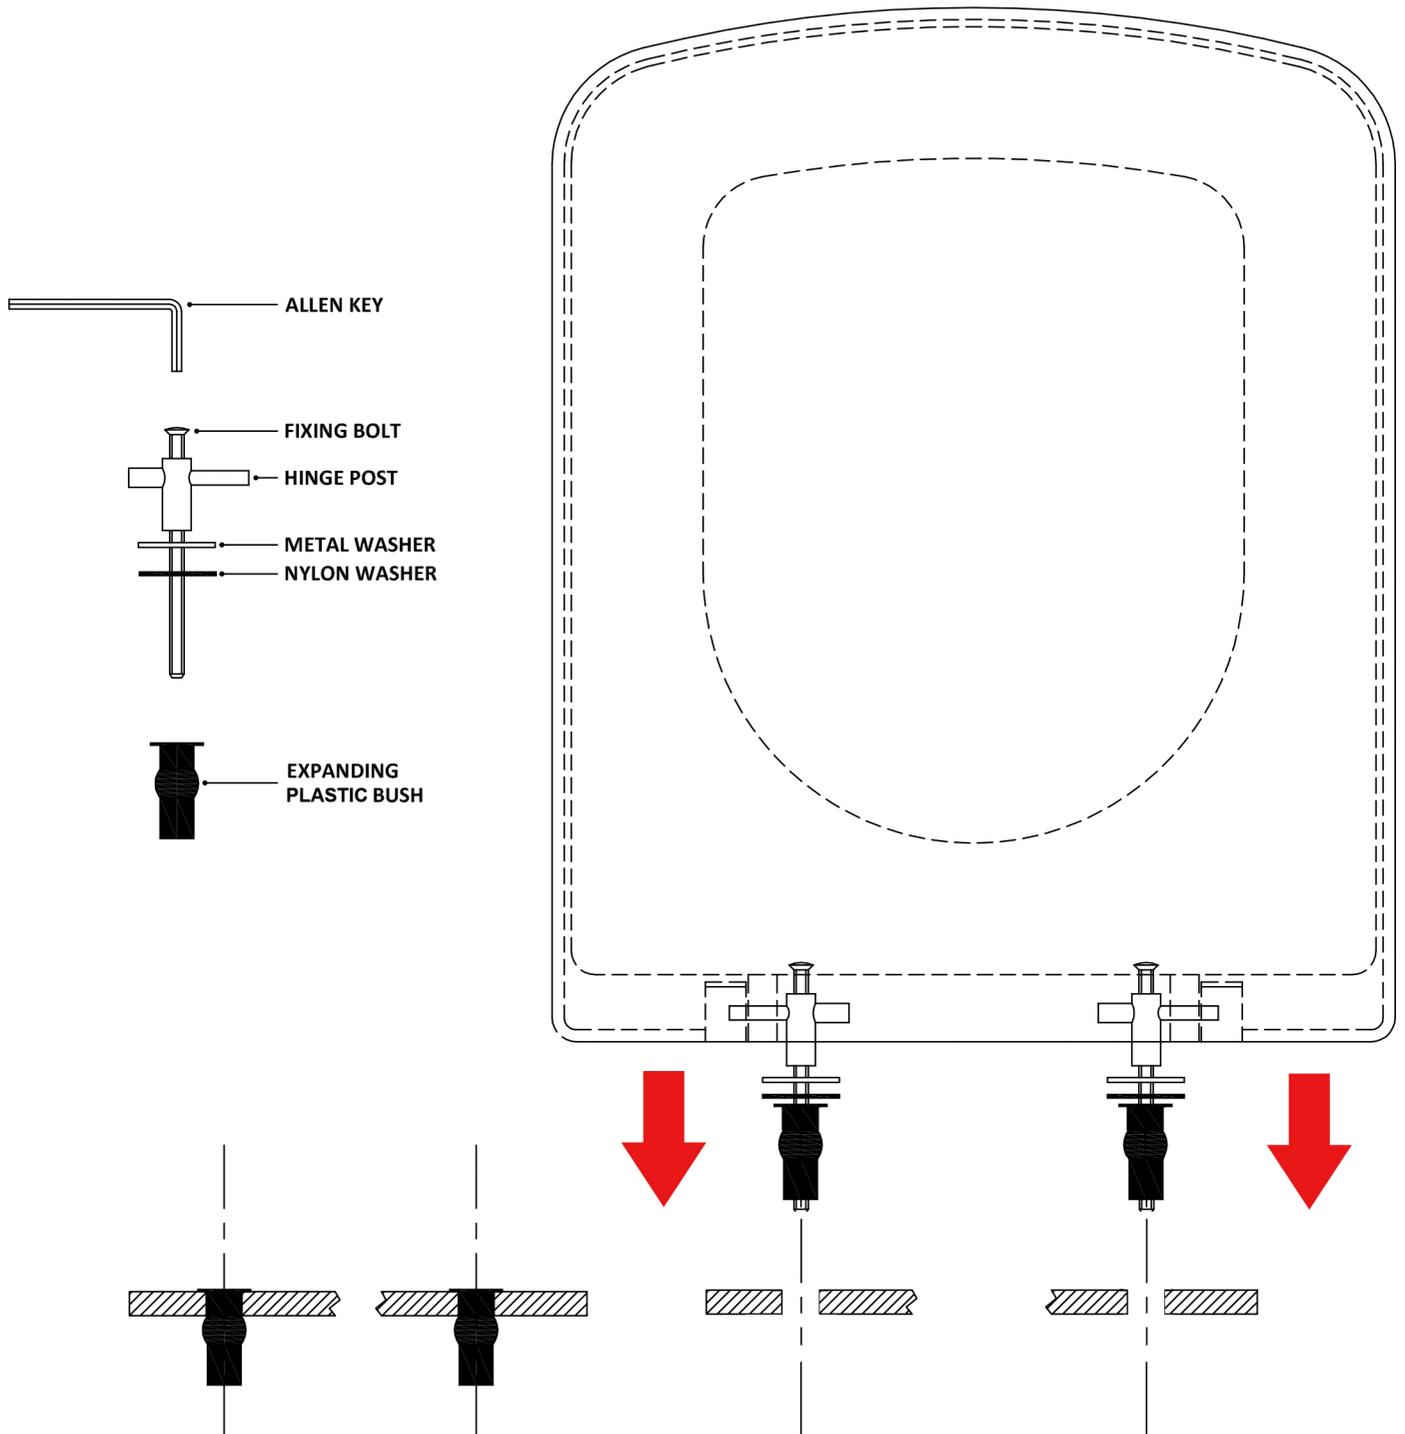

1. Check when inserting the hinges into the seat that the internal bushes that join the seat to the outer cover are fully inserted and pushed fully home, this ensures that the hinge bolts prior to inserting into the pan are at the correct 150mm centres.

2. When installing the seat hinges, prior to securing with the supplied Allen Key a firm downward pressure is required to ensure that the expanding plastic bushes are fully inserted and the metal washer seated squarely on the pan surface.

Note! IT WILL TAKE QUITE A FEW TURNS TO TAKE UP THE SLACK IN THE BUSHES BEFORE BEING FULLY TIGHTENED