






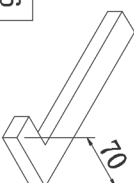


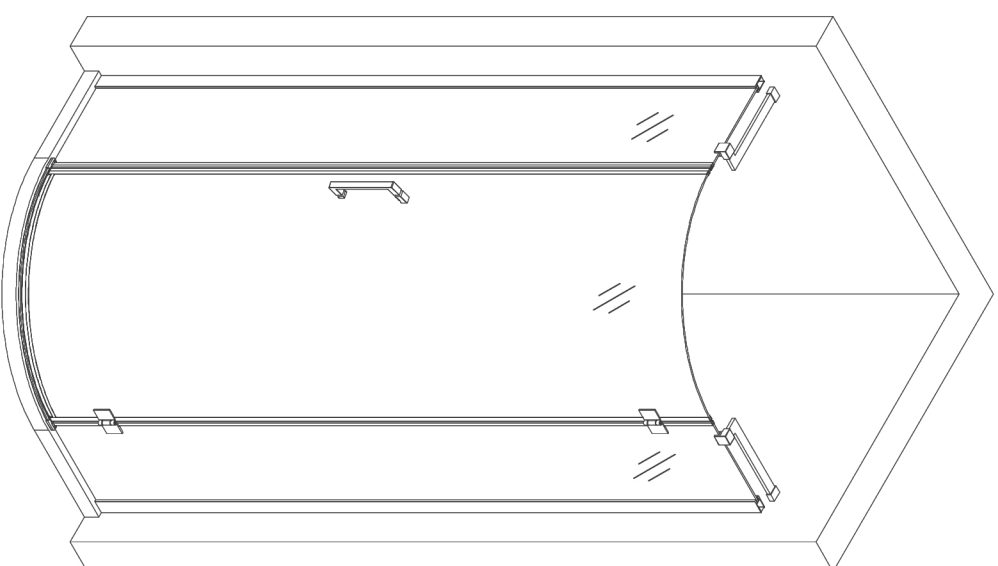



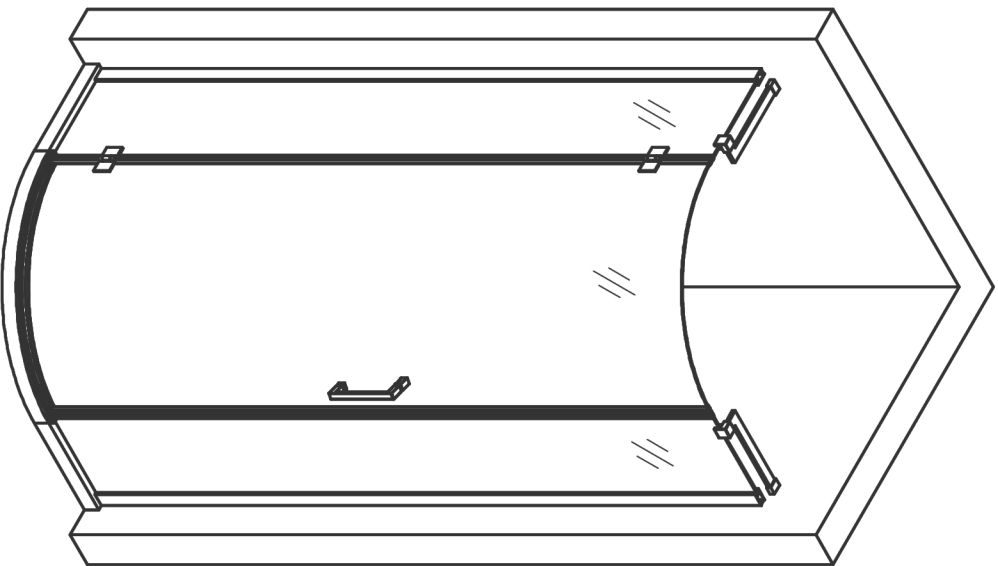


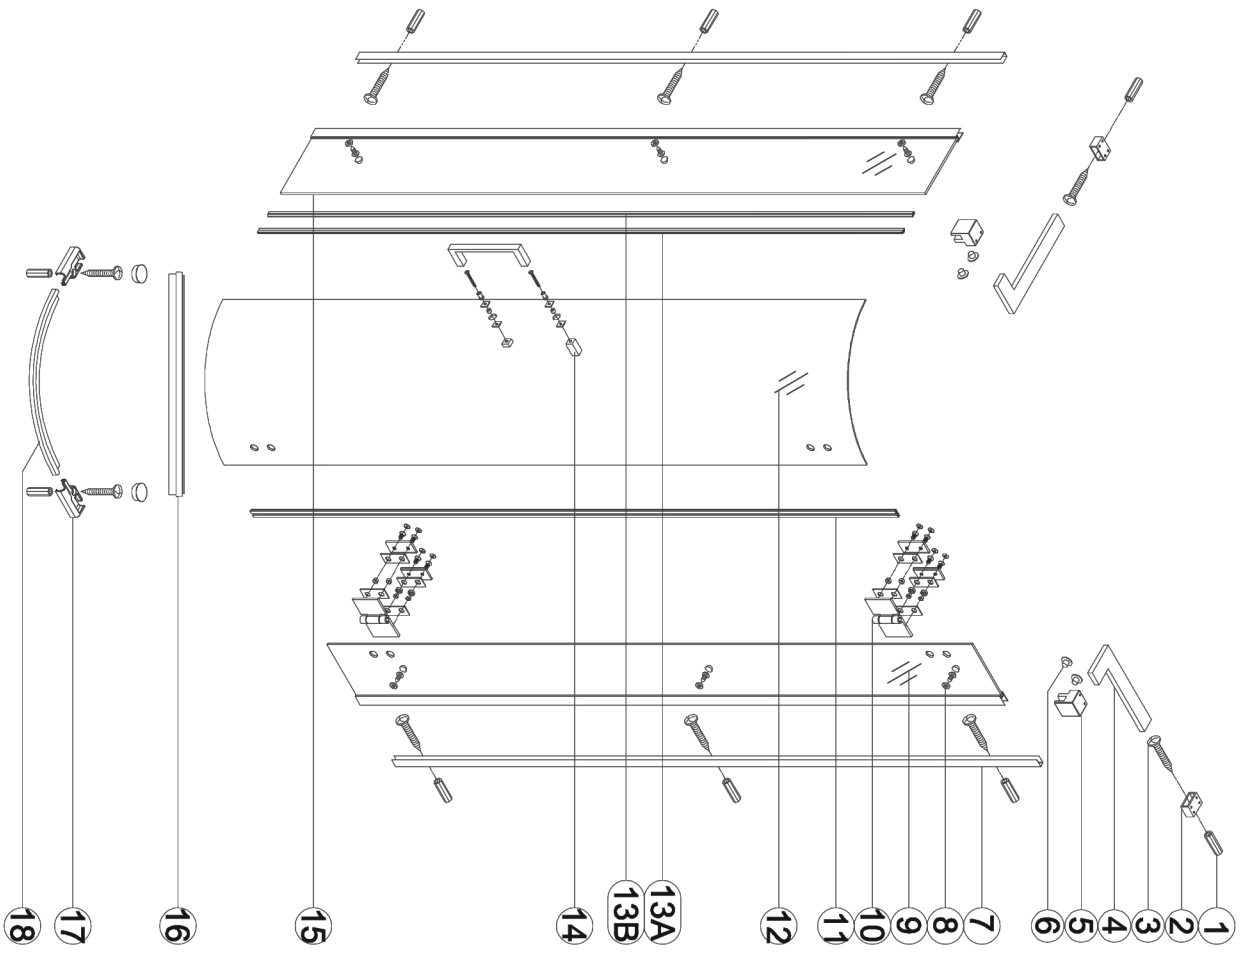


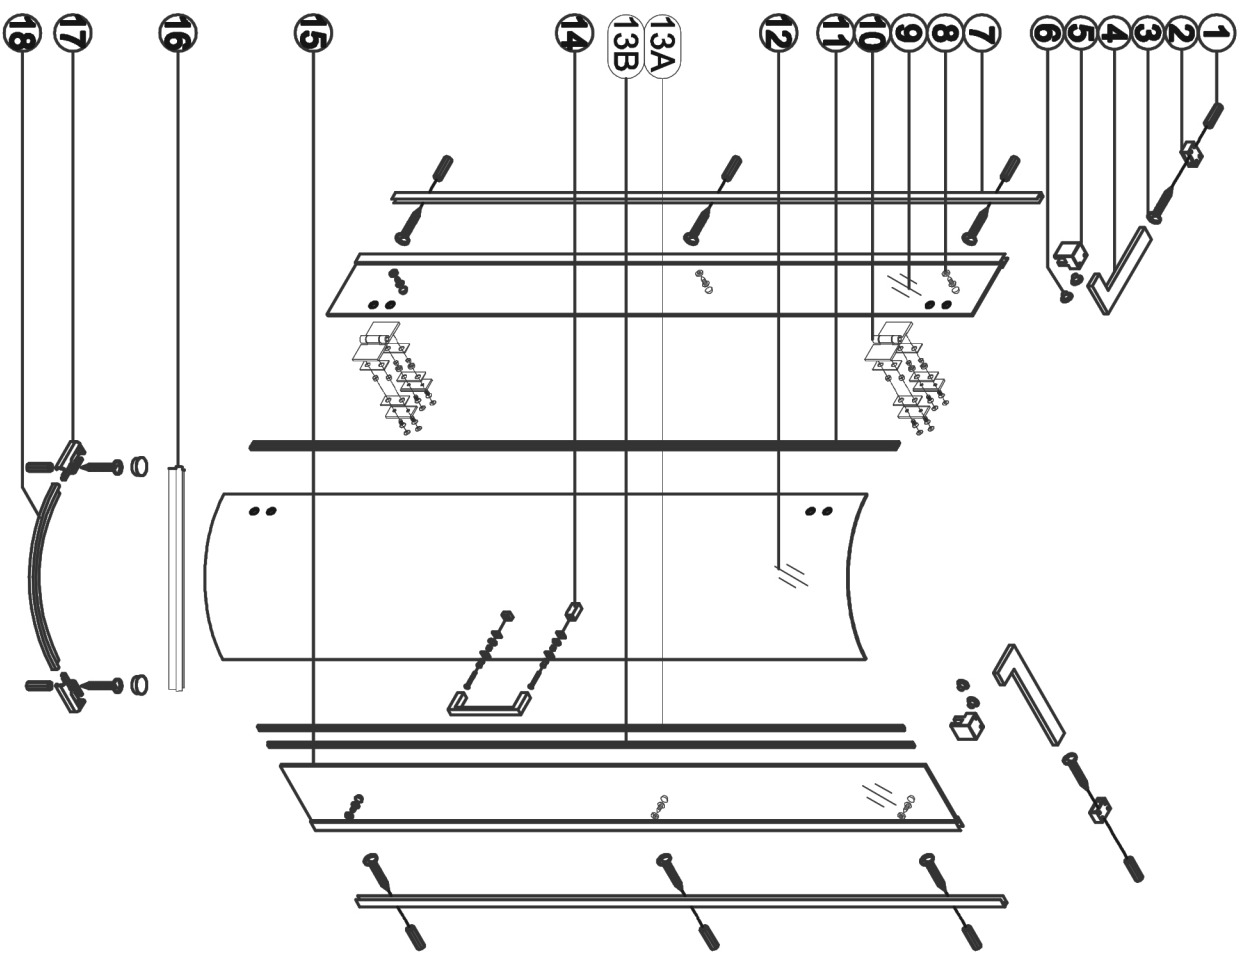






INSTALLATION MANUAL

SE006-V3 / SE007-V3

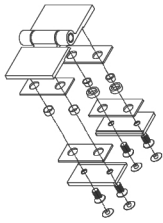
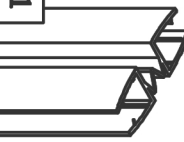
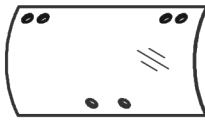



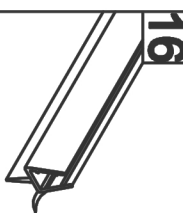


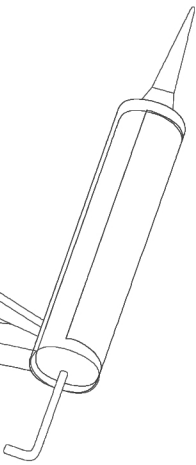1		2		3	ST4X30 	4	<div>WX-D06</div> <div>WX-D07</div> 	5		6	
7	D6X25 10Pcs	8	WX-D01 2Pcs	9	ST4X30 10Pcs	10	2Pcs	11	WX-D02 2Pcs	12	D4X4 4Pcs
13	 2Pcs	14	ST4X12 6Pcs	15	 1Pc	16	 2Pcs	17	 1Pc	18	 1Pc
13		14		15		16		17		18	
A B		 1Pc		 1Pc		 1Pc		<div>L</div> <div>R</div>  2Pcs		 1Pc	
WX-H02 1Pair		WX-D04 1Pc		1Pc		WX-H04 1Pc		WX-S01 2Pcs		WX-B04 1Pc	
800*800		900*900		Tools: 							
WX-D06		WX-D07									
4											

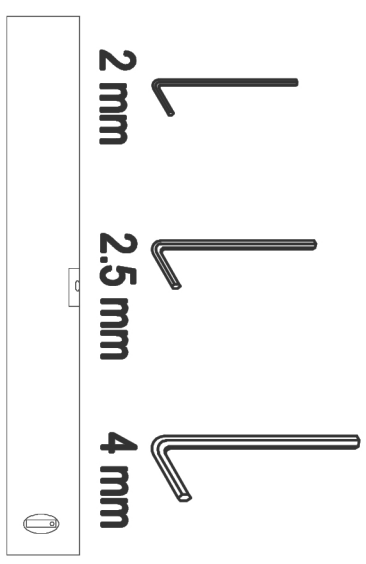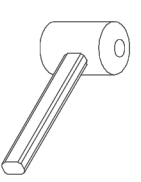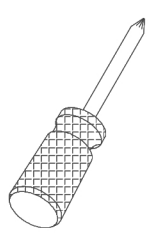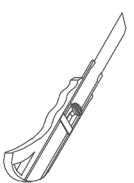



Ø6mm
Ø3.2mm

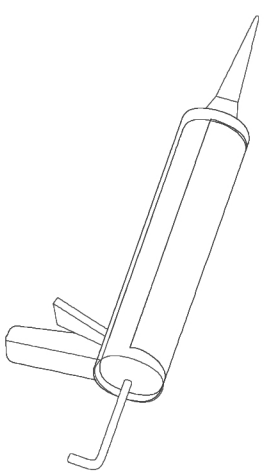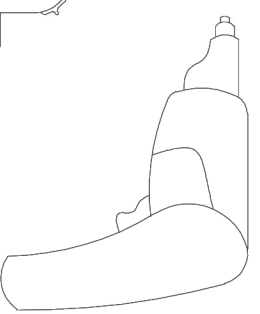

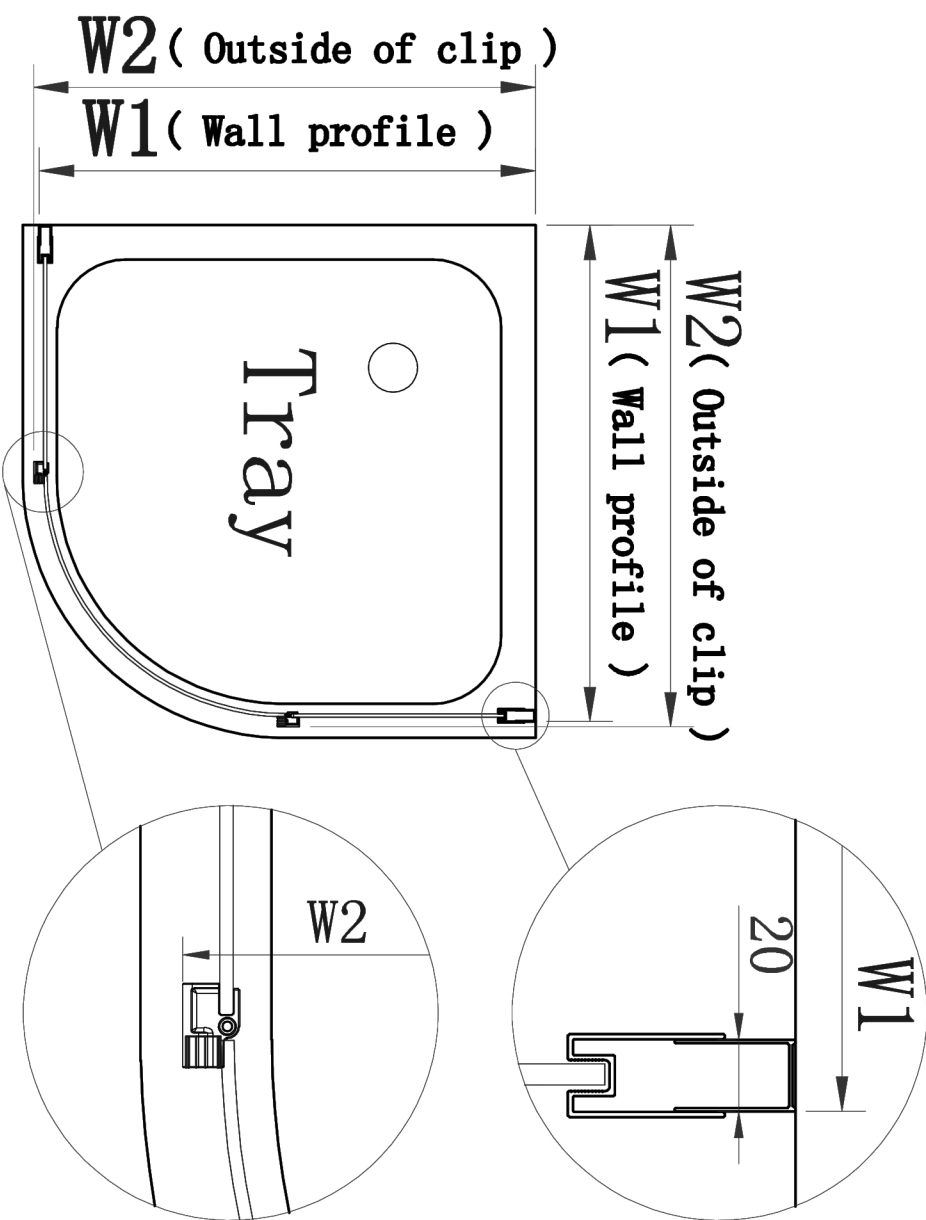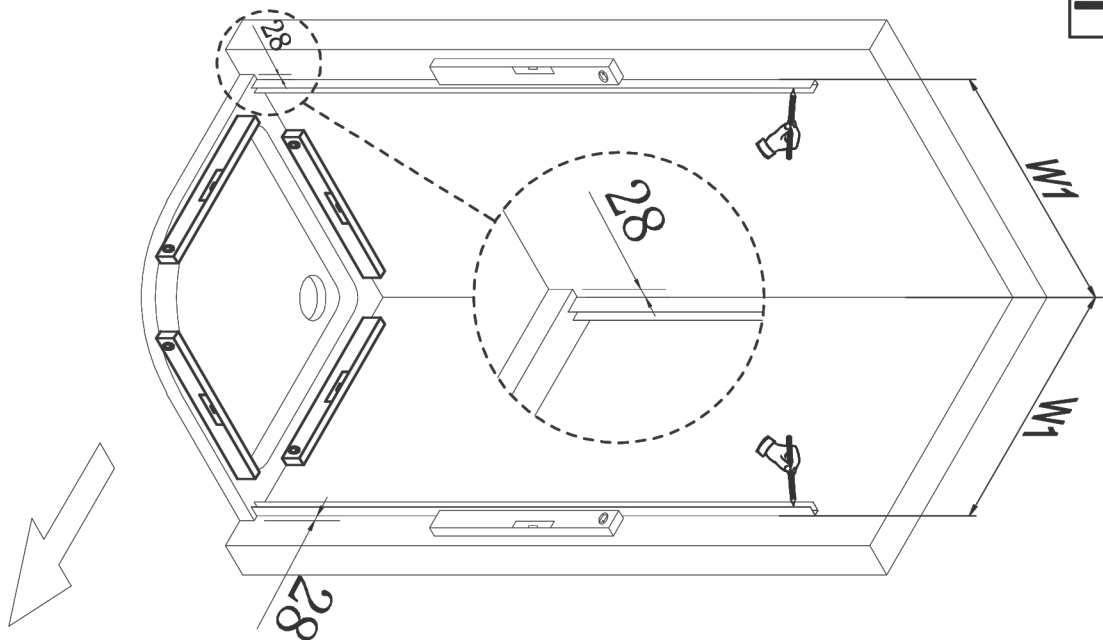

		W1	W2
1	800	752-772	760-780
2	900	852-872	860-880

2

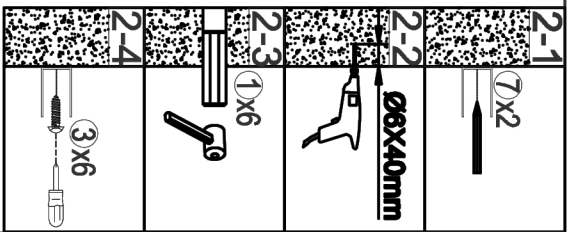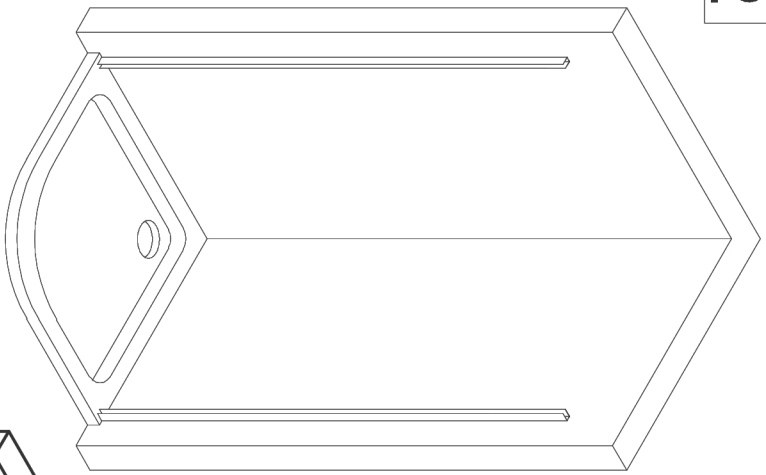


	SE006-V3	SE007-V3
⑨	X=240mm	X=340mm
15	Y=240mm	Y=340mm



1. PLEASE MEASURE THE HINGE HOLE ON THE FIXED GLASS BEFORE INSTALLATION

2-5	Inside	Outside
2-6	15x1	15x1
2-7	Outside	Inside

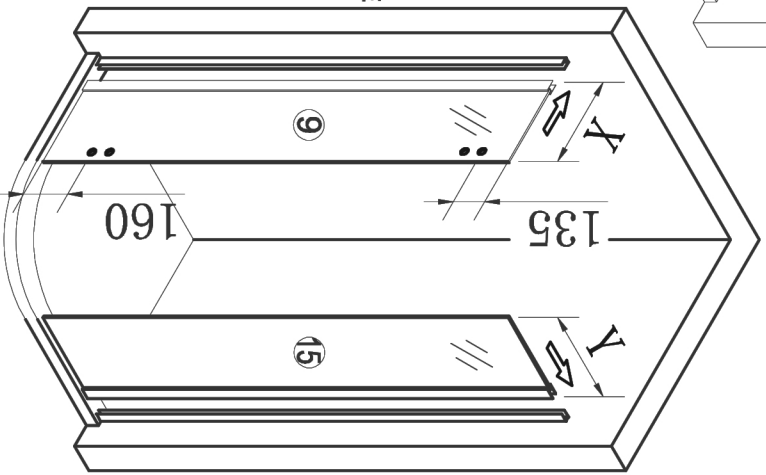


	SE006-V3	SE007-V3
⑨	X=240mm	X=340mm
15	Y=240mm	Y=340mm





1. PLEASE MEASURE THE HINGE HOLE ON THE FIXED GLASS BEFORE INSTALLATION

2-5	Inside	Outside
2-6	15x1	15x1
2-7	Outside	Inside

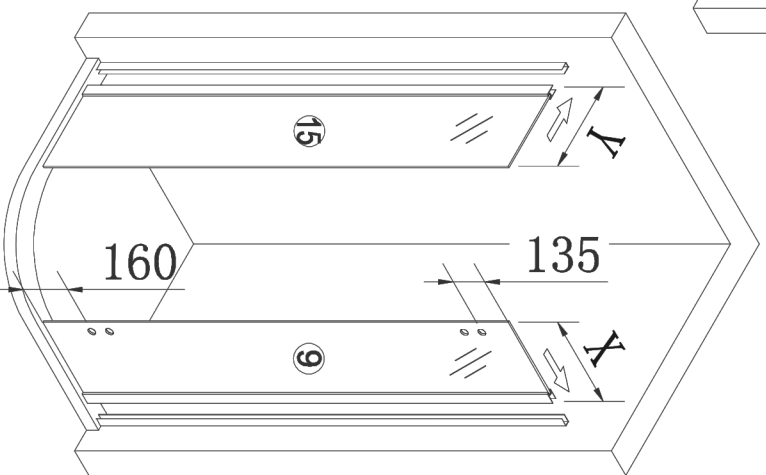

2

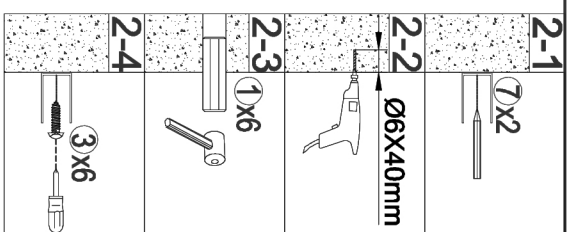
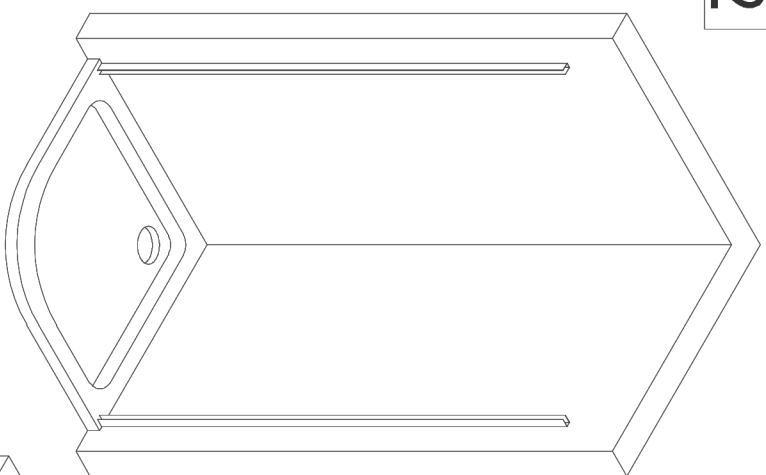






	SE006-V3	SE007-V3
⑨	X=240mm	X=340mm
15	Y=240mm	Y=340mm







1. PLEASE MEASURE THE HINGE HOLE ON THE FIXED GLASS BEFORE INSTALLATION





2-5	Inside	Outside
2-6	15x1	15x1
2-7	Outside	Inside

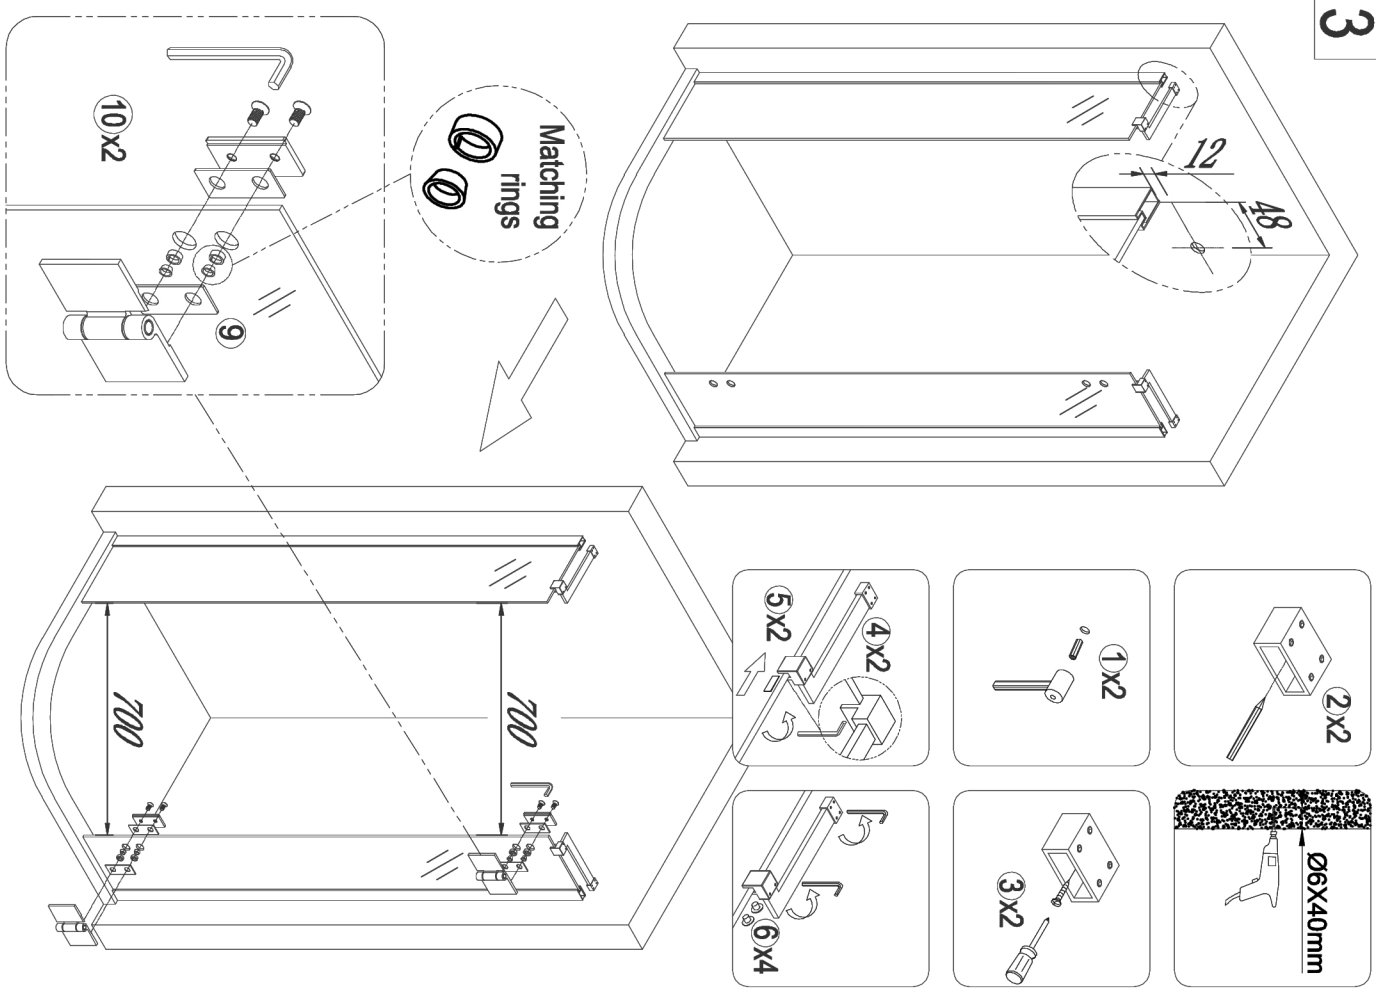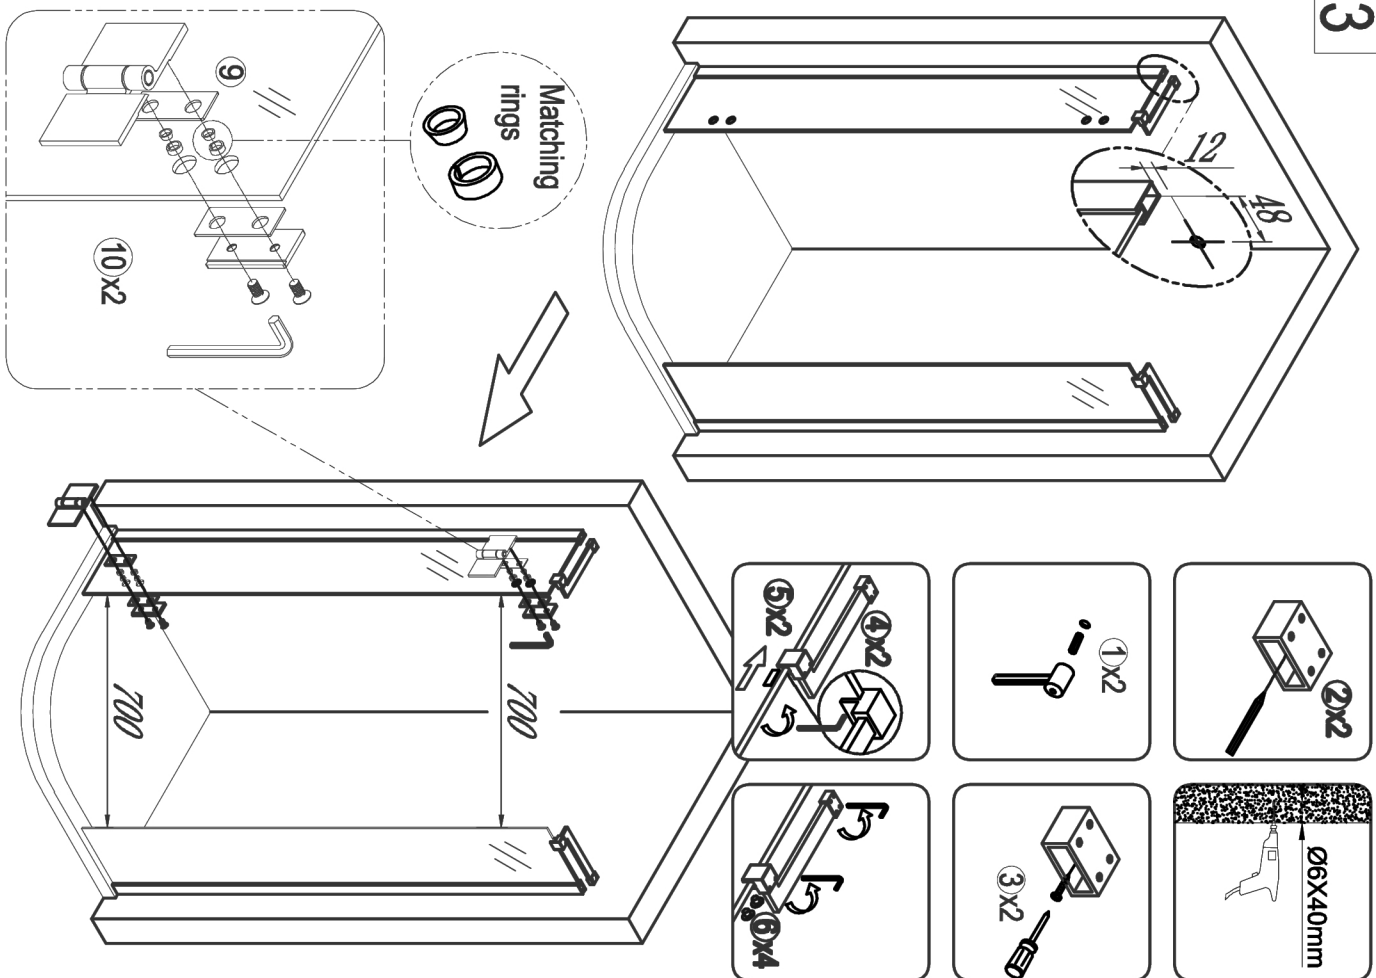

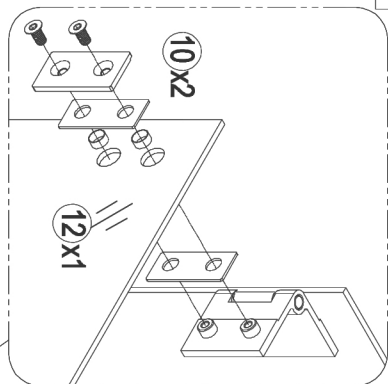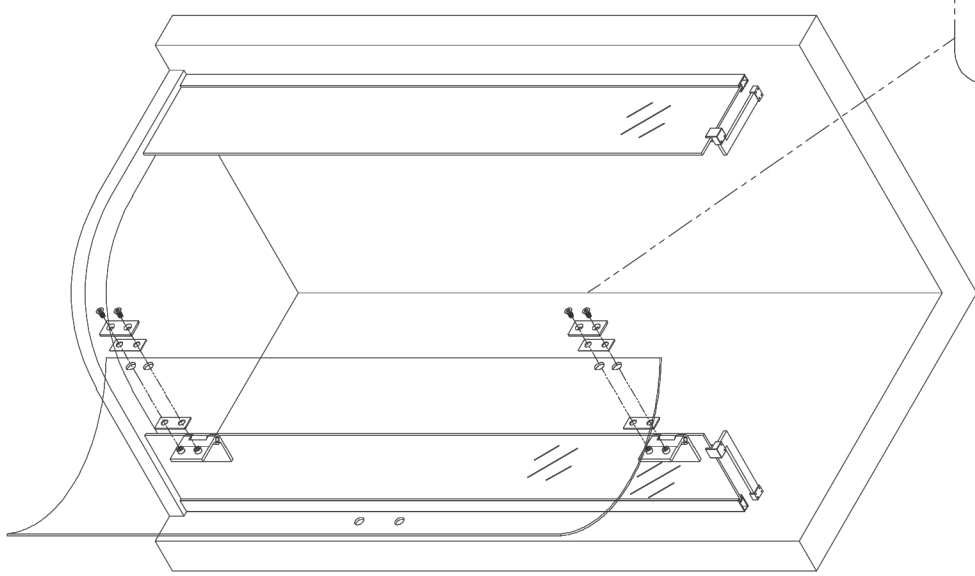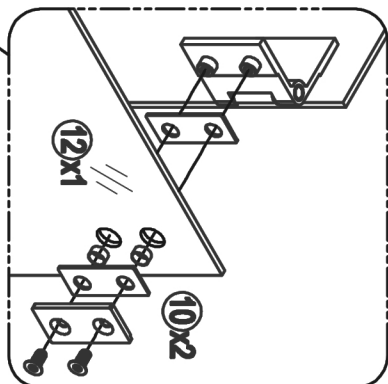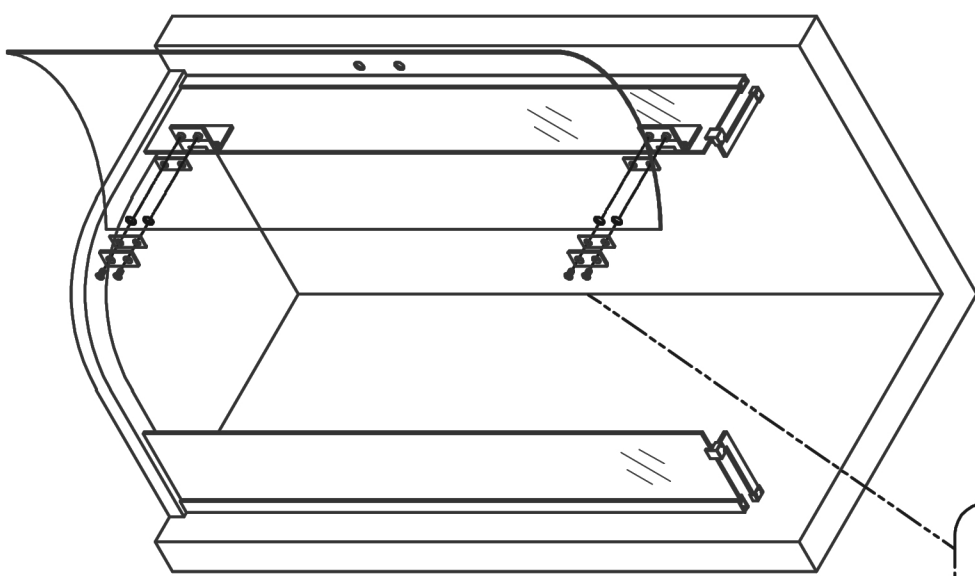

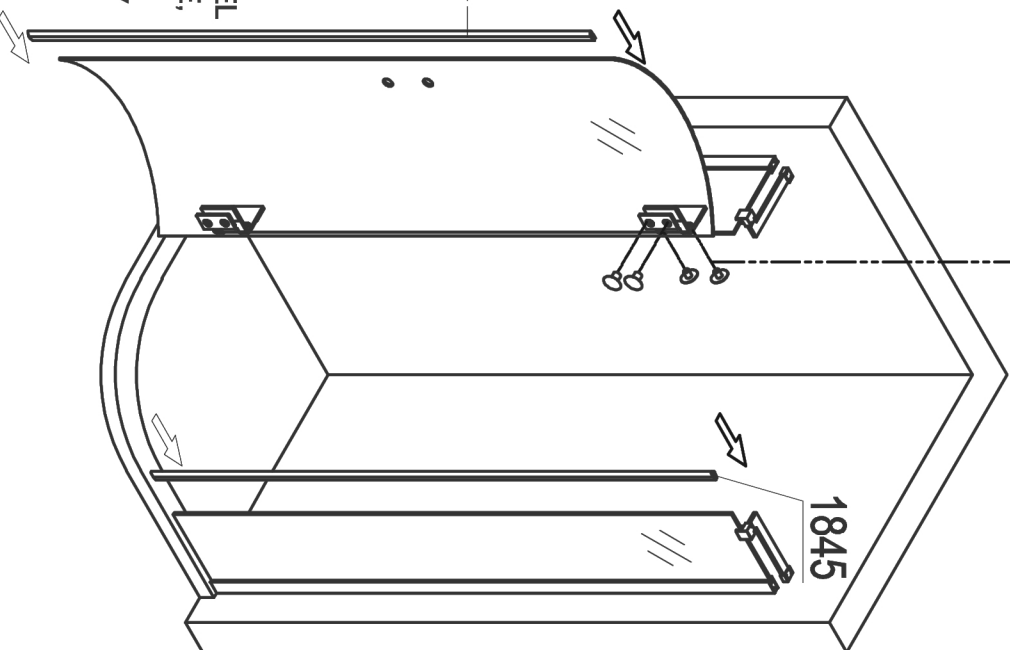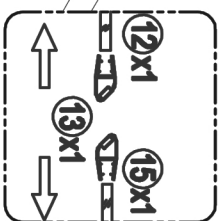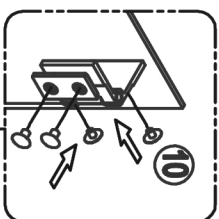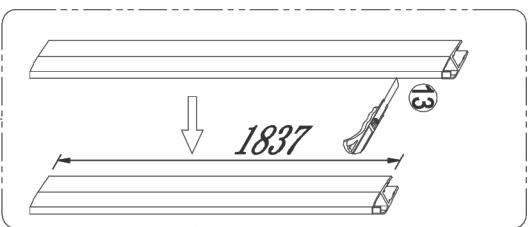

IT IS VERY IMPORTANT
TO HAVE THE BOTTOM
OF THE GLASS PARALLEL
TO THE TRAY TOP FACE,
IT MUST HAVE A 22MM
EVEN GAP ALL THE WAY
ALONG.

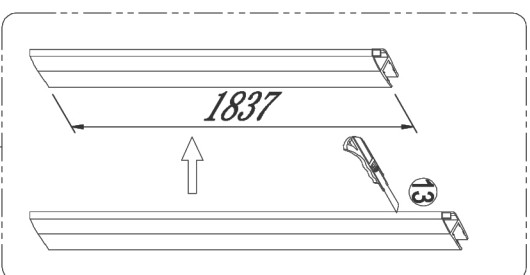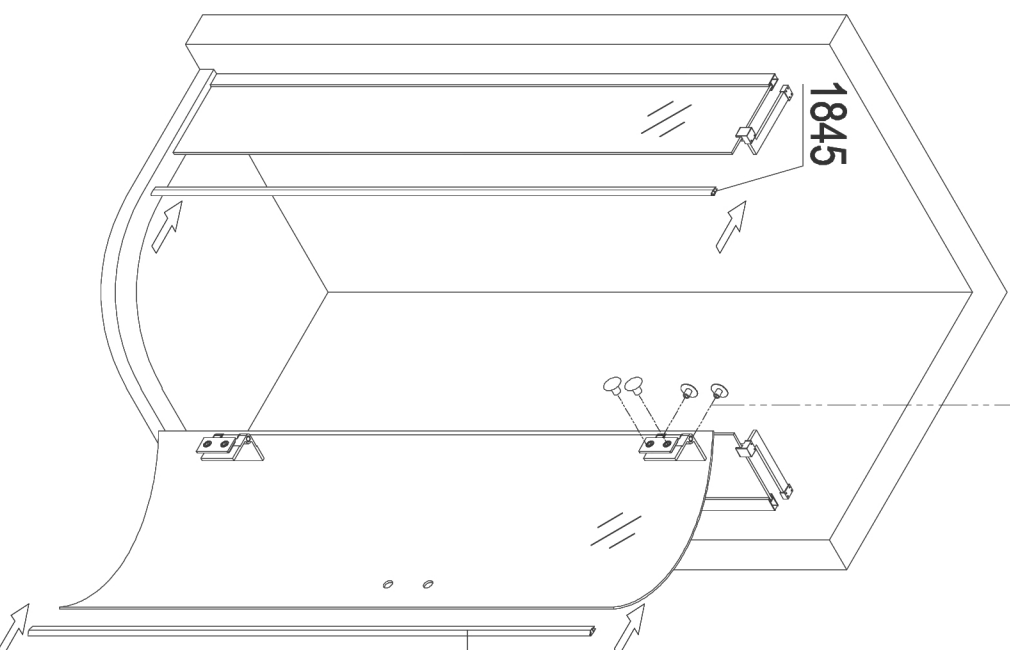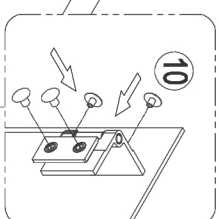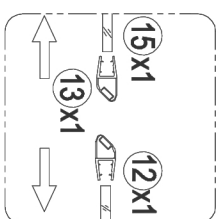


IT IS VERY IMPORTANT
TO HAVE THE BOTTOM
OF THE GLASS PARALLEL
TO THE TRAY TOP FACE,
IT MUST HAVE A 22MM
EVEN GAP ALL THE WAY
ALONG.




6

Fixed
glass

Door
Glass

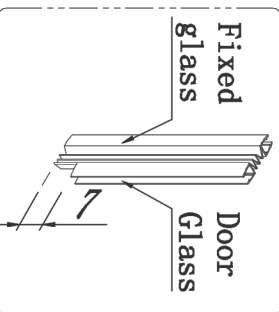


DRILL THROUGH THE
PRE-DILLED HOLES
IN THE WALL PROFILES
(SHOWN RIGHT). USE
3mm DRILL AND MAKE
SURE YOU ONLY DRILL
THROUGH ONE WALL
THICKNESS.

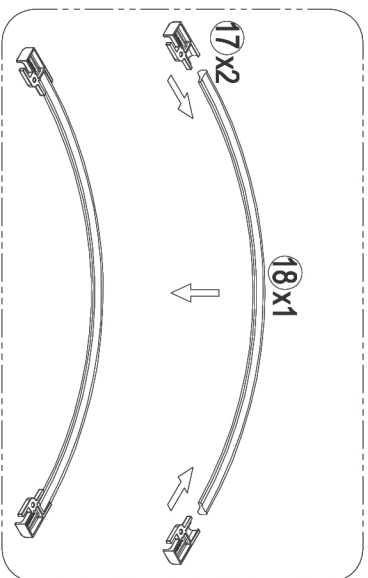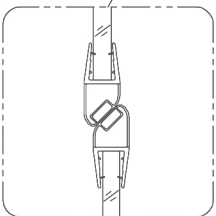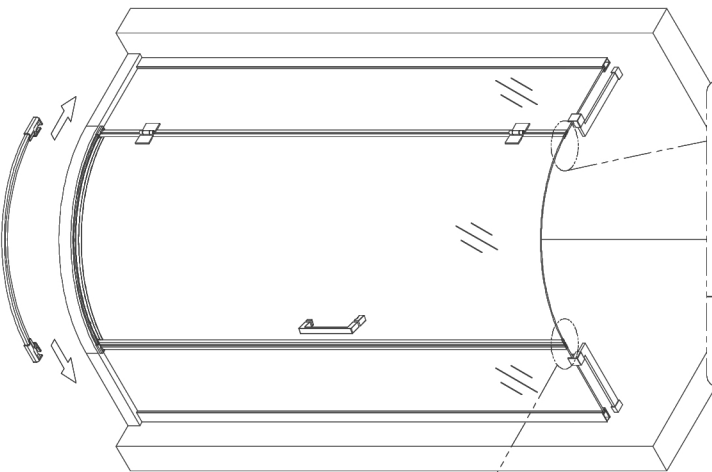


6-1

Ø3.2mm

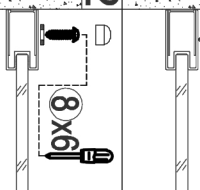

6-2

8x6



6-3

11x1

12



6-4

14x1




6-5

3x1



6-6

3x1



6-7


16x1






6

Door
Glass

Fixed
glass

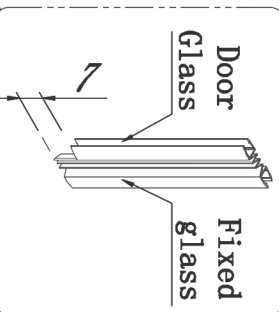


DRILL THROUGH THE
PRE-DILLED HOLES
IN THE WALL PROFILES
(SHOWN RIGHT). USE
3mm DRILL AND MAKE
SURE YOU ONLY DRILL
THROUGH ONE WALL
THICKNESS.

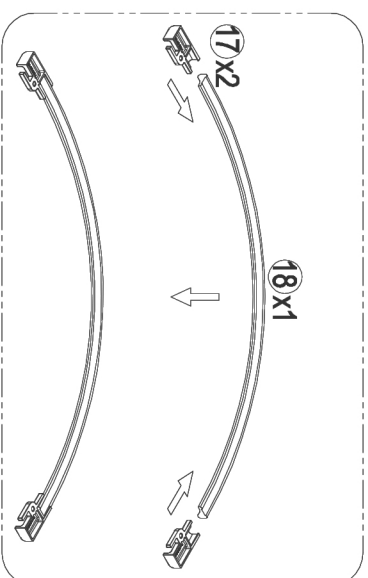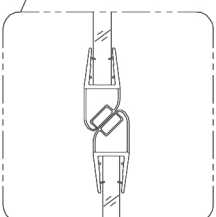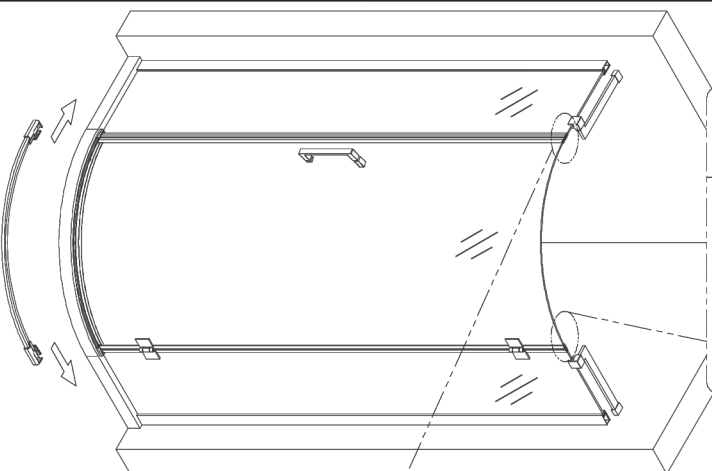


6-1

Ø3.2mm

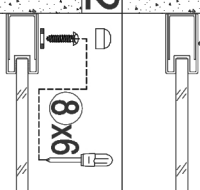

6-2

8x6



6-3

11x1

12



6-4

14x1




6-5

3x1



6-6


3x1



6-7


16x1



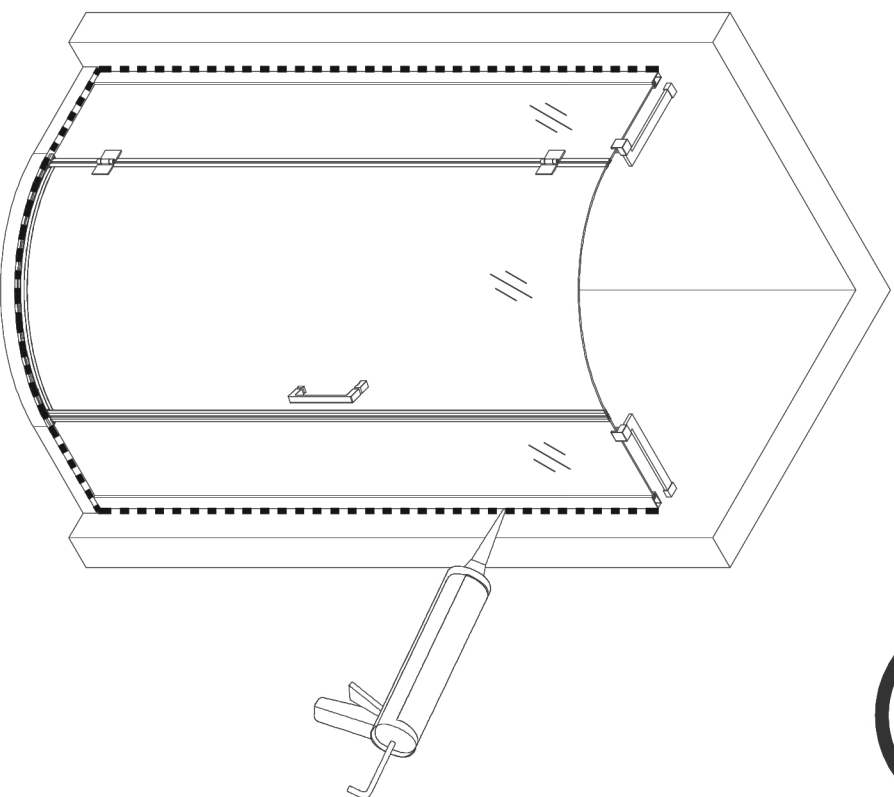

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when
cleaning your shower enclosure.

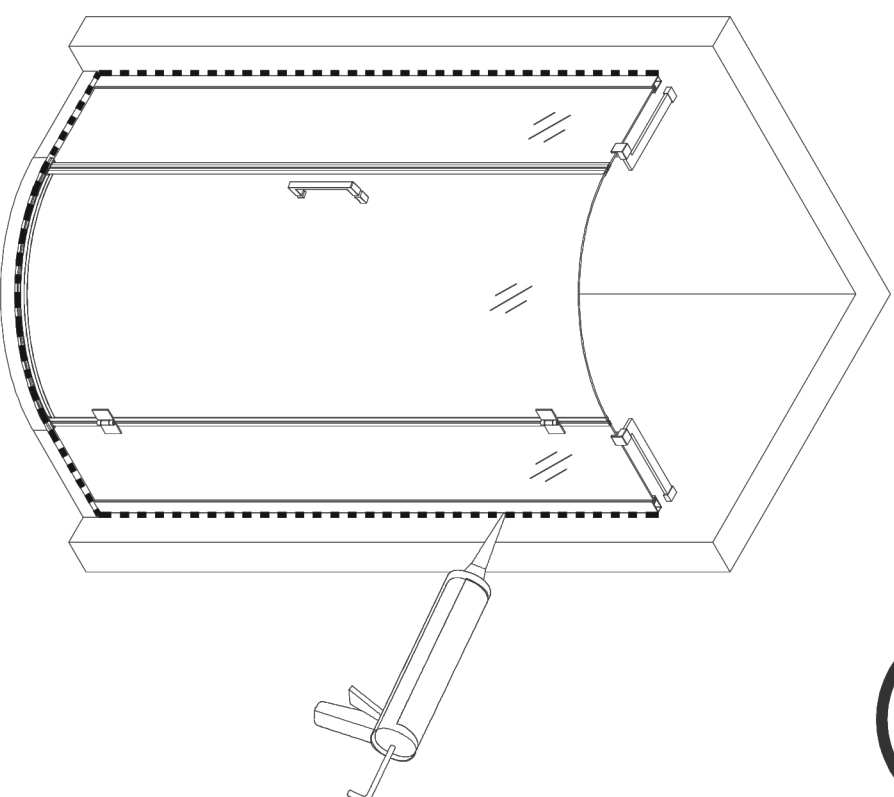

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when
cleaning your shower enclosure.