

Tulsa Art No. 9101600

Jersey Art No. 9101700

Thank you for purchasing this HiB product.

Please read through these instructions carefully and refer back to them during installation to ensure that your product is fitted safely and that it retains its high quality finish.

Please retain this leaflet for future reference.

Before drilling, ensure there are no hidden cables or pipes in the ceiling.


Care Instructions

Do not use abrasives or solvents when cleaning this product

Aftercare Service

In the unlikely event that this product should fail please contact HiB customer services, contact details shown below.

Wall Mounting (Fig. 1)

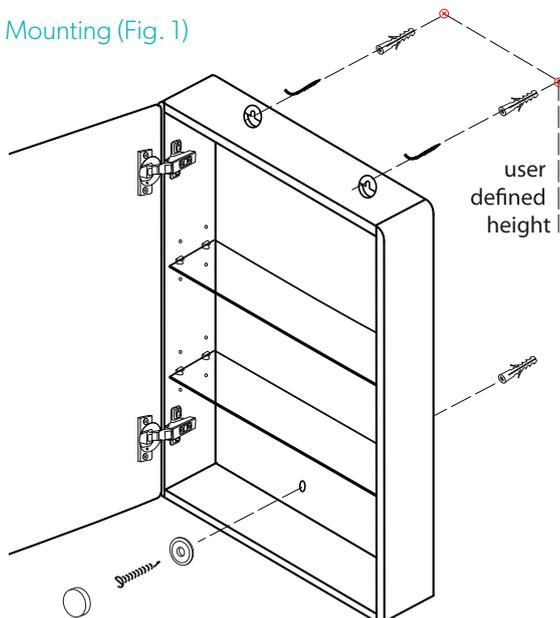

Fitting Instruction

1. Position the cabinet in a suitable location and mark the position of the top of the cabinet using a soft pencil.
2. Remove the cabinet from the wall and using a spirit level, mark the position of the three mounting points (Fig. 1).
3. **Before drilling, ensure there are no hidden cables or pipes behind the mounting points.** Drill the required holes in the marked positions. If drilling through tile, use a ceramic drill bit. Insert the wall plugs level with the surface of the wall. If fitting to a tiled surface, wall plugs should be inserted below the tile surface to avoid cracking. *NB. For plasterboard walls, specialist fixings should be purchased, available from any DIY or hardware store.*
4. Insert the hook screws into the wall plugs.
5. Hang the cabinet on the wall ensuring that it is firmly located on both hook screws. Position the washer provided over the hole at the bottom of the back of the cabinet. Fix the cabinet firmly to the wall by screwing through the washer into the wall plug. Cover the screw using the cap provided.
6. The hinge can be adjusted in order to reposition the door correctly. See Fig. 2 - diagrams A, B and C for further information.

Hinge Adjustment (Fig. 2)

