


OPTIMA SLIDING DOOR / SIDE PANEL



Sliding Door -
Pages 2 - 8

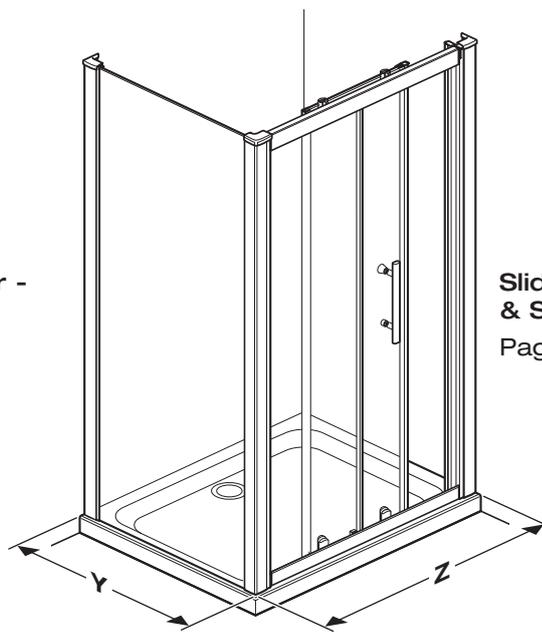

Sliding Door
& Side Panel -
Pages 9 - 16

DIMENSIONS

Check the enclosure size in the table below matches the showertray installation.

X = Widths:

1000 Door X = 950 - 1000mm
1100 Door X = 1050 - 1100mm
1200 Door X = 1150 - 1200mm
1300 Door X = 1250 - 1300mm
1400 Door X = 1350 - 1400mm

Y = Widths:

700 Panel Y = 670 - 695mm
760 Panel Y = 735 - 760mm
800 Panel Y = 775 - 800mm
900 Panel Y = 875 - 900mm

Z = Widths:

1000 Door Z = 953 - 1003mm
1100 Door Z = 1053 - 1103mm
1200 Door Z = 1153 - 1203mm
1300 Door Z = 1253 - 1303mm
1400 Door Z = 1353 - 1403mm

*Please read these instructions carefully and keep for future reference.
Incorrect fitting will invalidate the guarantee.*

⚠ SAFETY

- Handle glass with great care. Although the glass is very tough, sharp impacts can damage both the glass and metal frame.
- Make sure there are no hidden pipes or cables hidden in the wall where you intend to drill.
- Wear safety goggles, shoes and appropriate clothing.

⚠ BEFORE INSTALLATION

- Check that the shower tray is level in all directions. The enclosure will not sit correctly on an uneven surface. If uneven, the wall channels may not fit and the doors may not shut correctly.
- The enclosure should be fitted on tiled walls which are sealed with waterproof grout.
- There must be a good silicone seal between the rim of the shower tray and the wall.
- The shower tray and the enclosure must match in size. Attempting to fit the incorrect size of enclosure to the shower tray will result in water leaks.
- Always check very carefully that components are vertical.

Equipment needed:

Drill, 6.5mm Masonry Bit, 4.5mm & 3mm Metal Bits (general), Crosshead Screwdriver, Spirit Level, Pencil, Tape Measure, Masking Tape, Silicone Sealant.




Note: The screws and wall plugs supplied are for masonry walls. For lightweight walls i.e. stud partition, plasterboard etc, use the correct type of fixings.

CUSTOMER CARELINE 01746 713410



Check contents of pack before installation. If anything is missing, contact our Customer Careline for assistance.

CUSTOMER CARELINE: 01746 713410


	PN3230	8		Inner & Outer wheel covers	4/2
	PN3225	8		1000mm = PN40343 1100mm = PN40345 1200mm = PN40346 1300mm = PN40347 1400mm = PN40348	2
	PN60524	8		PN40010	1
	PN4748	14		PN40332	1
	PN50490	2		PN40335	1
	PN50488	2		20mm Flipper PN40336	1
	PN60510	1		27mm Flipper PN50493 PN50494	1/1

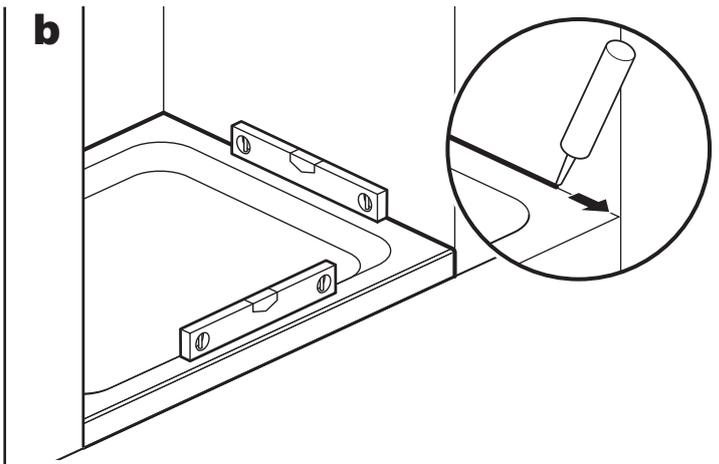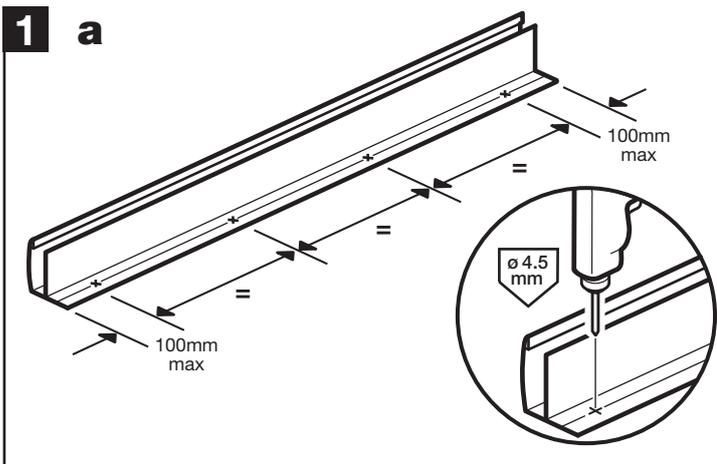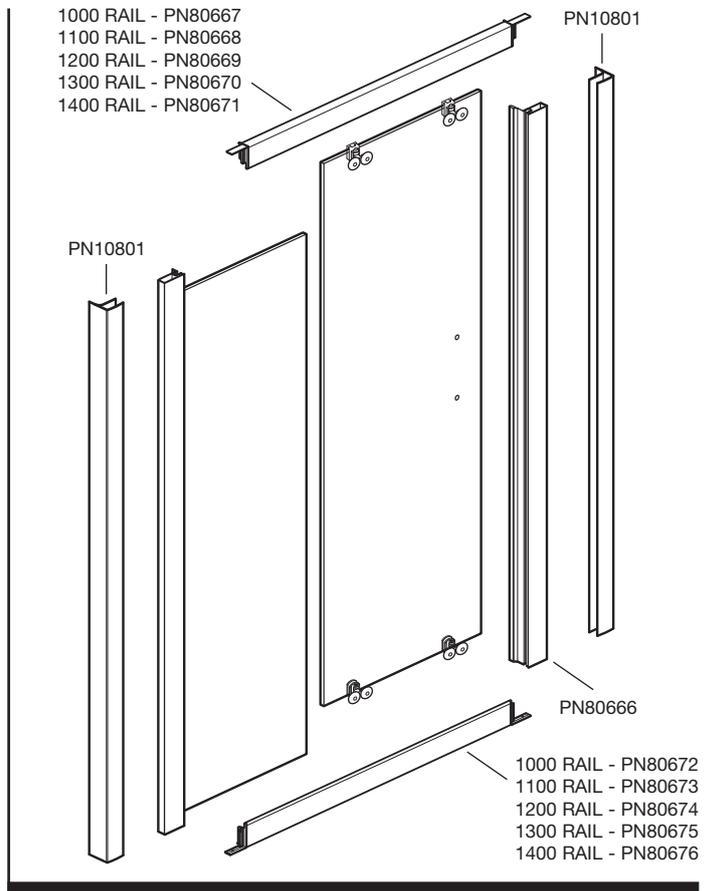


a: Drill holes in both wall channels at points shown using a 4.5mm drill bit, where shown.
b: Ensure the shower tray is level in all directions. **IMPORTANT:** Clean the tray and seal the gap between the tray surface and tiles. It is important that the tray is sealed right up to the tray edge so that the bottom of the wall channel is sealed. Failure to do this will cause water to leak under the wall channel and between the tray and tiles, resulting in damp patches on the wall and under the tray.

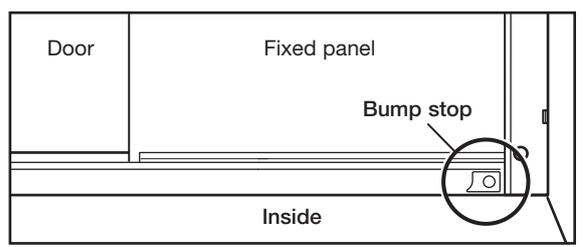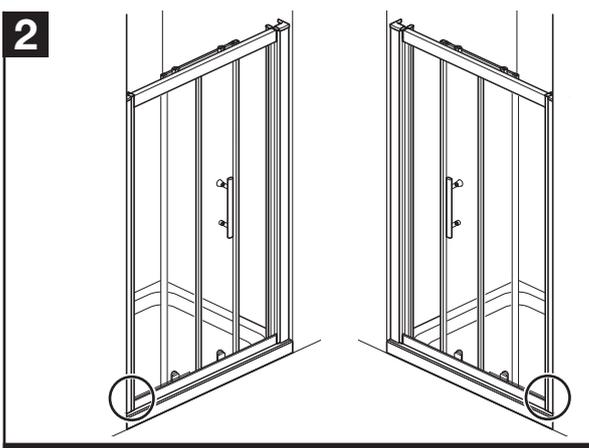


The enclosure can be assembled with the door on either the right or left side of the assembly (see step 4). **Note:** The bottom bump stop **MUST** be on the 'fixed panel' side of the enclosure.
Note: The following instructions show the enclosure with the door on the right hand side.

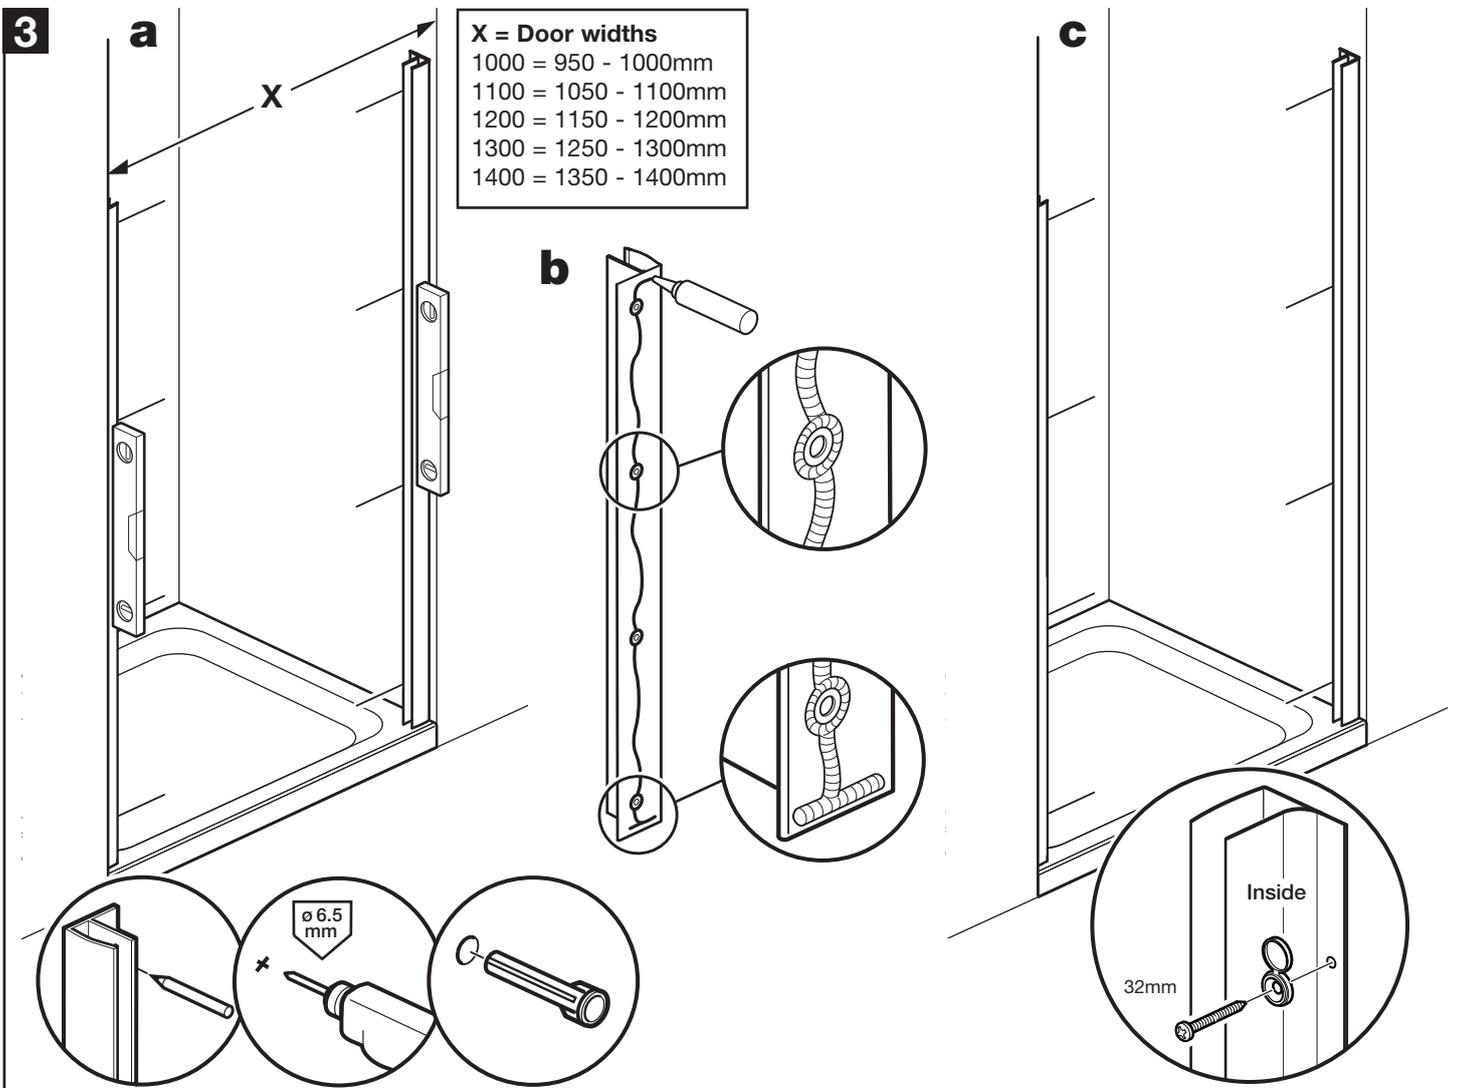


- a:** Place the wall channels on the tray ensuring they are vertical and an equal distance back from the front of the tray. Place masking tape against the wall before marking drill hole positions, this will help prevent the drill bit slipping. Drill 6.5mm holes, 30mm deep and insert the wall plugs.
- b:** Apply sealant to the back of the wall channels. **c:** Fix the wall channels to the walls using 8 x 32mm screws and screw caps.

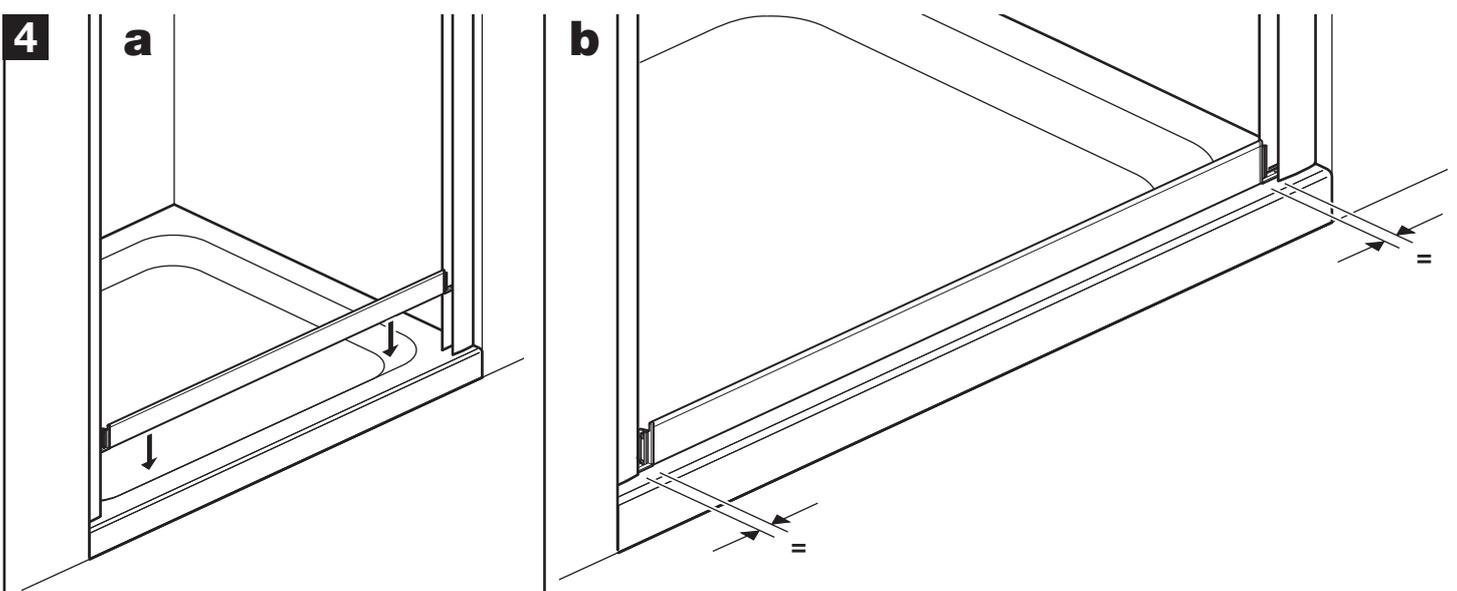


- a:** Place the bottom rail onto the tray with its end mouldings inserted into the wall channels.
- Note:** The bottom bump stop (on the inside of the rail) **must** be on the 'fixed panel' side of the enclosure.
- b:** Centre the bottom rail between the wall channels so that there is an equal gap at each end.

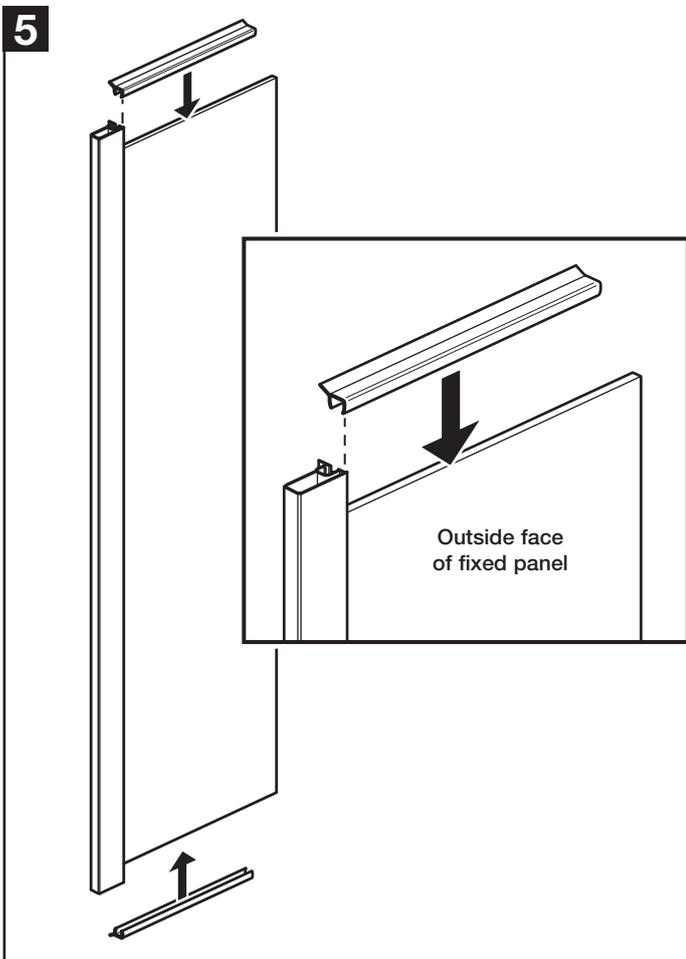


Push fit the 'short flipper seals' onto the top and bottom edges of the fixed panel - flush against the metal profile. **Ensure the flipper seal 'flaps' are on the inside of the fixed panel.**
Note: Wetting the glass with water will help to fit the seals.

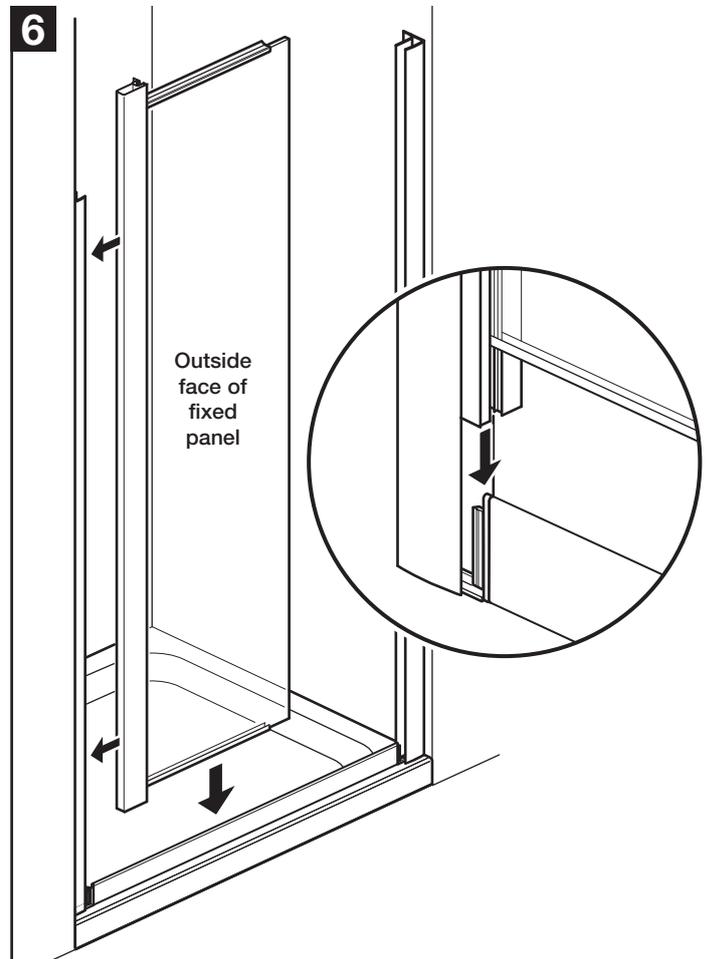


Position the fixed panel into the required wall channel and slide down so it fully slots onto the end moulding of the bottom rail.

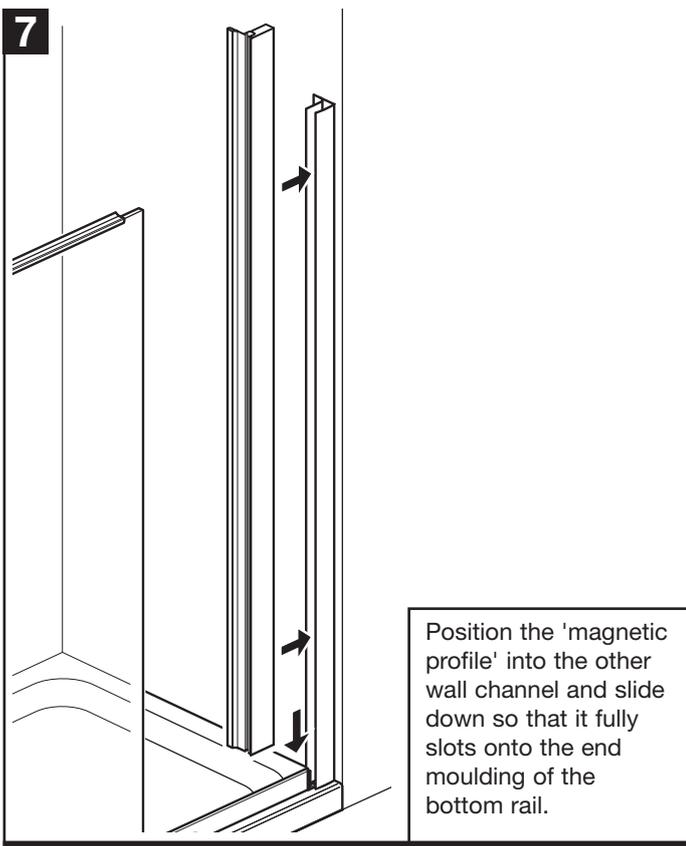

Position the 'magnetic profile' into the other wall channel and slide down so that it fully slots onto the end moulding of the bottom rail.

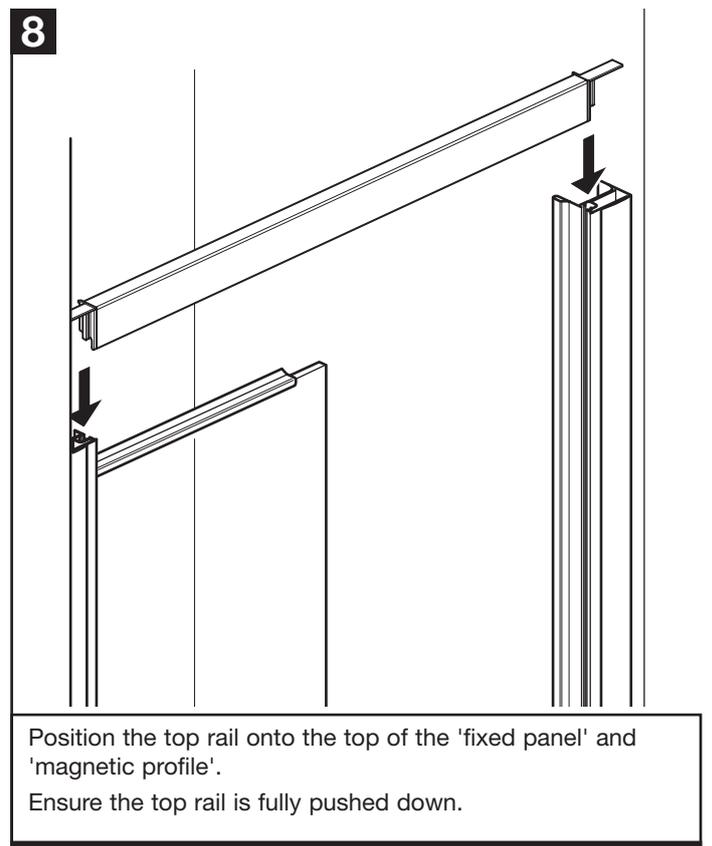



Position the top rail onto the top of the 'fixed panel' and 'magnetic profile'.
 Ensure the top rail is fully pushed down.

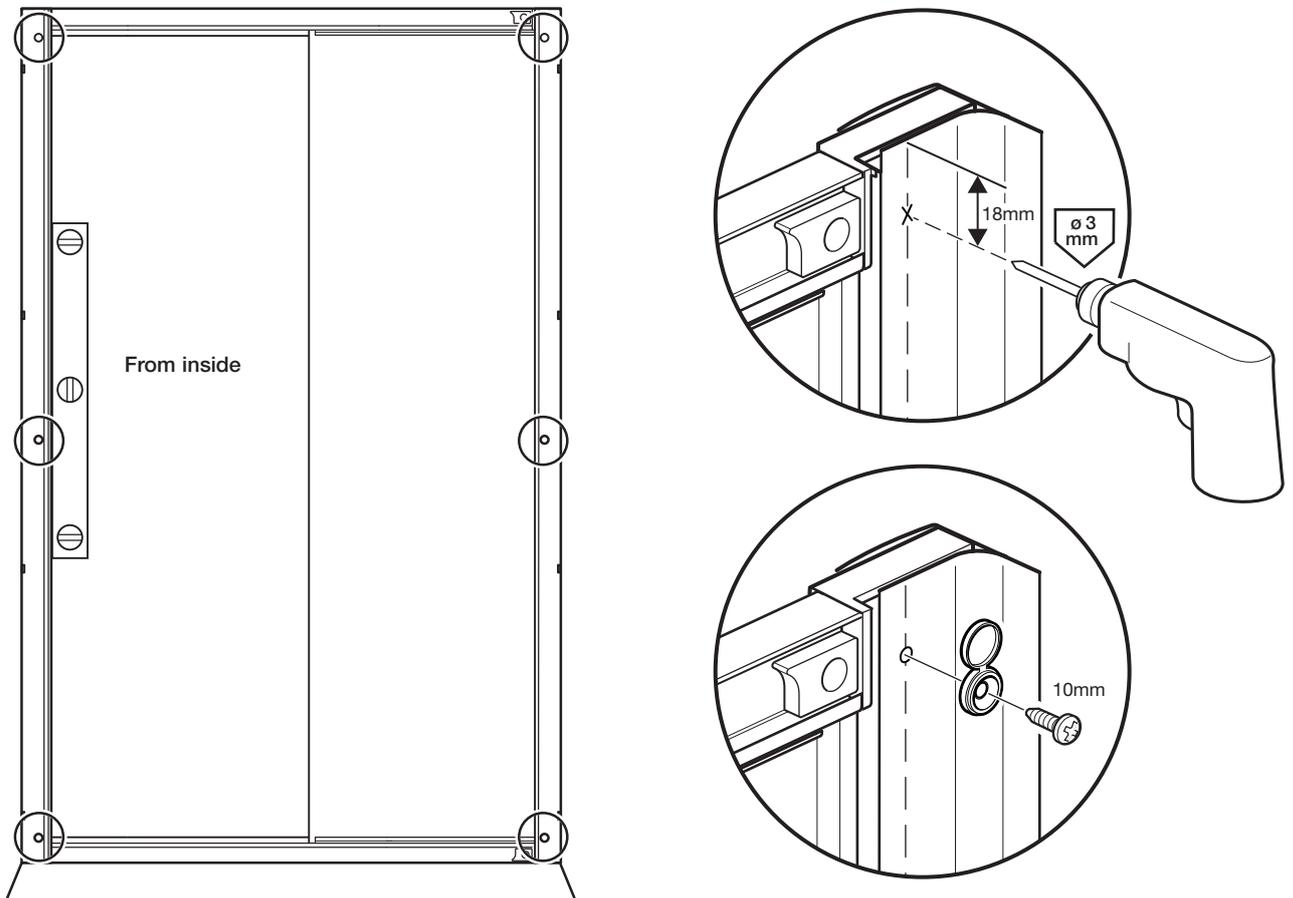9

Check the door frame is vertical and is centrally positioned between the wall channels.

From inside the enclosure, in the 6 positions shown, drill through the wall channels into the fixed panel and magnetic profile.
Important: The top holes MUST be 18mm down from the top. Drill using a 3mm drill bit.

Fix using 6 x 10mm screws and screw caps.

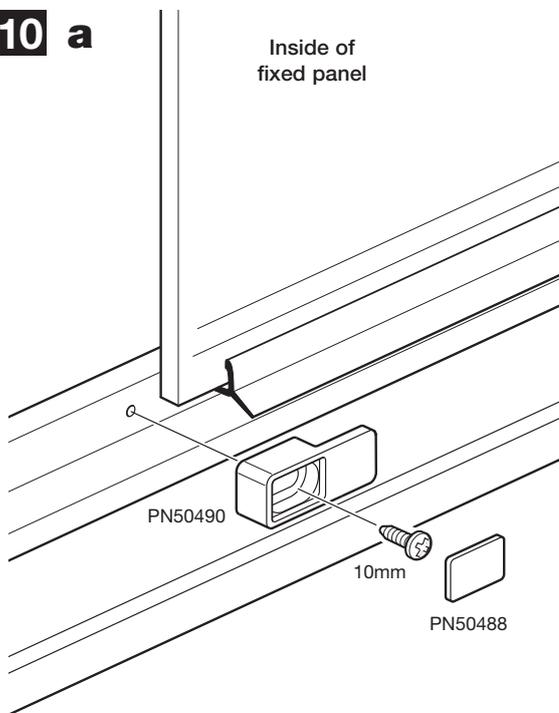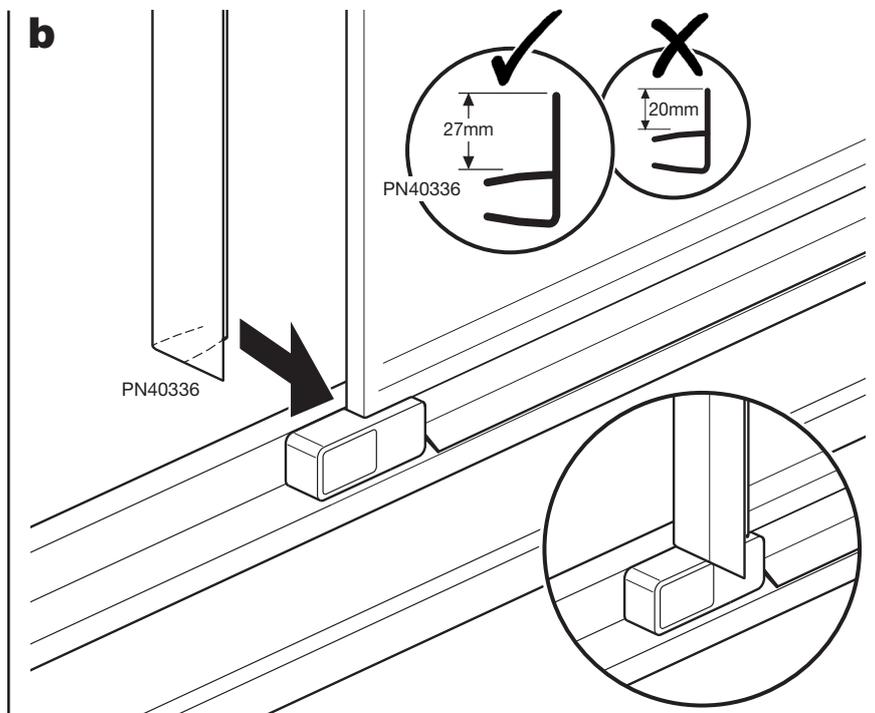
10 a**b**

a: Attach a glass clamp to each horizontal rail (at edge of glass) using 10mm screws, **tighten by hand only - do not overtighten.** Push fit glass clamp covers.


b: Select vertical seal (PN40336) with the 27mm 'flipper' and fit to the fixed panel.

Important: The seal must sit tight against glass clamps (top and bottom).

Important: Seal 'flipper' must be on inside of the enclosure. Note: Wetting the glass with water will help fit the seal.

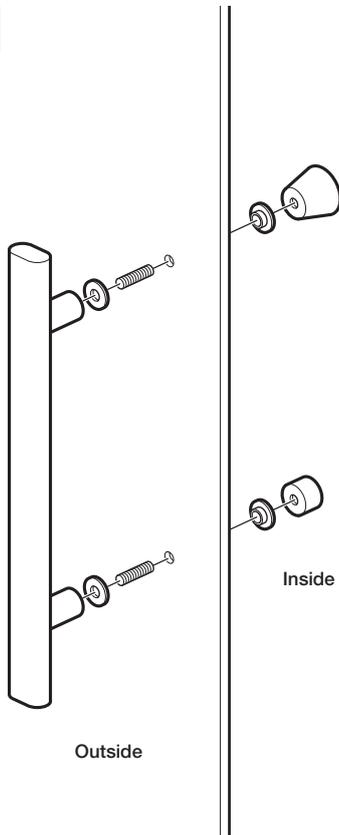11

Fit the door handle (PN60510) to the door ensuring the washers fit between the glass and handle.



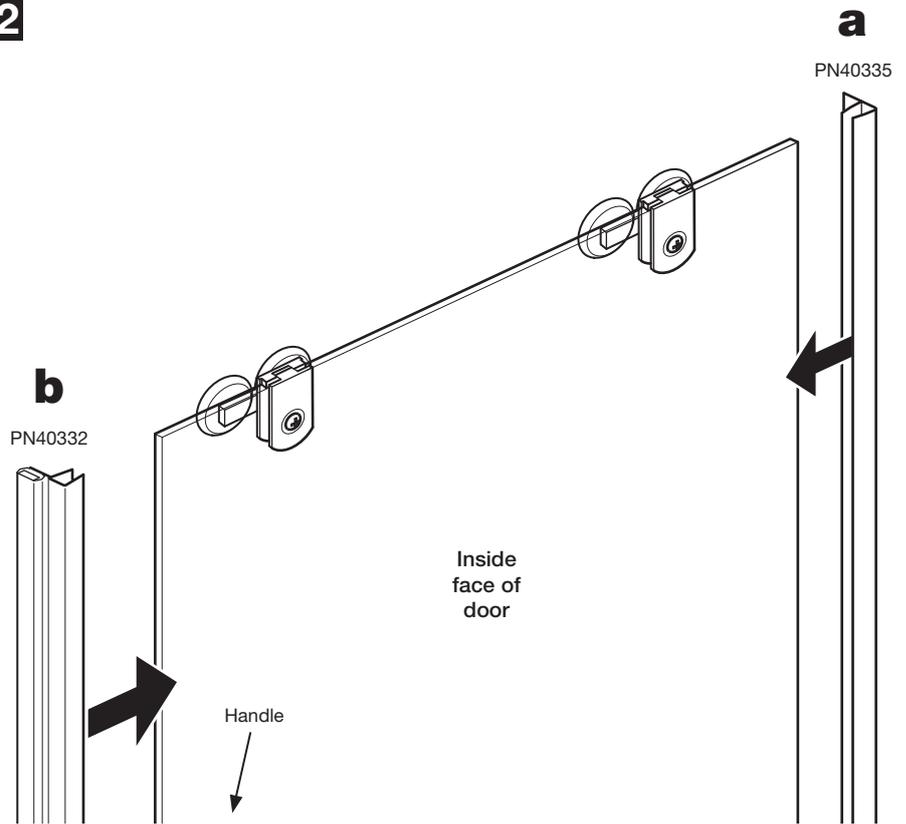
12

a: Select vertical seal (PN40335) with the 20mm 'flipper' and fit onto the back edge of the door. **Ensure the flipper seal 'flap' is on the outside of the door.**



b: Push fit 'magnetic seal' (PN40332) onto the closing edge of the door (**the same side as door handle**).

Note: Ensure the magnetic seal is positioned as shown.

Note: Wetting the glass with water will help fit the seals.

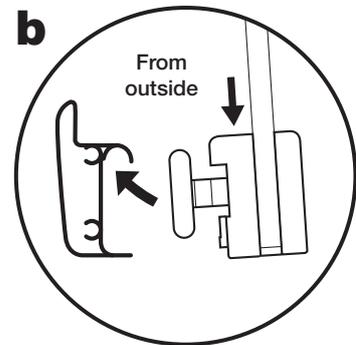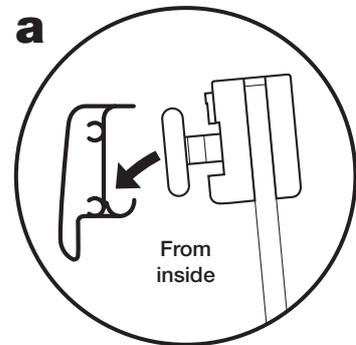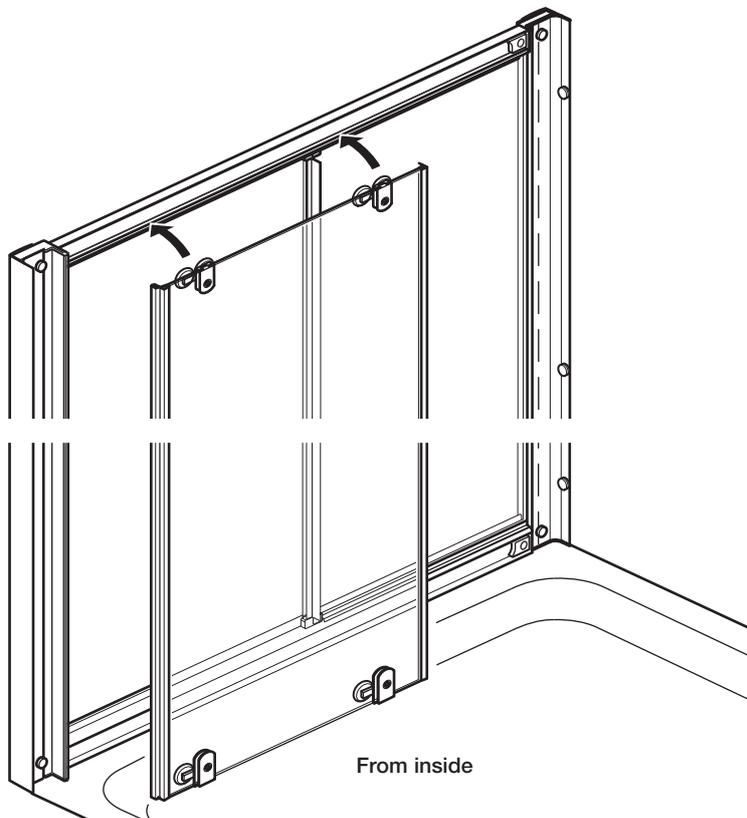13



a: From inside the enclosure, position the top wheels into the top rail. **b:** From outside the enclosure with the door closed, push down the 'plungers' on both bottom wheels, position into the bottom rail and release.

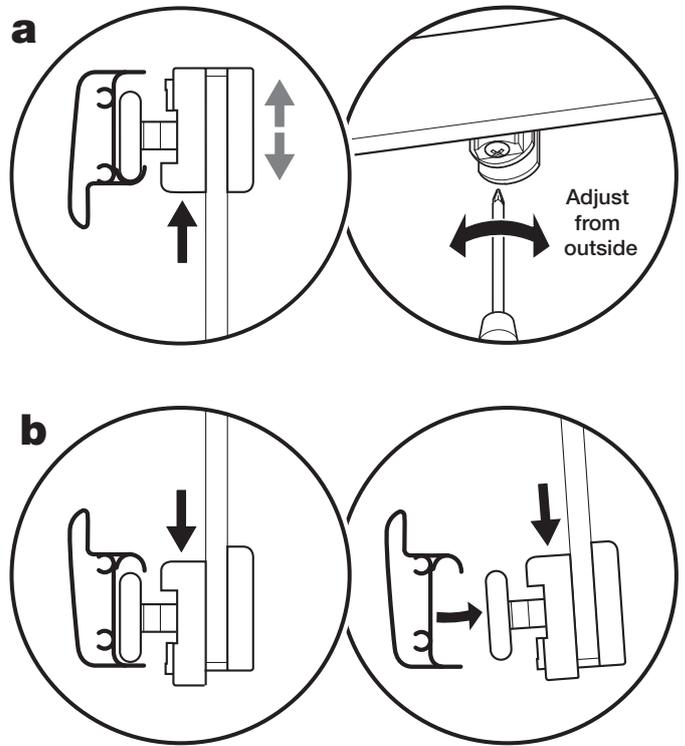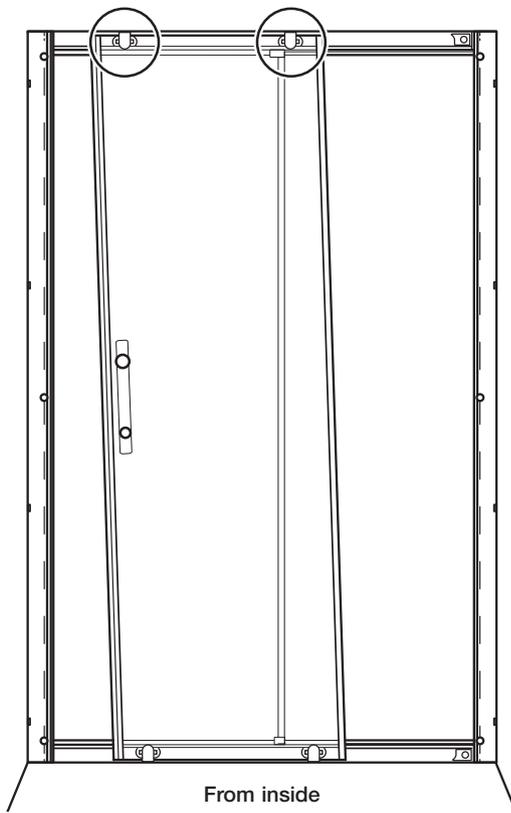14

Door adjustment: The wheels at the top of the door may need adjusting so that the door slides freely and the magnetic seal meets evenly with the magnetic profile when the door is closed.

a: From outside the enclosure and with the door closed, adjust the screws on the top wheels. The bottom wheels should be securely located in the bottom rail but the door must not be raised so high that the 'plungers' on the bottom wheels do not operate.


b: The 'plungers' on the bottom wheels can be pushed down to unclip the door which will allow access to clean the door and fixed panel.

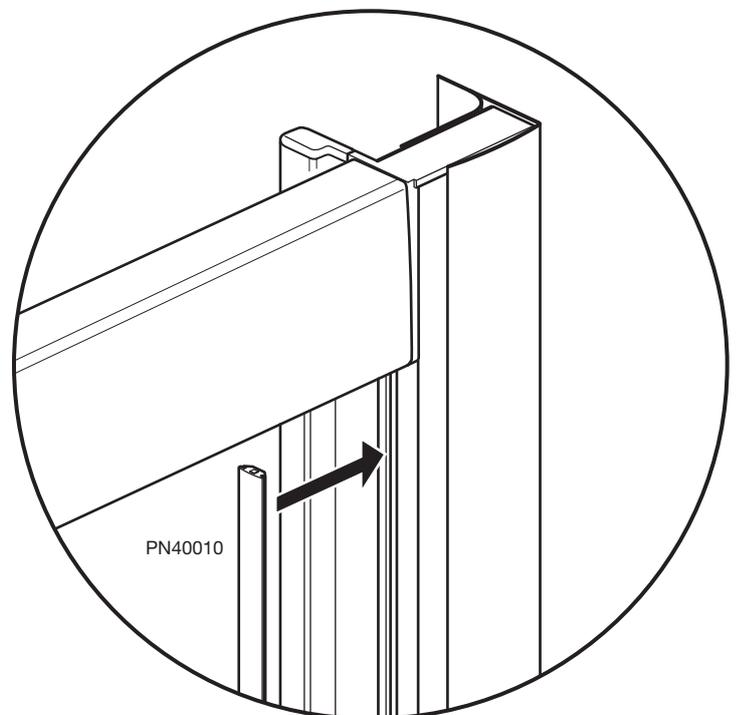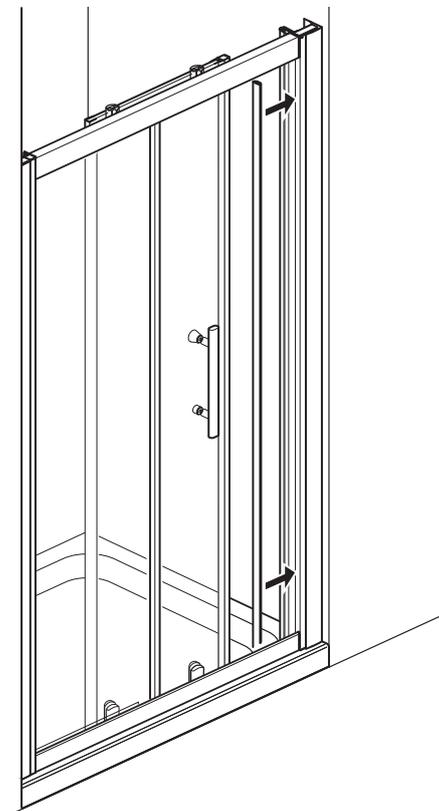15

Push fit the seal (PN40010) into the 'magnetic channel profile'.


Note: The seal may need trimming to length.

16

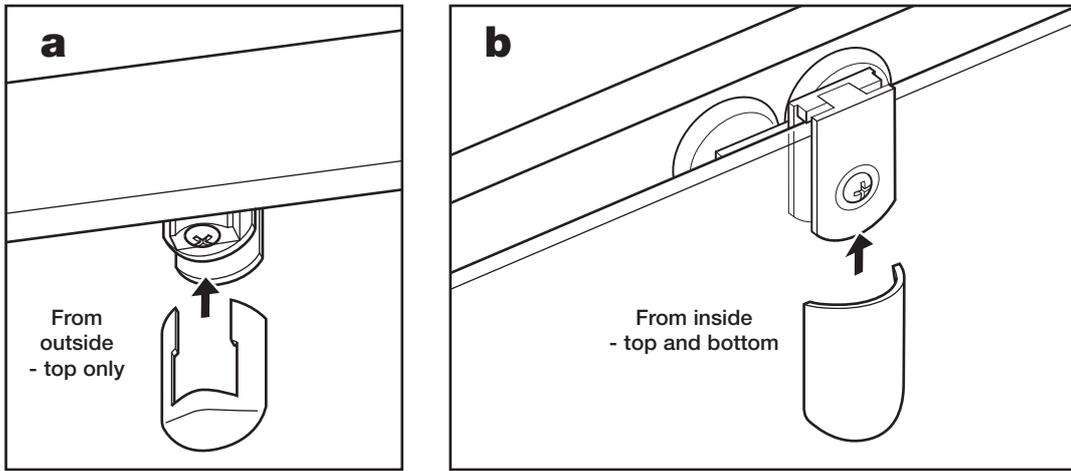


a: From outside the enclosure push fit the outer wheel covers onto the wheels at the top of the door.
b: From inside the enclosure push fit the inner wheel covers onto the wheels at the top and bottom of the door.

17

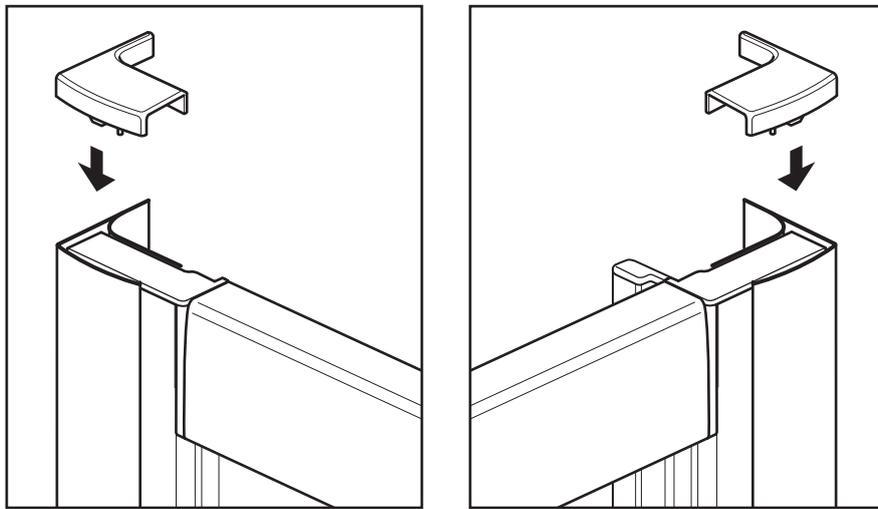

Push fit the top caps (PN50493/50494) onto the wall channels as shown

18

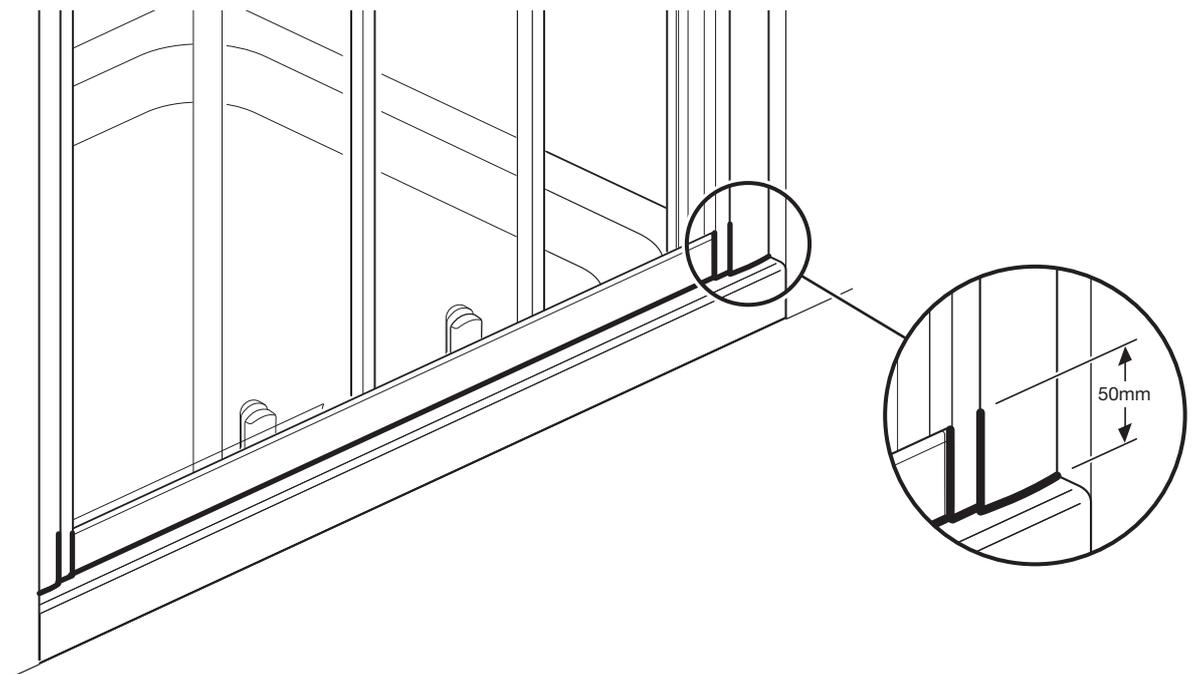


From the outside only, apply sealant to the bottom of the enclosure and 50mm up the wall channels and vertical joints as shown.

Check contents of packs before installation. If anything is missing, contact our Customer Careline: **01746 713410**



CUSTOMER CARELINE: 01746 713410

	PN3230	8		Inner & Outer wheel covers	4/2
	PN3225	8		1000mm = PN40343 1100mm = PN40345 1200mm = PN40346 1300mm = PN40347 1400mm = PN40348	2
	PN60524	8		PN40010	1
	PN4748	14		PN40332	1
	PN50490	2		PN40335	1
	PN50488	2		20mm Flipper	1
	PN60510	1		27mm Flipper	1
				PN50493 PN50494	1/1

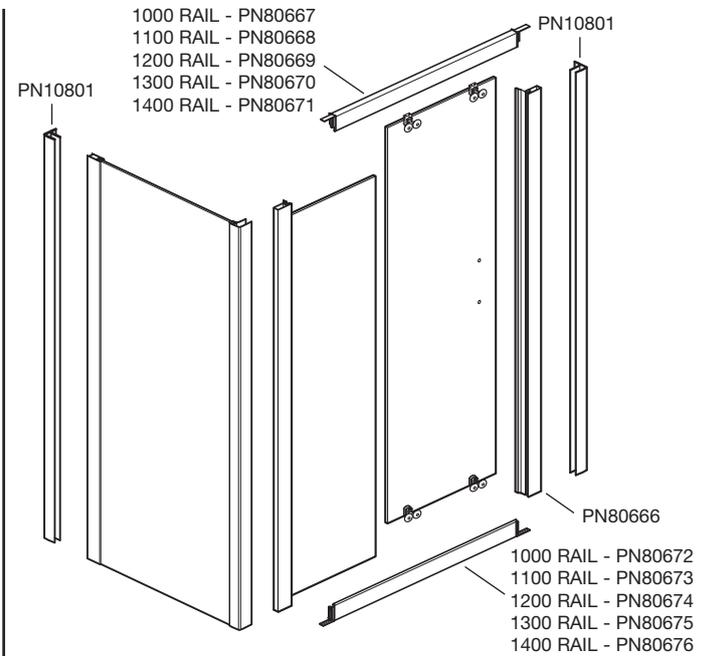



SIDE PANEL CONTENTS

	PN3222	3		PN50503 PN50504	1/1
	10mm PN4748	3		PN50495 PN50496	1/1

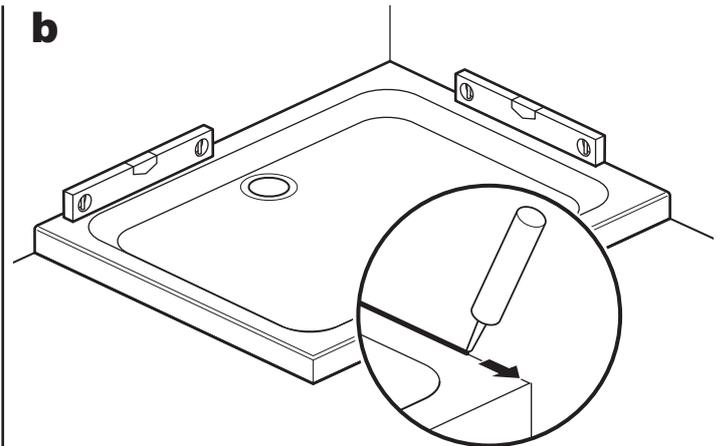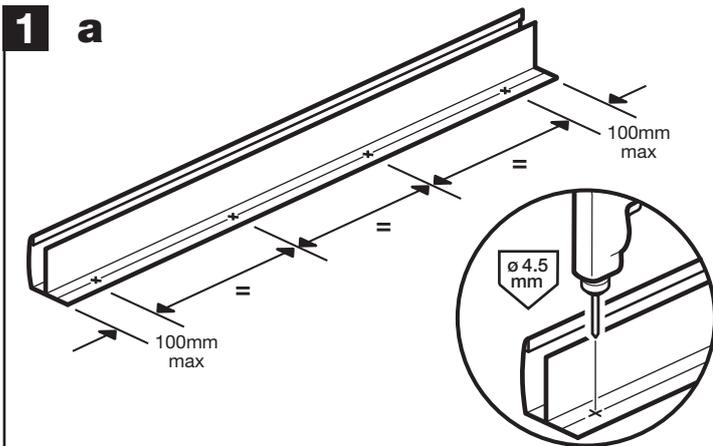


a: Drill holes in both wall channels at points shown using a 4.5mm drill bit, where shown.

b: Ensure the shower tray is level in all directions. **IMPORTANT:** Clean the tray and seal the gap between the tray surface and tiles. It is important that the tray is sealed right up to the tray edge so that the bottom of the wall channel is sealed. Failure to do this will cause water to leak under the wall channel and between the tray and tiles, resulting in damp patches on the wall and under the tray.

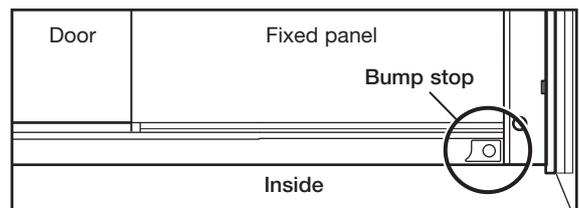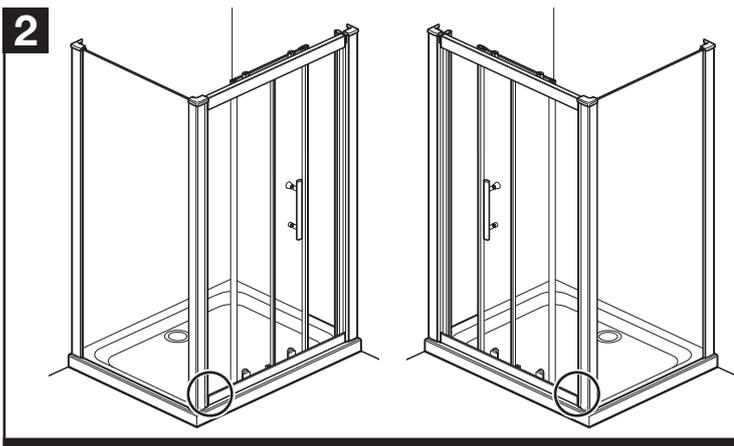


The enclosure can be assembled with the side panel on either the right or left and the door on either the right or left (see step 5). **Note:** The bottom bump stop **MUST** be on the 'fixed panel' side of the enclosure.

Note: The following instructions show the enclosure with the side panel on the left and the door on the right hand side.

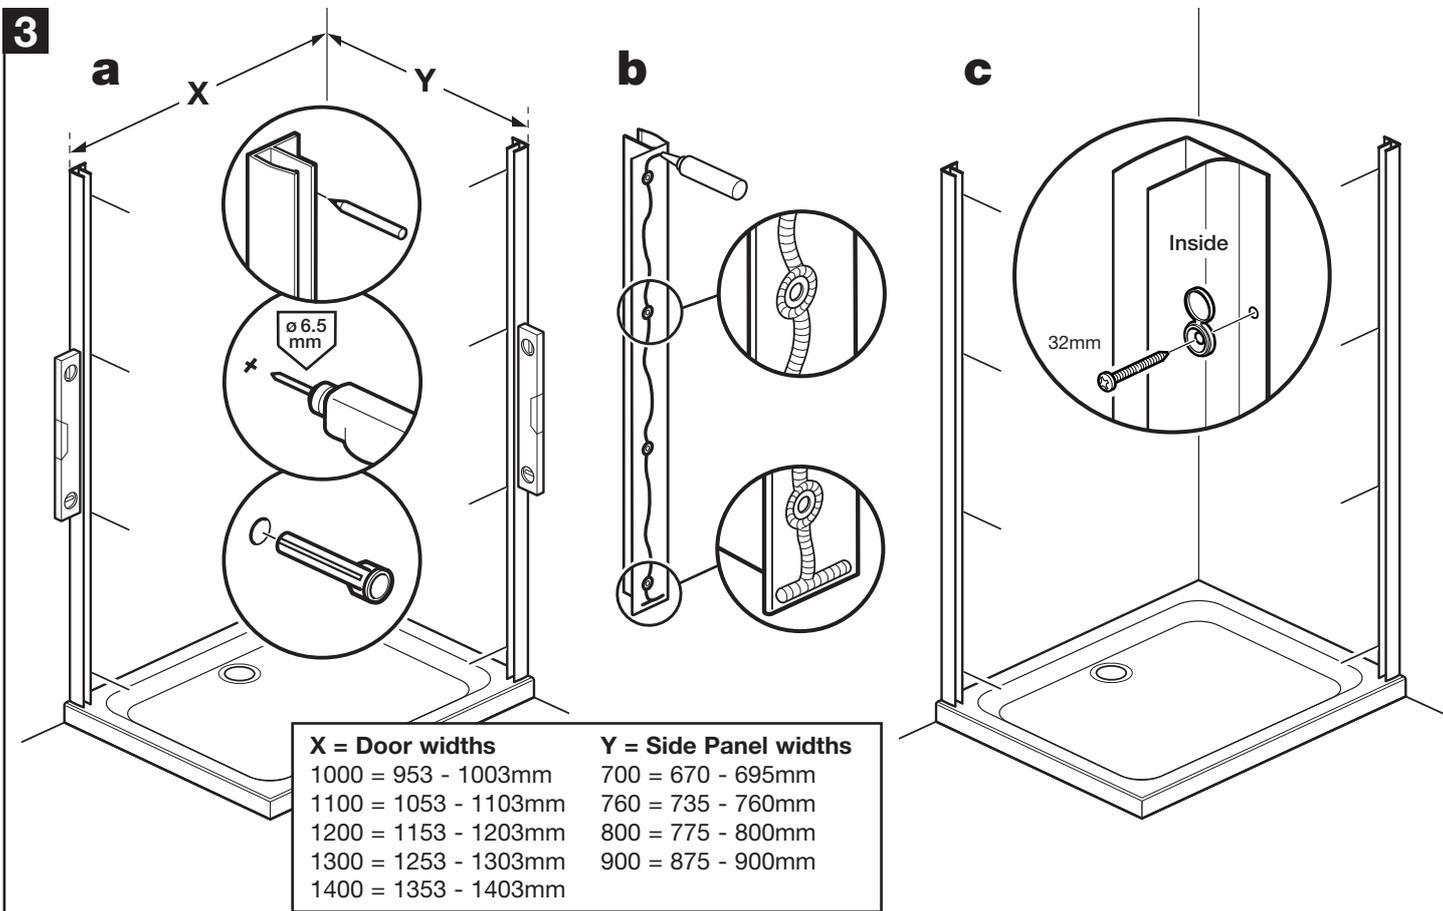


a: Place the wall channels on the tray ensuring they are vertical and an equal distance back from the front of the tray. Place masking tape against the wall before marking drill hole positions, this will help prevent the drill bit slipping. Drill 6.5mm holes, 30mm deep and insert the wall plugs.

b: Apply sealant to the back of the wall channels. **c:** Fix the wall channels to the walls using 8 x 32mm screws and screw caps.

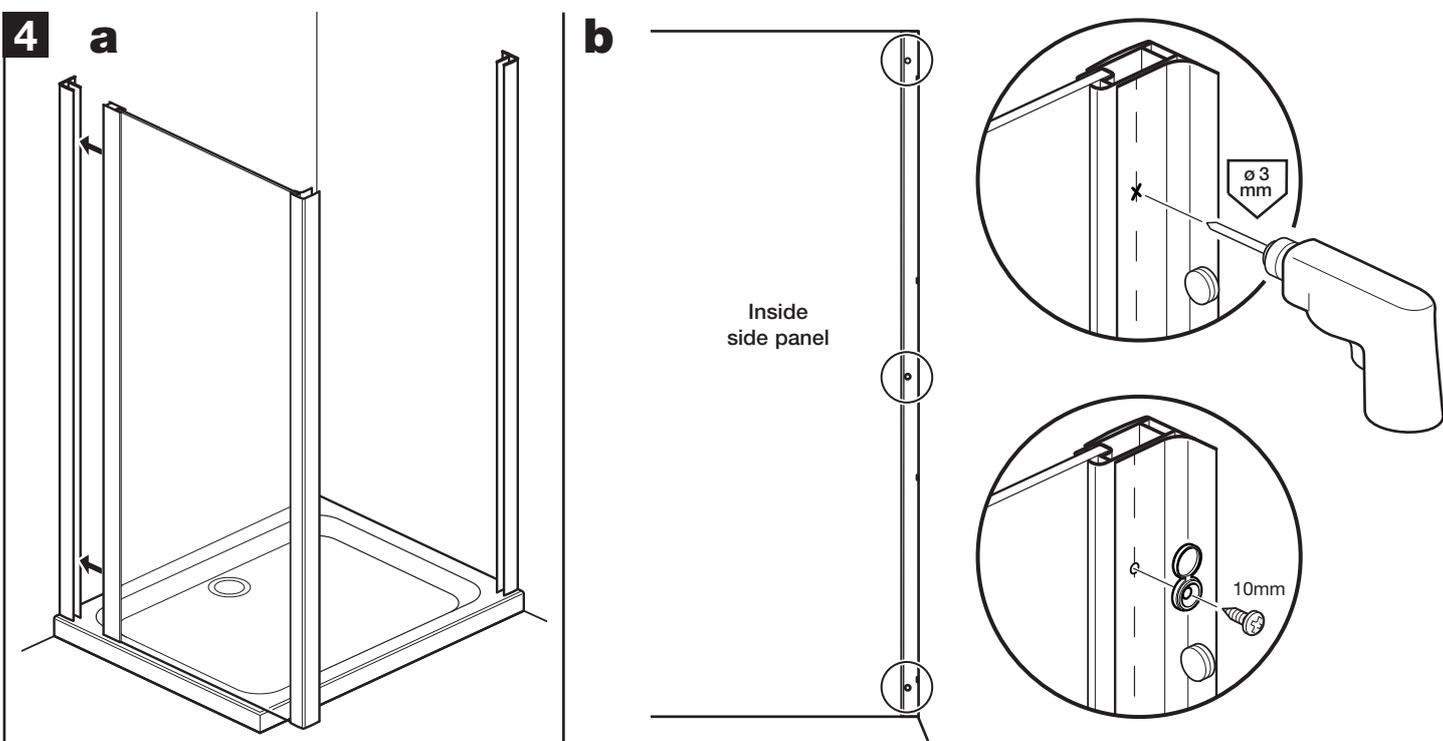


a: Insert the side panel into the wall channel ensuring that the corner post is the same distance in from the edges of the tray as the wall channels.


b: From inside the enclosure, in the positions shown, drill through the wall channel into the side panel using a 3mm drill bit, **do not drill too deep!** Fix using 3 x 10mm screws (PN3222) and screw caps.

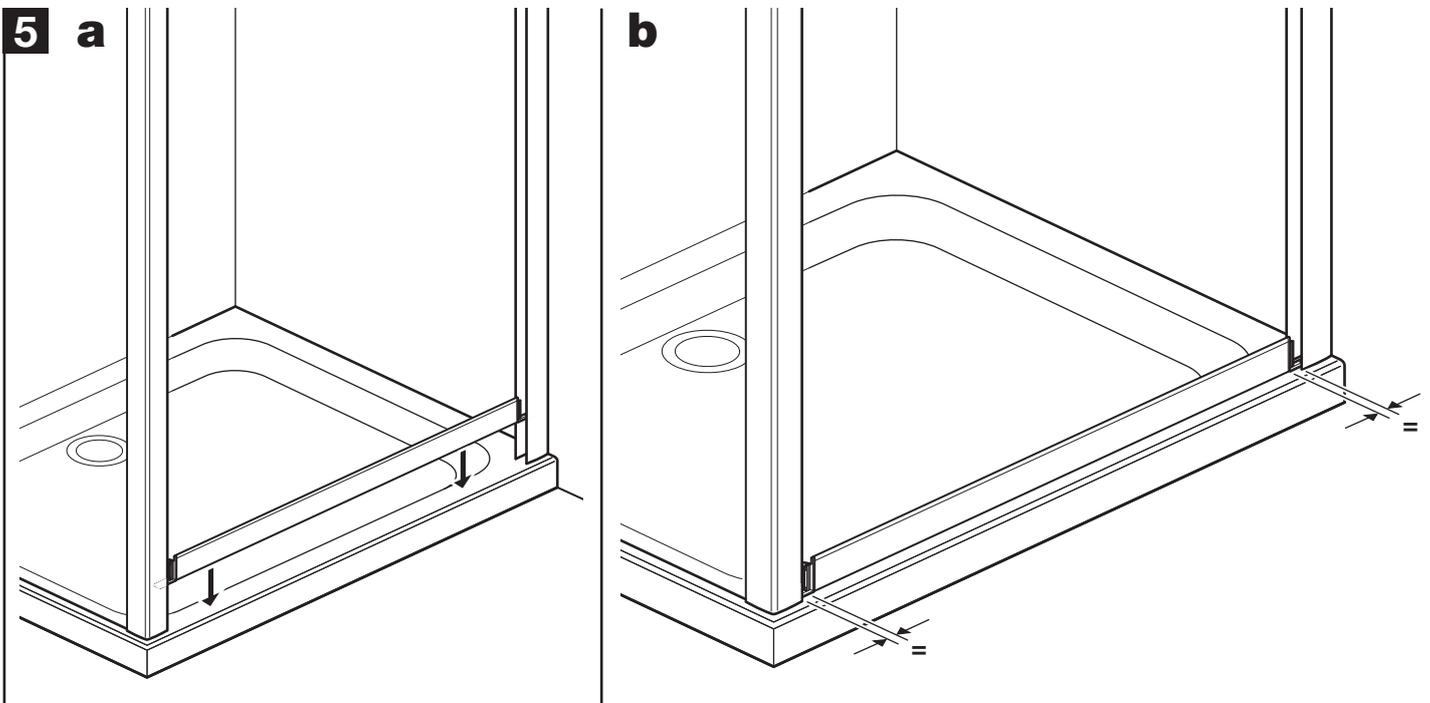






a: Place the bottom rail onto the tray with its end mouldings inserted into the corner post and wall channel.
Note: The bottom bump stop (on the inside of the rail) **must** be on the 'fixed panel' side of the enclosure.
b: Centre the bottom rail between the corner post and wall channel so that there is an equal gap at each end.

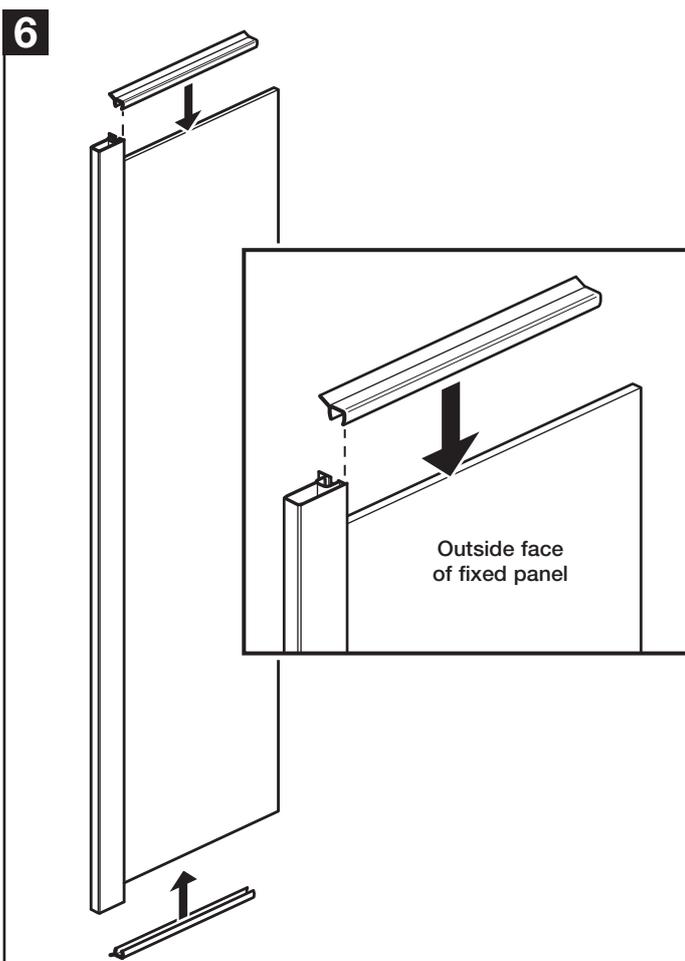



Push fit the 'short flipper seals' onto the top and bottom edges of the fixed panel - flush against the metal profile.
Ensure the flipper seal 'flaps' are on the inside of the fixed panel.
Note: Wetting the glass with water will help to fit the seals.

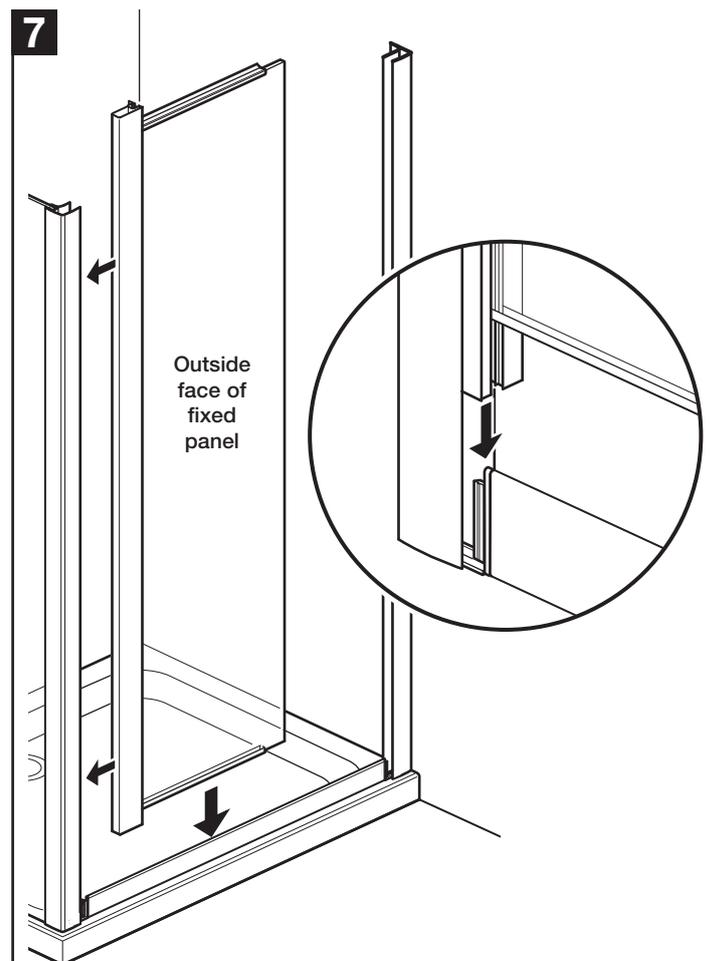

Position the fixed panel into the required corner post/wall channel and slide down so it fully slots onto the end moulding of the bottom rail.

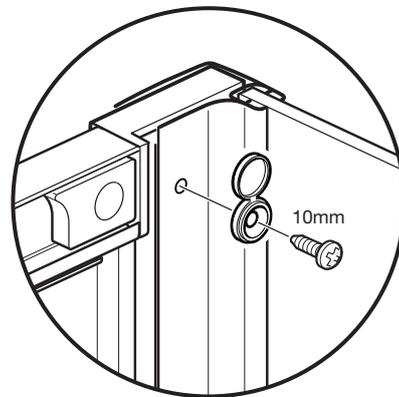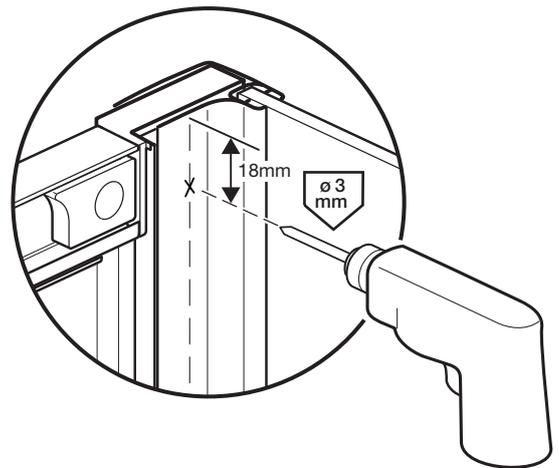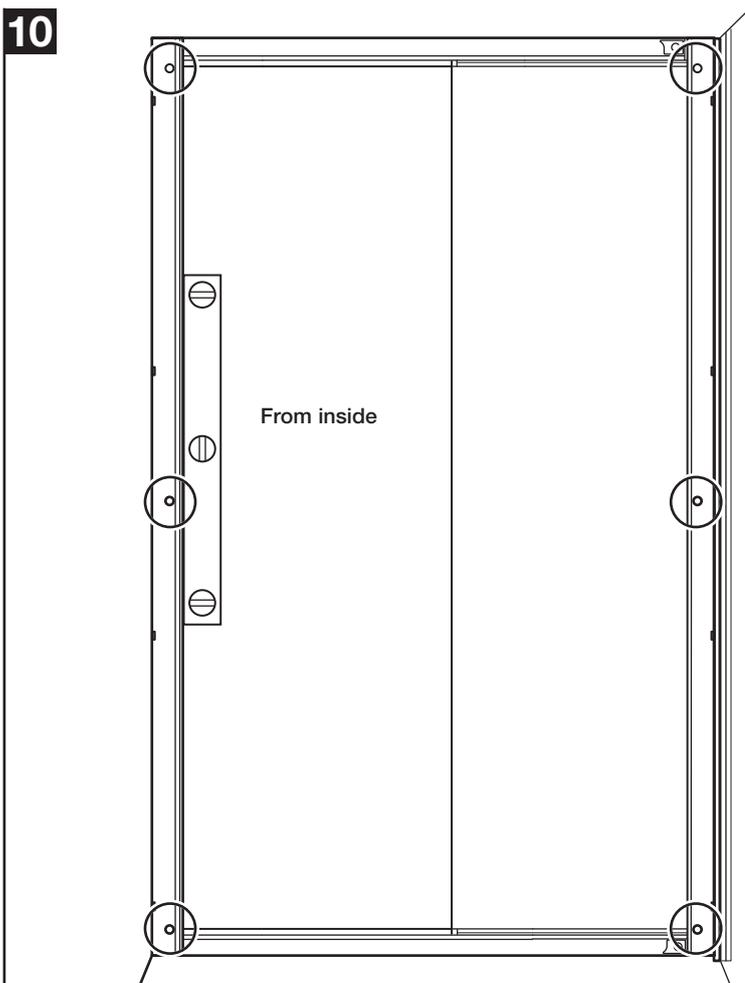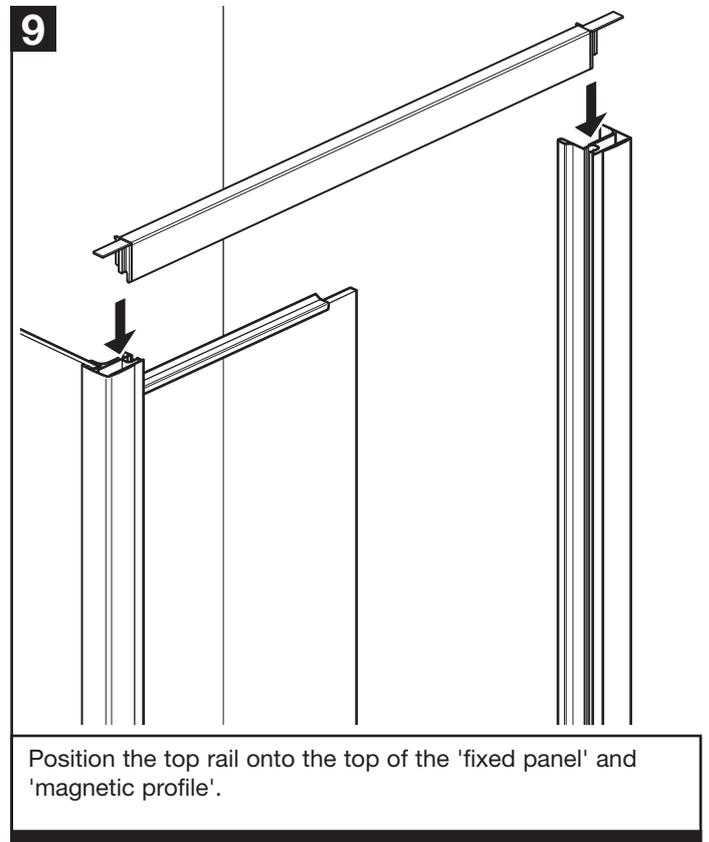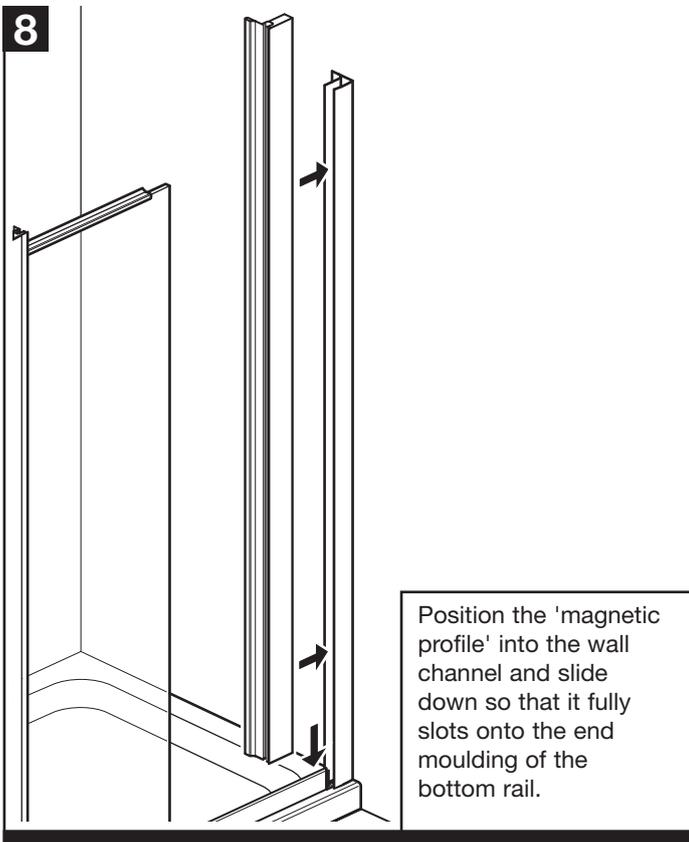

Check the door frame is vertical and is centrally positioned between the corner post and wall channel.
 From inside the enclosure, in the positions shown, drill through the corner post and wall channel into the fixed panel and magnetic profile. **Important: The top holes MUST be 18mm down from the top.** Drill using a 3mm drill bit.
 Fix using 6 x 10mm screws and screw caps.

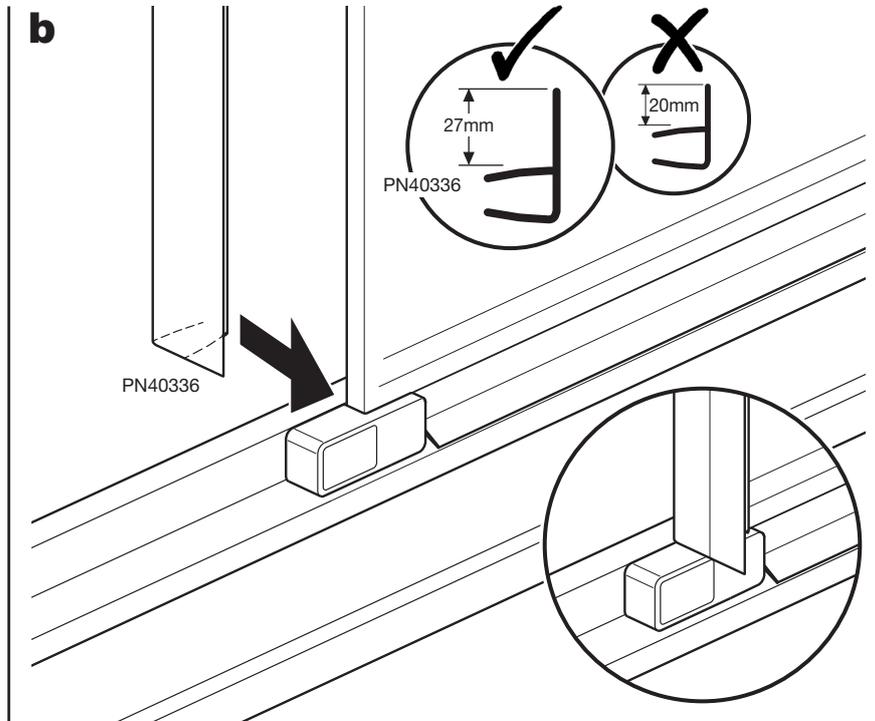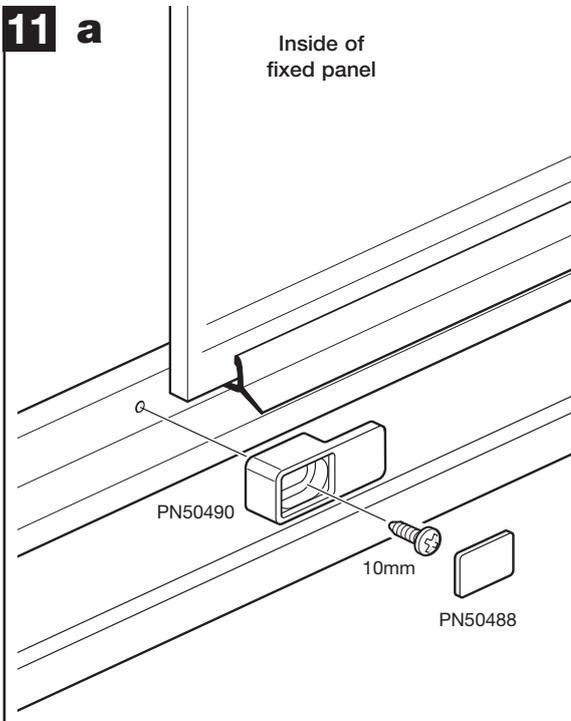


a: Attach a glass clamp to each horizontal rail (at edge of glass) using 10mm screws, **tighten by hand only - do not overtighten.** Push fit glass clamp covers.


b: Select vertical seal (PN40336) with the 27mm 'flipper' and fit to the fixed panel.

Important: The seal must sit tight against glass clamps (top and bottom).

Important: Seal 'flipper' must be on inside of the enclosure. **Note:** Wetting the glass with water will help fit the seal.

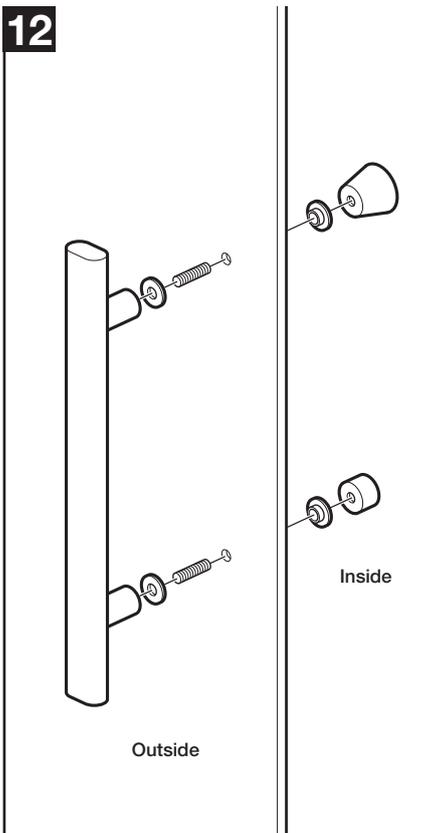

Fit the door handle (PN60510) to the door ensuring the washers fit between the glass and handle.

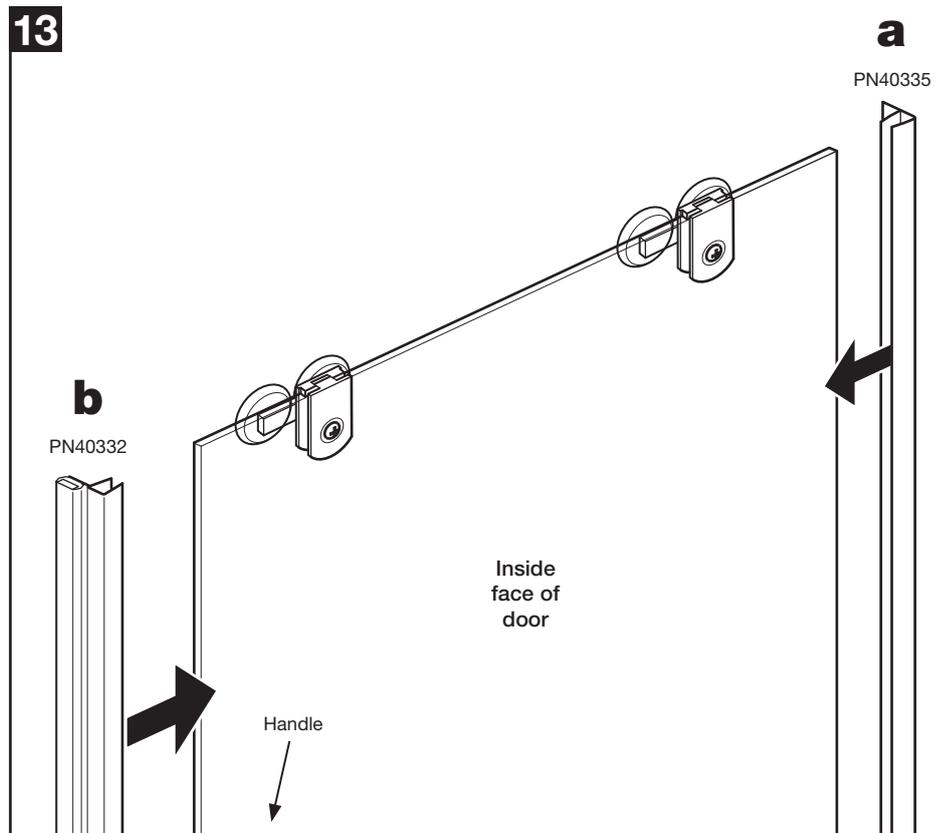



a: Select vertical seal (PN40335) with the 20mm 'flipper' and fit onto the back edge of the door. **Ensure the flipper seal 'flap' is on the outside of the door.**

b: Push fit 'magnetic seal' (PN40332) onto the closing edge of the door (**the same side as door handle**).


Note: Ensure the magnetic seal is positioned as shown.

Note: Wetting the glass with water will help fit the seals.

14

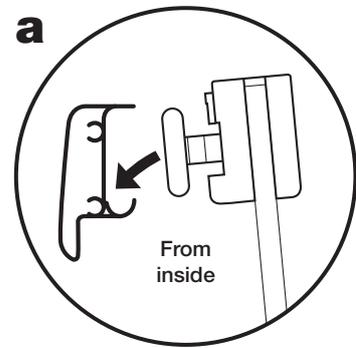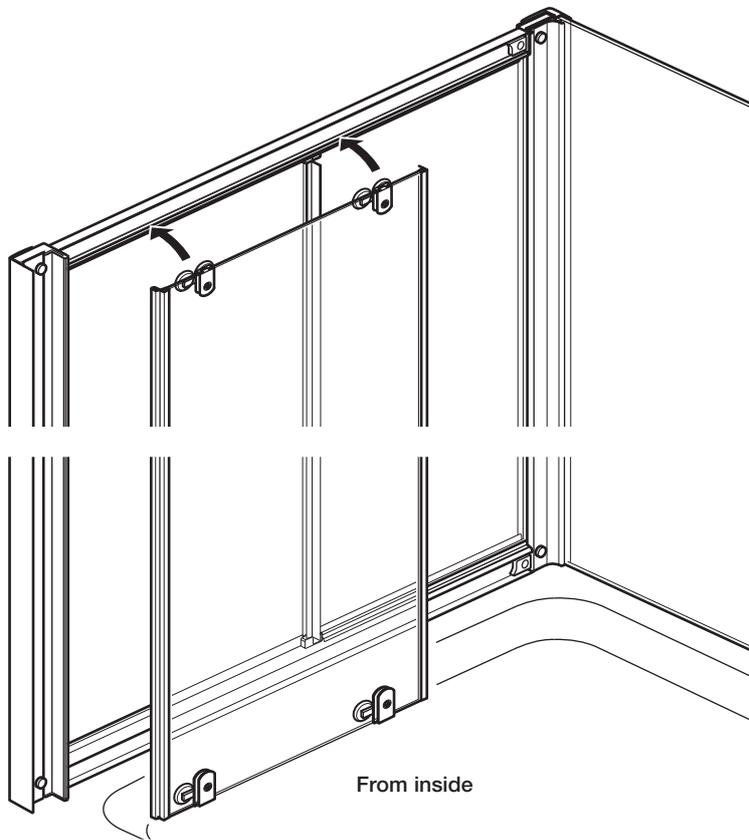




Top of door

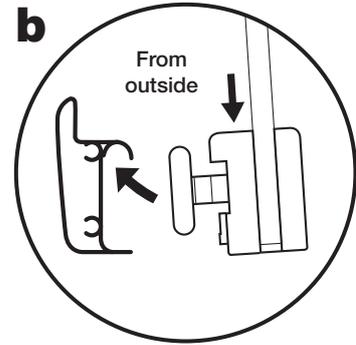

Bottom of door

a: From inside the enclosure, position the top wheels into the top rail. **b: From outside the enclosure with the door closed,** push down the 'plungers' on both bottom wheels, position into the bottom rail and release.

15

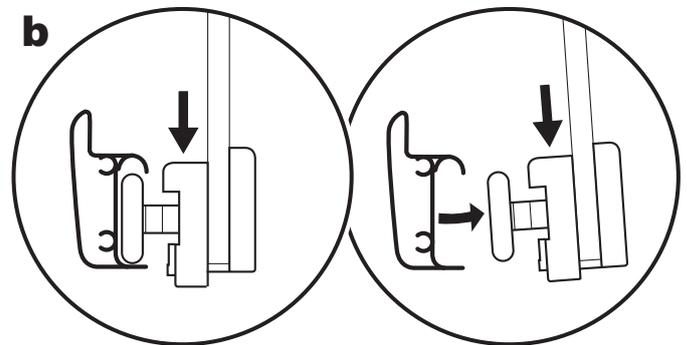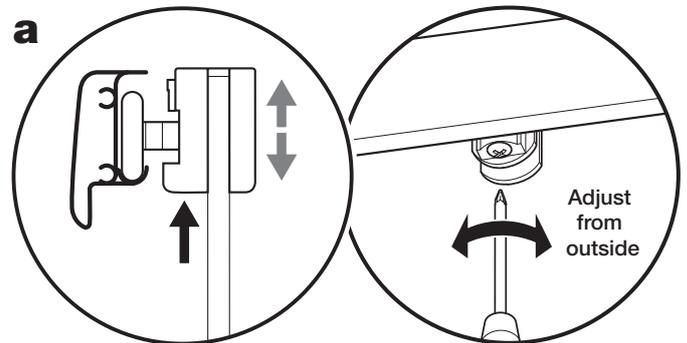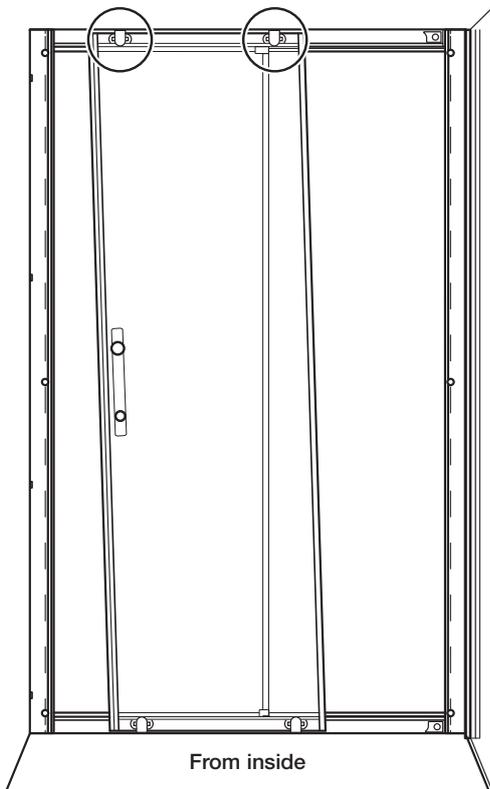


Door adjustment: The wheels at the top of the door may need adjusting so that the door slides freely and the magnetic seal meets evenly with the magnetic profile when the door is closed.

a: From outside the enclosure and with the door closed, adjust the screws on the top wheels. The bottom wheels should be securely located in the bottom rail but the door must not be raised so high that the 'plungers' on the bottom wheels do not operate.

b: The 'plungers' on the bottom wheels can be pushed down to unclip the door which will allow access to clean the door and fixed panel.


16

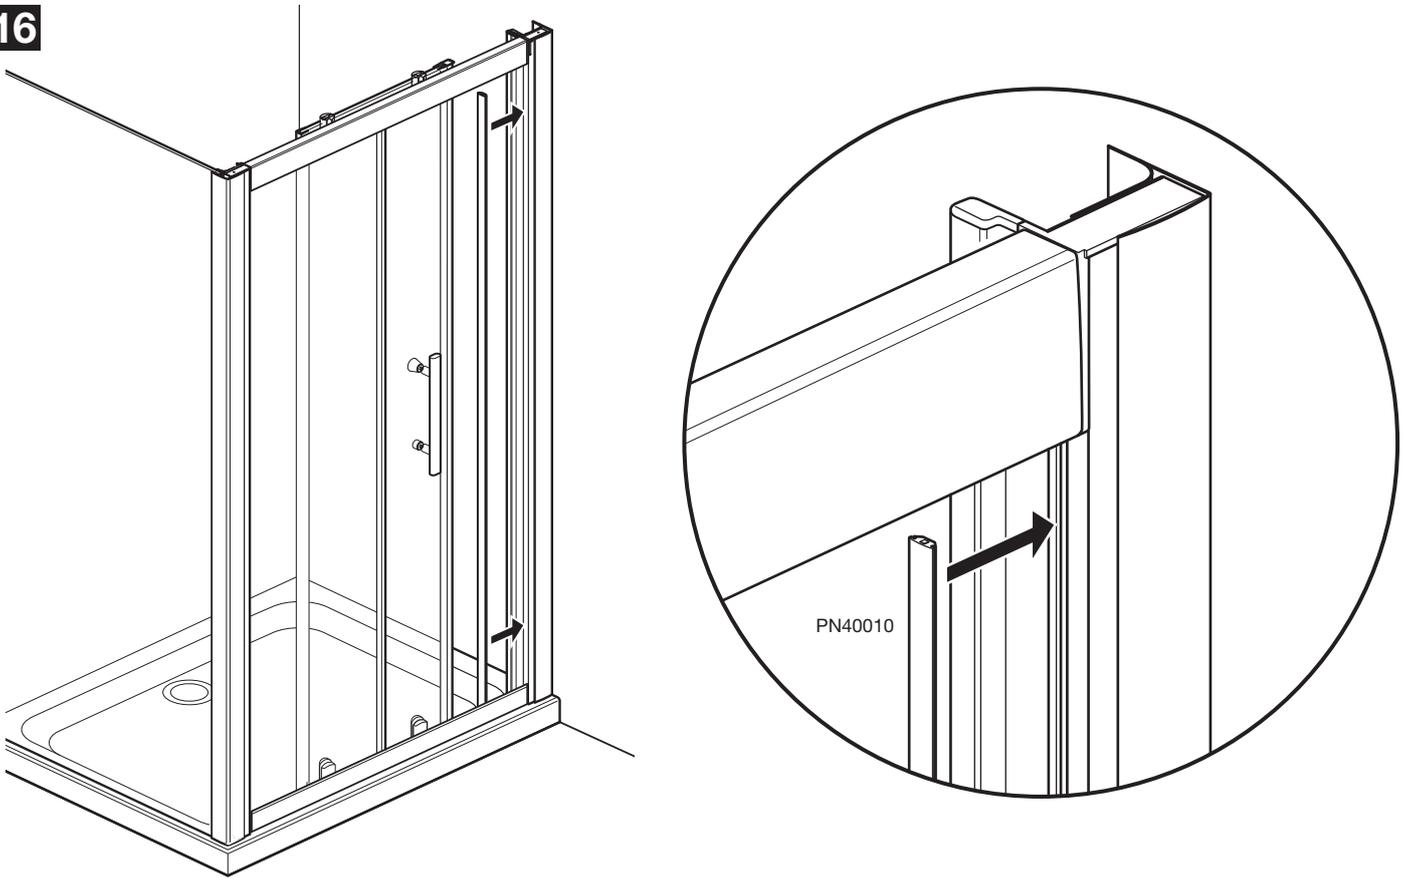

Push fit the seal (PN40010) into the 'magnetic channel profile'.


Note: The seal may need trimming to length.

17

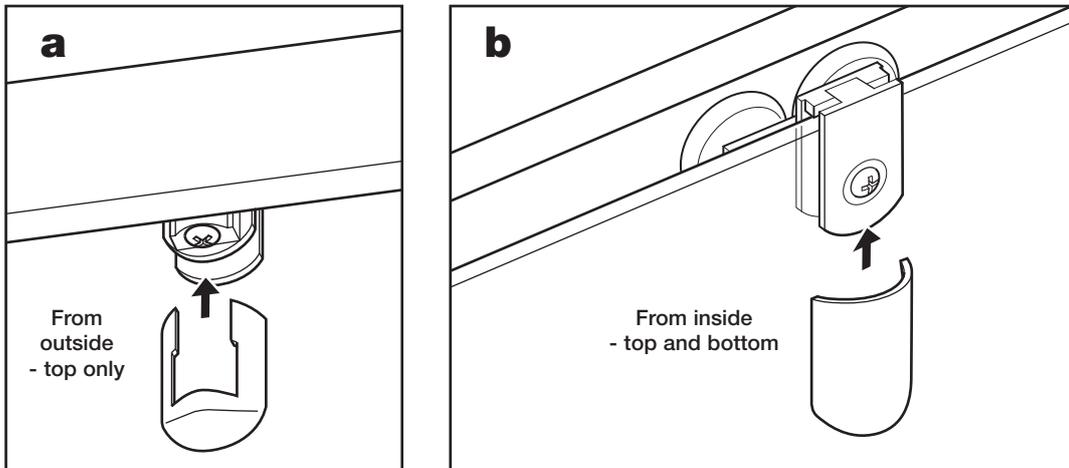


a: From outside the enclosure push fit the outer wheel covers onto the wheels at the top of the door.

b: From inside the enclosure push fit the inner wheel covers onto the wheels at the top and bottom of the door.

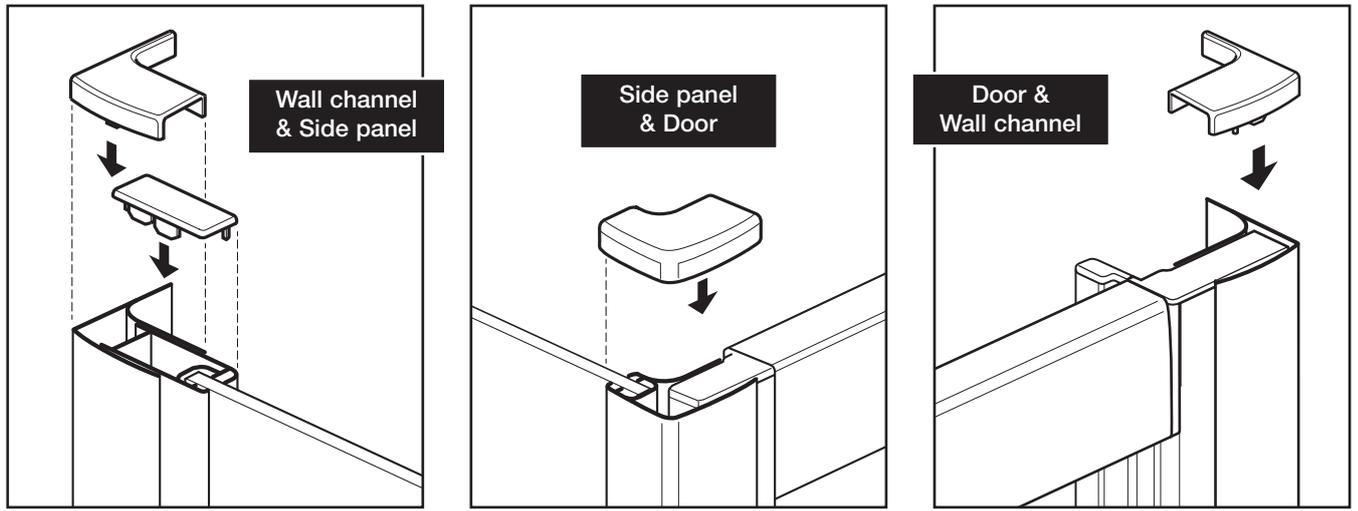18

Push fit the top caps onto the wall channels and corner post as shown.

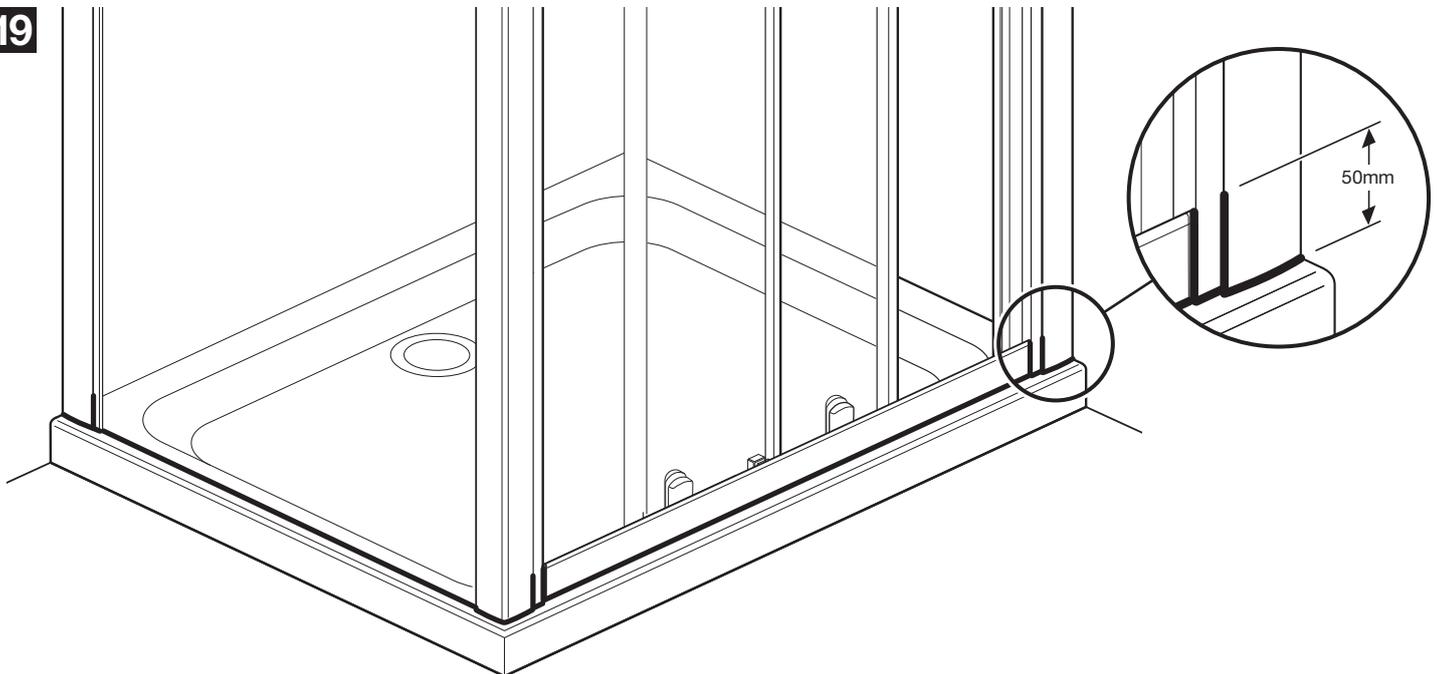19

From the outside only, apply sealant to the bottom of the enclosure and 50mm up the wall channels and vertical joints as shown.

Recycling

Packaging:- The cardboard and polythene parts of this packaging can be recycled.

End of life:- This product contains materials such as aluminium and glass which can be recycled.

Please contact your local authority to find your nearest recycling centre.

IMPORTANT: You must not use the shower for 24 hours after installation of the enclosure.

DO NOT use bleach, scouring powders, solvents or other aggressive cleaning agents. To clean, use warm soapy water and a clean cloth and rinse off.

Please note: There has been a glass coating applied to this product, use a squeegee to remove water and debris.

Periodically check all fixings and tighten if necessary.

CORAM SHOWERS LTD

Stanmore Industrial Estate, Bridgnorth, Shropshire WV15 5HP, UK • Tel: 01746 766466 • Fax: 01746 764140 • www.coram.co.uk