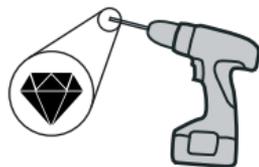


## Drilling Guidelines


As this basin is reversible, mounting holes need to be drilled before installation.

- ① Measure and mark drill locations. Ensure holes are drilled according to desired tap hole orientation (Left or Right).
- ② Use a **diamond** drill bit to drill from the **outside** of the basin to minimise chances of ceramic cracking.

**Warning!**

Only drill through outer wall of basin.

Right hand tap hole:

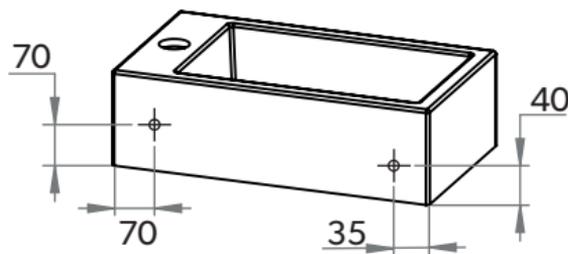

Left hand tap hole:

