

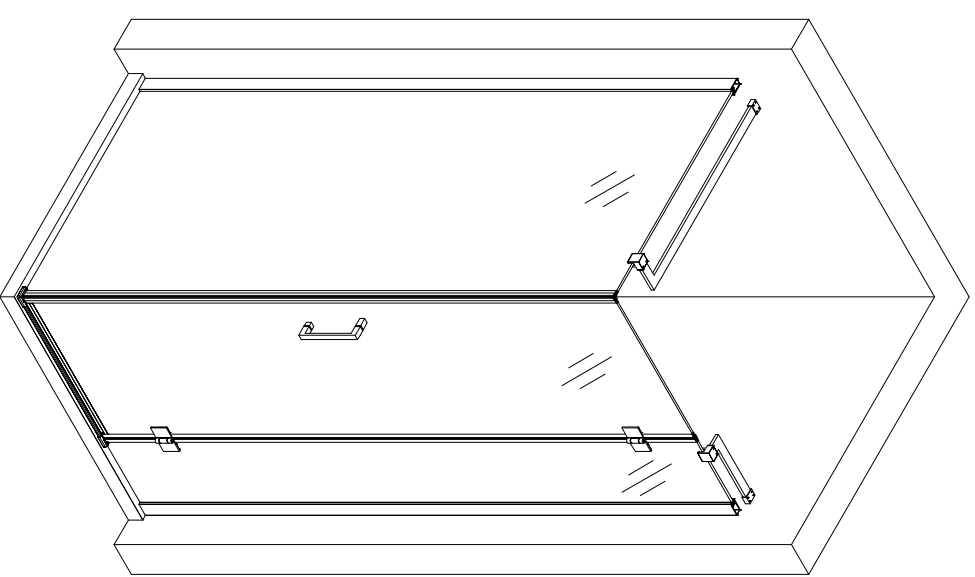
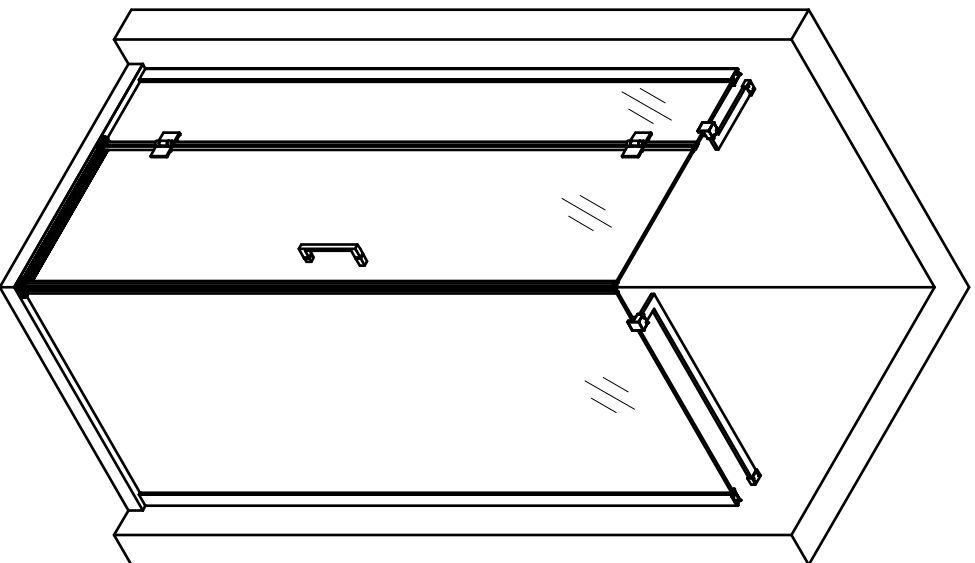









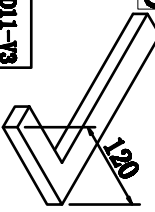



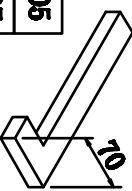
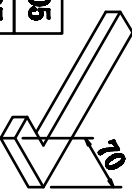
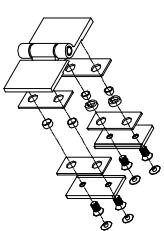
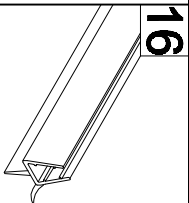
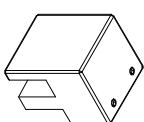
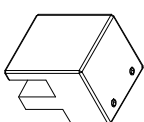
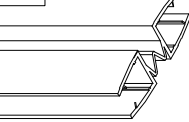




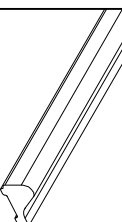

INSTALLATION MANUAL

Apollo In-line Hinged Door +







700SP-V3 / 760SP-V3 / 800SP-V3 / 900SP-V3 / 100SP-V3

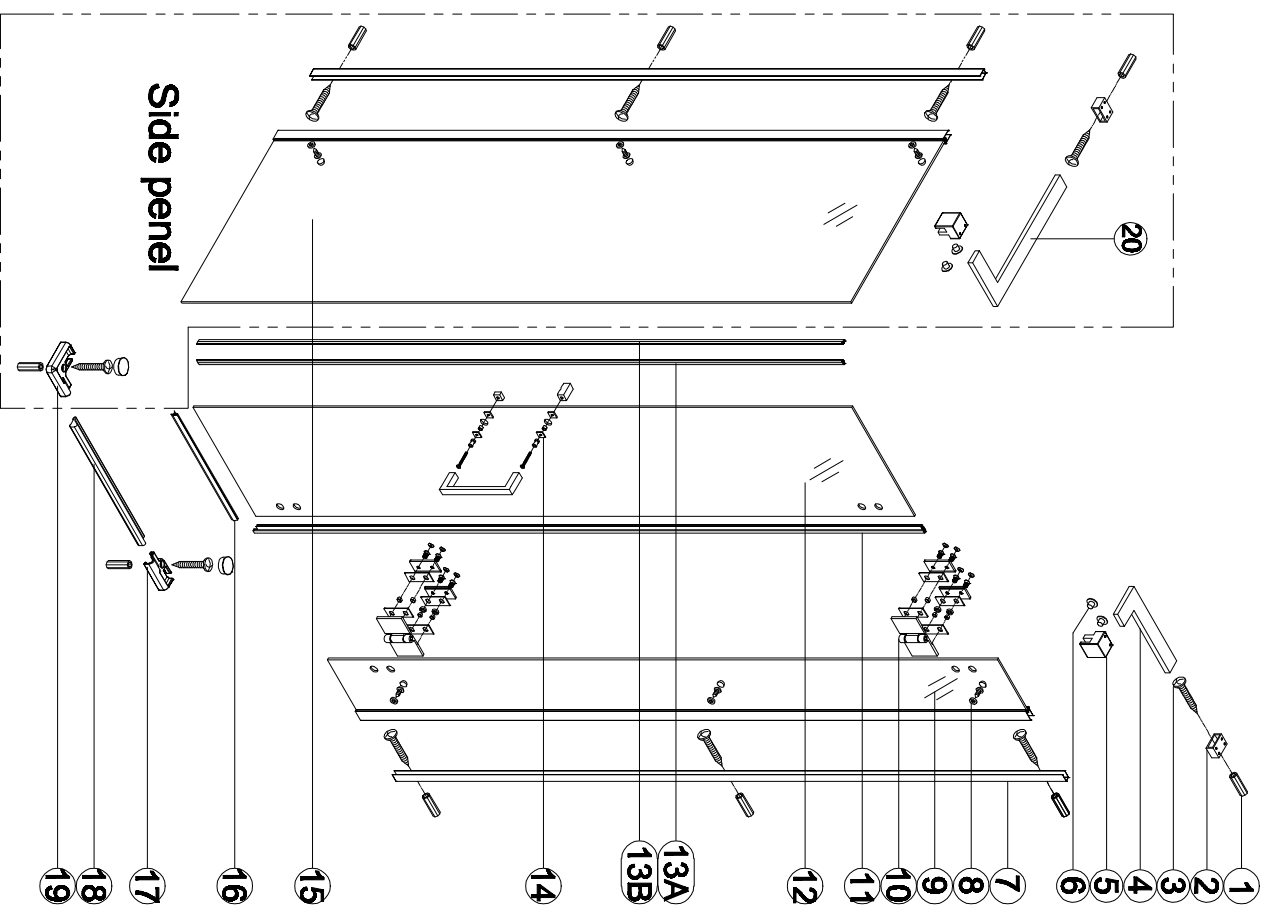

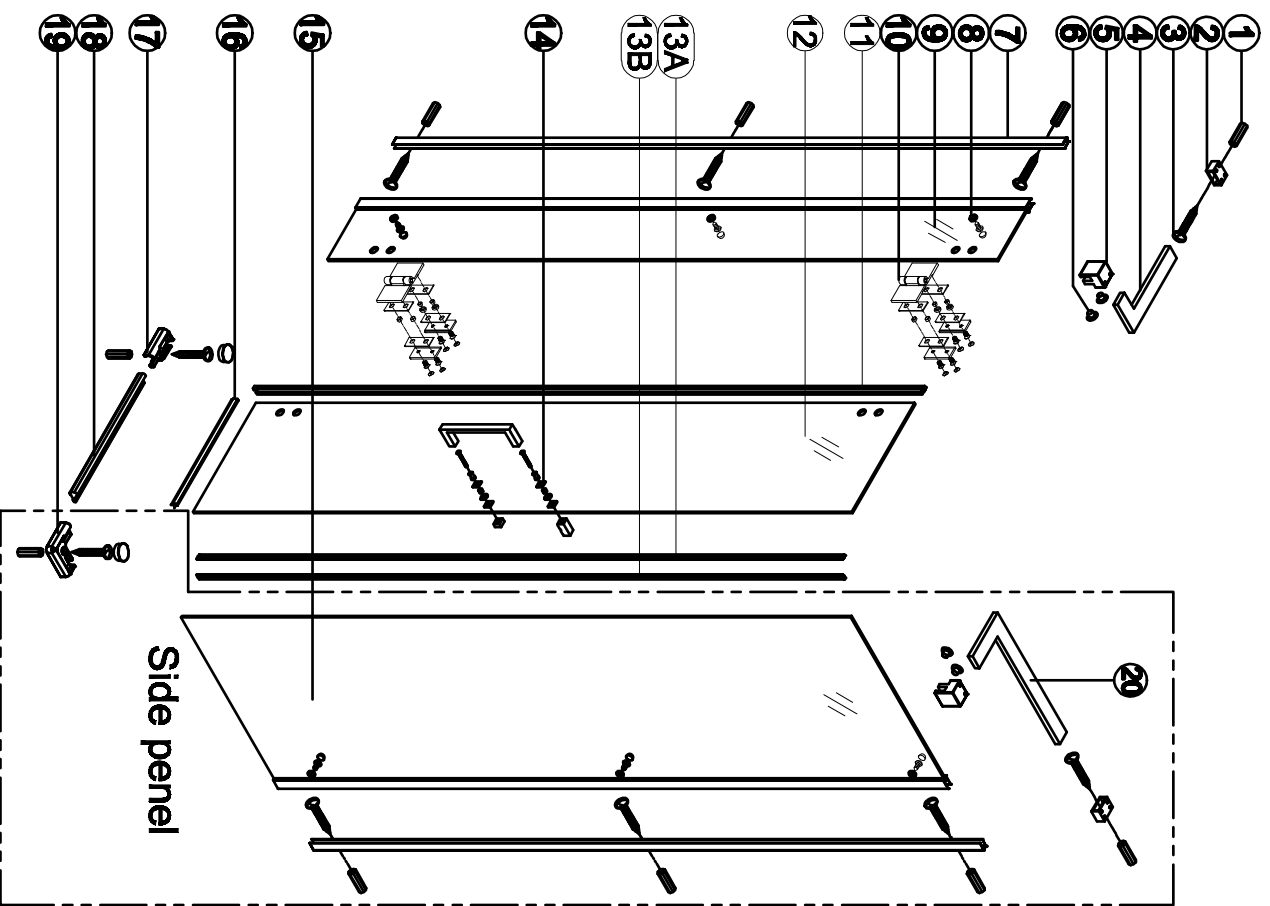

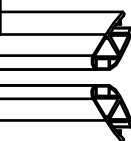1		10Pcs	D6X25	1		2Pcs	WX-B01	13		1Pair	WX-H02	19		2Pcs	WX-S03
2		2Pcs	WX-D01	8		6Pcs	ST4X12	14		1Pc	WX-D04	20		1Pc	WX-D11-V3 WX-D12-V3
3		10Pcs	ST4X30	9		1Pc	ST4X30	15		1Pc	WX-D05	4		1Pc	WX-D06 WX-D07 WX-D09
4		1Pc	WX-D05 WX-D07 WX-D09	10		2Pcs	WX-D03	16		1Pc	WX-H03	5		2Pcs	WX-D02
5		2Pcs	WX-D02	11		1Pc	WX-H01	17		2Pcs	WX-S01	6		4Pcs	D4X4
6		4Pcs	D4X4	12		1Pc	WX-D11	18		1Pc	WX-B03	7		1Pc	WX-D12-V3

Tools:

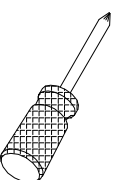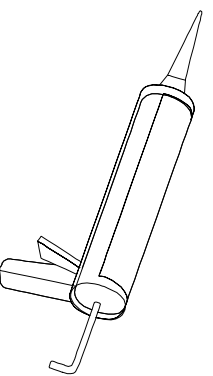

2 mm



2.5 mm




4 mm



Ø6mm



Ø3.2mm

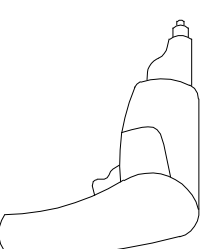


1

		W1	W2	L1	L2
1	700	652-672	660-680	652-672	660-680
2	760	712-732	720-740	712-732	720-740
3	800	752-772	760-780	752-772	760-780
4	900	852-872	860-880	852-872	860-880
5	1000	952-972	960-980	952-972	960-980
6	1200			1152-1172	1160-1180

Side Panel

Door

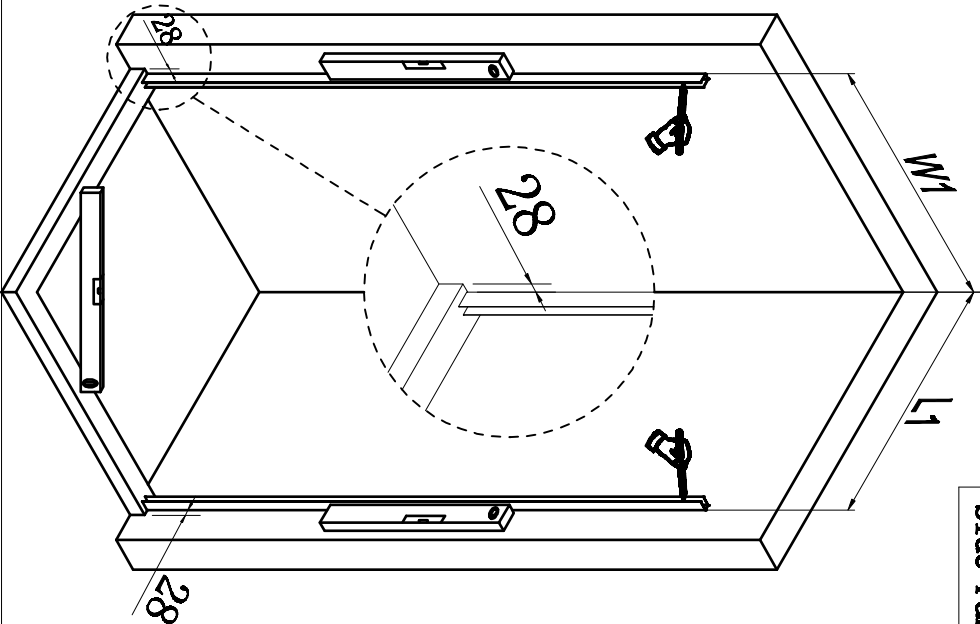


1


		L1	L2	W1	W2
1	700	652-672	660-680	652-672	660-680
2	760	712-732	720-740	712-732	720-740
3	800	752-772	760-780	752-772	760-780
4	900	852-872	860-880	852-872	860-880
5	1000	952-972	960-980	952-972	960-980
6	1200	1152-1172	1160-1180		

Door


Side Panel

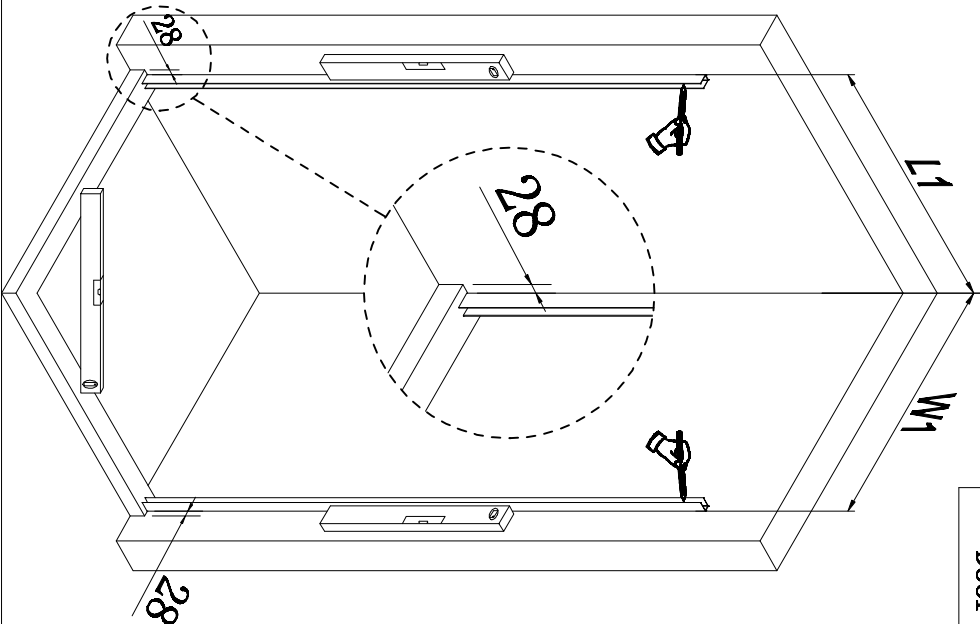

2

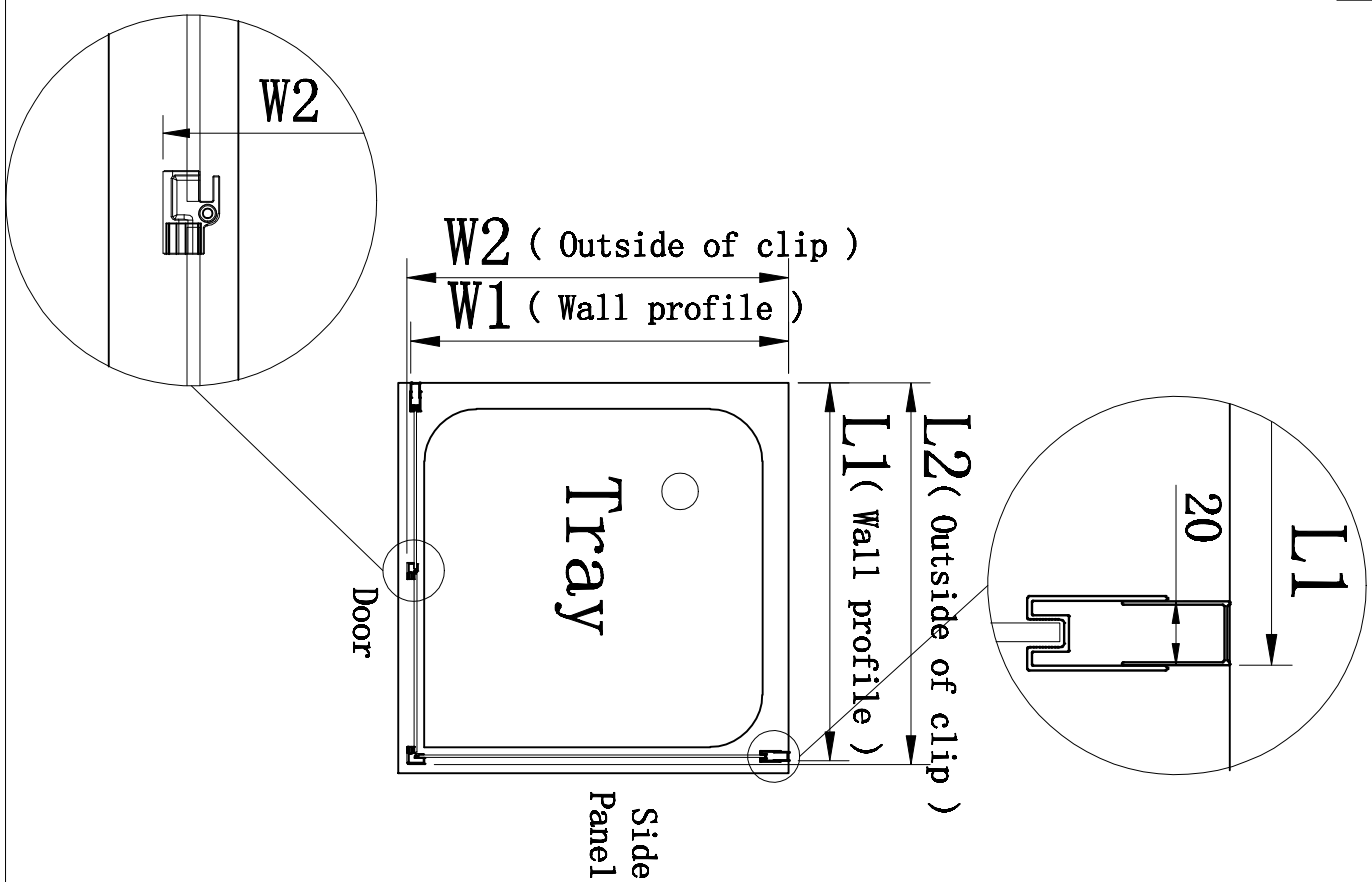




2

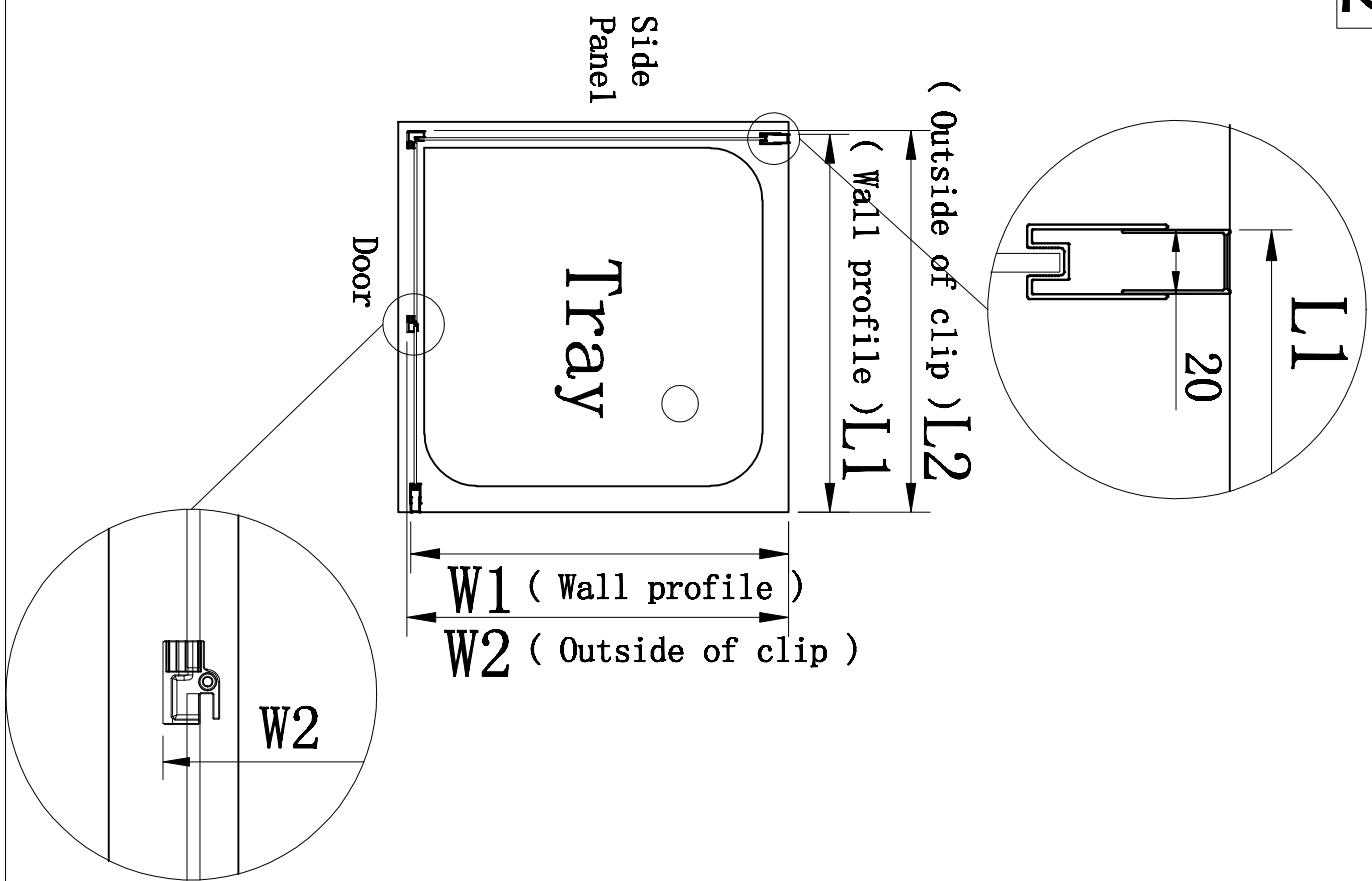


3-a

Please measure the hinge hole on the fixed glass before installation.

If 135mm/160mm:

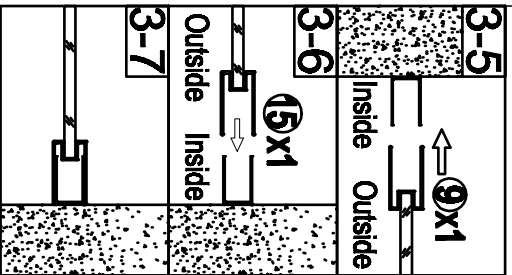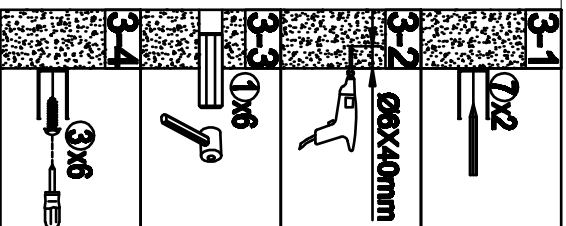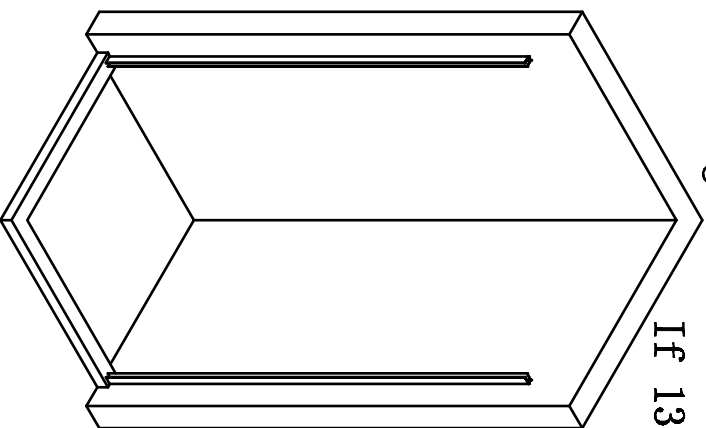




THE PROFILES
AND THE GLASS
SHOULD BE SET
TRUE & LEVEL
WITH A SPIRIT
LEVEL.

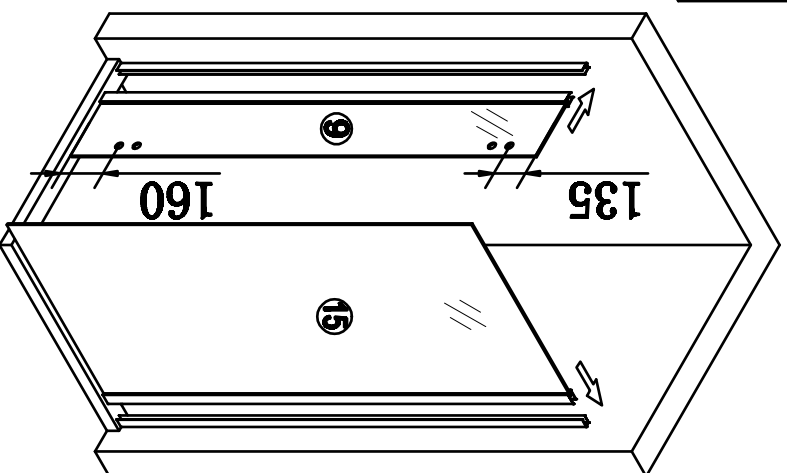


3-a

Please measure the hinge hole on the fixed glass before installation.

If 135mm/160mm:

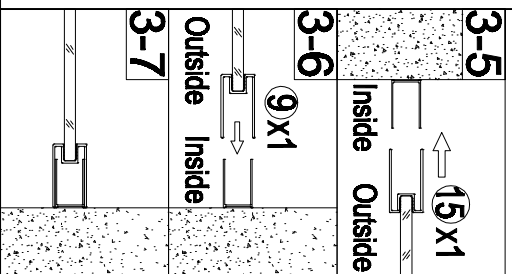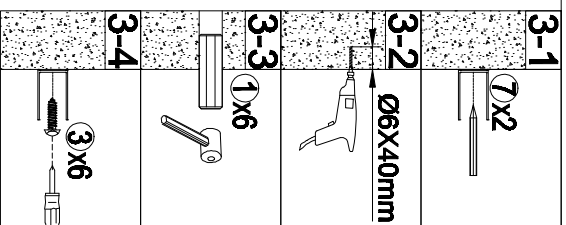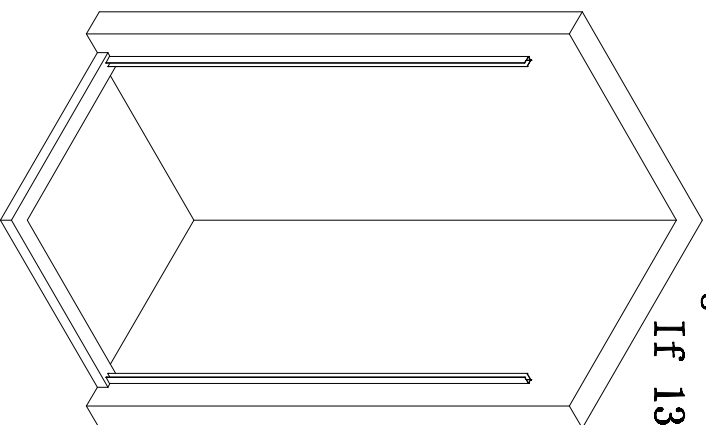



THE PROFILES
AND THE GLASS
SHOULD BE SET
TRUE & LEVEL
WITH A SPIRIT
LEVEL.

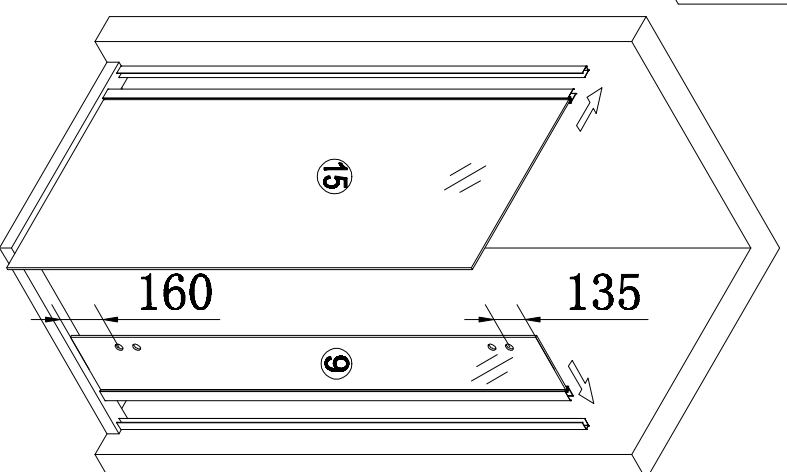

3-b

Please measure the hinge hole on the fixed glass before installation.



If 150mm/150mm:

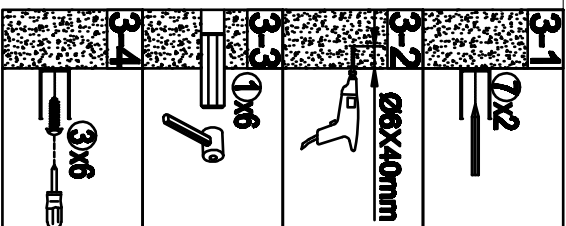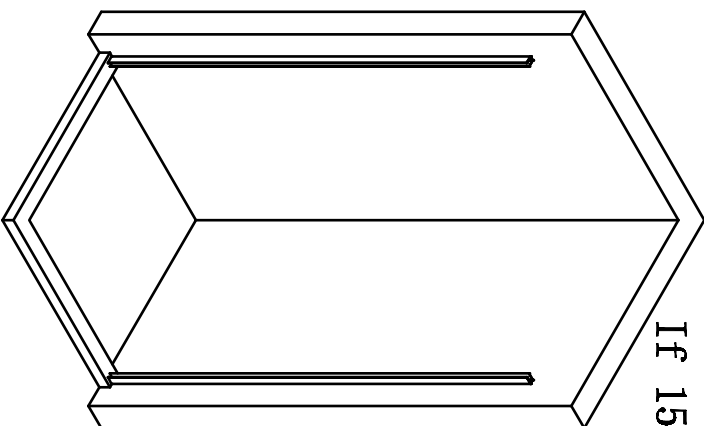

3-b

Please measure the hinge hole on the fixed glass before installation.

If 150mm/150mm:

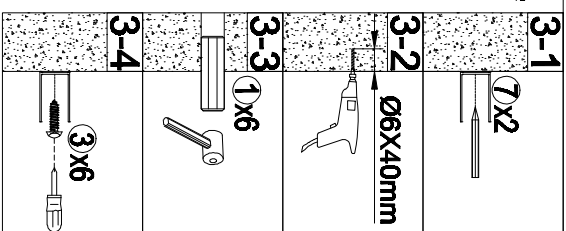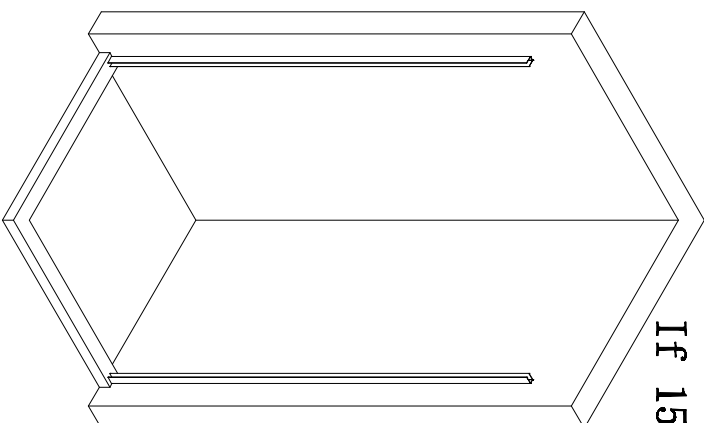

3-5

9x1

Inside Outside


3-6

15x1

Outside Inside

3-7

THE PROFILES AND THE GLASS SHOULD BE SET TRUE & LEVEL WITH A SPIRIT LEVEL.

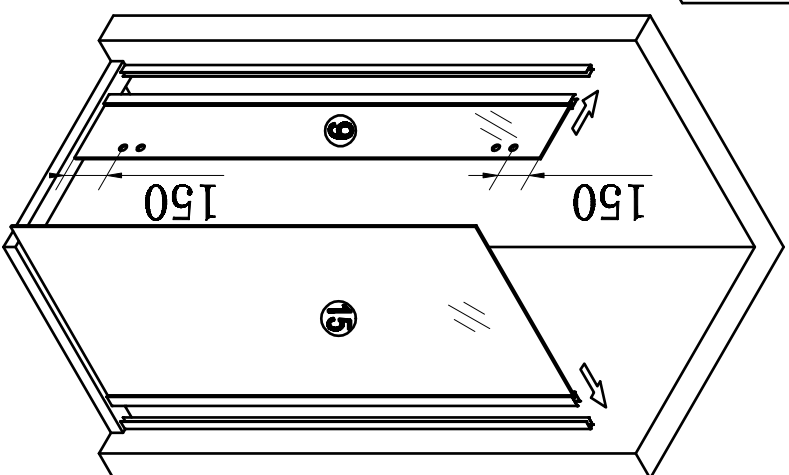

3-5

15x1

Inside Outside


3-6

9x1








Outside Inside

3-7








THE PROFILES AND THE GLASS SHOULD BE SET TRUE & LEVEL WITH A SPIRIT LEVEL.

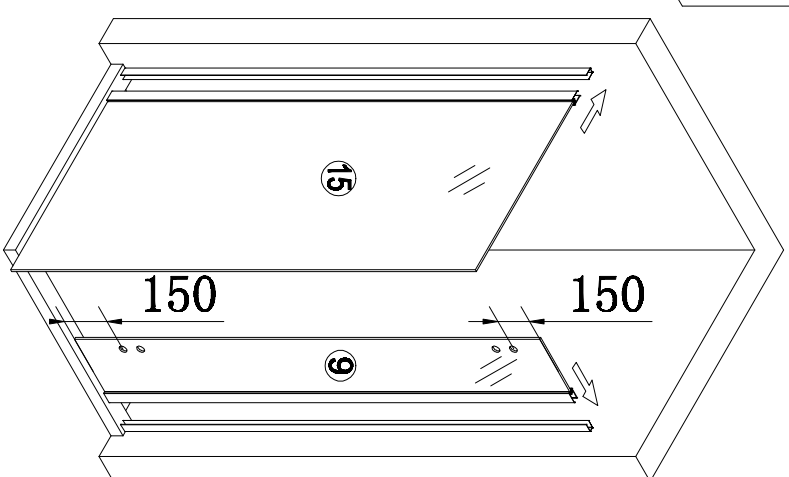



4

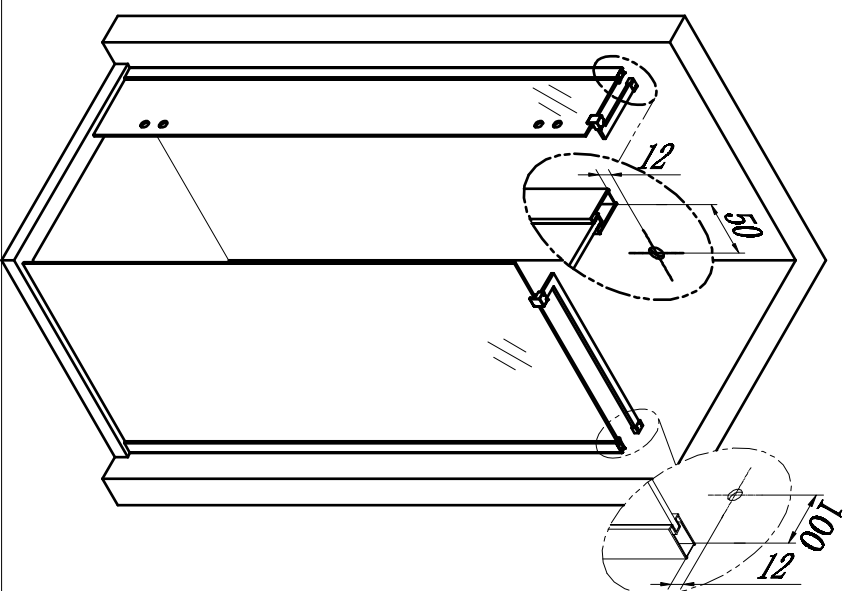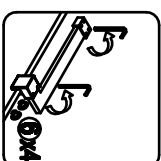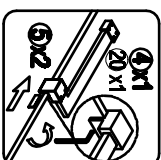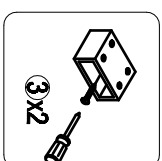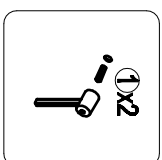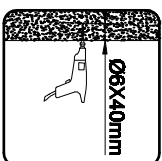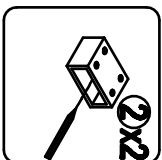



4

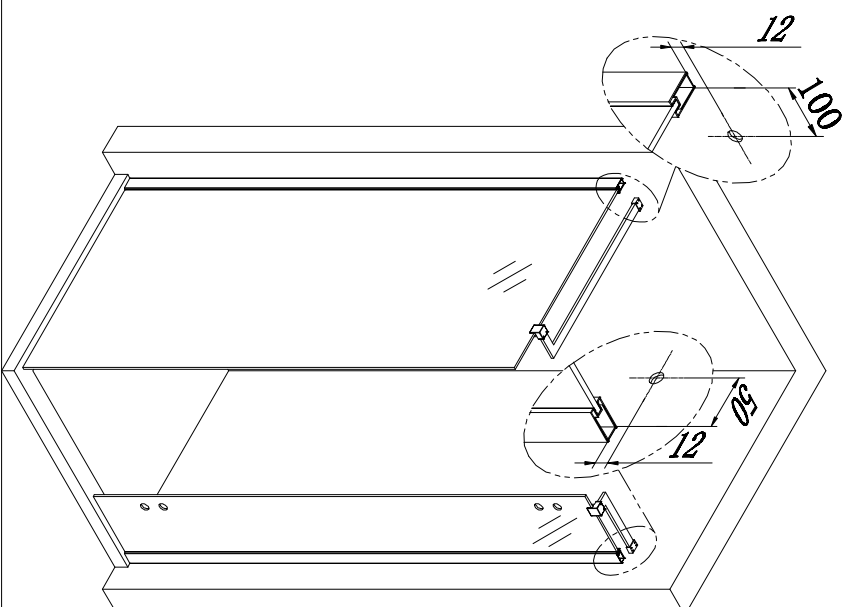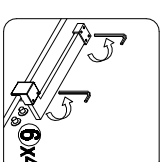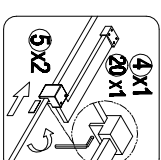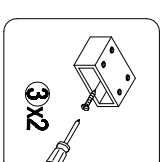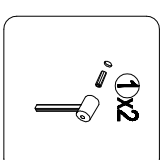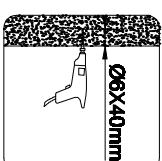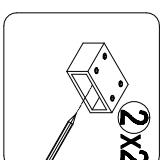

5

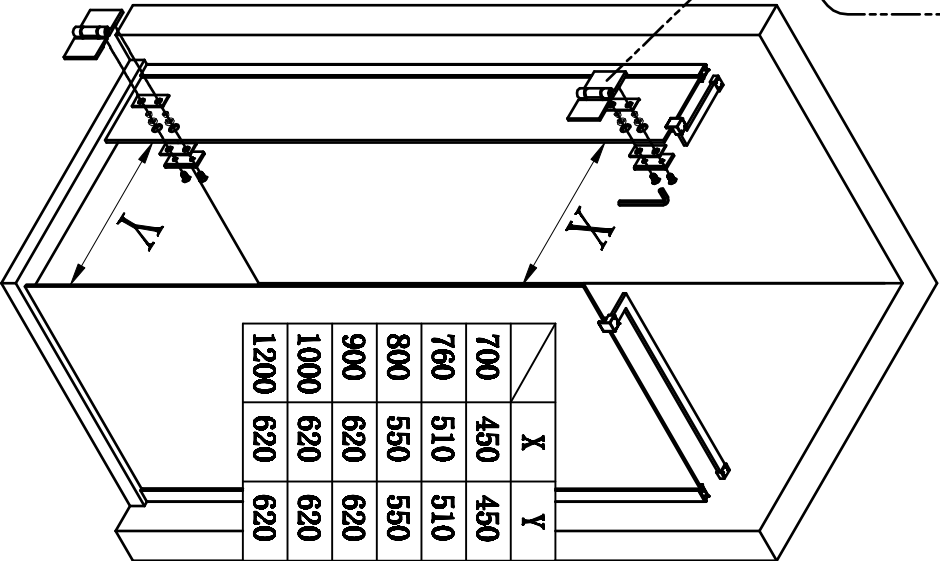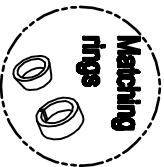


5

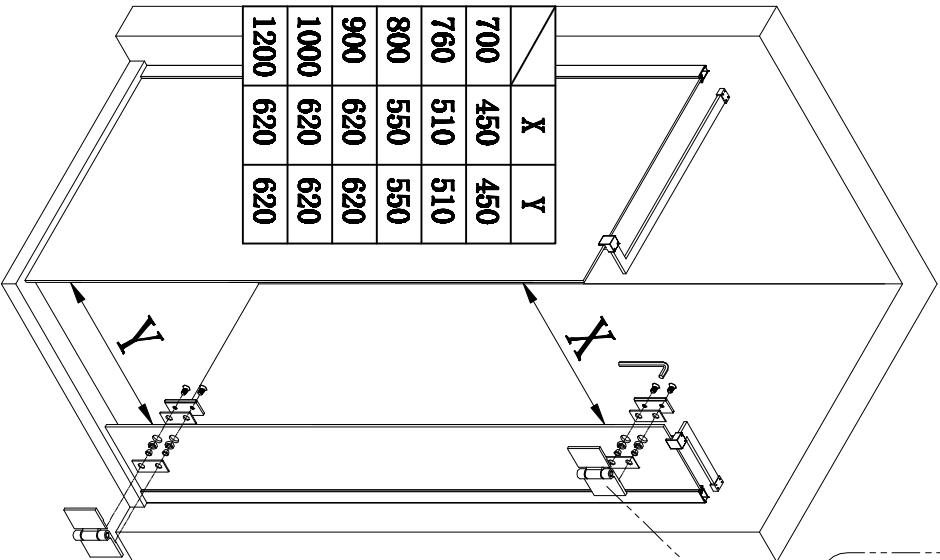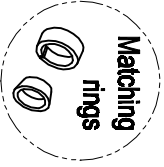


6-2

Please measure the hinge hole on the door glass before installation, If the same:

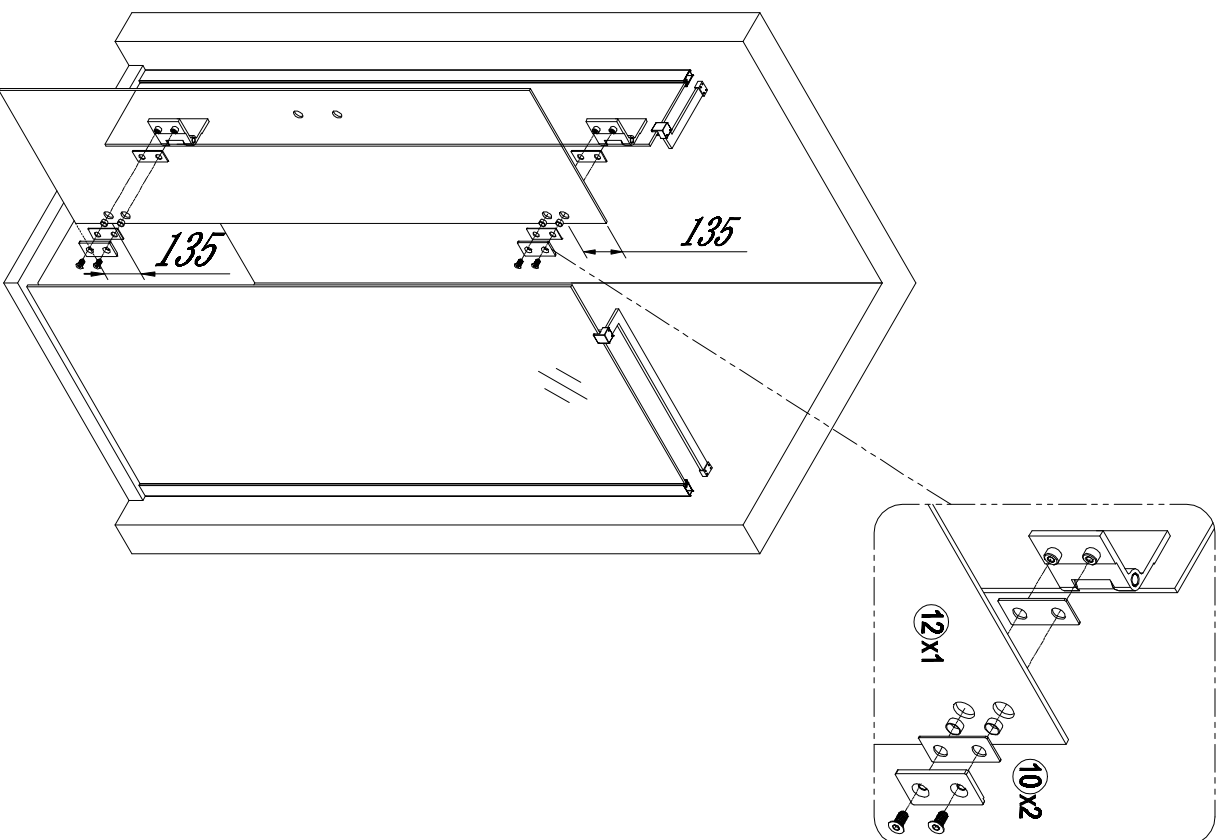



6-2

Please measure the hinge hole on the door glass before installation, If the same:


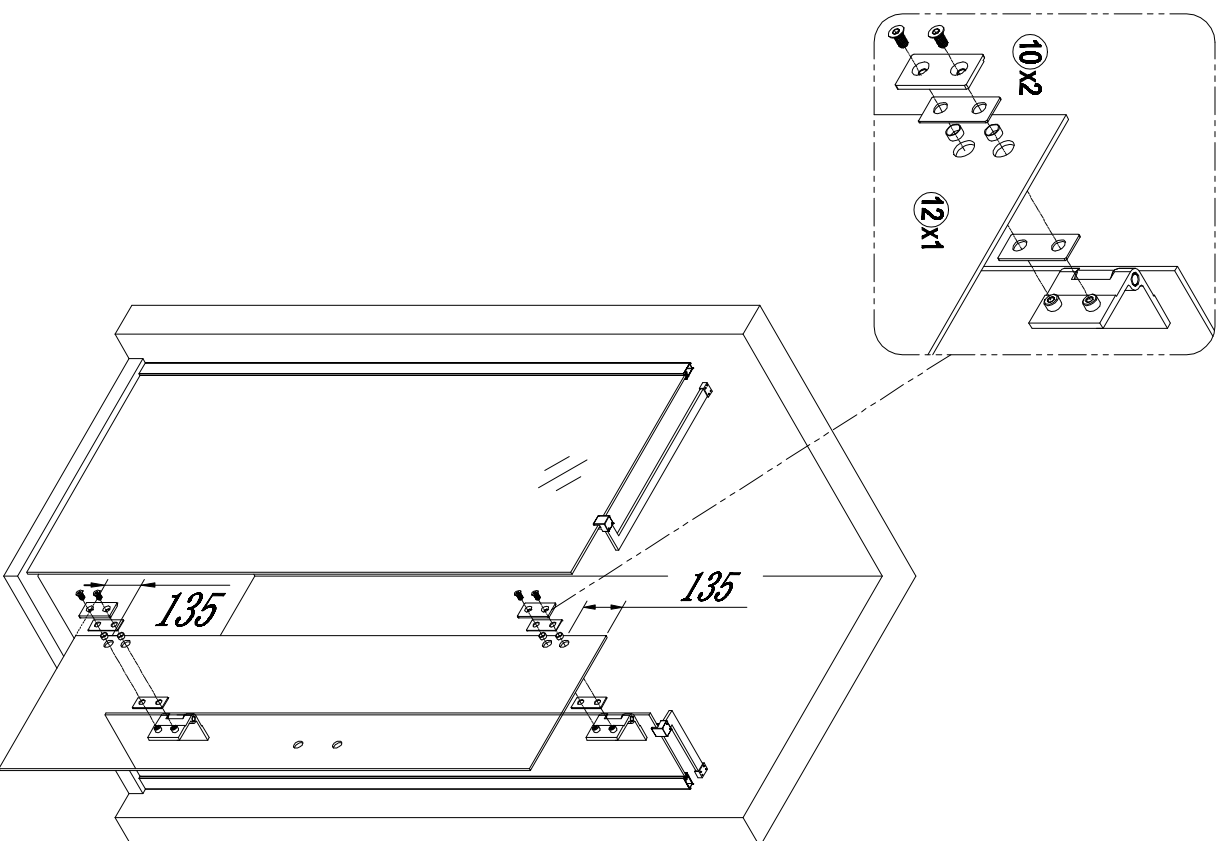


6-b





Please measure the hinge hole on the door glass before installation, If different:

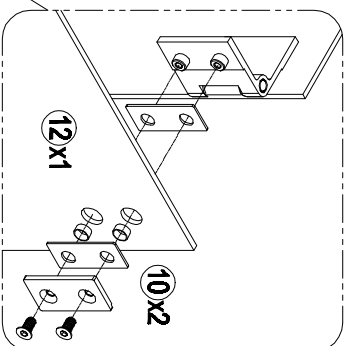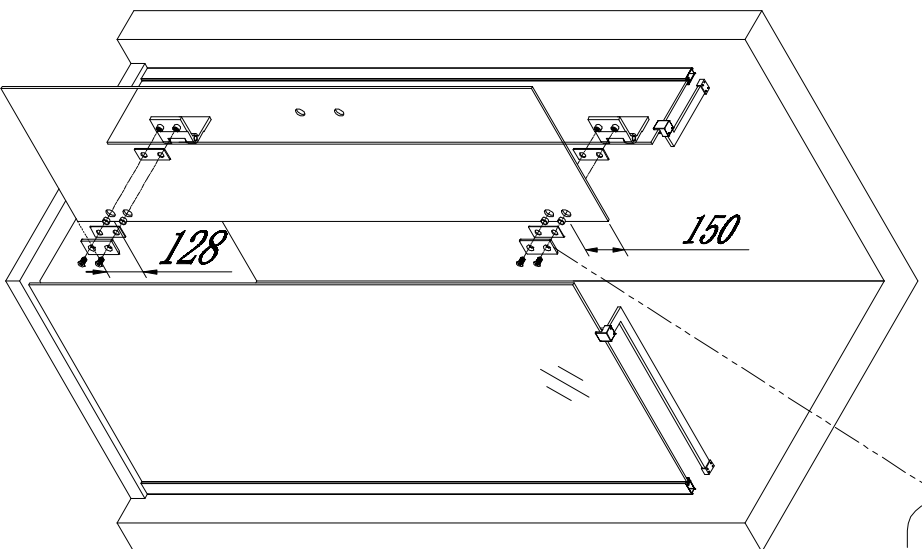**6-b**

Please measure the hinge hole on the door glass before installation, If different:



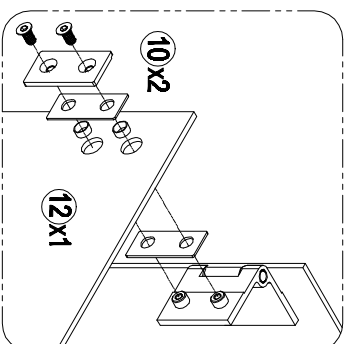
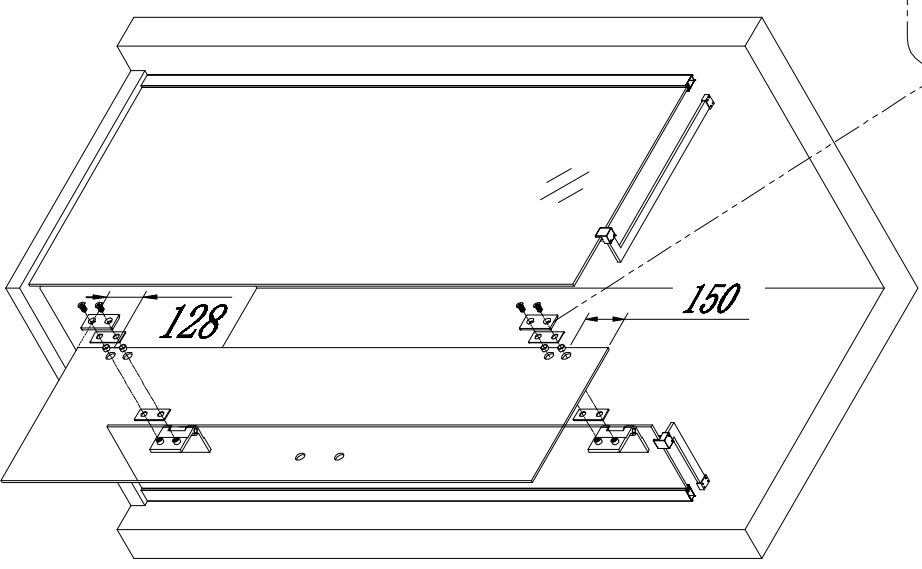


7

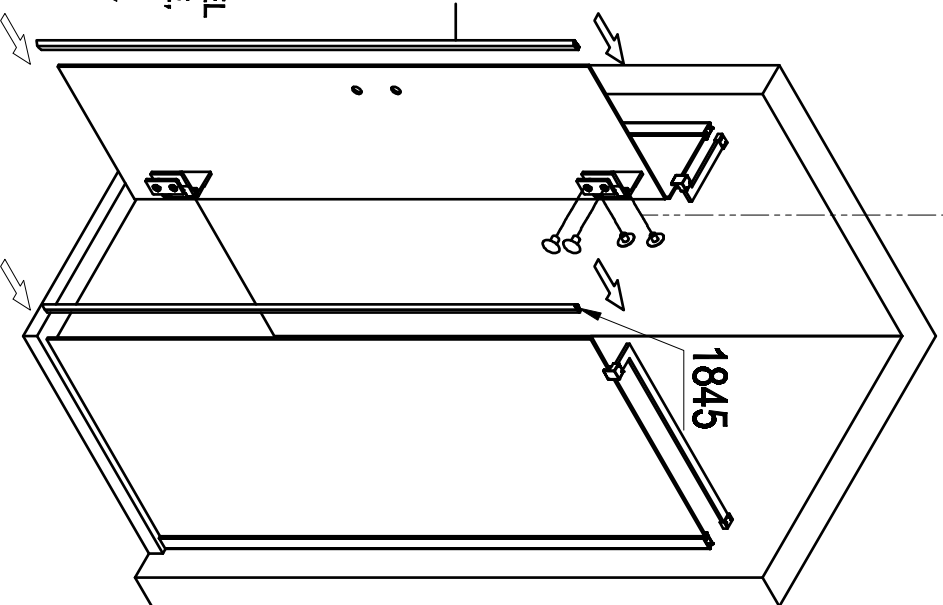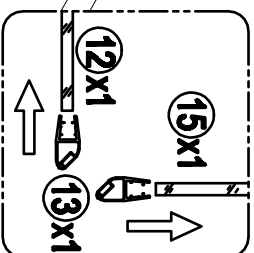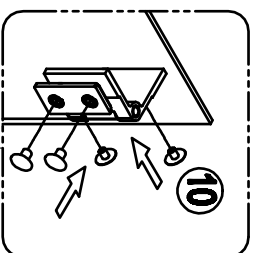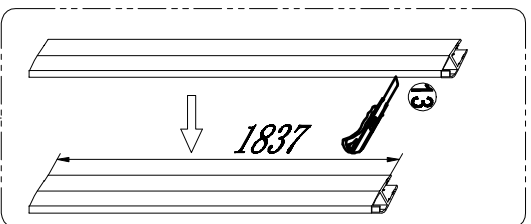

IT IS VERY IMPORTANT
TO HAVE THE BOTTOM
OF THE GLASS PARALLEL
TO THE TRAY TOP FACE,
IT MUST HAVE A 22MM
EVEN GAP ALL THE WAY
ALONG.

7

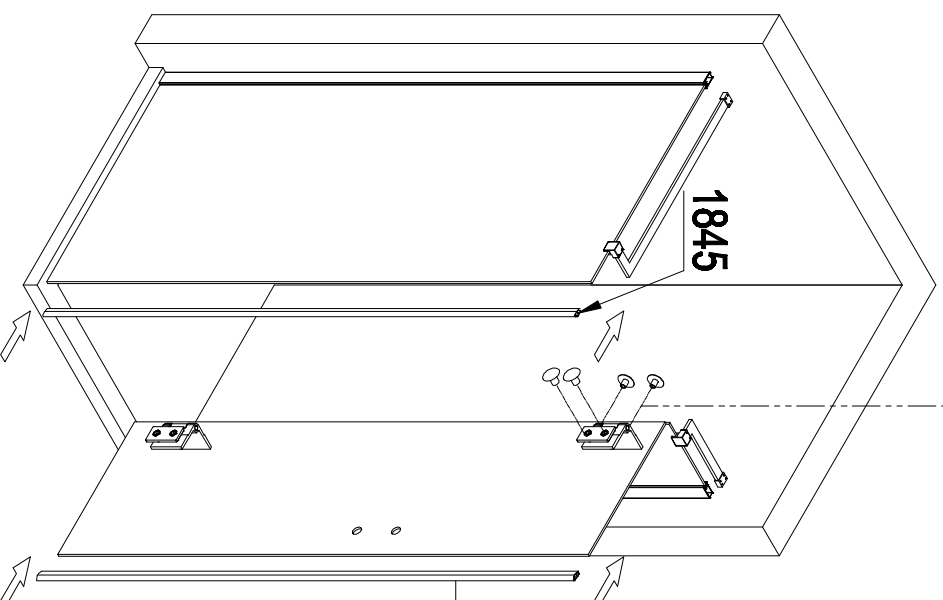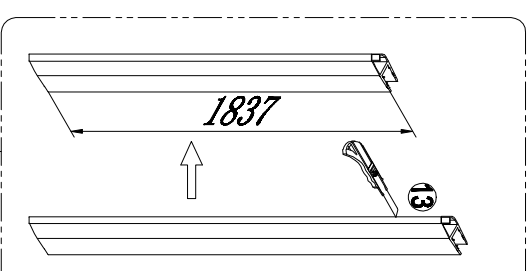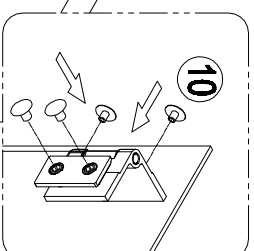
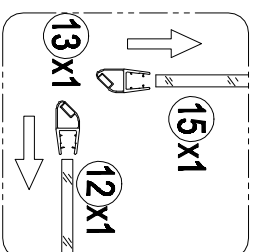


IT IS VERY IMPORTANT
TO HAVE THE BOTTOM
OF THE GLASS PARALLEL
TO THE TRAY TOP FACE,
IT MUST HAVE A 22MM
EVEN GAP ALL THE WAY
ALONG.


8

Fixed
glassDoor
Glass

DRILL THROUGH THE
PRE-DILLED HOLES
IN THE WALL PROFILES
(SHOWN RIGHT). USE
3mm DRILL AND MAKE
SURE YOU ONLY DRILL
THROUGH ONE WALL
THICKNESS.

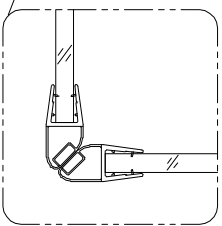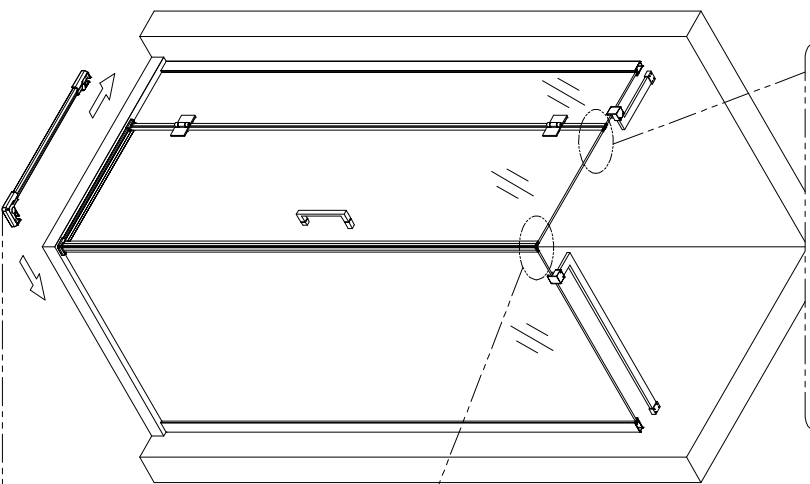8-1 $\varnothing 3.2\text{mm}$ 8-2 $\varnothing 8 \times 6$ 8-3 $\varnothing 11 \times 1$ 8-4 $\varnothing 12$ 8-5 $\varnothing 14 \times 1$ 8-6 $\varnothing 17 \times 1$ 8-7 $\varnothing 19 \times 1$ 8-8 $\varnothing 16 \times 1$



Cutting the
bottom strip
of 15 mm

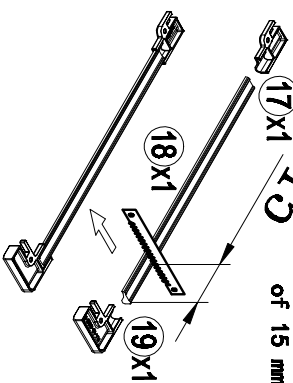


8

Door
GlassFixed
glass


DRILL THROUGH THE
PRE-DILLED HOLES
IN THE WALL PROFILES
(SHOWN RIGHT). USE
3mm DRILL AND MAKE
SURE YOU ONLY DRILL
THROUGH ONE WALL
THICKNESS.

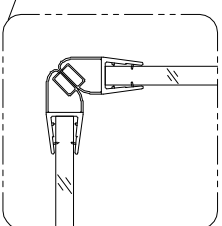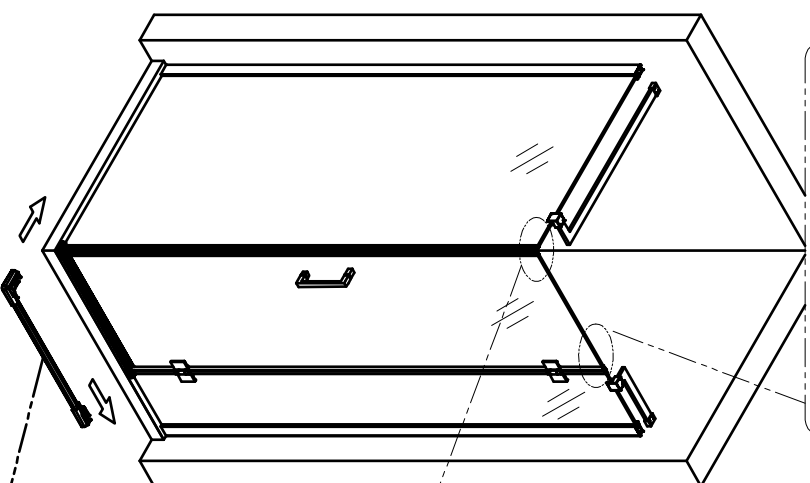8-1 $\varnothing 3.2\text{mm}$ 8-2 $\varnothing 8 \times 6$ 8-3 $\varnothing 11 \times 1$ 8-4 $\varnothing 12$ 8-5 $\varnothing 14 \times 1$ 8-6 $\varnothing 17 \times 1$ 8-7 $\varnothing 19 \times 1$ 8-8 $\varnothing 16 \times 1$

Cutting the
bottom strip
of 15 mm

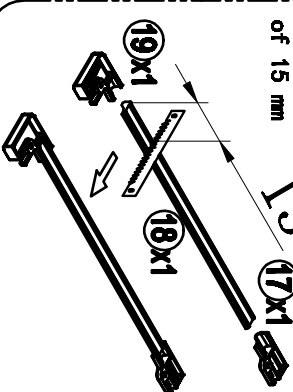


9

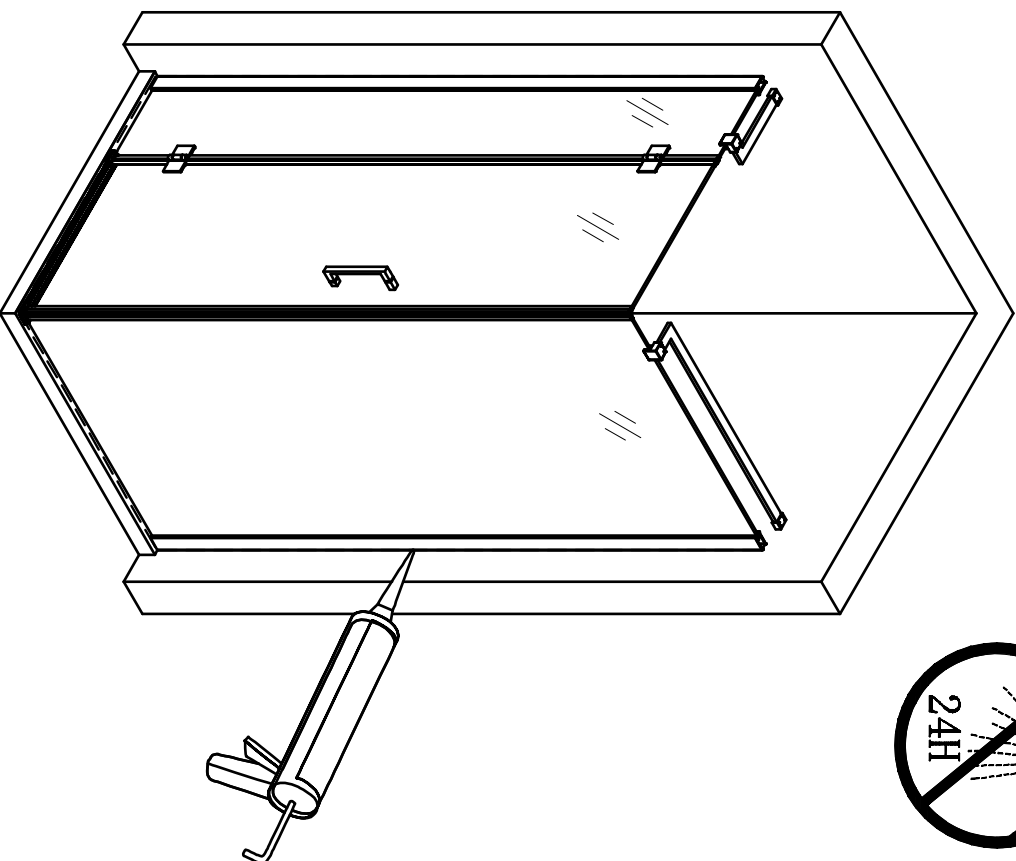

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

9

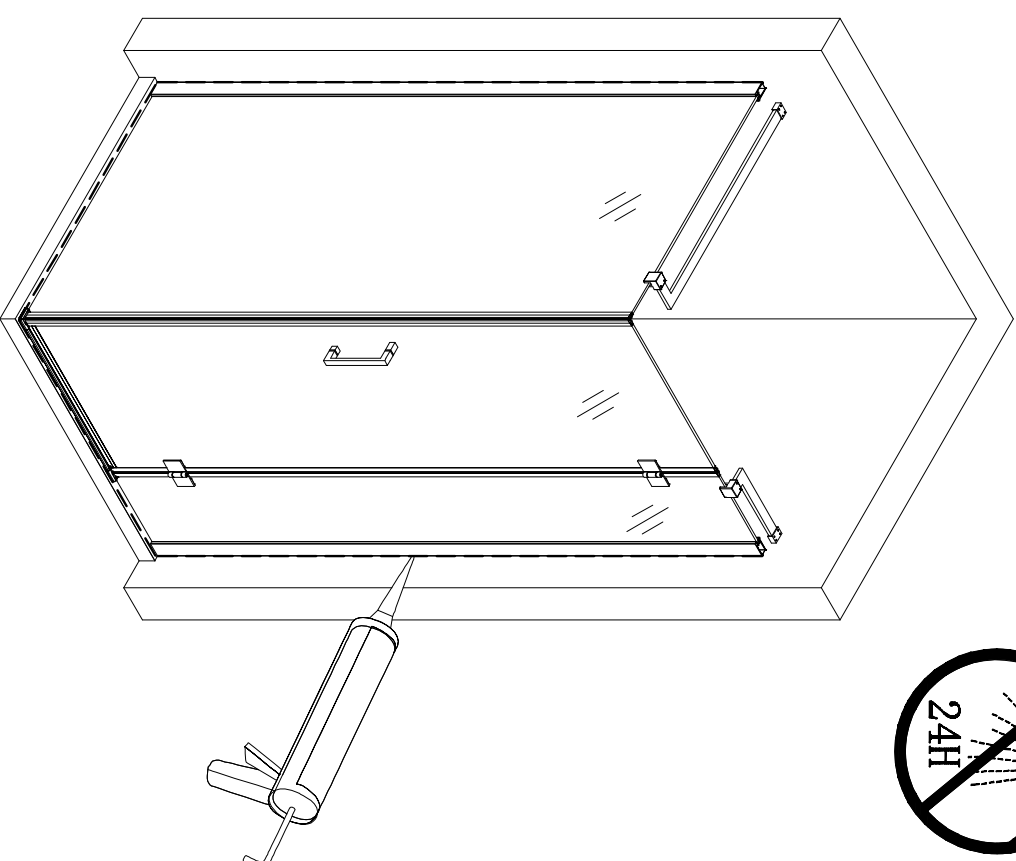

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.