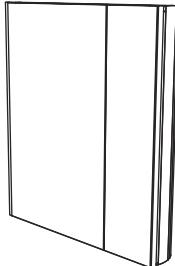
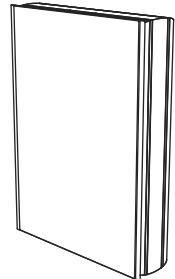
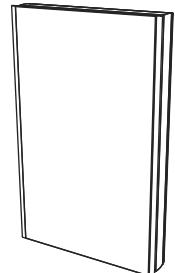
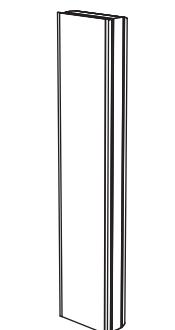


Please retain for future reference

REFINE (ne)
AS615ALSLPEQUINOX (ne)
AS515ALLPLIMIT
AS415ALSLPREFERENCE
AS315AL


CARE & SAFETY

Wear suitable eye protection when drilling. Take care when using power tools near water - the use of a residual current device (RCD) is advised. Beware of hidden cables or pipes. Take care if drilling on tiled surfaces in case the drill slips. A piece of masking tape applied to the wall before marking out the fixing holes will stop the drill from wandering.

DO NOT strike glass components with hard or pointed items. DO NOT place very hot or very cold items against or in close proximity to glass surfaces unless an adequately thick insulation material is used to prevent such items coming in contact with the glass. The nominal thickness of the mirror glass used in this product is 6mm and is film backed for safety. If the glass becomes chipped or broken replace immediately. For details on replacement glass and other components contact customer services at the address below.

CLEANING

It is recommended that the unit is cleaned with a soft, dry, non abrasive cloth. Never use cleaning agents or abrasive

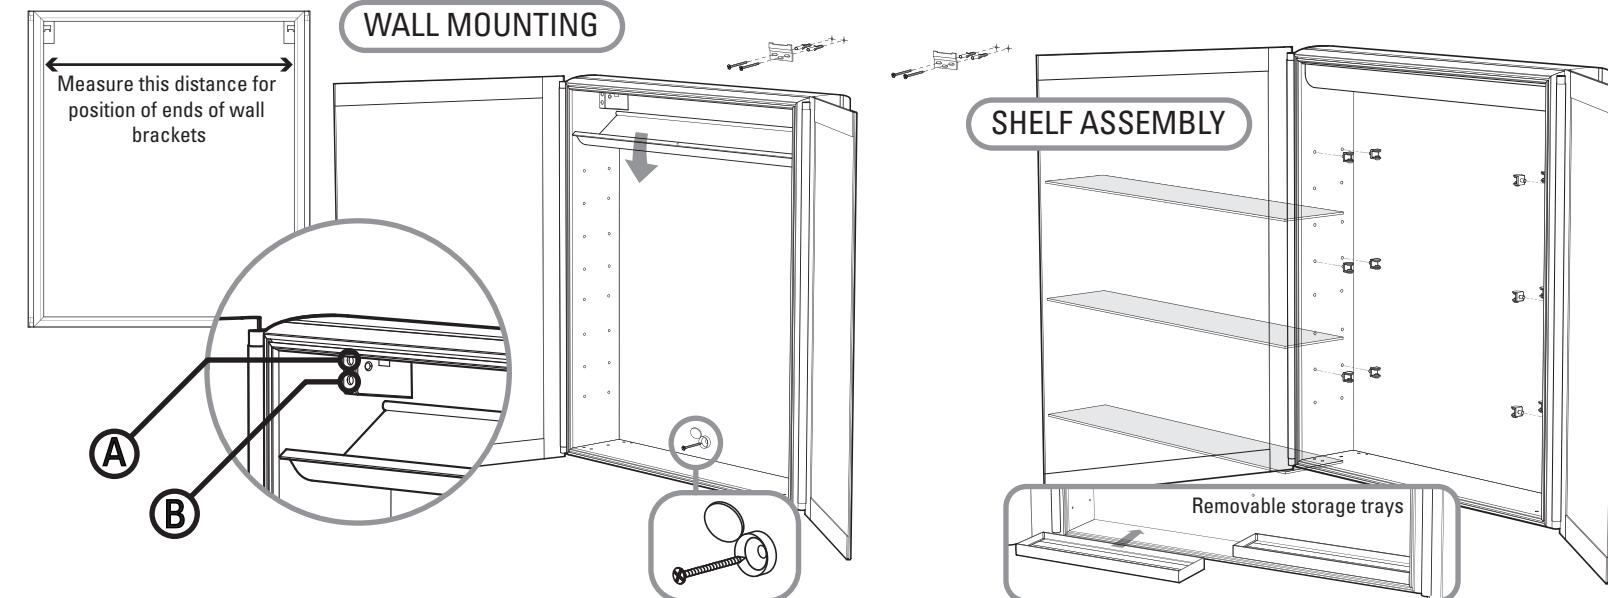

materials on any type of surface finish.

INSTALLATION PROCEDURE

Take care using power tools, especially near water. The use of a residual current device (RCD) is recommended.

- 1] Remove the packaging taking special care with the doors and separate shelves. Open the cabinet doors and remove the screws on the front edge and lower the cover. Take care not to lose the screws.
- 2] Choose a location to mount the cabinet. Using a spirit level mark off a horizontal line approximately 50mm below where the top of the cabinet is to be. Position the bracket hole centres so that they are centred on the line, and ensure that the ends of the brackets are spaced to the width between the inner edges of the vertical aluminium extrusions (see illustration). Mark off the holes using a pencil.
- 3] Note: Wall plugs supplied are only suitable for solid stone / brick walls. For plasterboard walls use specialist wall plugs, available from DIY or hardware stores. Seek advice from a specialist about the suitability of fixings to be used. Drill the required holes and insert wall plugs.
- 4] Screw the brackets to the wall using the screws provided,
- 5] Hang the cabinet on the wall brackets, the claws on the cabinet hangers must be securely located on the wall brackets. Using a spirit level adjust the angle of the cabinet by turning the top screw (screw A) with a cross head screwdriver. When the angle is properly adjusted, screw through the lower section of the cabinet backboard and mark the wall. Remove the cabinet from the wall, drill a suitable hole in the marked location and fit a wall plug. Re-hang the cabinet making sure to tighten screw B on both hangers and secure the base of the cabinet to the wall with the supplied screw and cover-cap. The cabinet should not be left unattended until it is fully secure.
- 6] When the cabinet is fully secure the internal top cover should be closed and secured with the small screws removed earlier.
- 7] To fit the glass shelves insert the shelf supports in the desired positions starting with the top shelf. Blanking plugs supplied can be used to cover unused shelf holes.
- 8] Finally add the storage trays to the base of the cabinet. These are provided to store small loose items within the cabinet.

please ensure the screws are fully tight but take care not to overtighten. Two screws must be used in each bracket.