









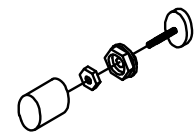


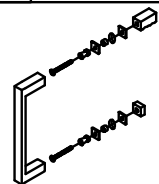


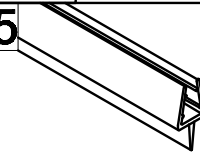
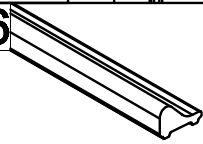
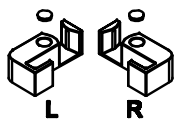
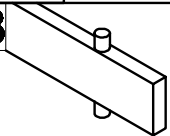
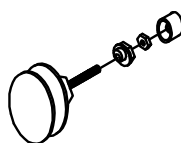








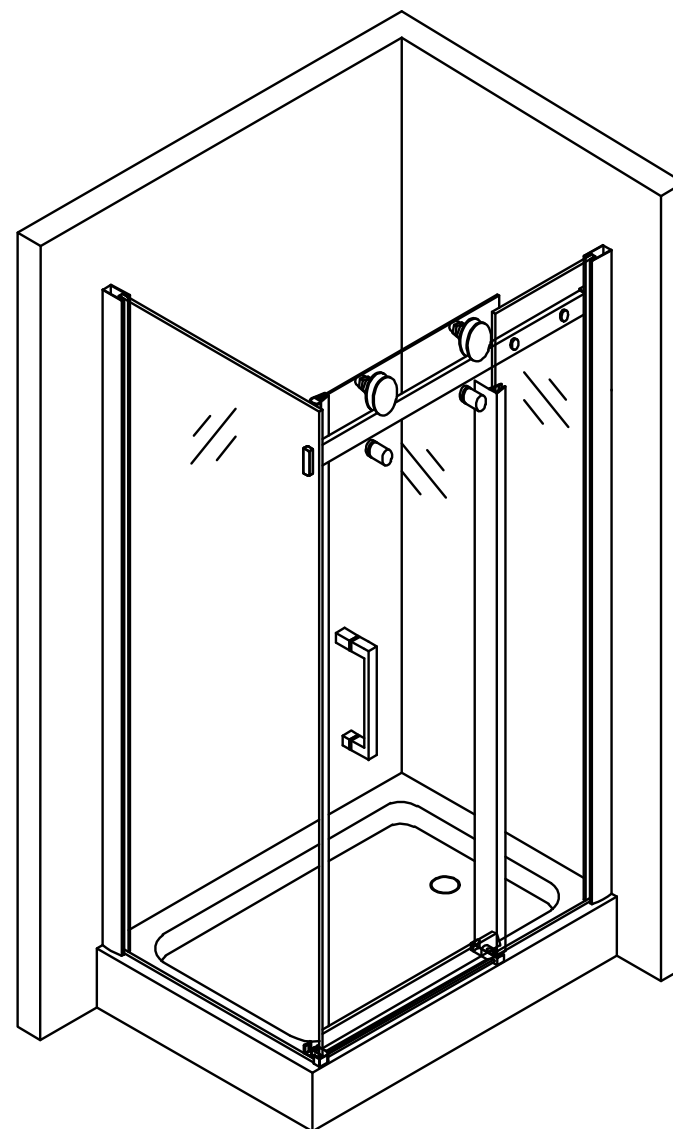
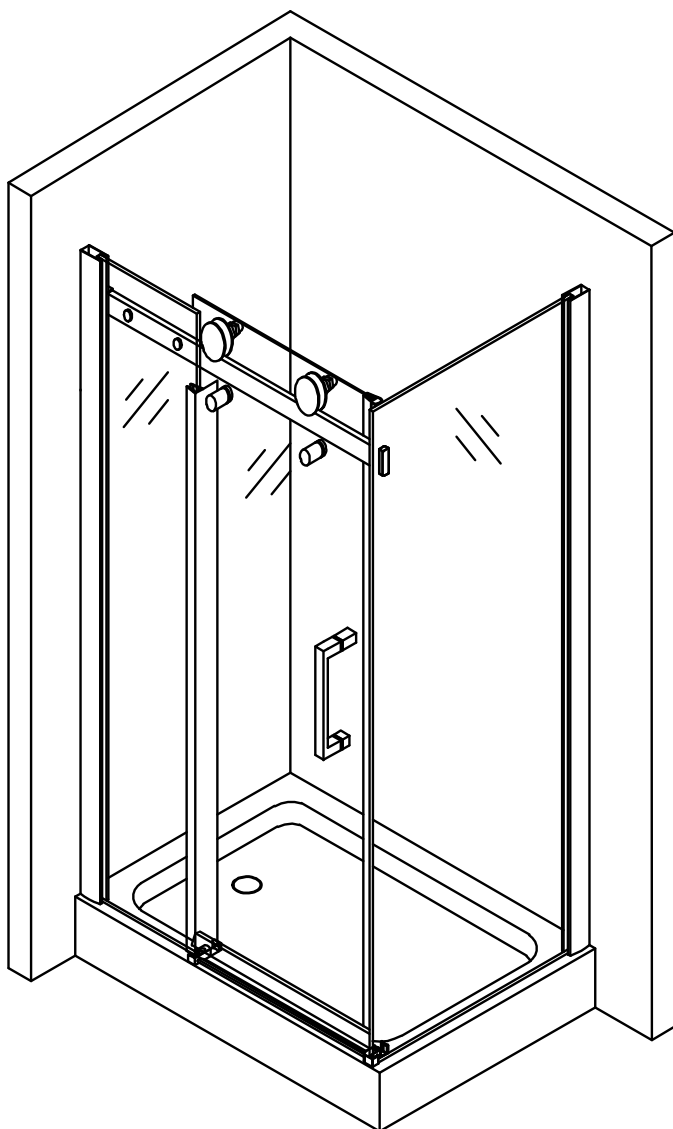


Nova sliding door enclosure-Matt Black



INSTALLATION MANUAL




<div>1</div> <div></div> <div>D6X25</div> <div>10Pcs</div>	<div>2</div> <div></div> <div>B1-D11B</div> <div>2Pcs</div>	<div>3</div> <div><div>ST4X30</div></div> <div>ST4X30</div> <div>10Pcs</div>	<div>4</div> <div></div> <div>B1-D02B</div> <div>2Pcs</div>	<div>5</div> <div></div> <div>B1-D03B</div> <div>2Pcs</div>	<div>6</div> <div></div> <div>ST4X12B</div> <div>6Pcs</div>
<div>7</div> <div></div> <div>WX-B01B</div> <div>2Pcs</div>	<div>8</div> <div></div> <div>B1-D04B</div> <div>1Pc</div>	<div>9</div> <div></div> <div>B1-D04B</div> <div>2Pcs</div>	<div>10</div> <div></div> <div>B1-H01B</div> <div>2Pcs</div>	<div>11</div> <div></div> <div>B1-D06B</div> <div>1Pc</div>	<div>12</div> <div></div> <div>B1-D05B</div> <div>1Pc</div>
<div>13</div> <div></div> <div>B1-H07B</div> <div>1Pc</div>	<div>14</div> <div></div> <div>B1-D06B</div> <div>2Pcs</div>	<div>15</div> <div></div> <div>B1-H08B</div> <div>1Pc</div>	<div>16</div> <div></div> <div>B1-B06B</div> <div>1Pc</div>	<div>17</div> <div></div> <div>B1-D15B</div> <div>2Pcs</div>	<div>18</div> <div></div> <div>B1-F08B</div> <div>B1-F09B</div> <div>B1-F10B</div> <div>B1-F11B</div> <div>1Pc</div>
<div>19</div> <div></div> <div>B1-D07B</div> <div>2Pcs</div>	<div>20</div> <div></div> <div>M5X10</div> <div>2Pcs</div>	<div>21</div> <div></div> <div>B1-D16B</div> <div>1Pc</div>	<div>22</div> <div></div> <div>B1-D17B</div> <div>1Pc</div>	<div>18</div> <div><div>1000</div><div>B1-F08B</div></div> <div><div>1200</div><div>B1-F09B</div></div> <div><div>1400</div><div>B1-F10B</div></div> <div><div>1600</div><div>B1-F11B</div></div>	
<div>Tools:</div>					

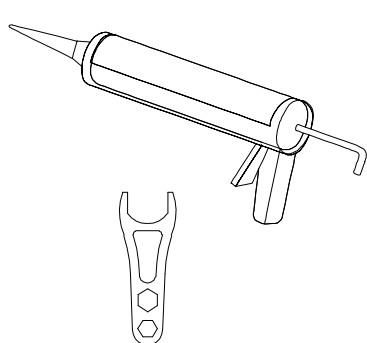


Ø6mm

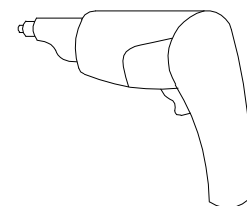



Ø3.2mm








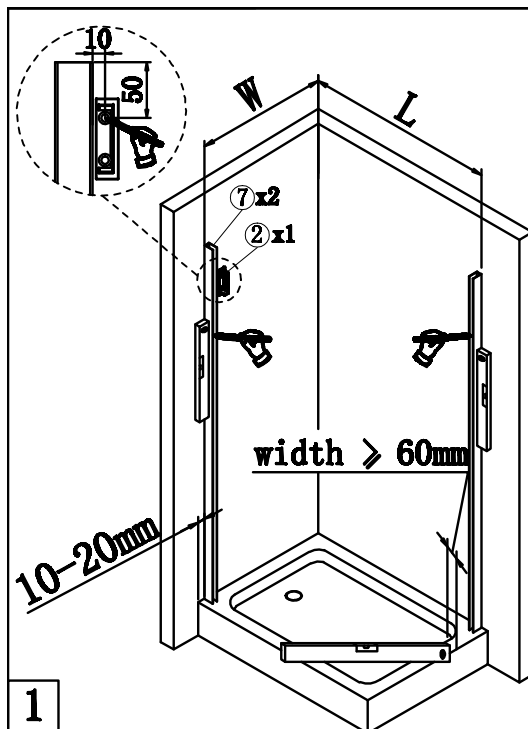

	L	W
700		660-680
800		760-780
900		860-880
1000	960-980	960-980
1200	1160-1180	
1400	1360-1380	
1600	1560-1580	

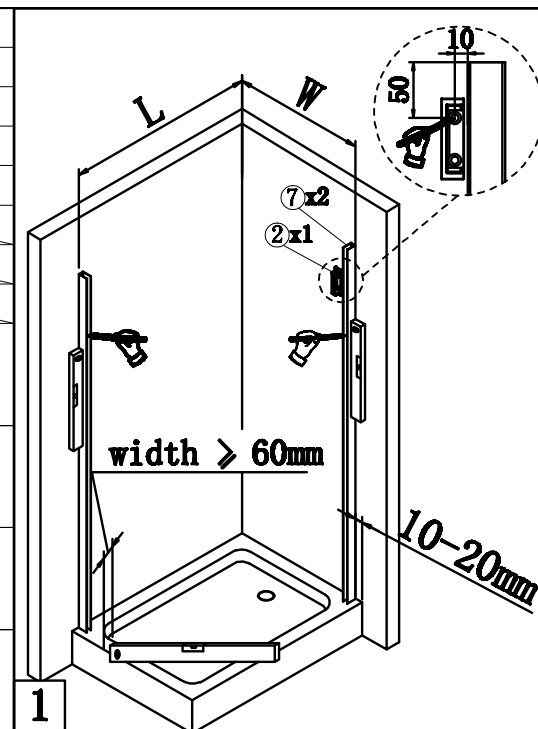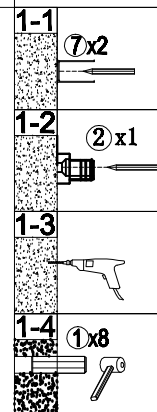




	L	W
700		660-680
800		760-780
900		860-880
1000	960-980	960-980
1200	1160-1180	
1400	1360-1380	
1600	1560-1580	

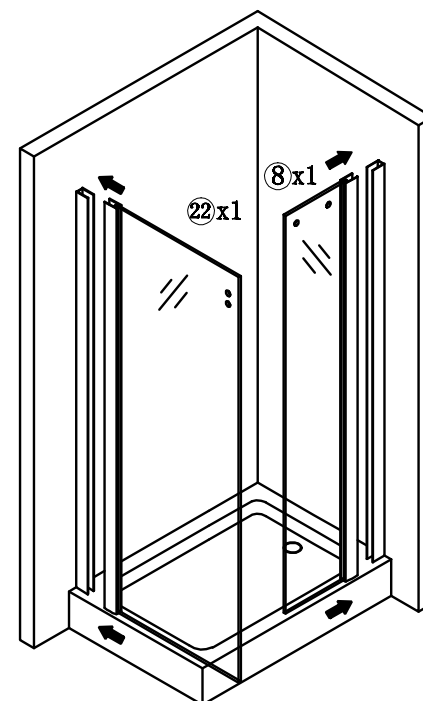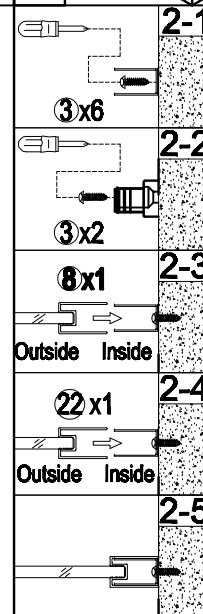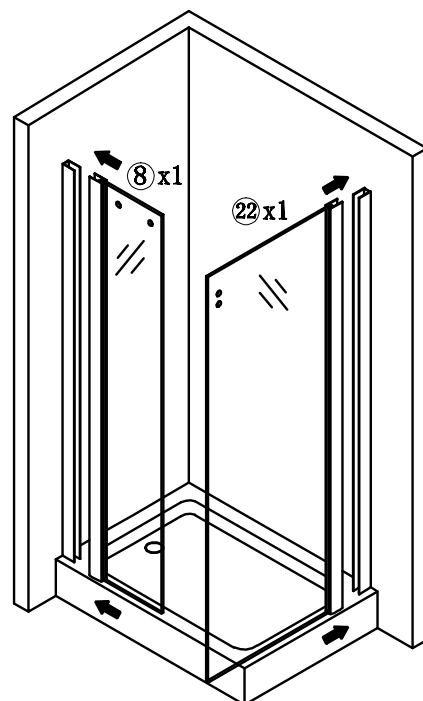
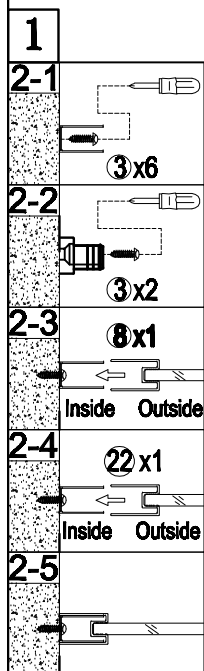
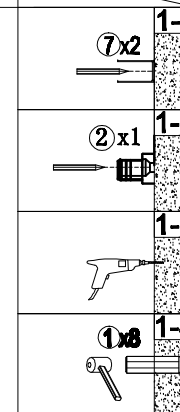


2

2

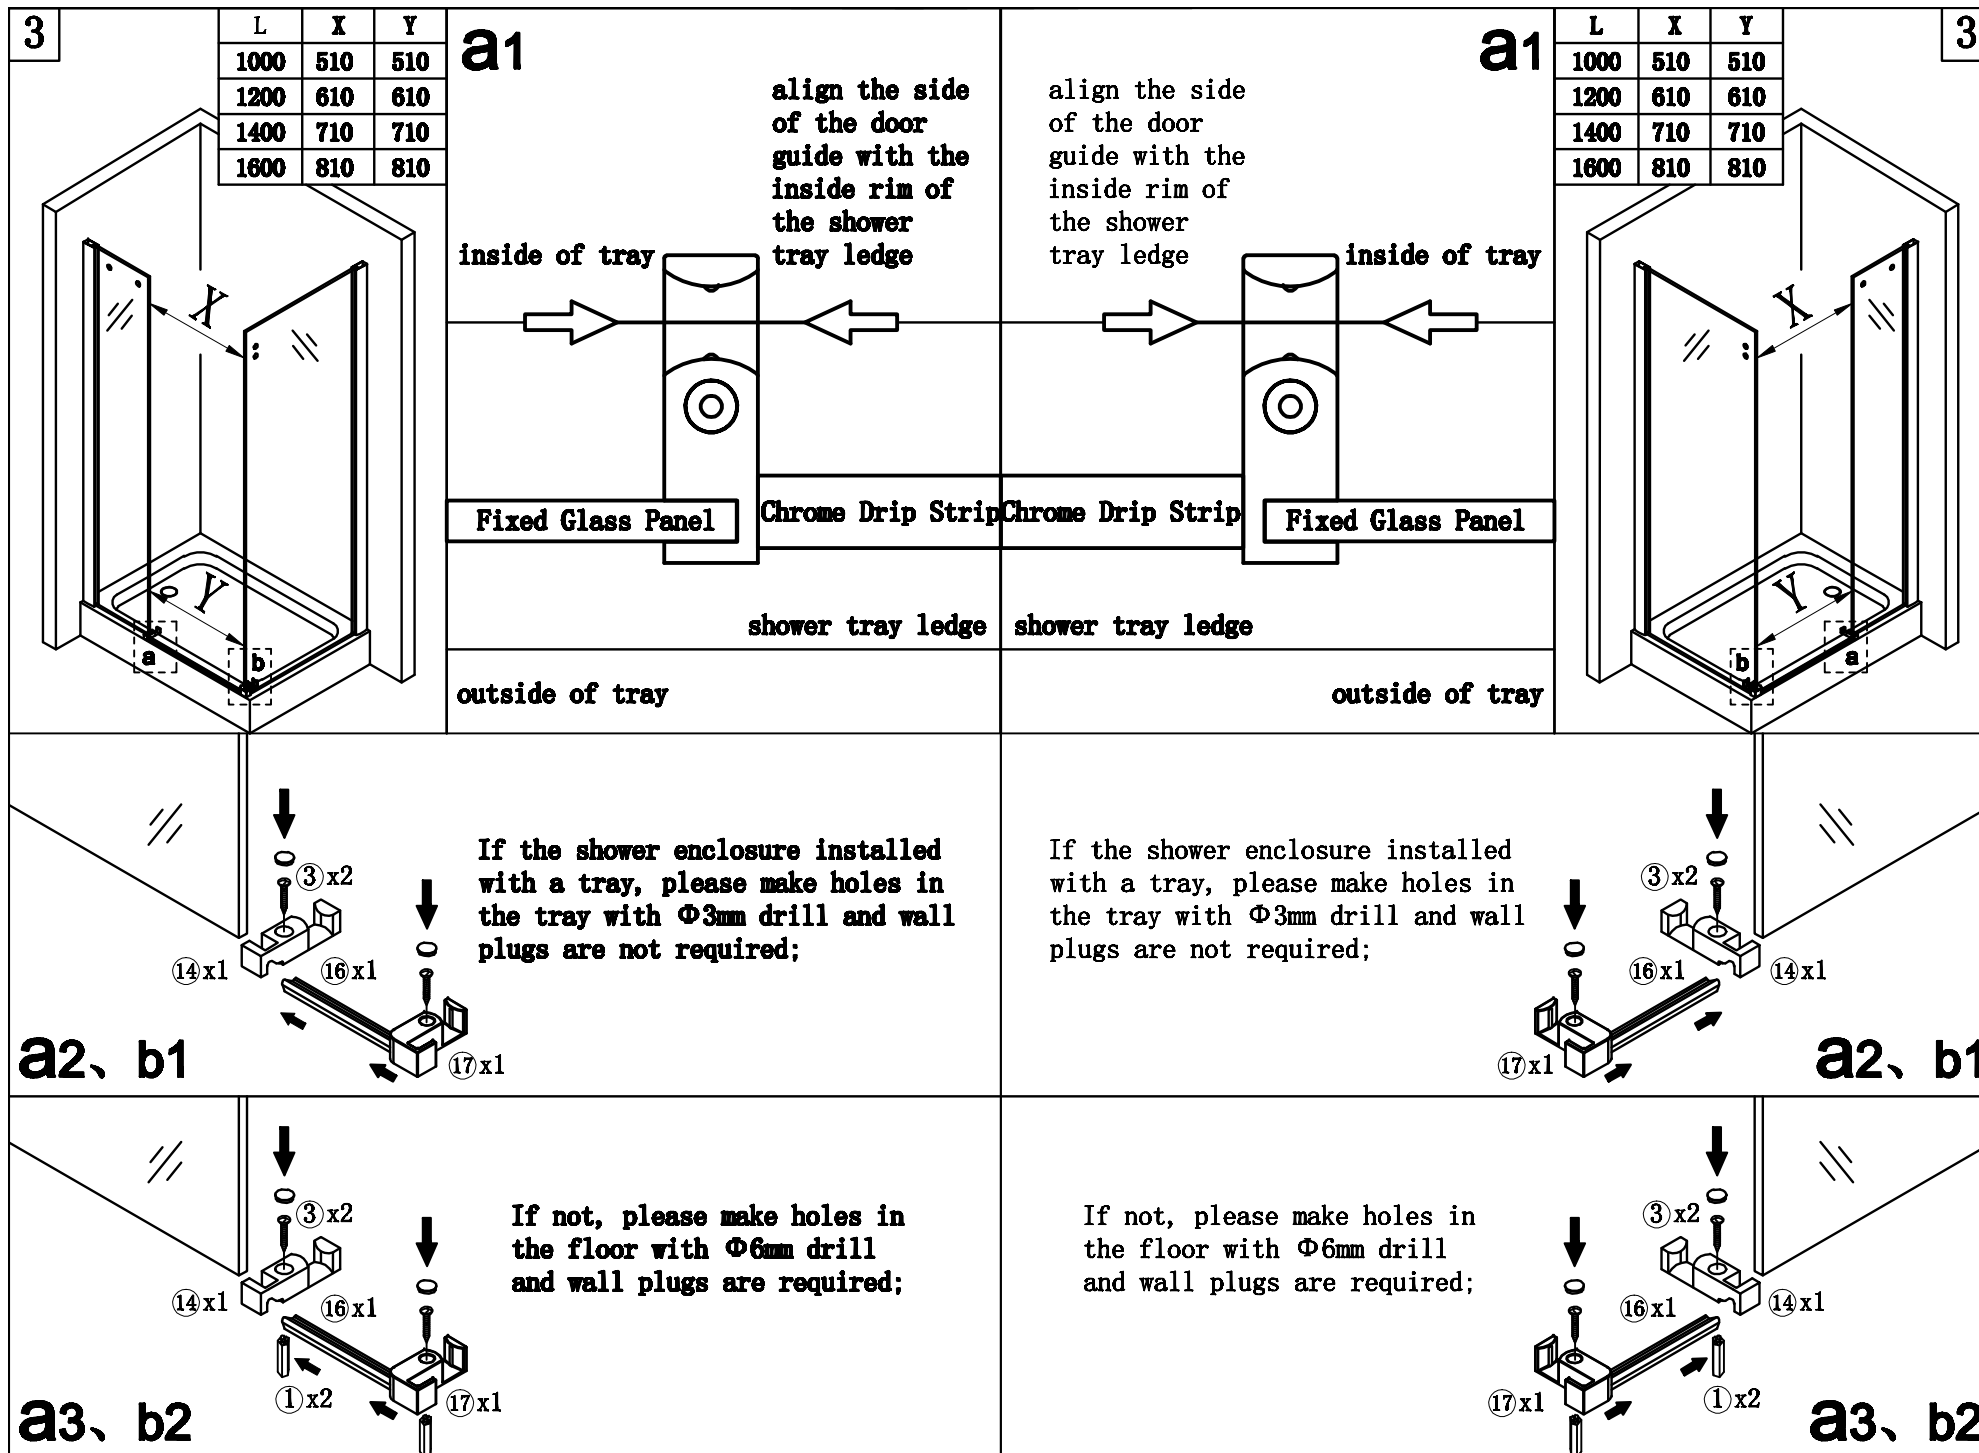

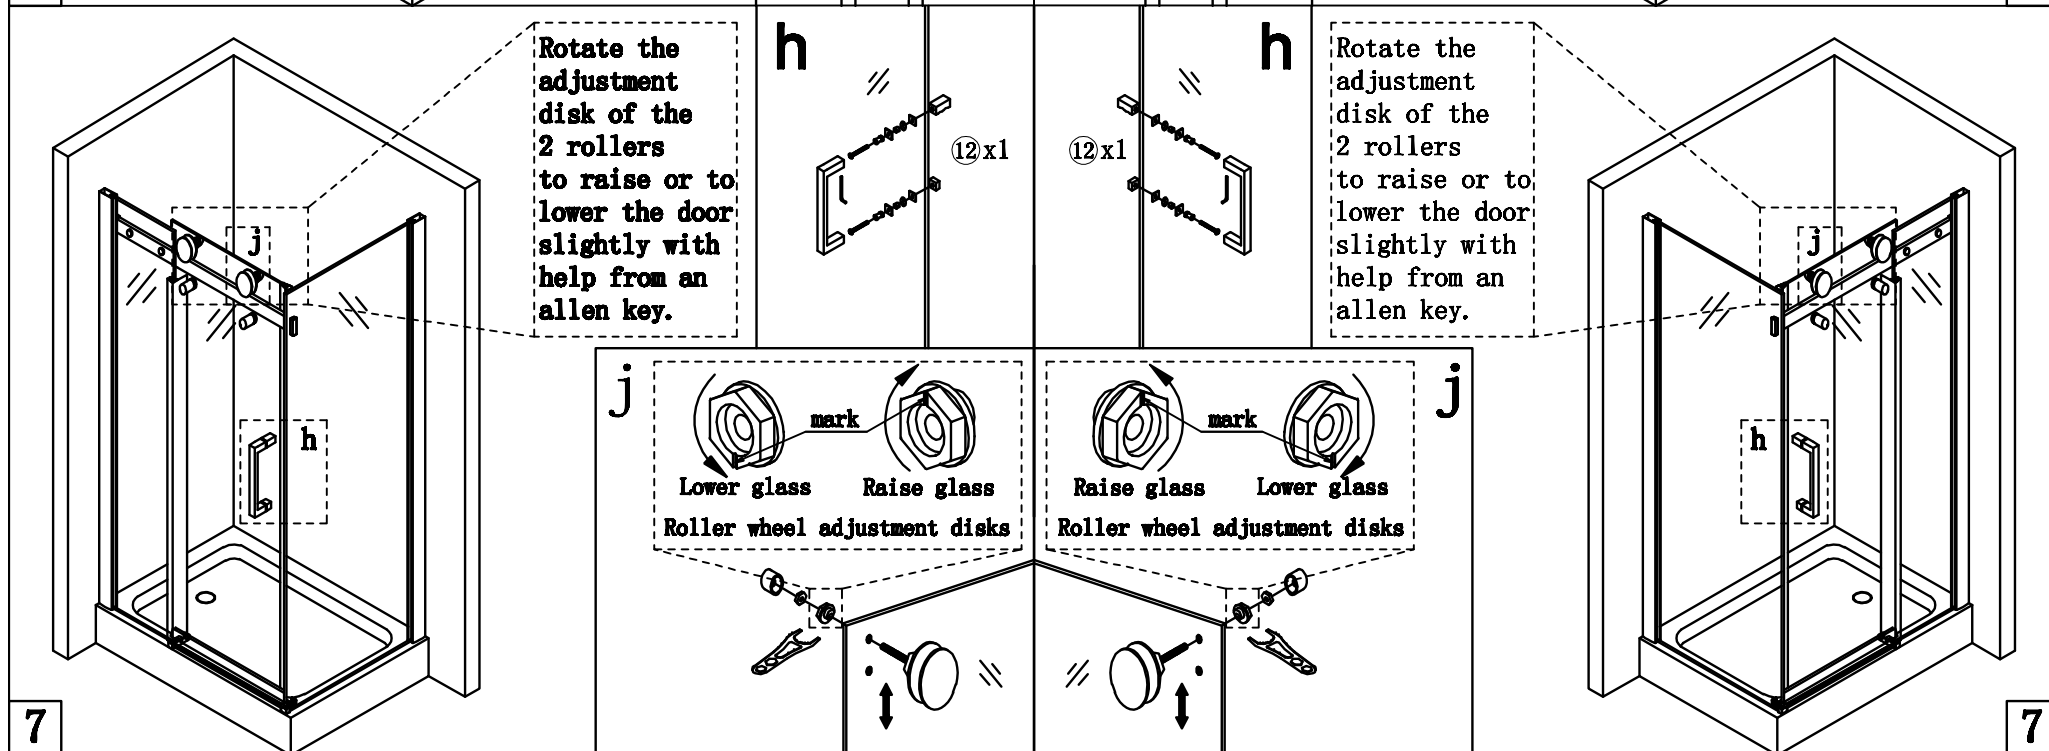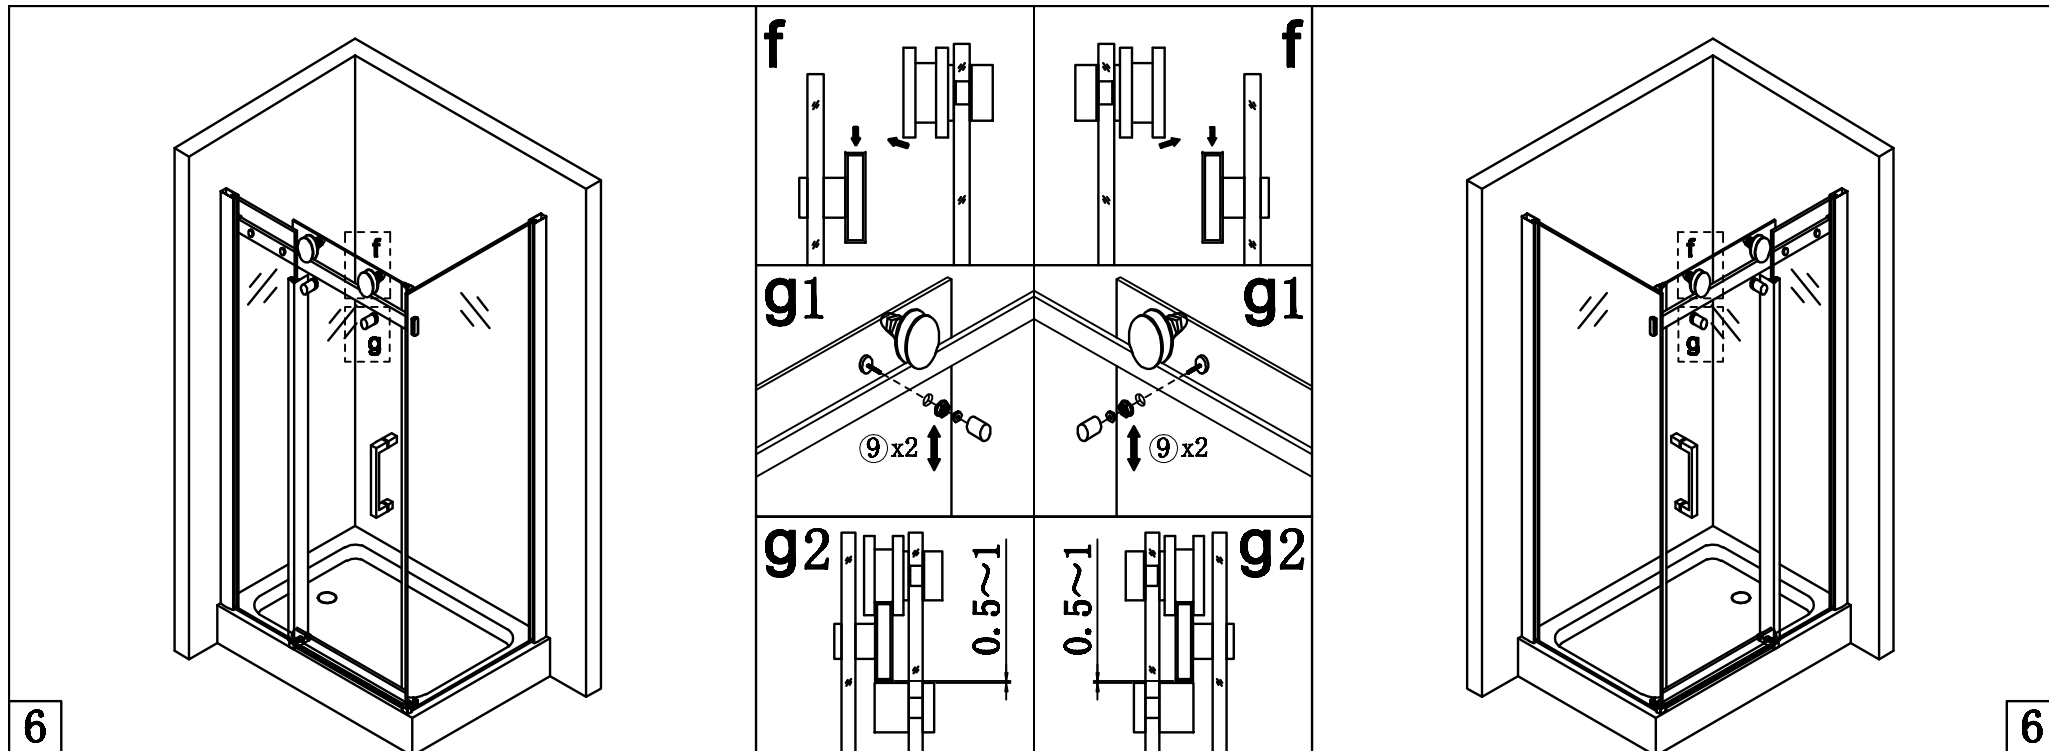


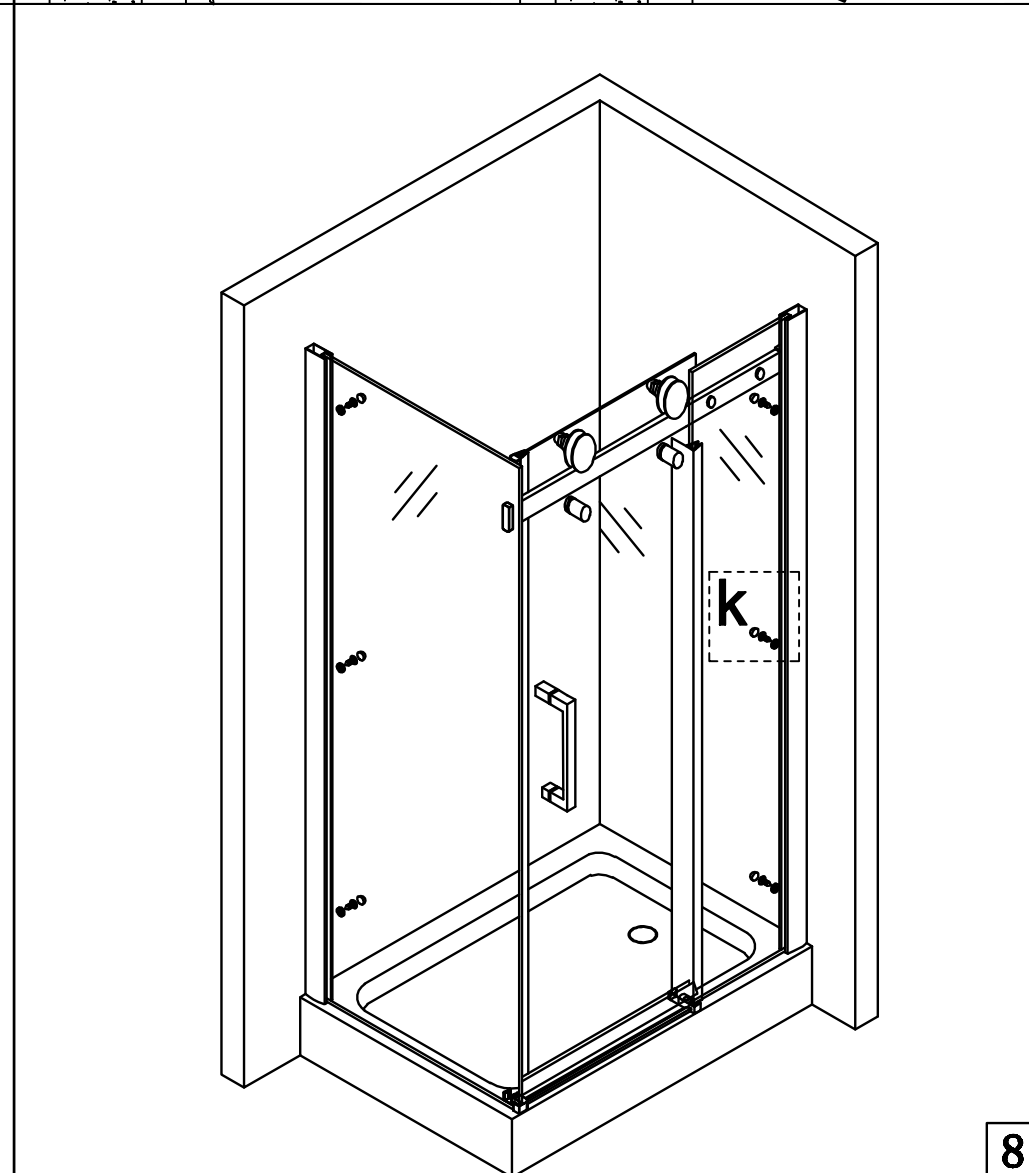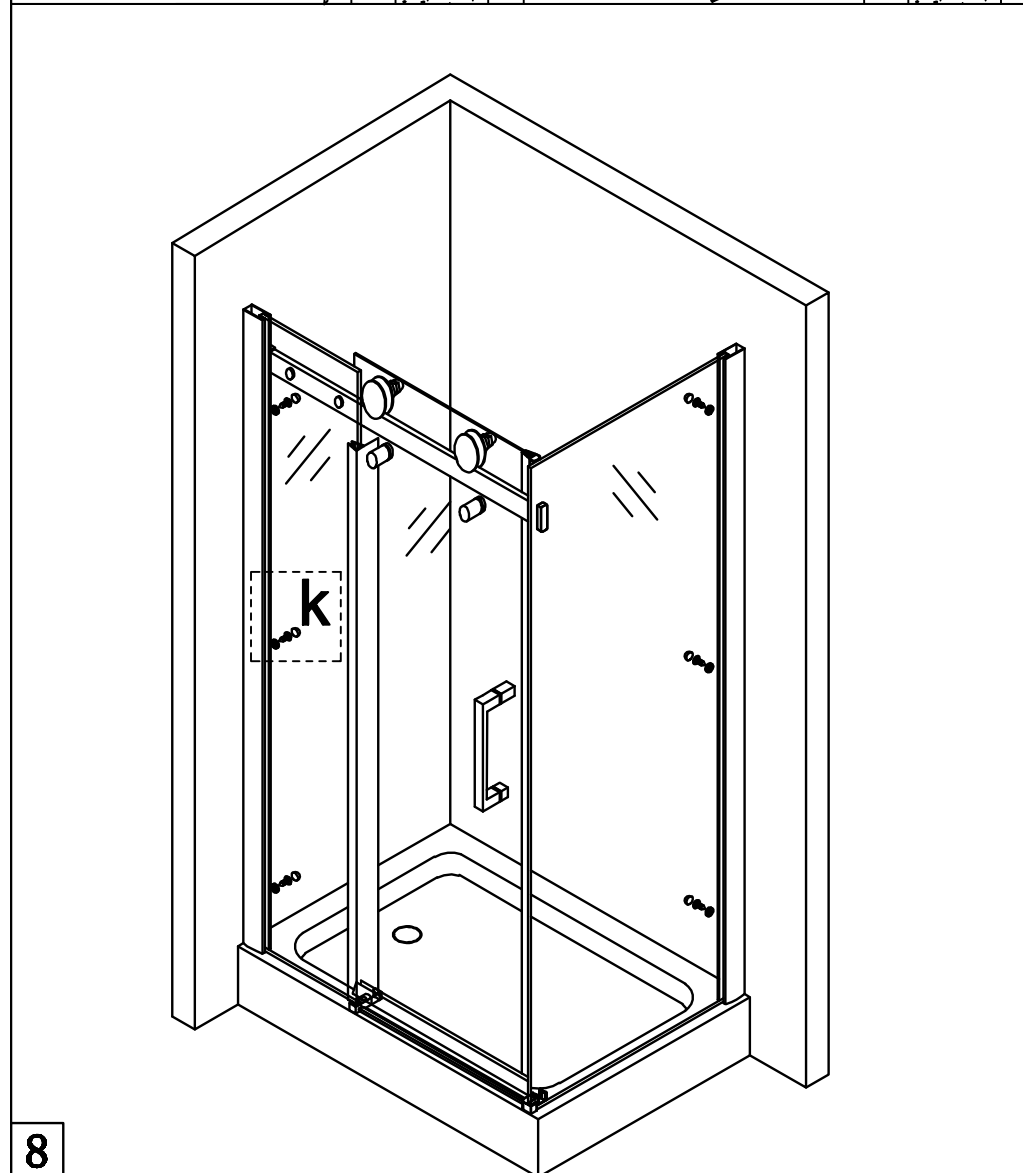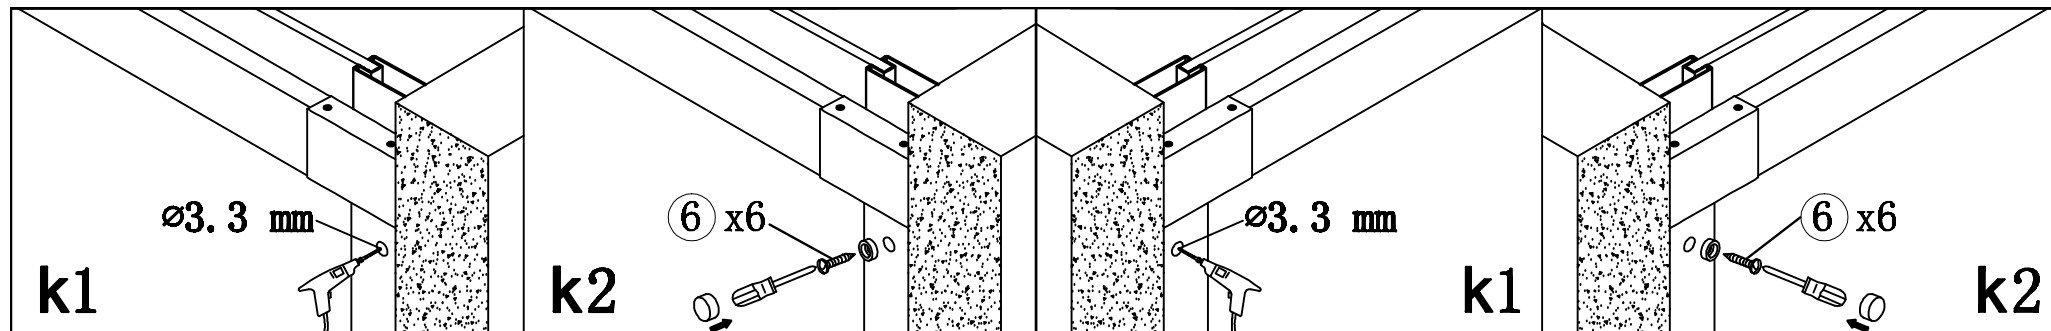



Care Instructions:

Do not use your shower enclosure within 24 hours of assembly . Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

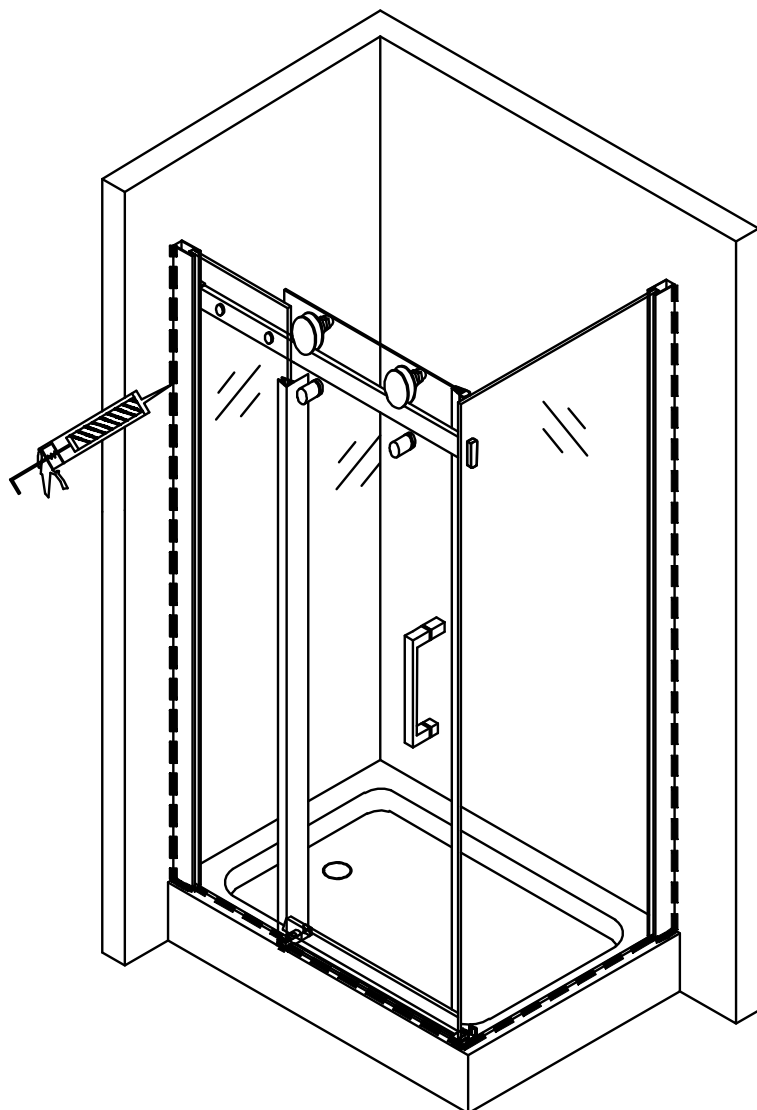

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly . Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

