

# BC 2200 Dolphin Hot Air Hand Dryers

## User Manual

Please read carefully before use




BC 2200RA



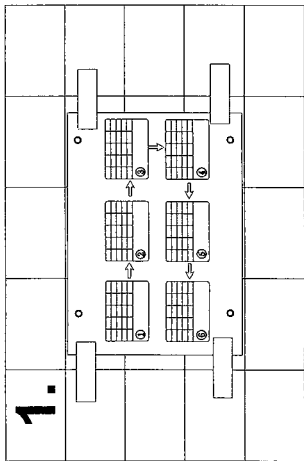
BC 2200W



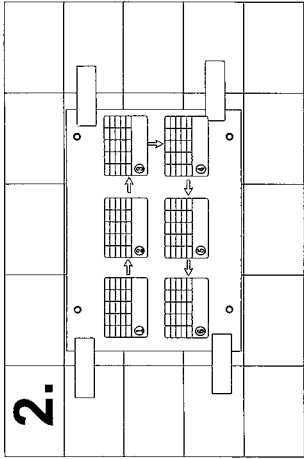
# Mounting Instructions



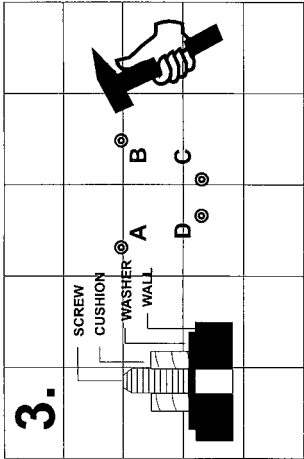
This product intended for installation by a qualified service person using 1.2 mm<sup>2</sup> solid conductor for wiring.

**1.** 

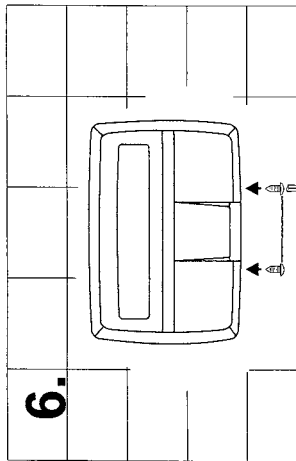
1. Fix the mounting instruction sheet on the wall. Suitable height for hole "C" is 50" from ground.

**2.** 

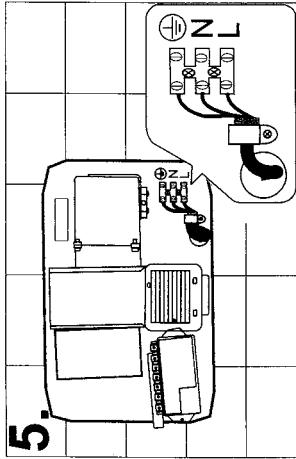
2. Drill 4 holes (A. B. C. D. 3" diameter; 1.4" depth.)

**3.** 

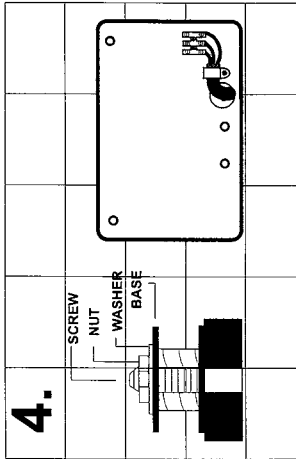
3. Take off the mounting instruction sheet. Hammer dowels into 4 holes.

**6.** 

6. Attach housing back to base plate at an angle of 10 degrees then secure properly.

**5.** 

5. Connections:  
 A. Connect the live wire (colored red or brown) to the terminal block marked "L".  
 B. Connect the neutral wire (colored black or blue) to the terminal block marked "N".  
 C. Connect the ground wire (colored green and yellow) to the terminal block marked "Y".

**4.** 

4. Remove the housing from the base plate; put the power cord at least 2 1/4" through the hole of the base plate then secure the base plate onto the wall.

130 cm FROM THE GROUND IS SUITABLE



D



C

