



VANITY BASIN FIXING INSTRUCTIONS

1. Remove packaging from basin
2. Place basin face down in required position on counter top, taking care not to damage the surface of the counter top or the basin
3. Ensure that the basin is aligned and in the correct orientation
4. Draw a line 'A' on the counter top, around the outer edge of the basin (Fig 1)

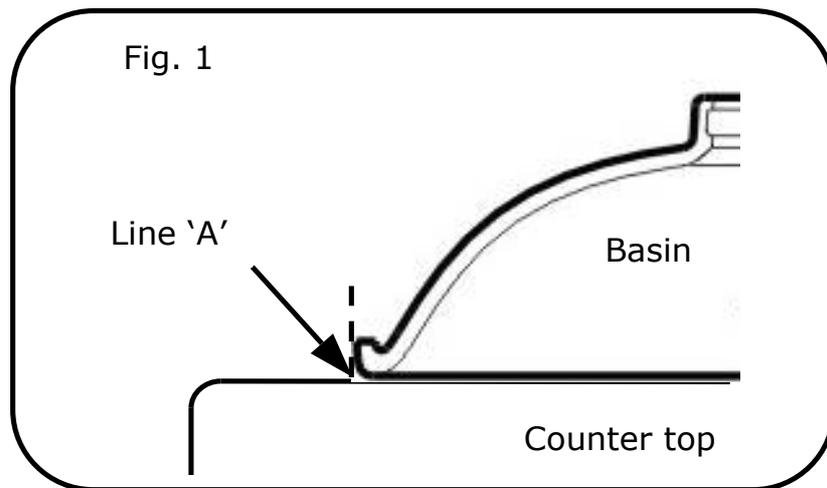

5. Remove basin from counter top
6. Draw a second line 'B' inside line 'A' at an offset of 18mm (Fig 2). Use this second line 'B' as the cut out guide

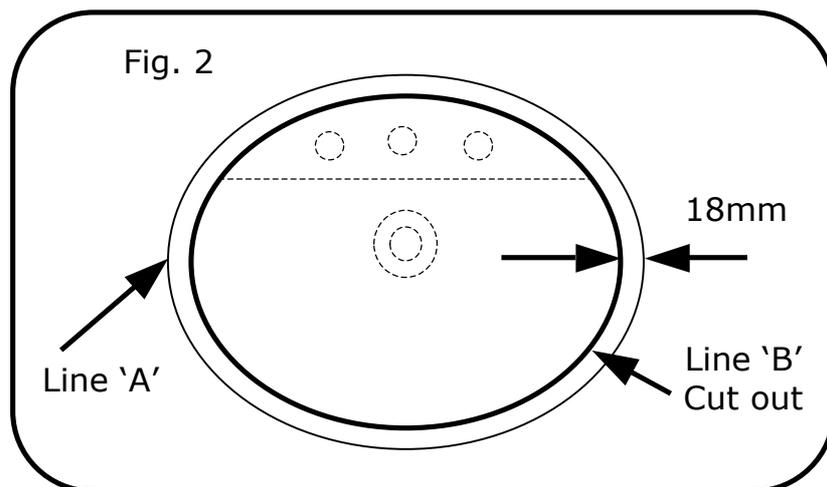

7. Add a bead of silicone to the underside of the basin rim
8. Locate basin into cut out profile
9. Remove excess silicone sealant when basin is fitted