

ASQUITHS

BATHROOMS OF TRANSFORMATION


BRASSWARE FITTING GUIDE



GENERAL FITTING GUIDE

BATH SPOUT




PRODUCT SHOWN WILL VARY
DEPENDING ON MODEL

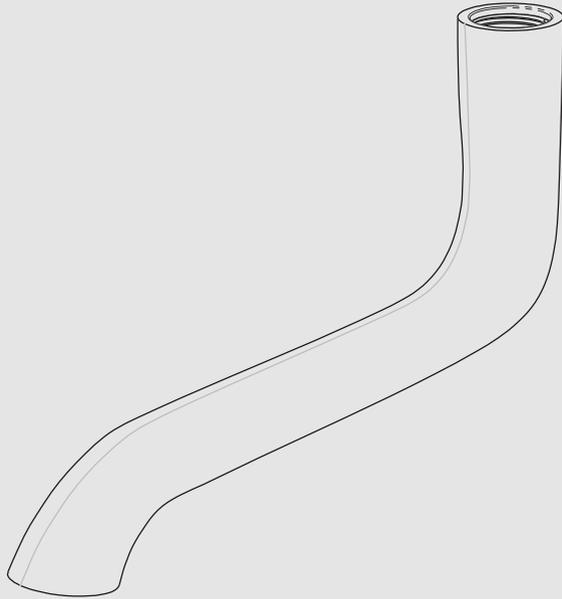

This spout is designed to be fitted to the bottom outlet point of the exposed thermostatic traditional shower valve.

Installation Procedure

1. Ensure you have all the relevant tools before commencing the installation.
2. Loosen the grub screw at the back of the bath spout, being careful not to fully remove it.
3. Screw the bath spout onto the threaded outlet of the wall mounted shower valve.
4. Secure the spout in place by tightening the grub screw.
5. Check all water feed connections to ensure there are no leaks.

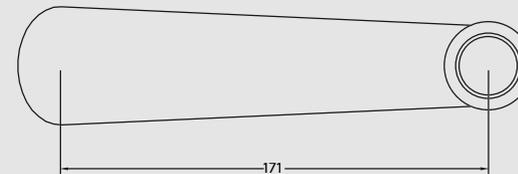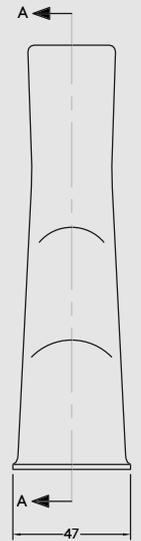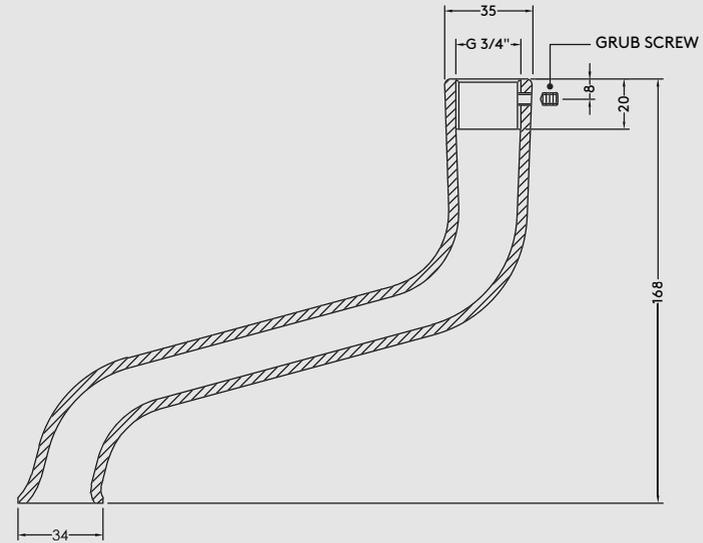

Guarantee & Aftercare

When installing or using tools, extra care must be taken to avoid damaging the finish or fitting. To maintain the appearance, please ensure it is cleaned regularly using a clean soft damp cloth only. Abrasive cleaners or detergents must not be used as they may cause surface deterioration. The company provides a guarantee against faulty material or manufacture excluding serviceable parts, providing they have been installed, cared for and used in accordance with our instructions.

The company reserves the right to continually evolve its product lines without notification. The company will not accept any liability regarding specification changes and their consequences unless previously quoted by the company in writing.





[ASQUITHSBATHROOMS.COM](https://www.asquithsbathrooms.com)