

# Assembly Instructions

## Instructions for installing the bath and the panel

### List of elements:

- |                |            |
|----------------|------------|
| 1. Bath        | - 1 item   |
| 2. Frame rails | - 2 items  |
| 3. Wood screws | - 12 items |
| 4. Bath legs   | - 4 pieces |
| 5. Leg nuts    | - 12 items |


- |                             |           |
|-----------------------------|-----------|
| 6. Foot with thread         | - 4 items |
| 7. Foot stabilization stand | - 4 items |
| 8. Wall plugs               | - 4 items |
| 9. Wall brackets            | - 4 items |

### For mounting the casing:

- |                    |            |
|--------------------|------------|
| 10. Panel          | - 1 item   |
| 11. Mounting clips | - 8 items  |
| 12. Wall plugs     | - 4 items  |
| 13. Wood screws    | - 12 items |
| 14. Floor screws   | - 4 items  |

### Bath installation on the base:

- 1) Base
- 2) Stand



### Before You Start.

- Read these instructions carefully.
- Check the pack & make sure you have all parts listed. If not, contact your supplier who will be able to help you.
- When ready to start, ensure that you have all the right tools to hand, plenty of space & a clean dry area for assembly.
- Remove packing & protective film & inspect product prior to the commencement of assembly. Any damages found must be reported to the product supplier immediately.
- Remove & discard any transportation screws as they are not required for installation.

It is recommended that when the bath needs turning 2 people should carry out this operation.

### Fitting Instructions

- Turn the bath over so it is sitting on the top face. Ensure that the top face is protected so it cannot be scratched or damaged.

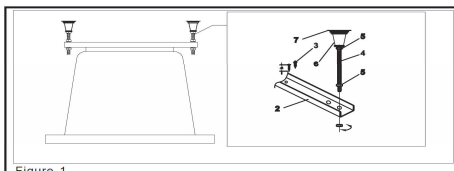


Figure 1

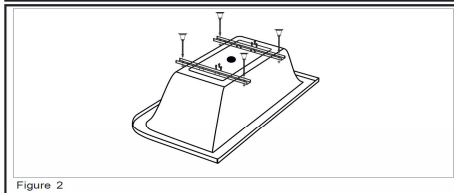


Figure 2

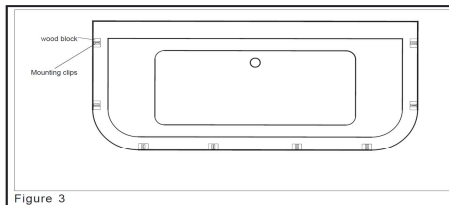


Figure 3





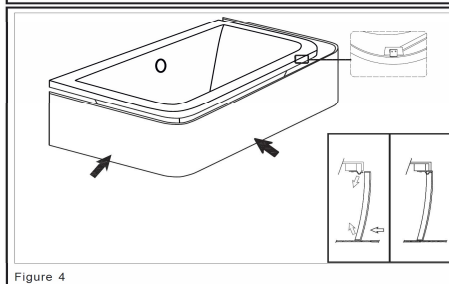


Figure 4




1. Place the bath as in Figure 2. Mount rails (2) to the bath bottom using wood screws (3) Then screw down legs (4). The rails spacing should ensure stability of the installed bath.

Figure 1

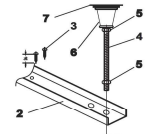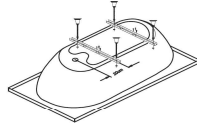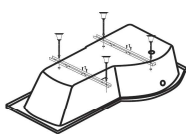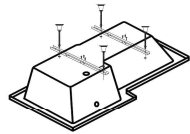


2. Put the bath in the selected place in the bathroom. Then level the bath legs (4). Mark the outline on both walls. Mark the places for brackets (9) (see Figure 3).

Figure 2

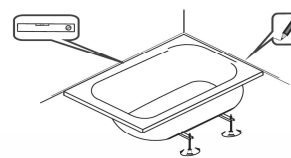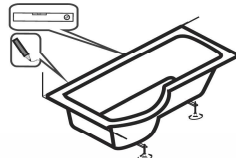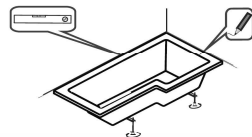

3. Mount the brackets (9) to the walls and slot the bath onto the brackets.

Figure 3

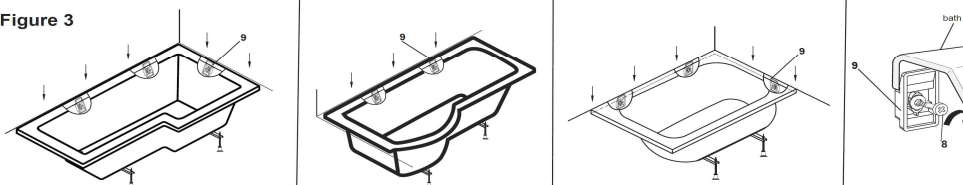

rew.1.1/12/08/15

4.

A. Tighten the clips (11) to the wooden block under the bath rim

B. Tighten the clips (11) to the floor using screw provided (14)

C. Install the panel as shown in Figure 4. If necessary the panel can be trimmed to the required dimensions.  
The panel is a separate product.

Figure 4

