



Recommended installation for P8 Semi Pedestal with 2TH basin.

Option 1:

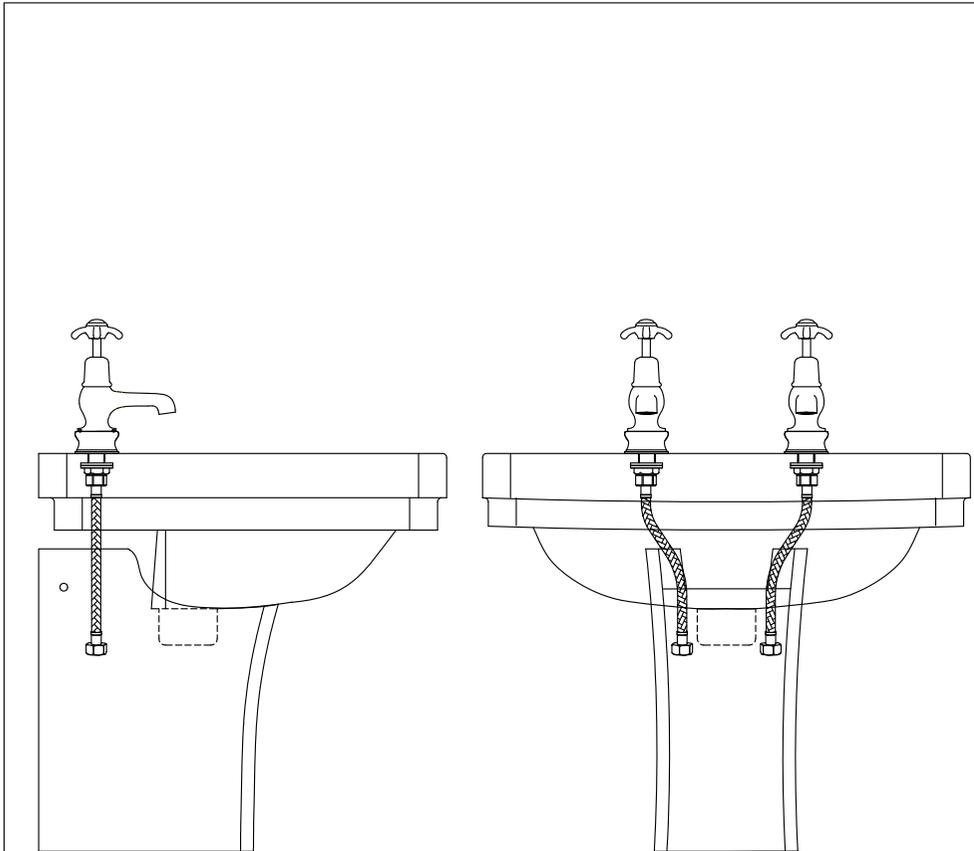

Please use the Burlington Regent tap bases.

Option 2:

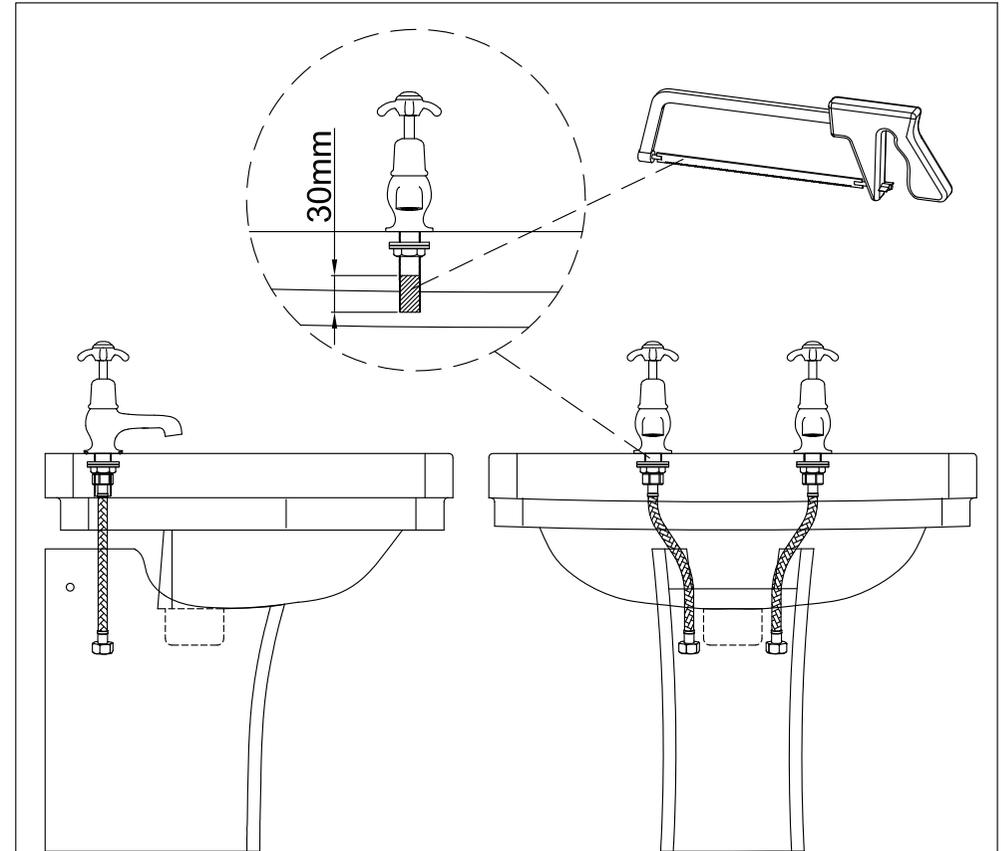

Please cut the brass tail of the taps as shown above.

Recommended Installation for Pedestal with Basin.

- Place the basin in position ensuring that it is level. The basin must be fixed onto the wall at the rear using appropriate wall fixings.
- The pedestal under the basin is for decoration. It is not designed to support the weight of basin.

