

Installation instructions



Thank you for purchasing this Victorian Plumbing product. Please follow these care instructions to ensure your product retains its high quality finish
- and retain this leaflet for future reference.

1. Identify all components are present prior to installation
2. Put the shower curtain rail(1) at a predetermined position and make a mark at the position of the screw hole (as show on figure 1)
5. Drill a hole straight into the wall and insert rawl plugs
6. Install the shower curtain rail and ensure screws are firmly fitted

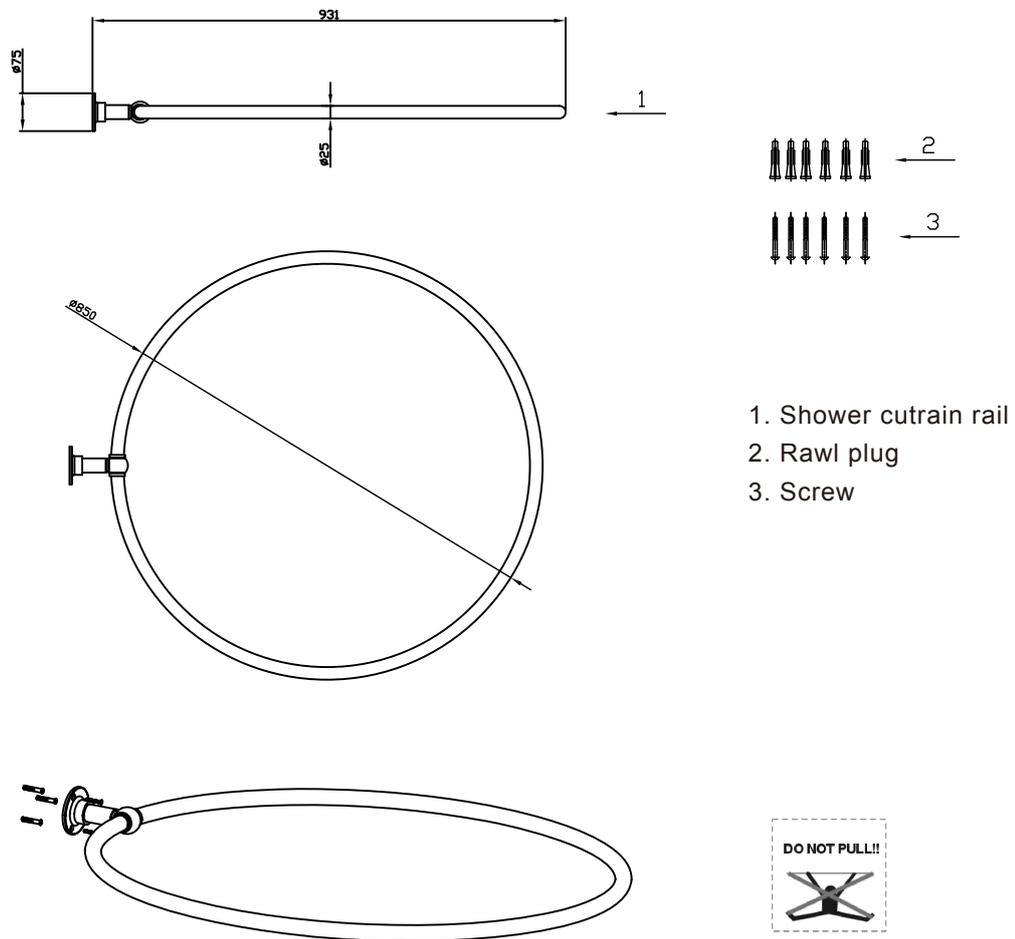


Figure 1

Please Note: Never drill into a wall without checking first for hidden pipes and cables

Victorian Plumbing

Diamond House. 41, Stephenson Way. Formby Business Park Formby. England. L37 8EG

Tel: 0044 800 862 0878

Website: www.victorianplumbing.co.uk