


# Installation instructions

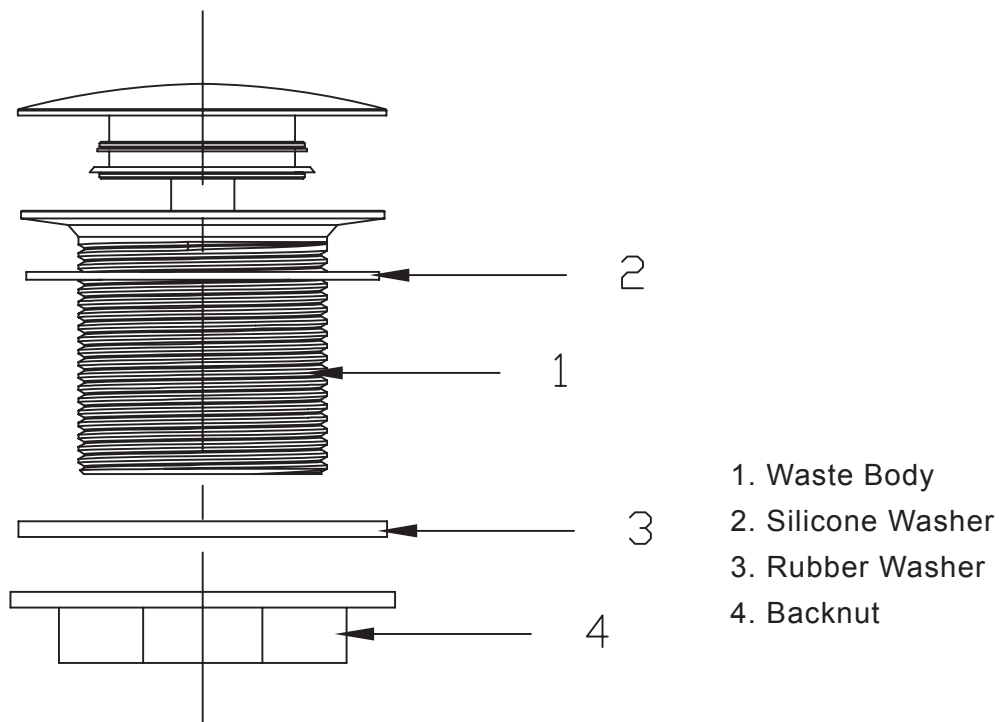

Thank you for purchasing this Victorian Plumbing product. Please follow these care instructions to ensure your product retains its high quality finish  
- **and retain this leaflet for future reference.**

1. Identify all components are present prior to installation
2. Fit the waste body(1)and rubber washer(2) into the bath
3. Fit the silicone washer (3) to the underneath of the bath as shown in the diagram,secure by tightening the backnut (4)
4. Check all joints and connections for leaks



Victorian Plumbing

Diamond House. 41, Stephenson Way. Formby Business Park Formby. England. L37 8EG

Tel: 0044 800 862 0878

Website:www.victorianplumbing.co.uk