


Model: LQ302 (Austin)

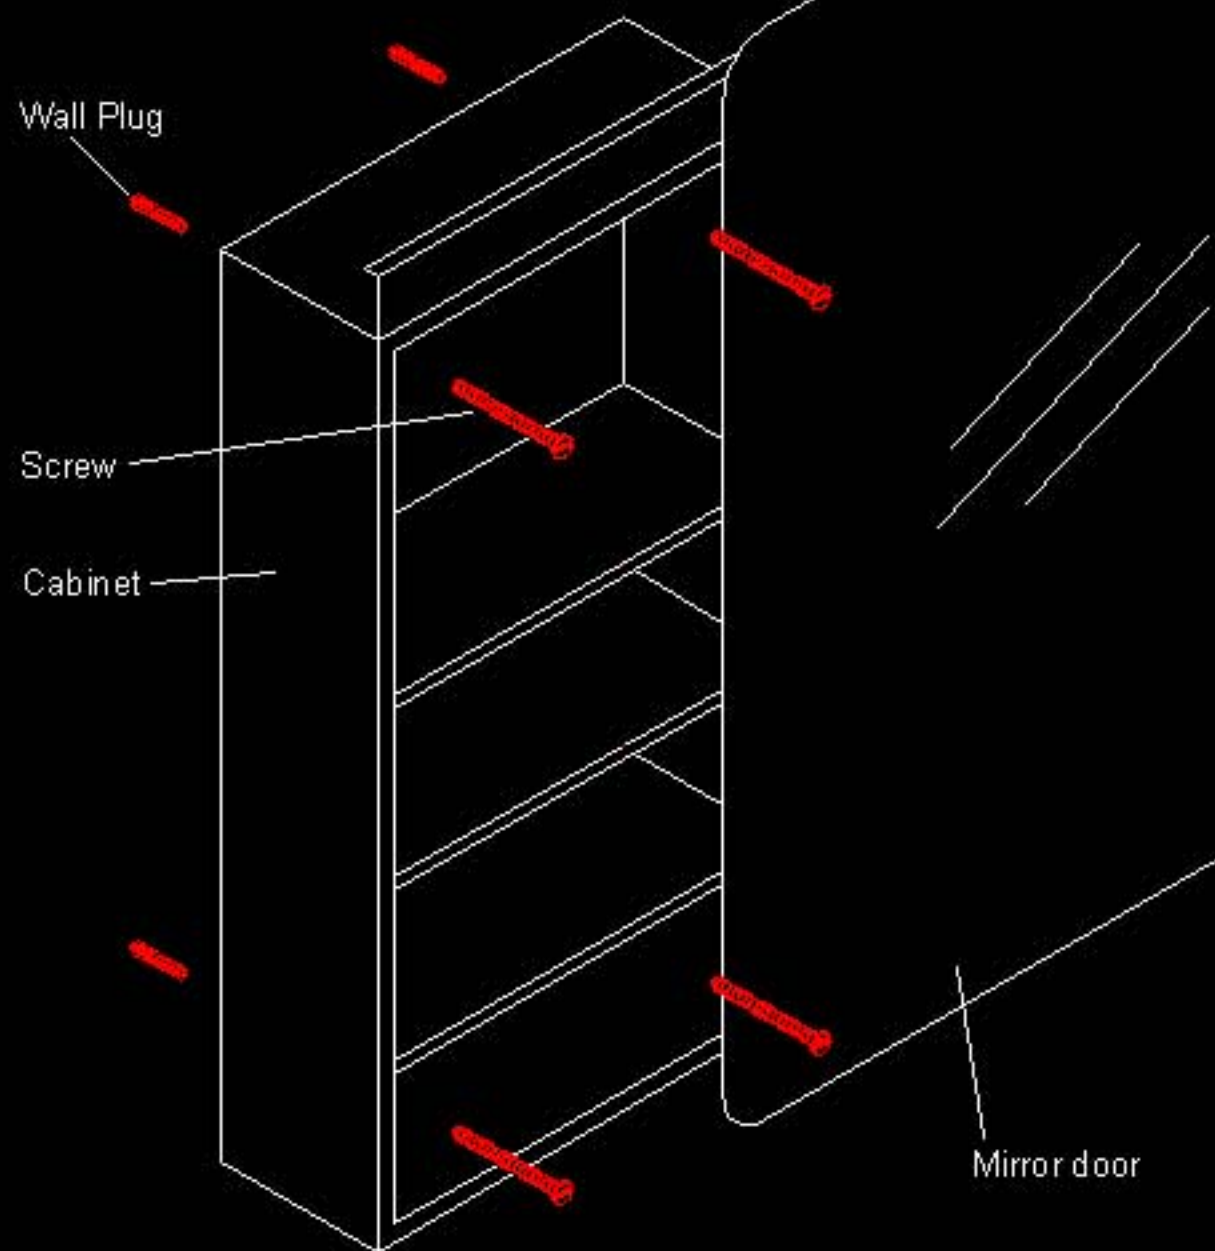

Installation Guide

1. Carefully consider the position you require the cabinet to be hung, bearing in mind the door will extend an extra 380mm to the side when fully open
2. With the help of an assistant, offer the cabinet to the wall, ensuring the top is perfectly horizontal. Check with a spirit level.
3. With the door fully open, transfer the four fixing hole positions to the wall.
4. Drill and plug the holes with the four rawlplugs provided.
5. Carefully align the holes with the plug positions and fix with $\text{Ø}6 \times 70$ screws provided.
6. Before fully tightening the screws, check that the front of the mirror is perfectly vertical.
7. Tighten the four screws