

Installation Guide

Fixed panel Bath screen

Important

Please familiarise yourself with the fitting instructions before commencing fitting.

- 1 Check that you have the tools required
- 2 Check that the installation site is compatible with size of screen supplied
- 3 Check all the bath screen components
- 4 Check that the installation kit is complete


DO NOT attempt to install the product unless you can tick **ALL 4** boxes as satisfactory.

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or "stud - partition" walls will require alternative fixings. Please consult a hardware supplier for the correct type.


It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

USE SAFETY EYEWEAR WHEN DRILLING

Any parts missing or damaged must be reported to your supplier within 5 days of purchase. Inspect fitting area before fitting. No claims will be accepted after product had been installed.

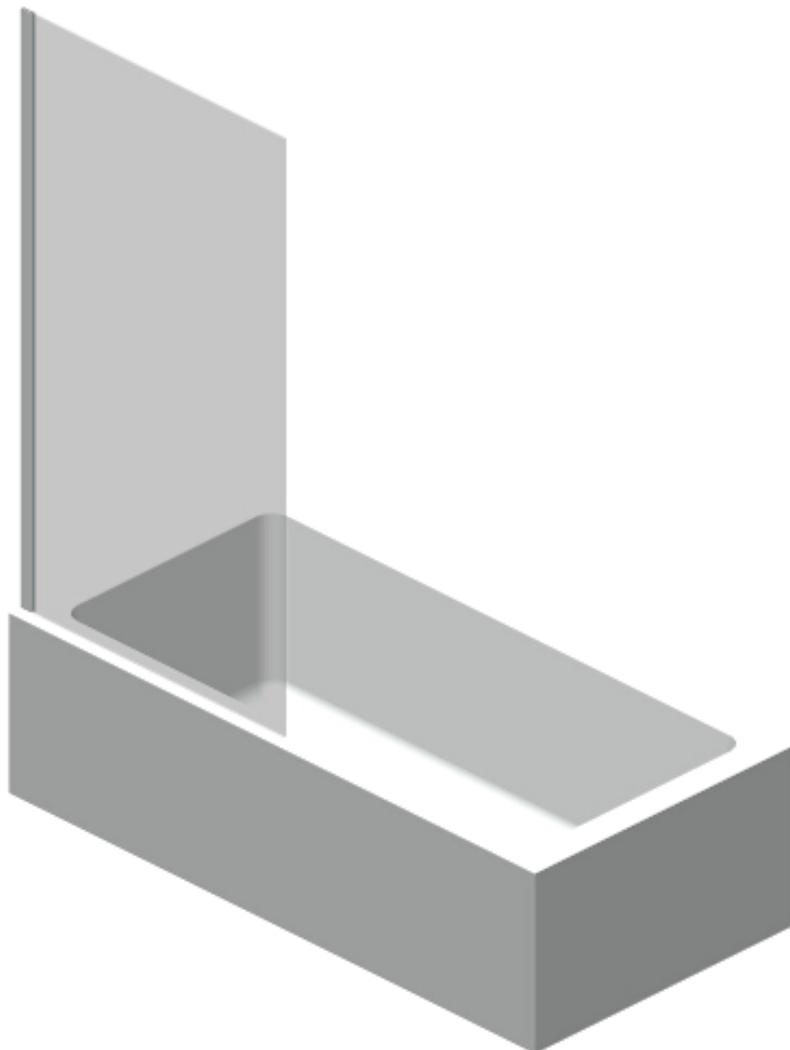


COMPONENTS AND BOX CONTENTS

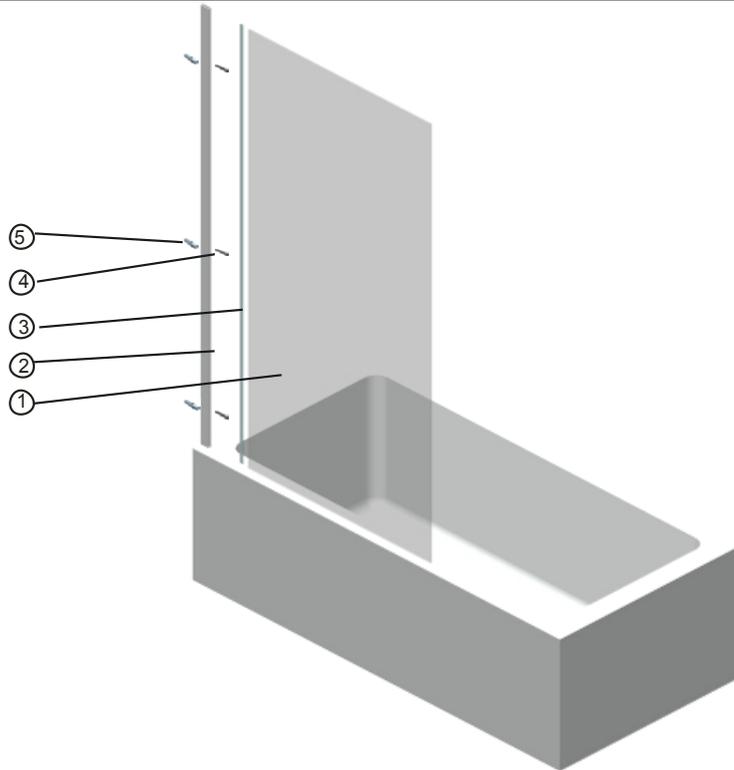

No.	Description	Qty	Part No.	No.	Description	Qty	Part No.
1	Fixed panel	1	A	4	Screw (3.9x30mm)	3	2SY51
2	wall profile	1	SP0MOBY019	5	Wall plug	3	2SP12
3	clear seal	1	SP0MOBY020				

FIXING KIT COMPONENTS, TOOLS REQUIRED, SITE CONDITIONS

Fixing Kit components
parts shown are not to scale

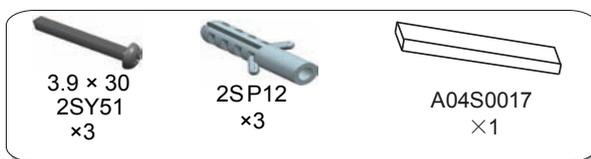

Tools required


- 6mm Masonry drill bit
- Power drill
- Quality silicone
- Pencil
- Tape measure
- #2 Phillips head screw driver
- Spirit level with horizontal and vertical level indicators

IMPORTANT - Installation Site

1. Ensure your bath is level before fitting. This screen is not designed to fit on baths with stepped fronts, roll top rims or integral soap dishes.
2. The tiling or other wall finishing should be effectively sealed at the bath edges.

INSTALLATION

1. Position the wall profile SP0MOBY019 so the fixed panel A sits on the inside edge of the bath. Fig 1

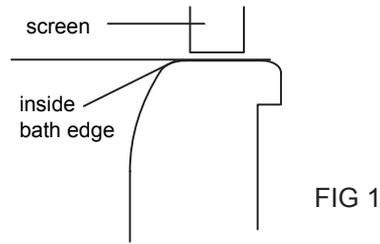

2. INSTALLATION

Plumb the wall profiles SP0MOBY019 using the vertical element of the spirit level. Mark 3 holes, drill with 6mm masonry bit and fit wall plugs 2SP12. Using the 3 Screw 2SY51, fix wall profile to wall. Fig 2.

3. Insert glass panel into the wall profile. Note: Max. adjustment of the glass panel in the wall profile is 15mm. Fig 3

4. Insert wedge gasket to the inside of the wall profile using A04S0017. Start at the bottom, pushing the seal in fully. Fig 4

FIG 2

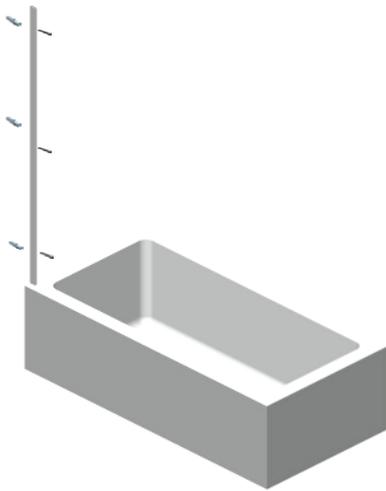


FIG 3


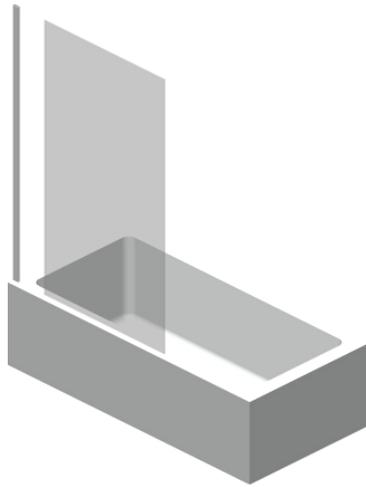


FIG 4



5. Seal the joint between the wall profile and wall on the outside and 50mm vertically between the wall profile and the glass.

Seal the bottom of the glass along the bath on both the inside and outside.

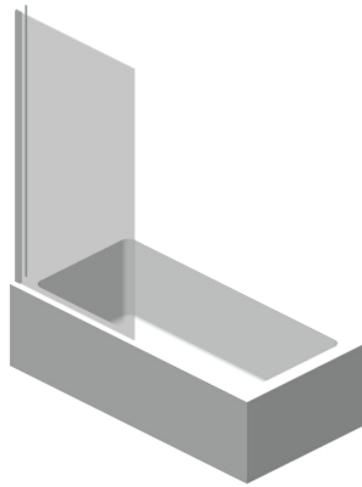