









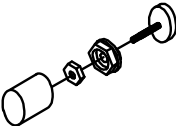


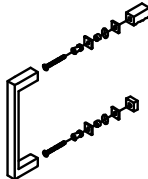


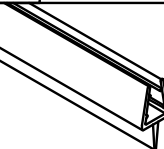
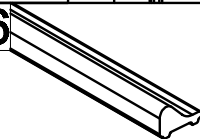

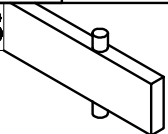
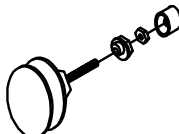


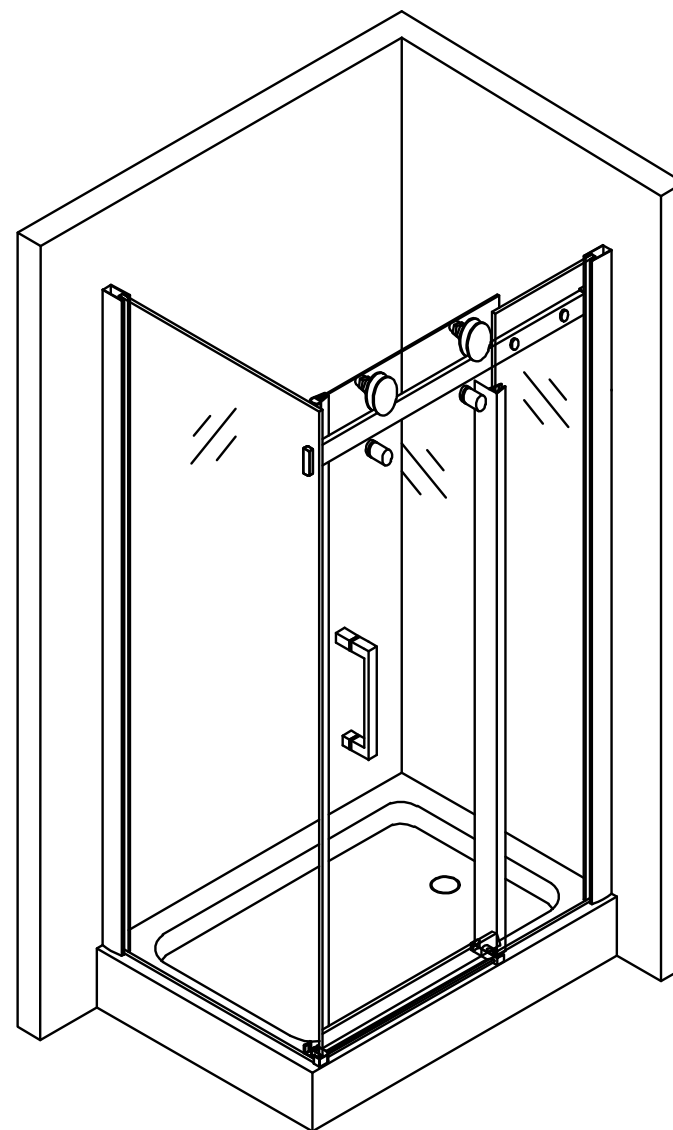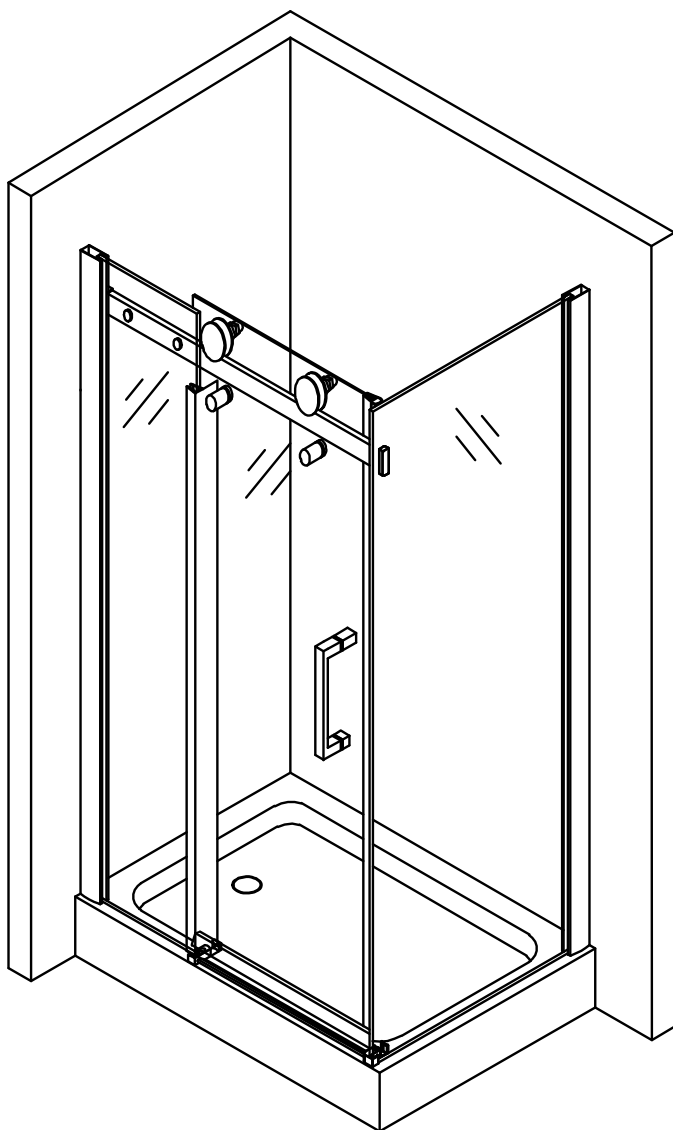










Nova sliding door enclosure

INSTALLATION MANUAL




<div>1</div> <div></div> <div>D6X2510Pcs</div>	<div>2</div> <div></div> <div>B1-D112Pcs</div>	<div>3</div> <div><div>ST4X30</div></div> <div>ST4X3010Pcs</div>	<div>4</div> <div></div> <div>B1-D022Pcs</div>	<div>5</div> <div></div> <div>B1-D032Pcs</div>	<div>6</div> <div></div> <div>ST4X126Pcs</div>
<div>7</div> <div></div> <div>WX-B012Pcs</div>	<div>8</div> <div></div> <div>B1-D041Pc</div>	<div>9</div> <div></div> <div>B1-D052Pcs</div>	<div>10</div> <div></div> <div>B1-H012Pcs</div>	<div>11</div> <div></div> <div>B1-D061Pc</div>	<div>12</div> <div></div> <div>B1-D051Pc</div>
<div>13</div> <div></div> <div>B1-H071Pc</div>	<div>14</div> <div></div> <div>B1-D062Pcs</div>	<div>15</div> <div></div> <div>B1-H081Pc</div>	<div>16</div> <div></div> <div>B1-B061Pc</div>	<div>17</div> <div></div> <div>B1-D152Pcs</div>	<div>18</div> <div></div> <div><div><div>B1-F08B1-F09</div><div>B1-F10B1-F11</div></div><div>1Pc</div></div>
<div>19</div> <div></div> <div>B1-D072Pcs</div>	<div>20</div> <div></div> <div>M5X102Pcs</div>	<div>21</div> <div></div> <div>B1-D161Pc</div>	<div>22</div> <div></div> <div>B1-D161Pc</div>	<div><div>18</div><div><div><div>1000B1-F08</div><div>1200B1-F09</div><div>1400B1-F10</div><div>1600B1-F11</div></div></div></div>	
<div>Tools:</div>					



Tools:

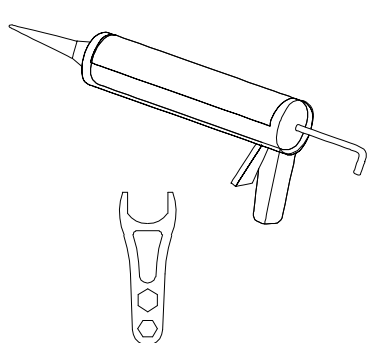


Ø6mm





Ø3.2mm





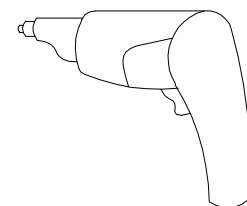


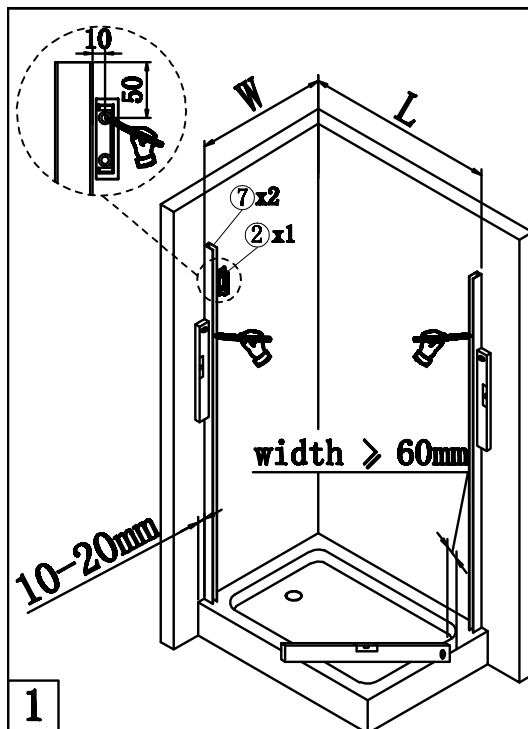

	L	W
700		660-680
800		760-780
900		860-880
1000	960-980	960-980
1200	1160-1180	
1400	1360-1380	
1600	1560-1580	

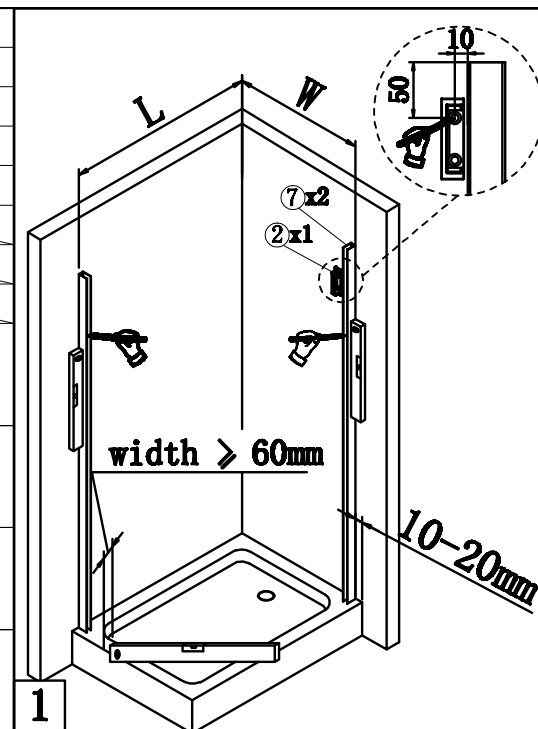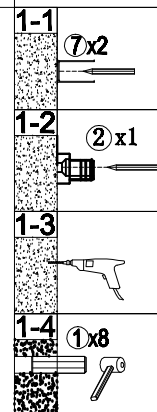

	L	W
700		660-680
800		760-780
900		860-880
1000	960-980	960-980
1200	1160-1180	
1400	1360-1380	
1600	1560-1580	

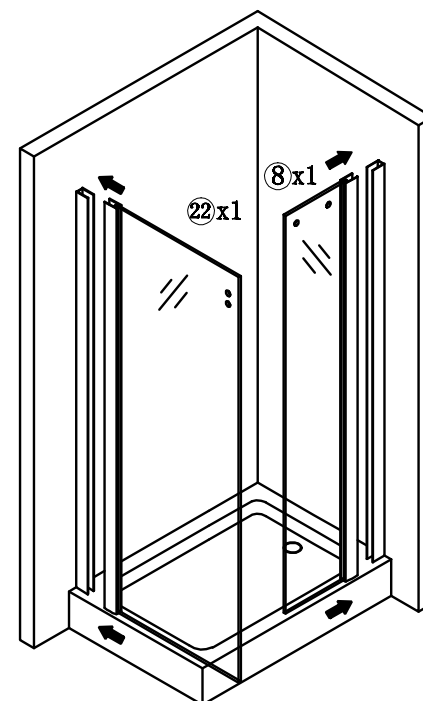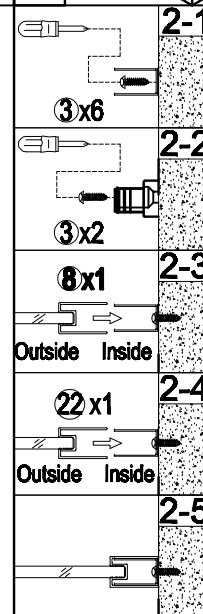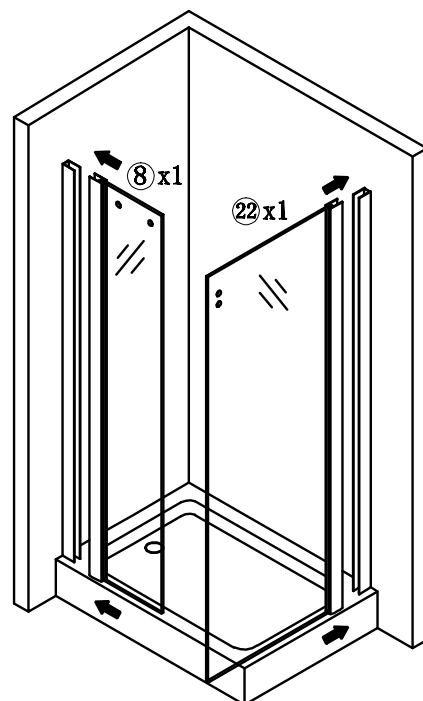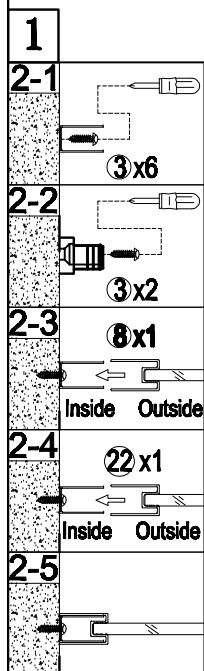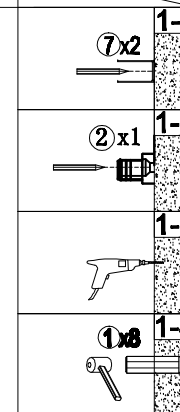

2

2

3

L	X	Y
1000	510	510
1200	610	610
1400	710	710
1600	810	810

a1

align the side of the door guide with the inside rim of the shower tray ledge

inside of tray

Fixed Glass Panel

Chrome Drip Strip

shower tray ledge

outside of tray

align the side of the door guide with the inside rim of the shower tray ledge

inside of tray

Fixed Glass Panel

Chrome Drip Strip

shower tray ledge

outside of tray

3

L	X	Y
1000	510	510
1200	610	610
1400	710	710
1600	810	810

a1

align the side of the door guide with the inside rim of the shower tray ledge

inside of tray

Fixed Glass Panel

Chrome Drip Strip

shower tray ledge

outside of tray

align the side of the door guide with the inside rim of the shower tray ledge

inside of tray

Fixed Glass Panel

Chrome Drip Strip

shower tray ledge

outside of tray

If the shower enclosure installed with a tray, please make holes in the tray with $\Phi 3\text{mm}$ drill and wall plugs are not required;

a2、b1

If the shower enclosure installed with a tray, please make holes in the tray with $\Phi 3\text{mm}$ drill and wall plugs are not required;



a2、b1


If not, please make holes in the floor with $\Phi 6\text{mm}$ drill and wall plugs are required;




a3、b2

If not, please make holes in the floor with $\Phi 6\text{mm}$ drill and wall plugs are required;

a3、b2

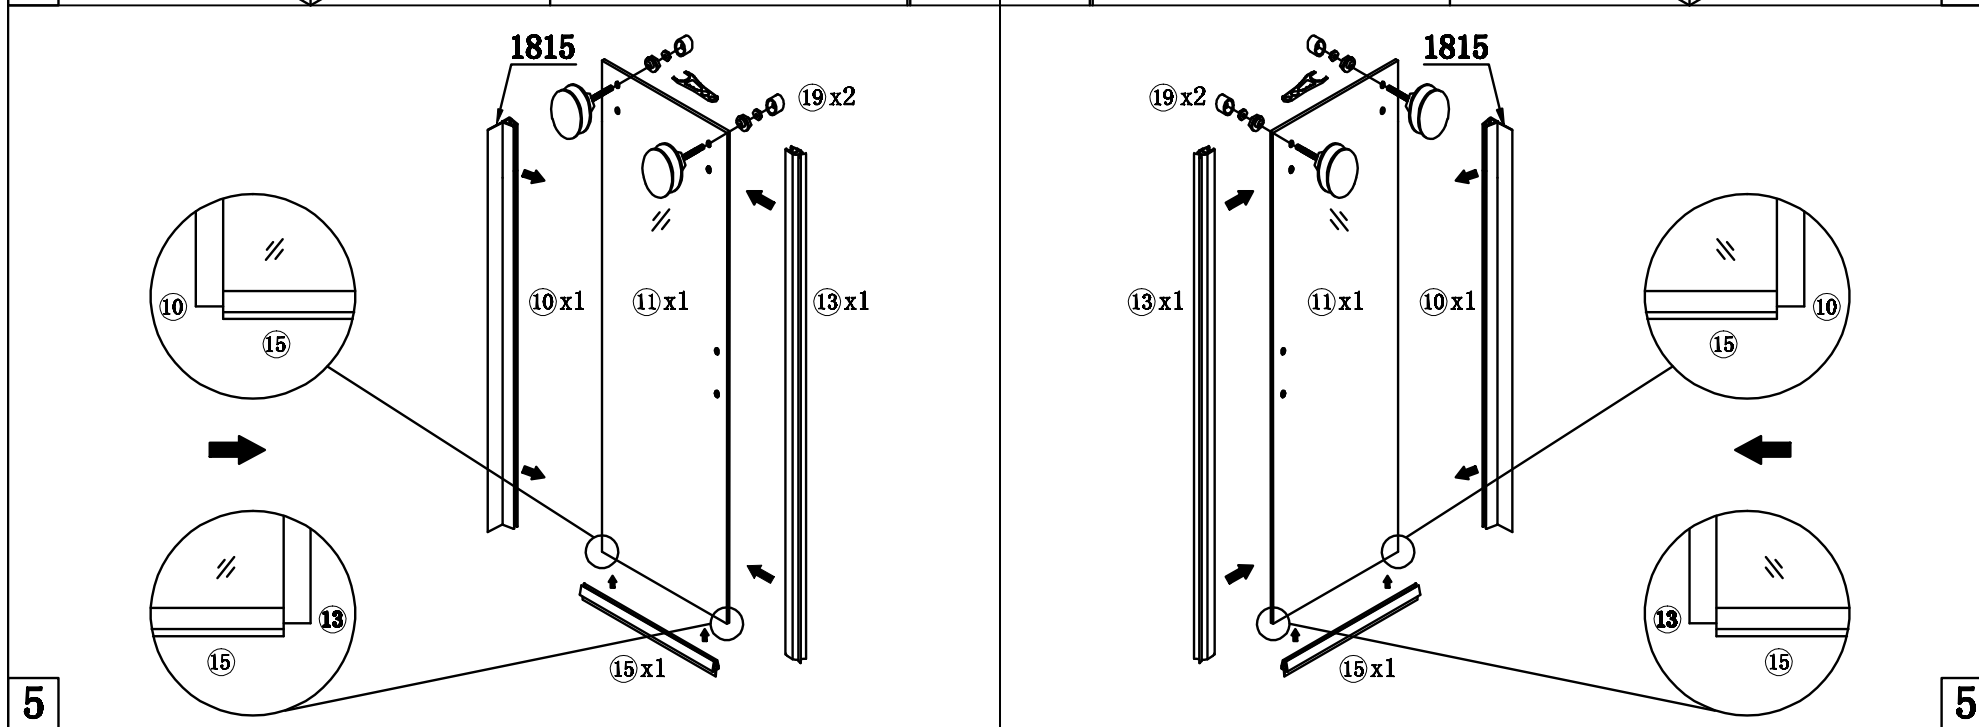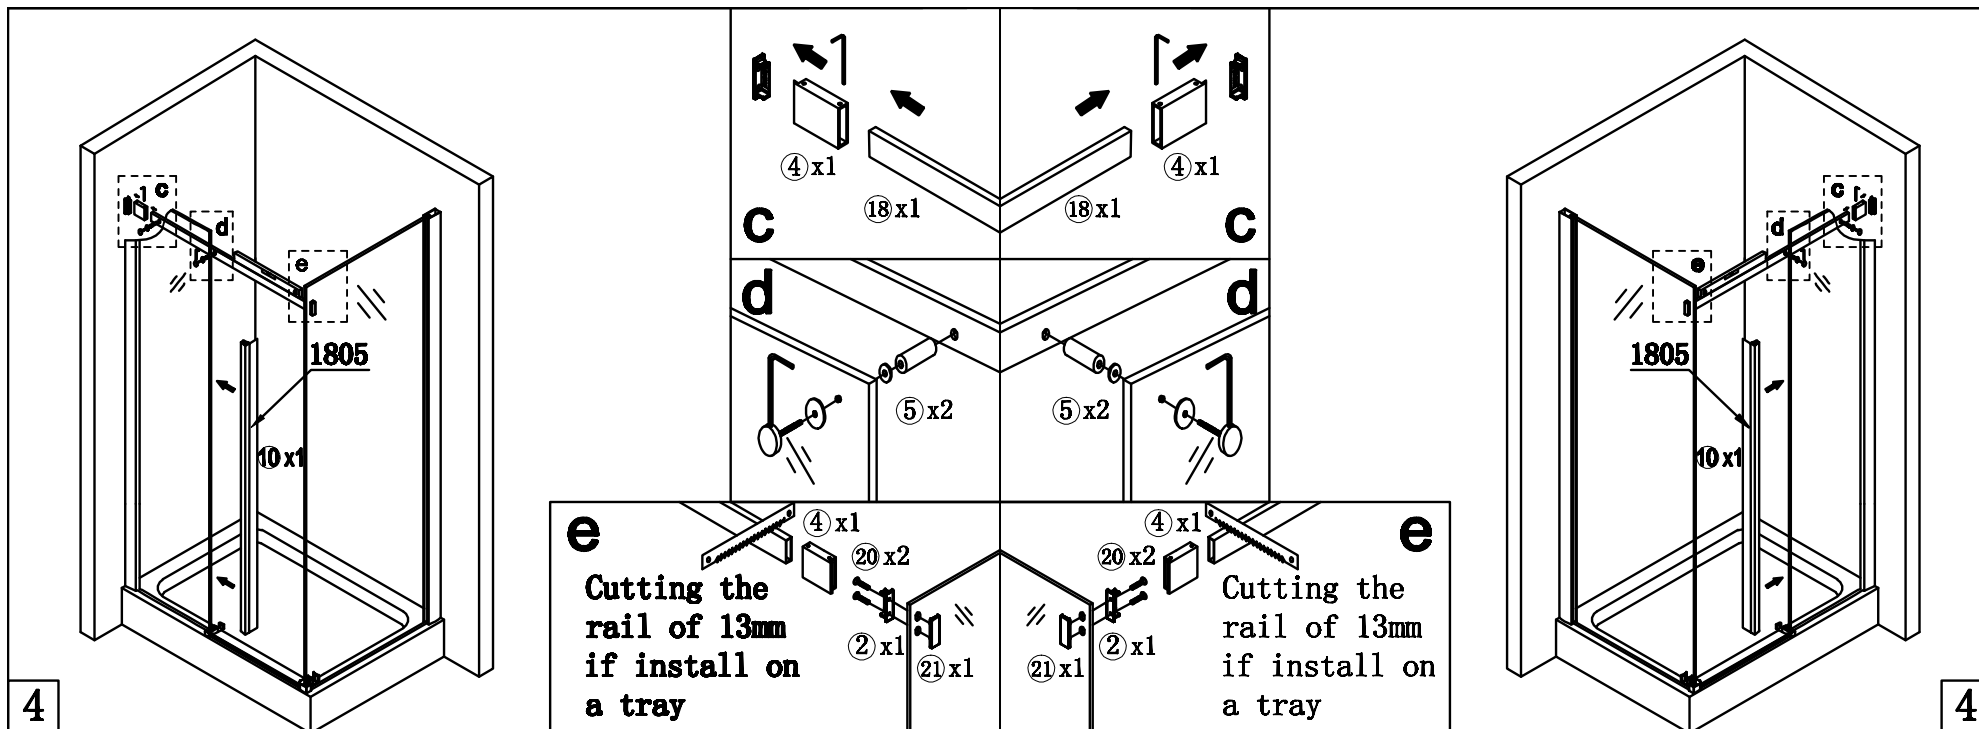

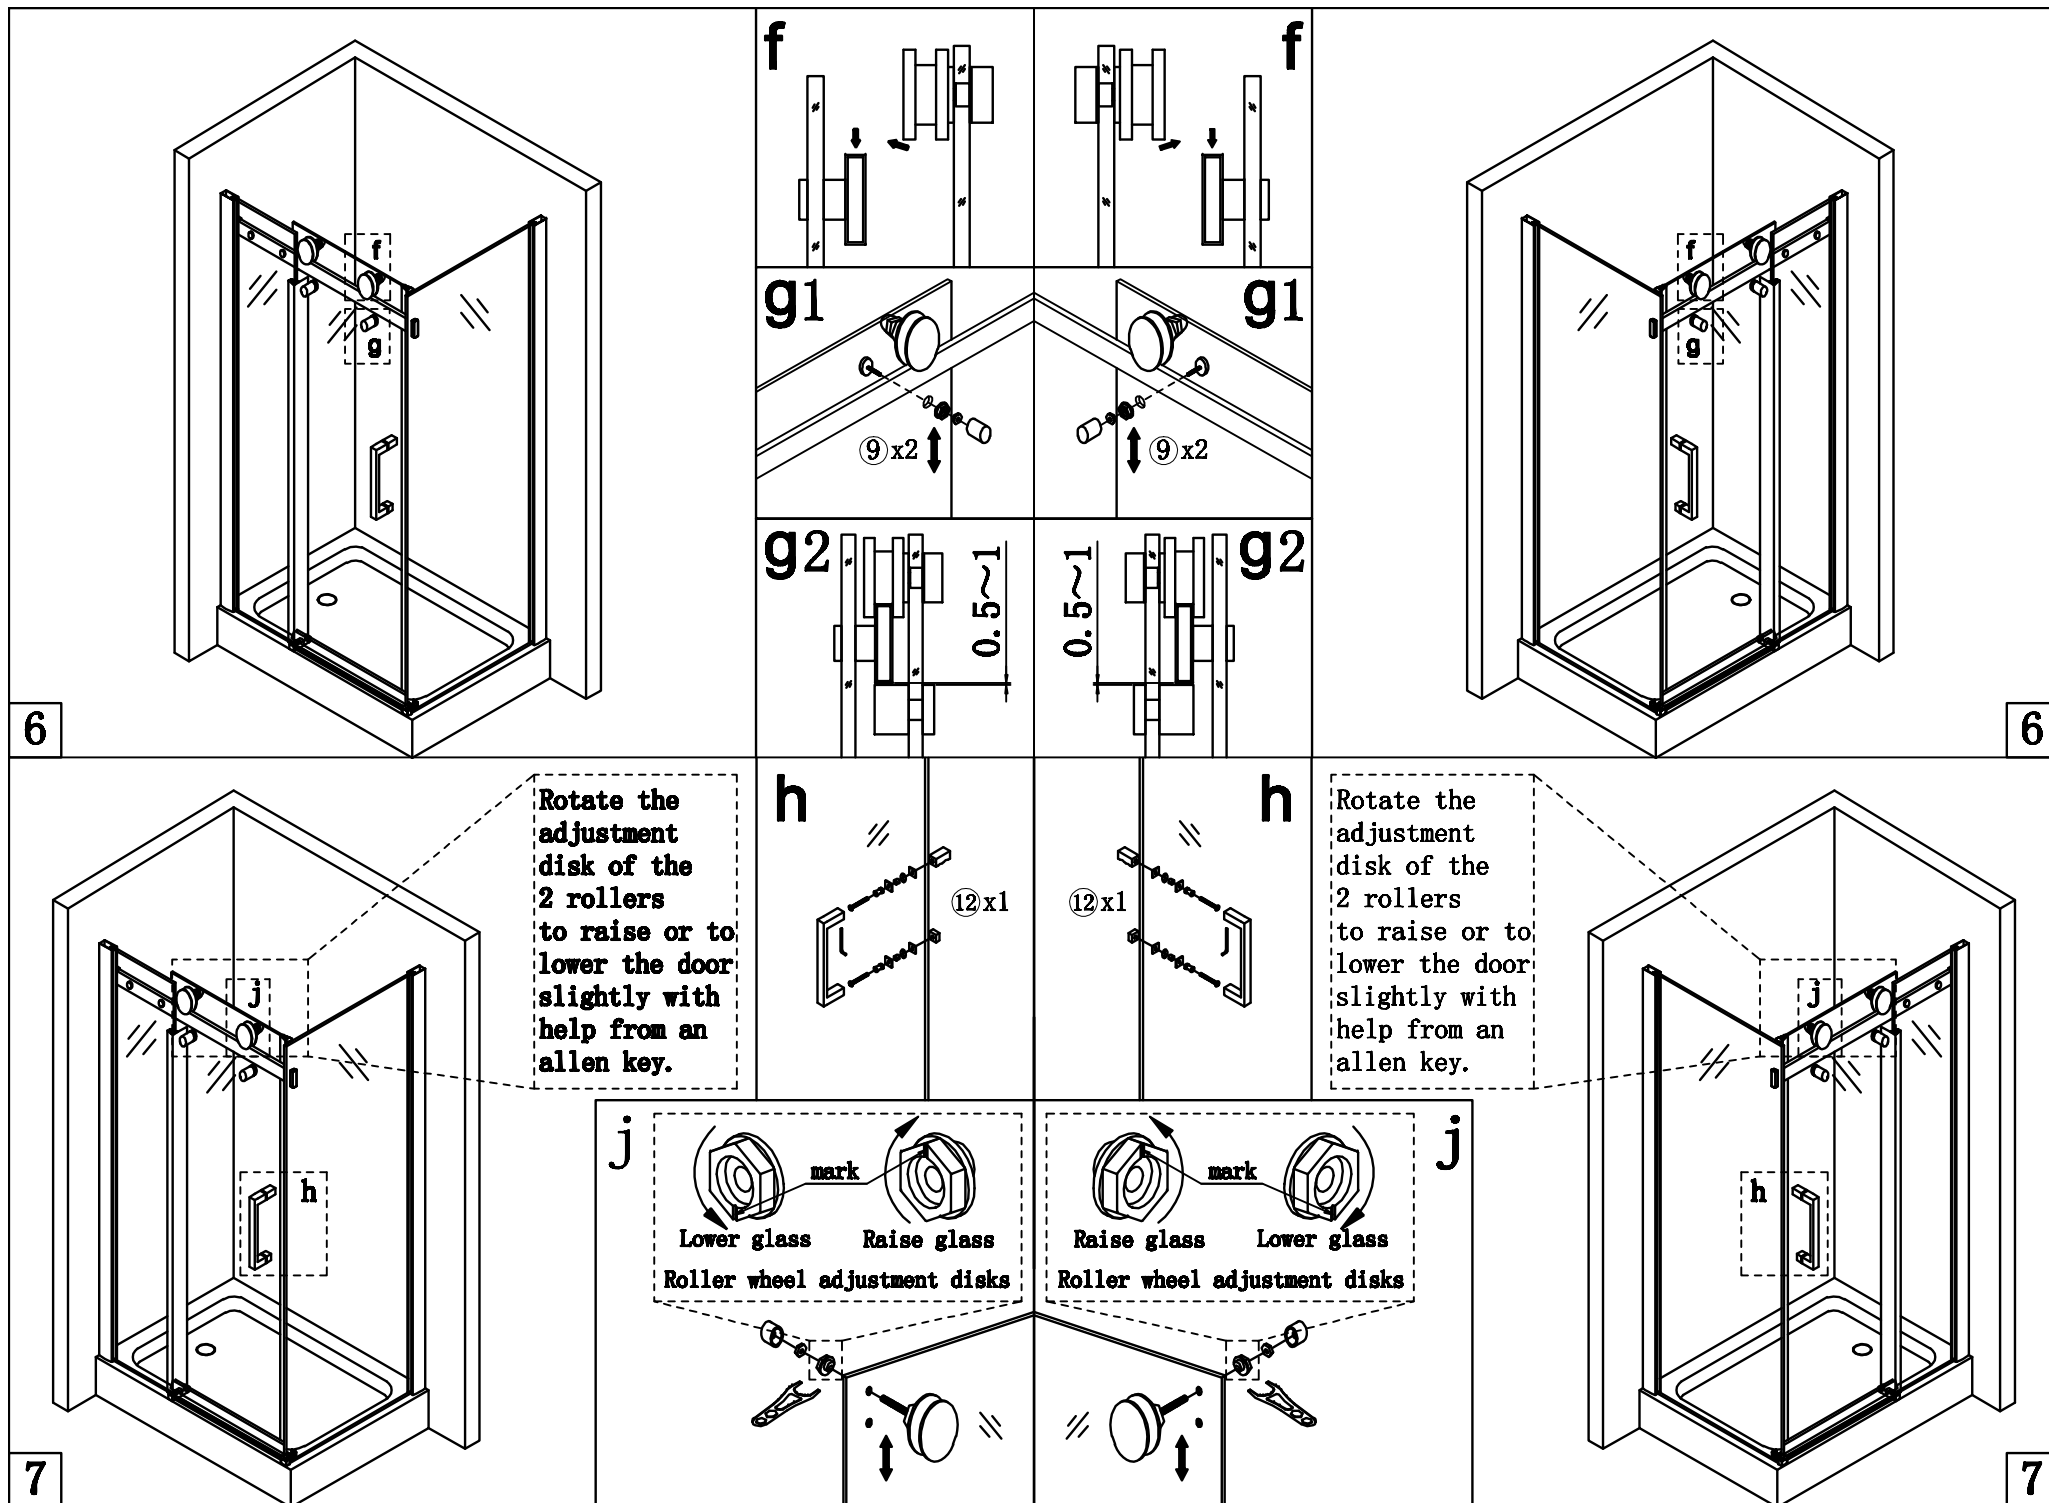


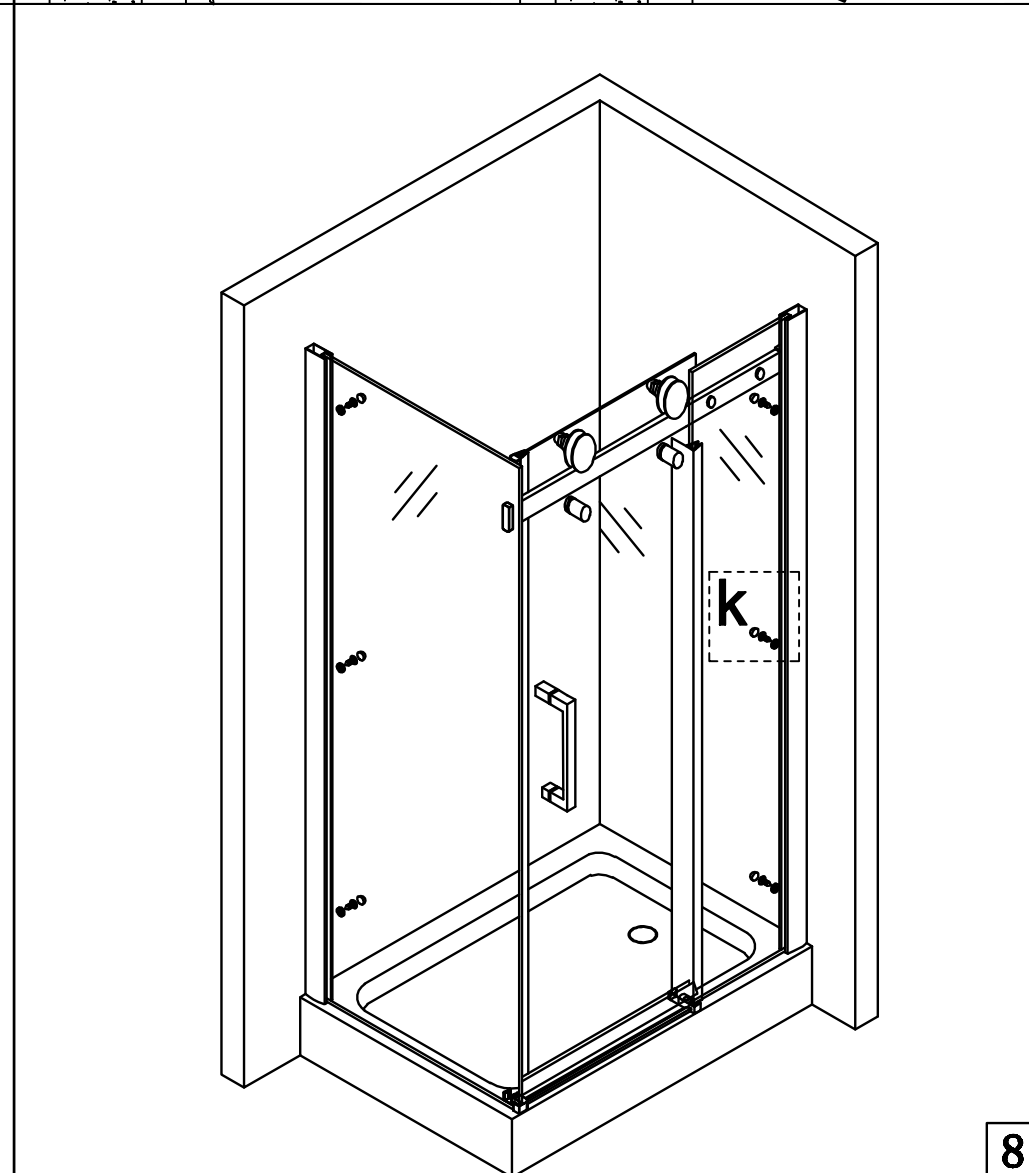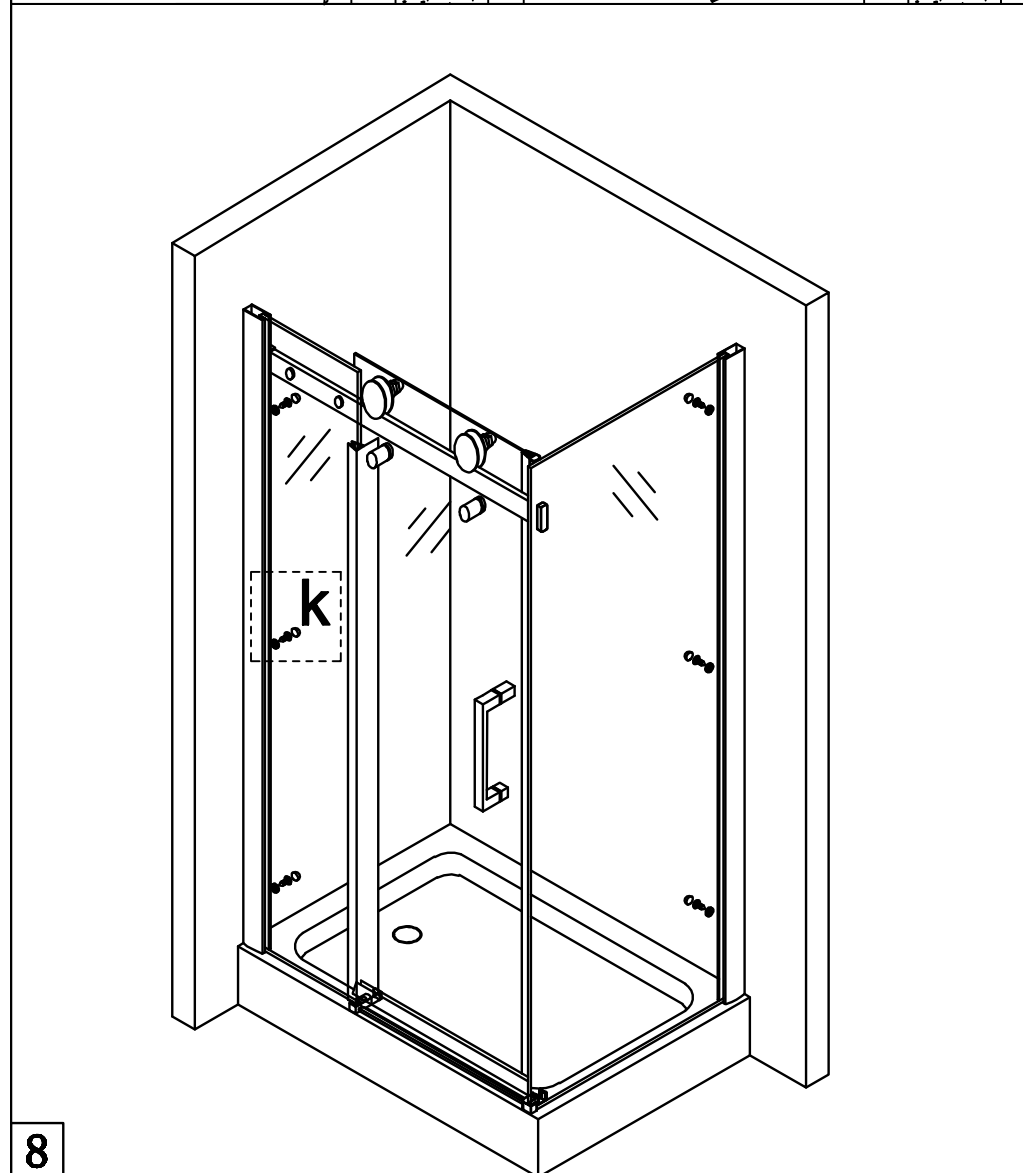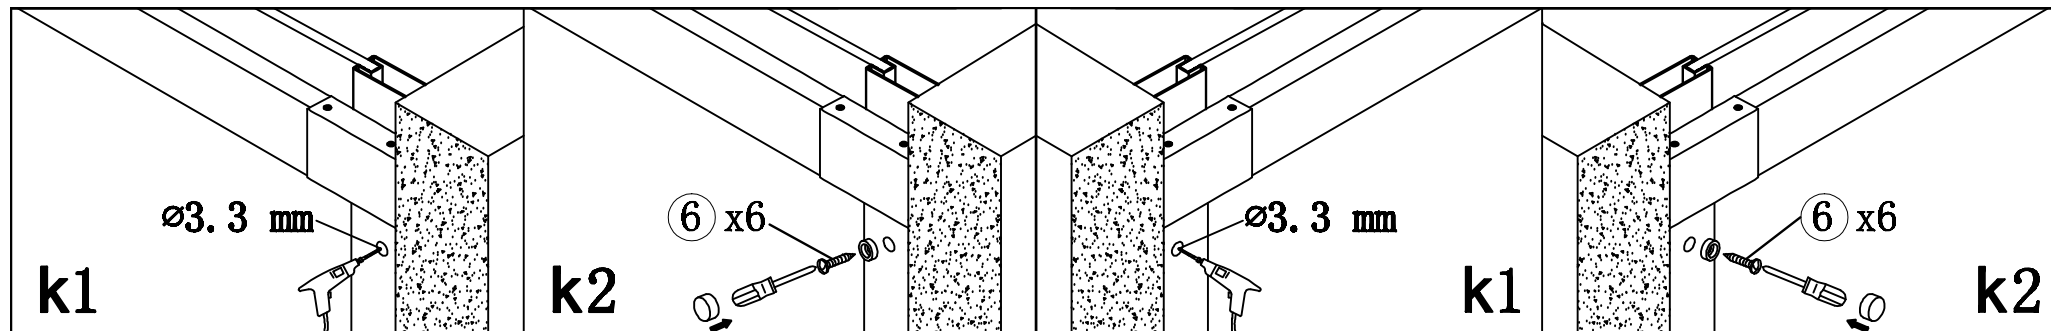



Care Instructions:

Do not use your shower enclosure within 24 hours of assembly . Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

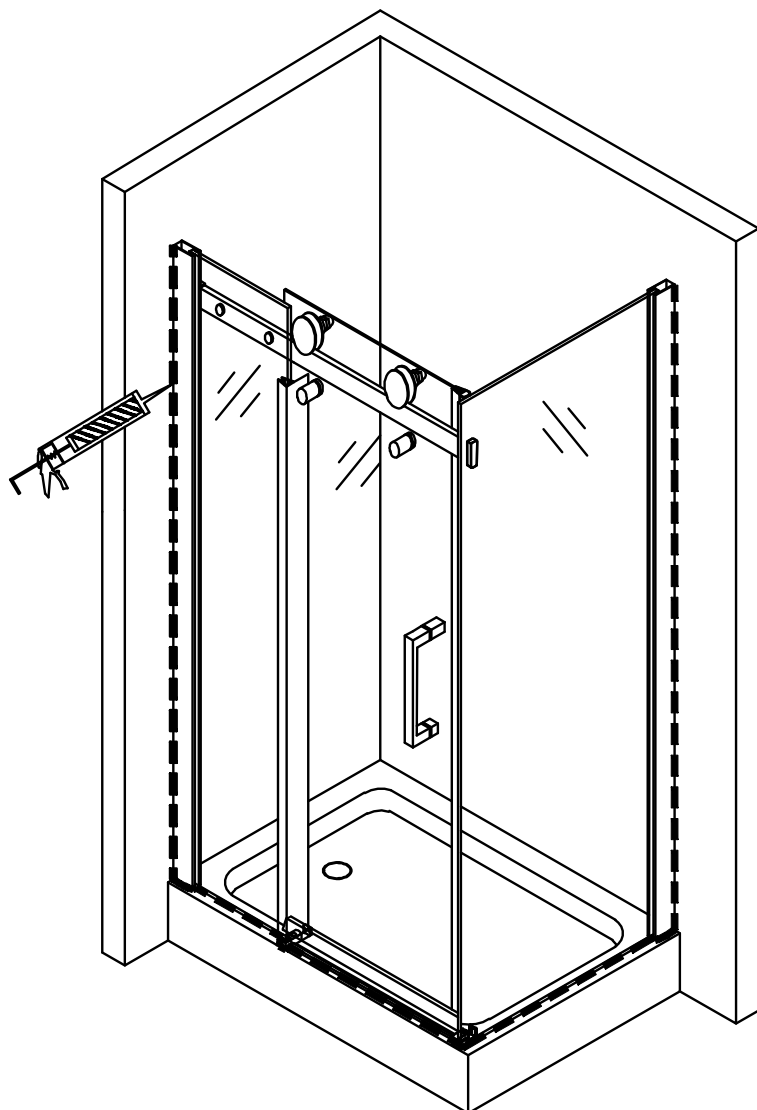

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly . Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

