


8 FITTING THE DRIP STRIP

STEP 1


CHECK THE LENGTH OF THE DRIP STRIP PROFILE. IT SHOULD MEASURE THE FOLLOWING:
700mm DOOR = 573mm 760mm DOOR = 633mm
800mm DOOR = 673mm 900mm DOOR = 773mm

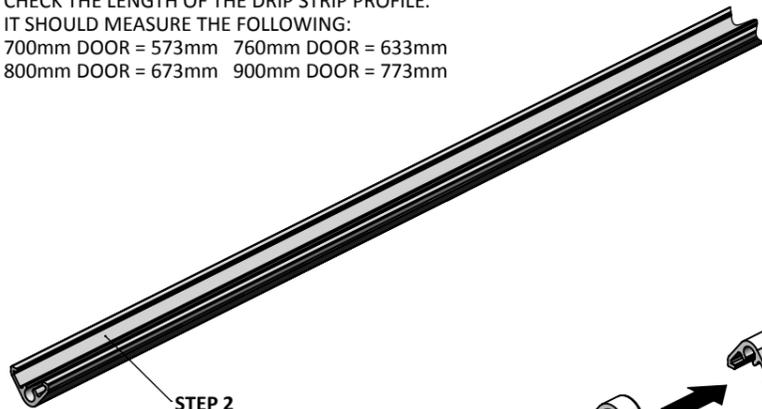

STEP 2
FILL THE UNDERSIDE OF THE DRIP STRIP PROFILE WITH SILICONE (ITEM 4)


STEP 3

FIT THE DRIP STRIP RETAINER CLIPS (ITEM 15) ONTO EACH END OF THE PROFILE.

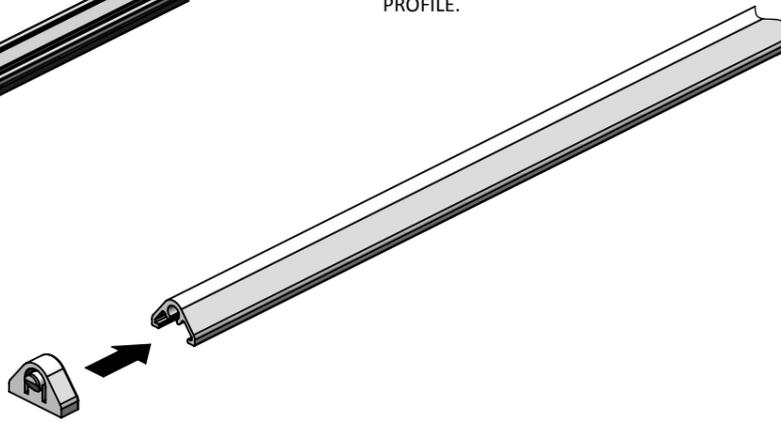


STEP 4

FIT THE DRIP STRIP AND CAPS INTO THE TWO BOTTOM HOLES IN THE VERTICAL PROFILES.

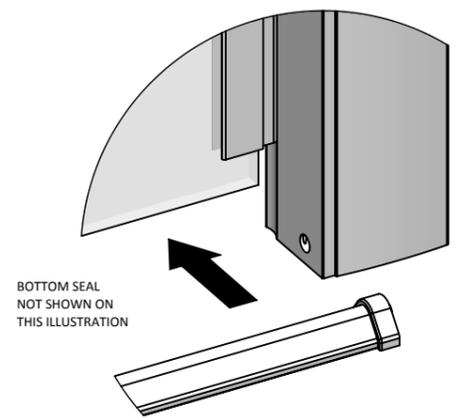

BOTTOM SEAL NOT SHOWN ON THIS ILLUSTRATION

9

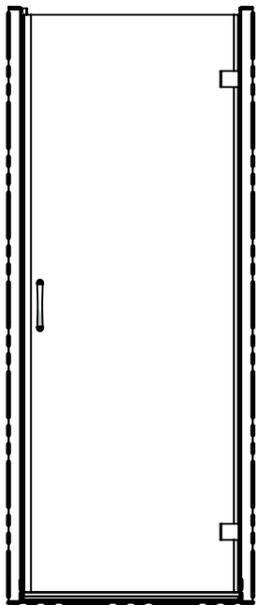


EXTERNALLY SILICONE SEAL THE WALL PROFILES WHERE THEY MEET THE WALL AND ALONG THE BOTTOM WHERE THEY MEET THE TRAY. ALSO FULLY SEAL THE DRIP STRIP AND RETAINER CLIPS (ITEM 4 & 15) ALL IN A CONTINUOUS BEAD.

SILICONE PLASTIC MOULDING AND 150mm HIGH AS SHOWN IN DETAILED VIEW BELOW.

DO NOT SILICONE INSIDE THE ENCLOSURE.

ALLOW THE SILICONE AT LEAST 24 HOURS TO FULLY CURE.

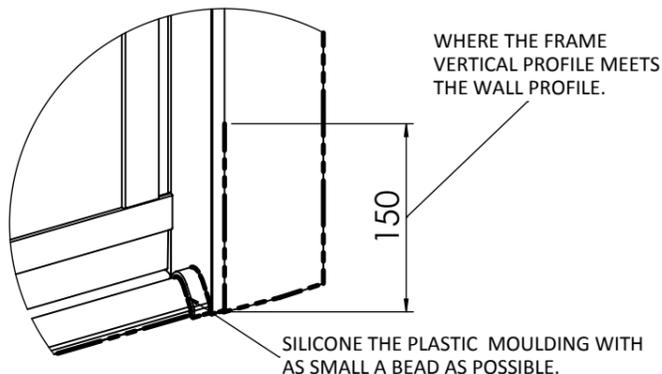

WHERE THE FRAME VERTICAL PROFILE MEETS THE WALL PROFILE.

SILICONE THE PLASTIC MOULDING WITH AS SMALL A BEAD AS POSSIBLE.

AFTERCARE - ENSURE YOU CLEAN YOUR PRODUCT USING A MILD DETERGENT DILUTED IN WATER, REMOVING ANY RESIDUE WITH A SOFT DAMP CLOTH.


MAINTENANCE - ENSURE MOVING PARTS ARE FREE FROM ANY DEBRIS OR SOAP BUILD UP.

SHOWER ENCLOSURE WITH WHEELS - THE WHEELS MUST ROTATE FREELY AND THE SPRING LOADED MECHANISM IN THE BOTTOM WHEELS MUST OPERATE WITHOUT INTERFERENCE.

TROUBLE SHOOTING GUIDE

1. IS THE TRAY LEVEL? (SEE STEP 1).
2. HAVE YOU COMPLETED STEP 2 CORRECTLY?
3. ARE THE WALL PROFILES PLUMB VERTICALLY? (SEE STEP 2).
4. DOES THE DOOR HAVE A 20mm EVEN/PARALLEL GAP BETWEEN THE BOTTOM OF THE GLASS AND TRAY? (SEE STEP 3).
5. IS THERE A 17mm GAP BETWEEN THE EDGE OF THE DOOR GLASS AND THE MAGNETIC POST FACE? (WITHOUT THE DOOR MAGNET FITTED (SEE STEP 4 & 4A)).
6. DOES THE DOOR SHUT PARALLEL TO THE MAGNETIC POST AND THE DOOR MAGNET ENGAGES/ATTRACTS ALONG IT'S FULL LENGTH?
7. DO THE DOOR MAGNETS ATTRACT TO EACH OTHER? (SEE STEP 6).
8. DO THE FINISHED TRAY MEASUREMENTS COMPLY WITH THE ADJUSTMENTS LISTED IN THE PRODUCT SPECIFICATION?
9. WHEN CONSIDERING THE LENGTH OF THE TOP TRACK ALSO CONSIDER THE VERTICAL PROFILES THAT ARE SECURED TO IT WHICH INCREASE IT LENGTH.
10. ONCE INSTALLED LEAVE THE ENCLOSURE DOORS IN THE CLOSED POSITION WHEN NOT IN USE AS MAGNET STRENGTH INCREASES OVER THE FIRST WEEK.

HINGE DOOR FITTING INSTRUCTION

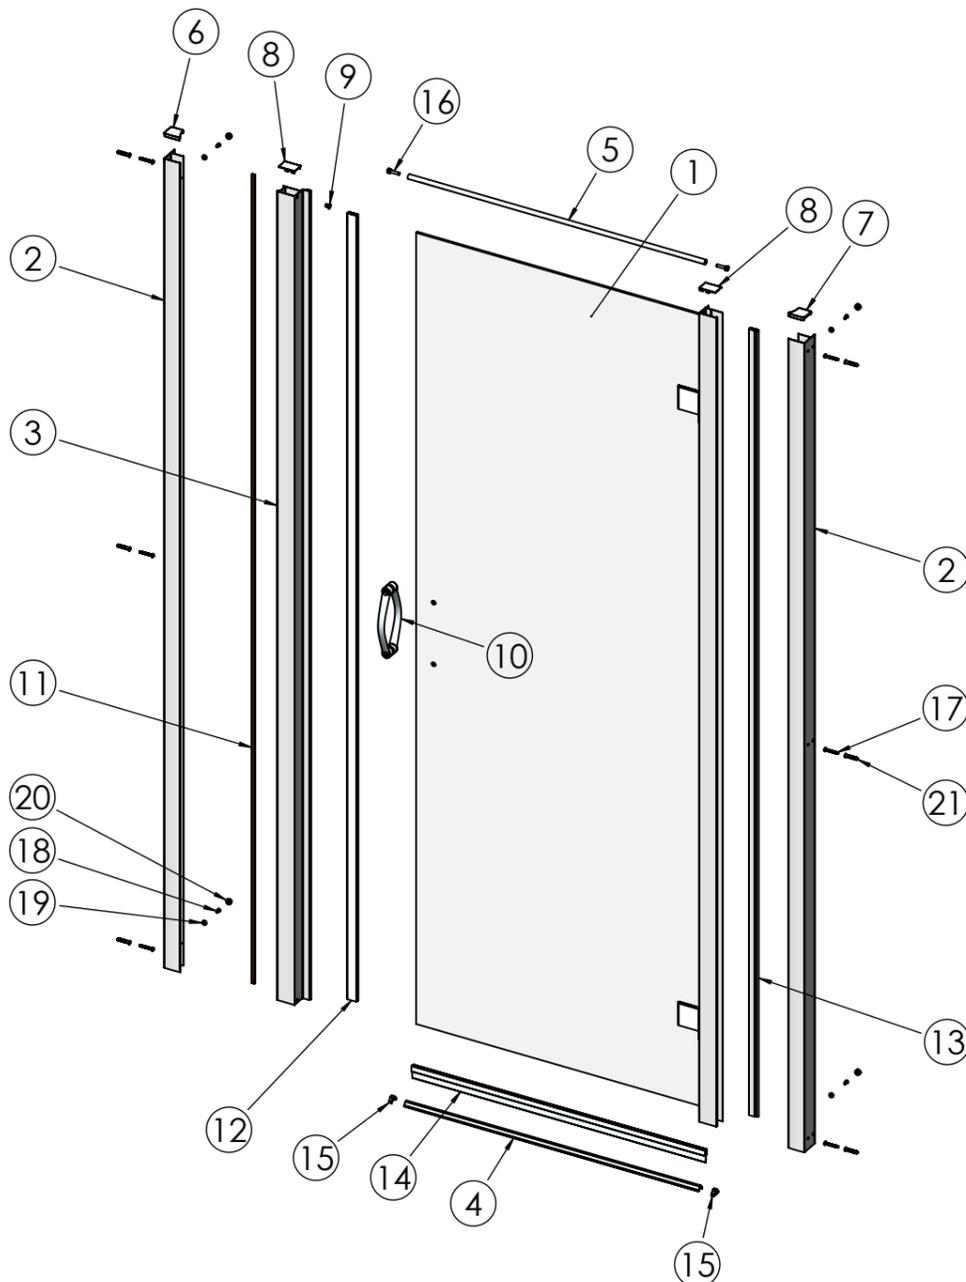

UNPACK THE BOX AND ENSURE ALL COMPONENTS ARE PRESENT.

NO REFUNDS OR REFITTING COST WILL BE GIVEN IF INCOMPLETE OR DAMAGED GOODS ARE FITTED.

THE TOUGHENED SAFETY GLASS SHOULD BE HANDLED WITH CARE AS IMPACTS WILL DAMAGE THE GLASS OR ENCLOSURE.

FIT THE SHOWER TRAY AS PER THE MANUFACTURERS INSTRUCTIONS.

NOTE: IF THE TRAY ISN'T TRUE AND LEVEL, IT MUST BE RECTIFIED BEFORE SILICONING AROUND THE TOP EDGE OF THE TRAY WHERE IT MEETS THE TILES. ALLOW THE SILICONE TO DRY BEFORE FITTING THE ENCLOSURE.


THE ENCLOSURE INSTALLATION IS RECOMMENDED AS A TWO MAN OPERATION.

TOOLS REQUIRED:

POWER DRILL - 3mm DRILL BIT - 6mm MASONRY DRILL BIT - CROSS HEAD SCREW DRIVER - TAPE MEASURE - PENCIL - SILICONE GUN WITH SANITARY GRADE SEALANT - SPIRIT LEVEL - RUBBER HEAD MALLETT.


ITEM	DESCRIPTION	Notes	QTY
1	HINGE DOOR SUB ASSEMBLY		1
2	WALL PROFILE		2
3	MAGNETIC POST		1
4	DRIP STRIP PROFILE		1
5	TOP SUPPORT BAR (STAINLESS)	USE WITH SIDE PANEL	1
6	WALL PROFILE TOP CAP LH		1
7	WALL PROFILE TOP CAP RH		1
8	RECTANGULAR CAP		2
9	BLANKING CAP		2
10	HANDLE SUB ASSEMBLY		1
11	CONCEALED MAGNET		1
12	DOOR MAGNET		1
13	DOOR VERTICAL 'P' SEAL (HINGE SIDE)		1
14	DOOR BOTTOM SEAL		1
15	DRIP STRIP RETAINER CLIPS		2
16	M5 x 20 SOC HD SCREW		2
17	3.9mm x 30mm PAN HD SCREW	FOR FIXING TO WALL	6
18	3.6mm x 9.4mm PAN HD SCREW		4
19	SCREW CUP		4
20	SCREW CUP COVER		4
21	RAWLPLUG		6

1

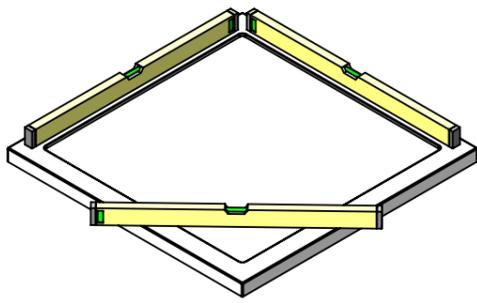


ENSURE THE TRAY IS LEVEL IN ALL PLANES.

2

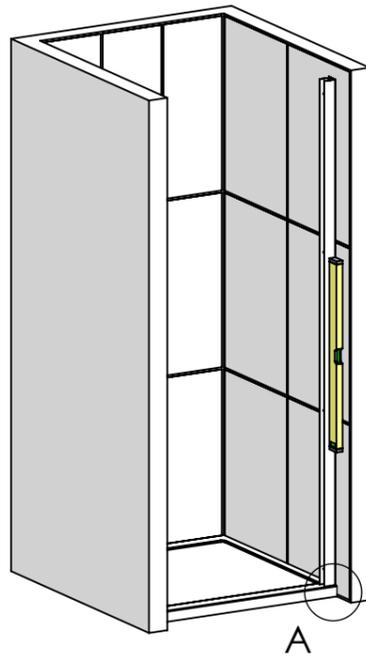

A

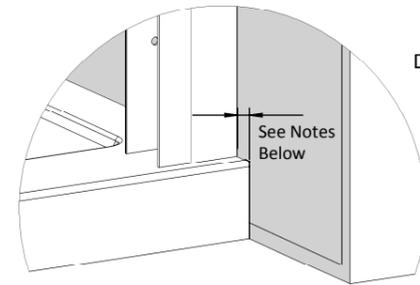

DETAIL 'A'

See Notes
Below

OFFER THE FRAME ONTO THE TRAY FIRST. ENSURE WALL PROFILES WILL REACH BOTH WALLS.


IN AN IDEAL INSTALLATION

FOR ALCOVE FIT, SET BOTH WALL PROFILES 8mm BACK FROM THE FRONT FACE OF THE TRAY. **IMPORTANT** - THEY MUST BE LEVEL WITH EACH OTHER FROM THE BOTTOM TO THE TOP. MAKING SURE THEY ARE TRUE WITH A SPIRIT LEVEL, MARK THROUGH THE FIXING HOLES WITH A PENCIL.

REMOVE PROFILES THEN DRILL AND PLUG THE WALL (ITEM 21). NOW FIX THE WALL PROFILES IN PLACE USING ITEM 17.

NOTE: IF FITTING THIS DOOR WITH A SIDE PANEL, FIT ONLY ONE WALL PROFILE AT THE FRONT OF THE TRAY AND REFER TO THE SIDE PANEL INSTRUCTIONS WITHIN THE SIDE PANEL BOX. ALSO IF USING A SIDE PANEL YOU WILL ALSO NEED TO FIT THE TOP SUPPORT BAR (ITEM 5), SEE STEP 4 - SIDE PANEL FIT.

3

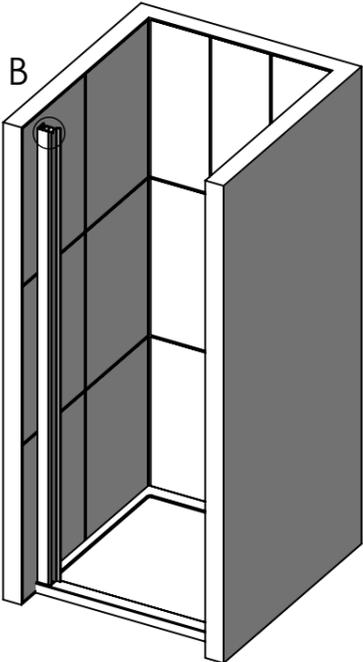

B

CHOOSE WHICH SIDE YOU WANT THE DOOR TO HINGE FROM AND THEN SLIDE THE MAGNETIC POST (ITEM 3) INTO THE OPPOSITE WALL CHANNEL. (DETAIL 'B')


FIT THE HANDLE (ITEM 10) TO THE GLASS. THIS WILL HELP YOU LIFT THE DOOR INTO POSITION.

NOW SLIDE THE DOOR SUB ASSEMBLY INTO THE OTHER WALL PROFILE WITH ONE PERSON SITUATED EITHER SIDE OF THE DOOR.

THE PERSON ON THE OUTSIDE WILL ADJUST THE DOOR AS NECESSARY. THE SECOND PERSON INSIDE THE ENCLOSURE WILL DRILL AND PIN THE PROFILES IN PLACE WHEN IT IS TRUE, SQUARE AND SET TO THE CORRECT DIMENSIONS LISTED NEXT. (SEE STEP 5 FOR DRILLING AND PINNING).

IT IS VERY IMPORTANT TO HAVE THE BOTTOM OF THE GLASS PARALLEL TO THE TRAY TOP FACE. IT MUST HAVE A 20mm EVEN GAP ALL THE WAY ALONG.

MAKING A TEMPORARY SPACER BLOCK FOR UNDER THE GLASS WILL ASSIST FITTING.

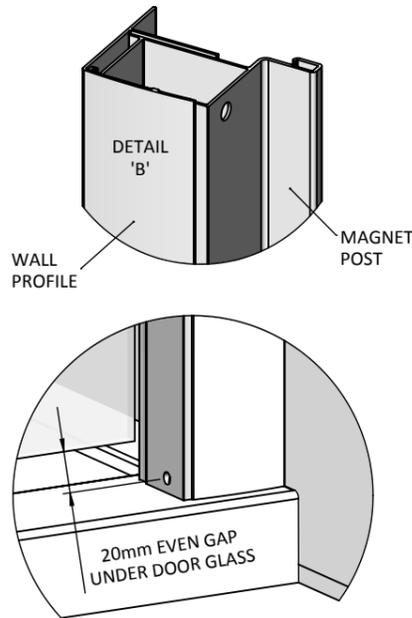


WALL PROFILE

DETAIL 'B'

MAGNET POST

20mm EVEN GAP UNDER DOOR GLASS

4 ALCOVE FIT

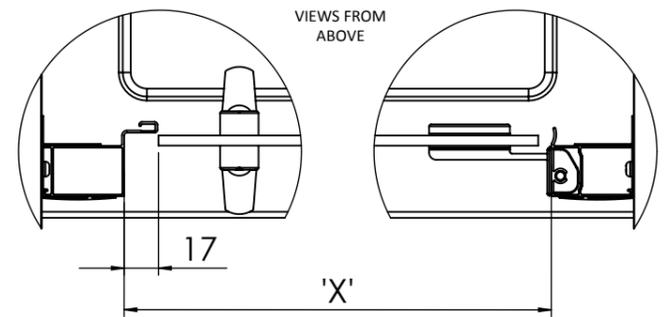


THE DOOR GLASS EDGE IS TO BE SET 17mm (SEE ABOVE) FROM THE MAGNETIC POST FACE (ITEM 3).

THERE SHOULD BE AN EQUAL AMOUNT OF PROFILE (ITEMS 1 AND 3) LOCATED IN EACH WALL PROFILE (ITEM 2). ADJUST TO CENTRALISE.

'X' IS THE IMPORTANT MEASUREMENT REQUIRED BETWEEN THE TWO VERTICAL PROFILE FACES. THE SIZES ARE TO BE SET AS FOLLOWS:
700 DOOR = 578.5mm, 760 DOOR = 638.5mm,
800 DOOR = 678.5mm, 900 DOOR = 778.5mm

THE PROFILES AND THE GLASS SHOULD BE SET TRUE & LEVEL WITH A SPIRIT LEVEL. THE 'X' MEASUREMENT SHOULD BE THE SAME AT THE TOP AND THE BOTTOM.

4 SIDE PANEL FIT

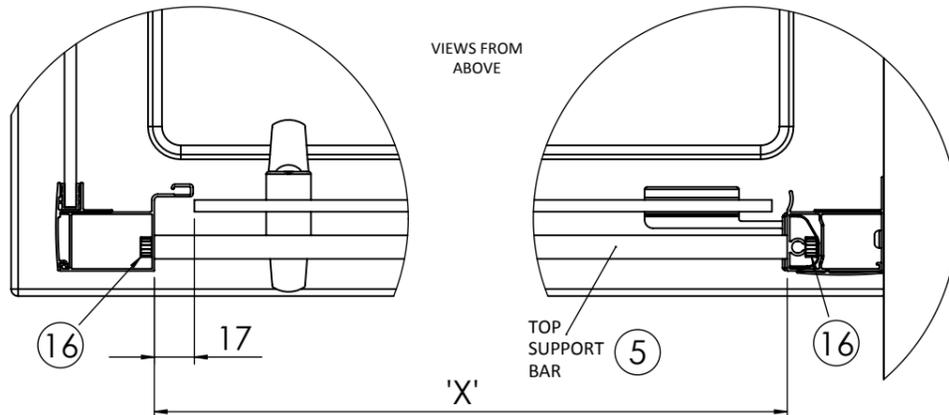

THE DOOR GLASS EDGE IS TO BE SET 17mm (SEE ABOVE) FROM THE MAGNETIC POST FACE (ITEM 3)

THERE SHOULD BE AN EQUAL AMOUNT OF PROFILE (ITEMS 1 AND 3) LOCATED IN THE WALL PROFILE (ITEM 2) AND THE SIDE PANEL CORNER POST. ADJUST TO CENTRALISE.


'X' IS THE IMPORTANT MEASUREMENT REQUIRED BETWEEN THE TWO VERTICAL PROFILE FACES. THE SIZES ARE TO BE SET AS FOLLOWS:

700 DOOR = 578.5mm, 760 DOOR = 638.5mm, 800 DOOR = 678.5mm, 900 DOOR = 778.5mm

IF FITTING A SIDE PANEL, FIT THE TOP SUPPORT BAR (ITEM 5), THIS WILL ALSO SET THE GAP.

THE PROFILES AND THE GLASS SHOULD BE SET TRUE & LEVEL WITH A SPIRIT LEVEL. THE 'X' MEASUREMENT SHOULD BE THE SAME AT THE TOP AND THE BOTTOM.

5

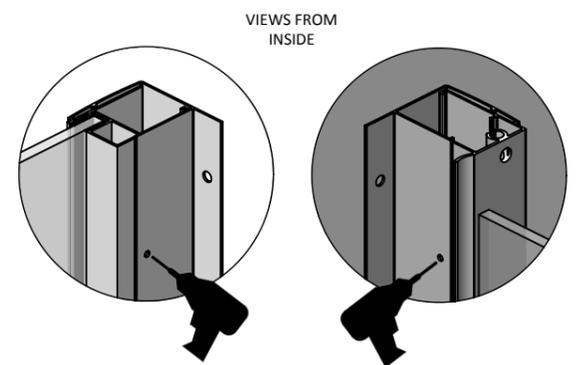

WHEN YOU ARE SATISFIED THE DOOR IS TRUE, SQUARE AND DIMENSIONALLY CORRECT IT CAN BE FIXED IN PLACE.

DRILL THROUGH THE PRE-DRILLED HOLES IN THE REAR OF THE WALL PROFILES (SHOWN ABOVE). USE A 3mm DRILL AND MAKE SURE YOU ONLY DRILL THROUGH ONE WALL THICKNESS.


FIX THE PROFILES WITH ITEMS 18, 19 & 20.

6

SEAL STEP 1


ON AN ALCOVE FIT, PUSH BLANKING PLUGS (ITEM 9) INTO THE TOP TWO HOLES ON THE VERTICAL PROFILES.

SEAL STEP 2

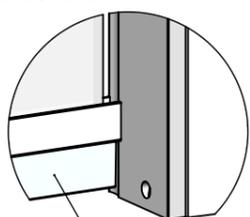

FIT THE DOOR BOTTOM SEAL (ITEM 14). IT SHOULD BUTT UP TO THE VERTICAL PROFILE WITH THE HINGES ON. CUT TO LENGTH FIRST BEFORE FITTING. THE SIZE IS AS FOLLOWS;
700 DOOR = 571mm, 760 DOOR = 631mm
800 DOOR = 671mm, 900 DOOR = 771mm

ITEM 11

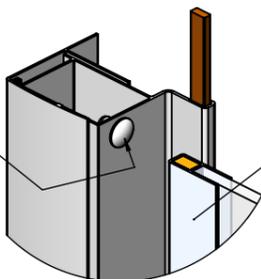

SLIDE THE CONCEALED MAGNET (ITEM 11) INTO THE PROFILE. CHECK POLARITY ATTRACTS DOOR BEFORE INSERTING. FIT DOOR MAGNET ITEM 12 TO DOOR GLASS.


IT IS TO BE LEVEL WITH THE TOP OF THE DOOR. AND CUT TO LENGTH PRIOR TO FITTING.

ON AN 1850mm ENCLOSURE CUT TO 1798mm LONG.
ON A 1900mm ENCLOSURE CUT TO 1848mm LONG.

SEAL STEP 3


FIT 'P' SHAPED VERTICAL SEAL (ITEM 13). IT SHOULD SIT FLUSH ON THE TOP OF THE DOOR BOTTOM SEAL. THE 'P' PART OF THE SEAL IS TO BE TOWARDS THE INSIDE OF THE ENCLOSURE. (SEE BELOW) CUT TO LENGTH FIRST BEFORE FITTING.

THE SIZE IS AS FOLLOWS;
1850 mm ENCLOSURE = CUT TO 1798mm LONG
1900 mm ENCLOSURE = CUT TO 1848mm LONG

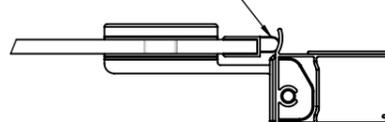

7

NOW YOU HAVE FITTED THE DOOR MAGNET (ITEM 12), SEALS (ITEMS 13 & 14) AND CHECKED THE OPERATION OF THE DOOR. MAKE SURE THE DOOR SHUTS PARALLEL TO THE MAGNETIC POST ITEM 3 (TOP TO BOTTOM). IF IT DOESN'T, SLACKEN THE WALL PROFILE FIXING SCREWS AND SLIGHTLY ADJUST THE WALL PROFILES UNTIL IT DOES. **IMPORTANT:** THE DOOR MAGNET SHOULD ENGAGE ON ITS FULL LENGTH. RETIGHTEN ALL SCREWS AFTER ANY ADJUSTING. ALSO CHECK THE 'P' SEAL SEALS ON THE VERTICAL PROFILE WHEN CLOSED.

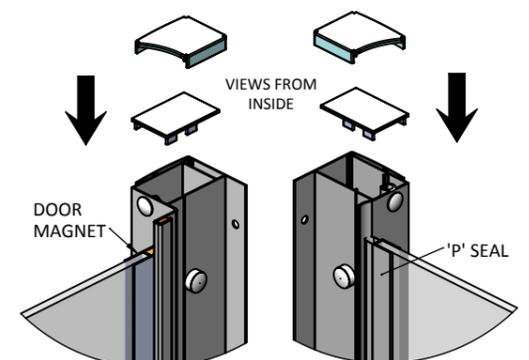

DOOR MAGNET

'P' SEAL