

Thank you for buying 'revolve 1400 arena cabinet'

Assembly instructions.

This cabinet is supplied with screws and wall plugs suitable for a stone or brick wall. For other wall types (e.g. hollow plasterboard) alternative fixings will be required. If in doubt consult a qualified person.

Ensure the wall surface is of suitable strength and construction before hanging the cabinet.


Warnings:

Fit in accordance with manufacturers instructions. Do not strike the glass with hard or pointed items. Wear suitable eye protection when drilling. When using power tools near water the use of a residual current device is advised for added protection against electric shock. Beware of hidden pipes or power cables. Take care when drilling on glazed tile surfaces in case drill slips.

Tools required:



Cross head screwdriver
Power drill
Spirit level
Pencil

Fixings / brackets (as marked):

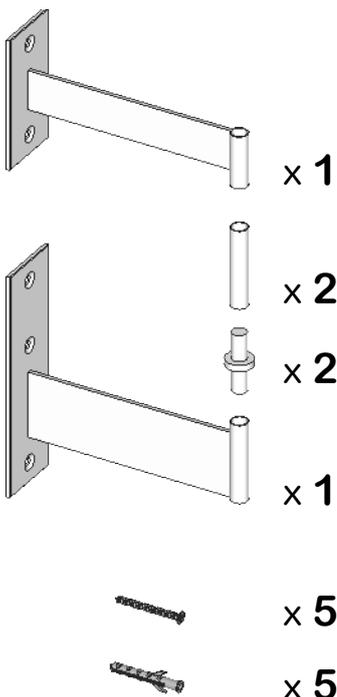

- clean with a damp cloth or chamois leather using a mild solution of washing up liquid. Do not use washing powders or any other substance containing abrasives since these can scratch the surface.
- do not overtighten screws during assembly.
- beware ! - some liquids may stain the laquered finishes

.wireworks
london

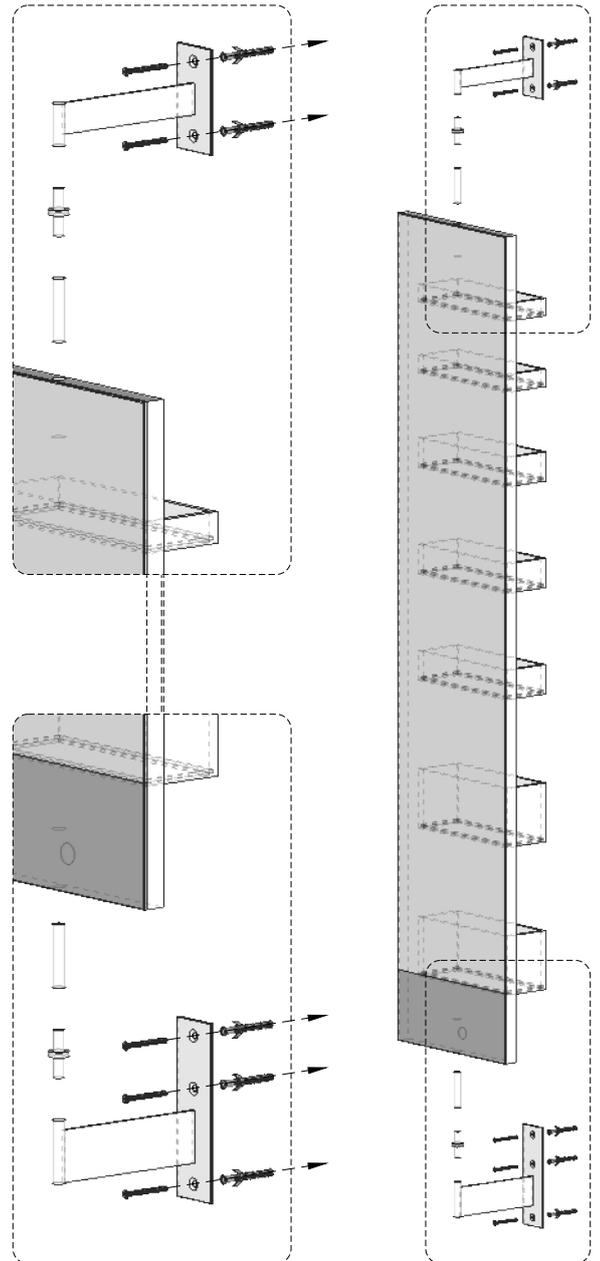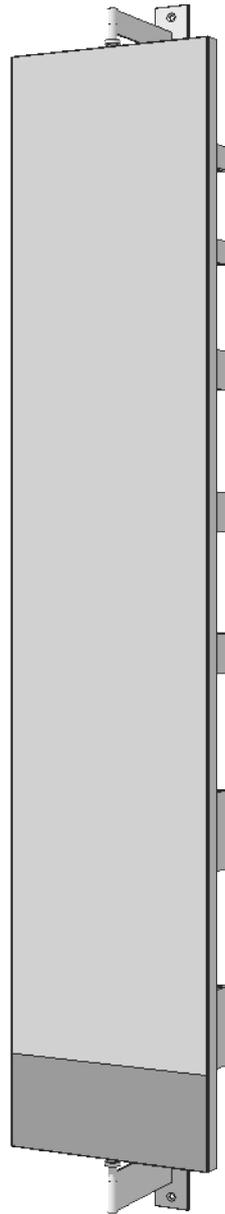

Fitting Instructions

1. Fit steel sleeve tube in the top and bottom of the cabinet.
2. Fix bottom bracket (larger) to wall securely.
3. Fit bottom spindle and position cabinet keeping VERTICAL at all times. Position top bracket and mark fixing screw positions. Remove cabinet and drill top bracket screw holes.
4. Fit top bracket loosely to the wall and locate cabinet between both brackets using spindles both top and bottom. KEEP VERTICAL. Tighten top bracket screws.
5. Check cabinet is secure and spins freely before use.
6. If in doubt consult a qualified builder.

Important:

Do not TILT the mirror once fitted to spindle.