
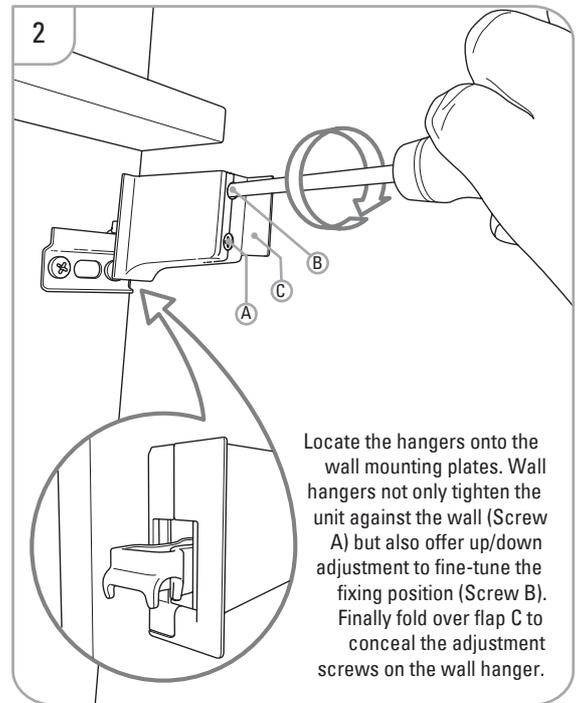


Before you start


It is recommended that the unit and basin are secured to a suitably reinforced wall to ensure stability. The wall plugs supplied are only suitable for solid stone / brick walls. For plasterboard walls use specialist wall plugs along with supplementary wall strengthening as units can be very heavy. Seek advice from a specialist about the suitability of fixings to be used.

Wear suitable eye protection when drilling. Take care when using power tools near water - the use of a residual current device (RCD) is recommended. Beware of hidden pipes or cables. Take care when drilling tiled surfaces as the drill might slip. Use a piece of masking tape to prevent the drill from wandering.

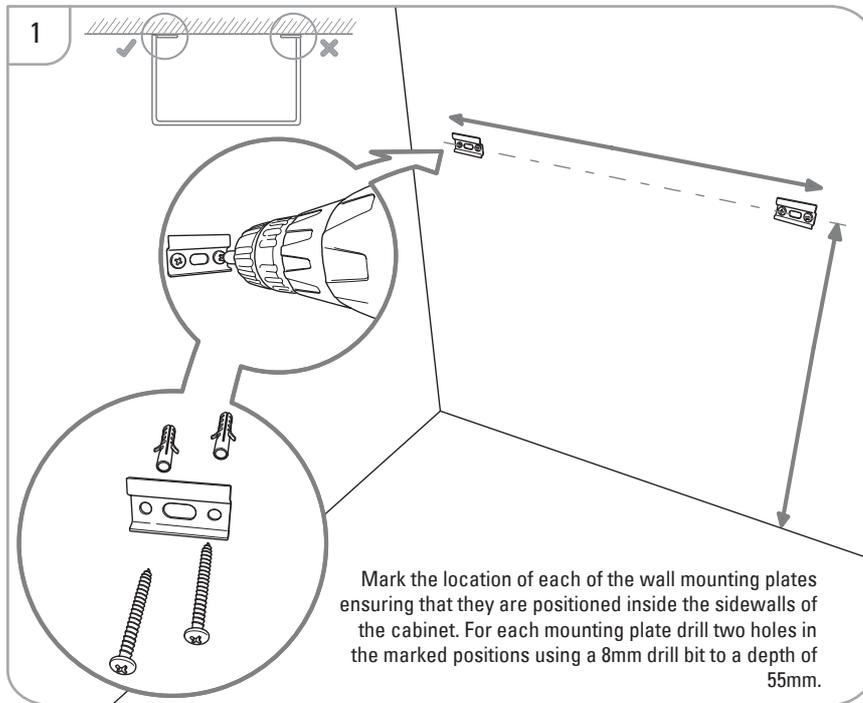

Securing cabinet to wall

Cabinet will need to be screwed to wall through fixing points located on the backboard just above the bottom shelf. See below.

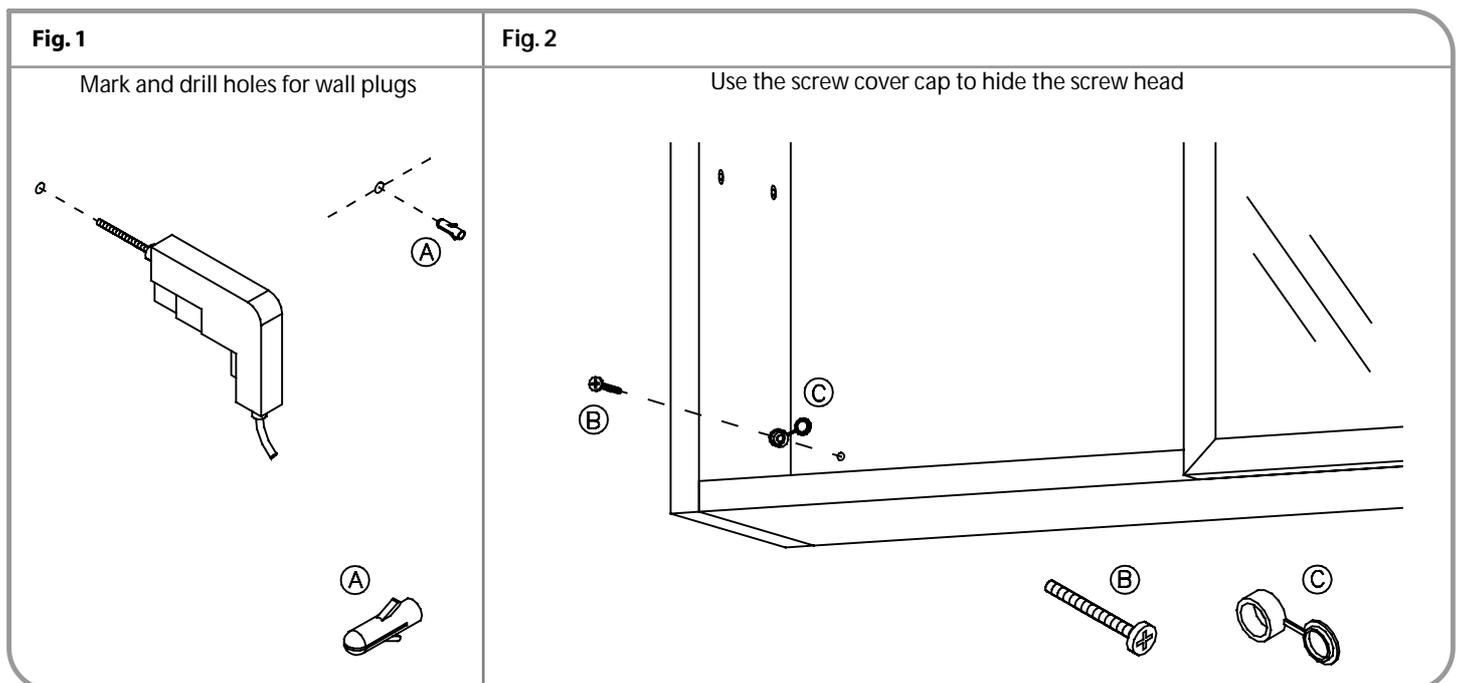


Hinge Adjustment

Hinges may require adjustment for both the doors to fit neatly together. This is achieved with the adjustable soft close hinges using the adjustment screws A and B (see Fig. 3). To access these you may first have to remove the screw cap cover. The hinges also feature a quick release mechanism to quickly and easily detach the door from the furniture frame, this is activated by pressing button C (see Fig. 3).

To make adjustment 1 (see Fig. 4) tighten/loosen adjustment screw A.

To make adjustment 2 (see Fig. 4) turn screw B.

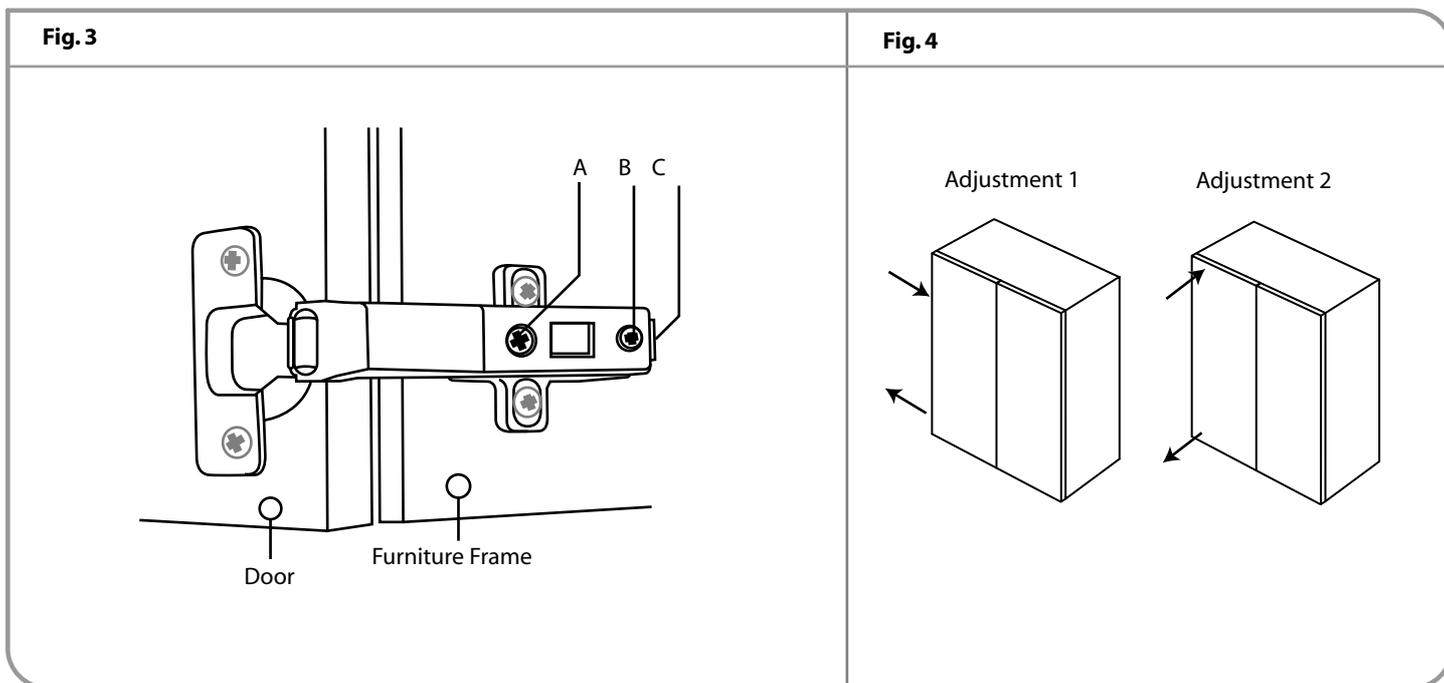

Shelves

This cabinet contains shelves with a maximum evenly distributed safe load for each shelf of 3Kg.

Replacement of Glass Components - BS7449 : 1991

This cabinet contains a mirrored door of nominal thickness of 3mm. Should the mirror become chipped or broken, it is not possible to replace with glass of the type described above due to the construction of the door. Contact Roper Rhodes Ltd for details on obtaining a suitable replacement door quoting the model number and batch number.

Furniture Aftercare Instructions

As with all wooden furniture, this product should be treated with care.

We recommend...

Wipe away any water splashes or condensation after use. Excessive exposure to water will deteriorate the furniture.

All bathrooms should be well ventilated with a suitable extractor fan.

Clean with a soft damp cloth only.

Use a wax free polish if one must be used.

For removal of lime scale deposits use a suitable proprietary cleaner. If necessary test on an inconspicuous area first.

Please DO NOT...

Do not scrub or scour

Do not use abrasive cleaning agents