

Assembly order:

1. Thread bolt (2) through the slot in locking pin assembly (3) and the slot in frosted gasket (4)


2. Push the assembled bolt through the toilet pan (5) and repeat with the opposite side.

3. From the underside of the pan add (6,7,8, and 9) to the bolt, threading the lock nut (9) last, tighten finger tight so the whole assembly can still turn on top of the toilet pan with a small resistance.

Tip If the bolt spins, Push it down into the slot in (3) the square shank should engage with the slot and lock the rotation. Repeat on opposite side.

4. Add the chrome cover cap (1) then line up the locking pins with the hinges, firmly push the toilet seat onto the pins until they engage and lock, manipulate the toilet seat to desired position and tighten the lock nut.

Tip Pull down on the end of the bolt if it spins when tightening to lock it in the slot in (3).

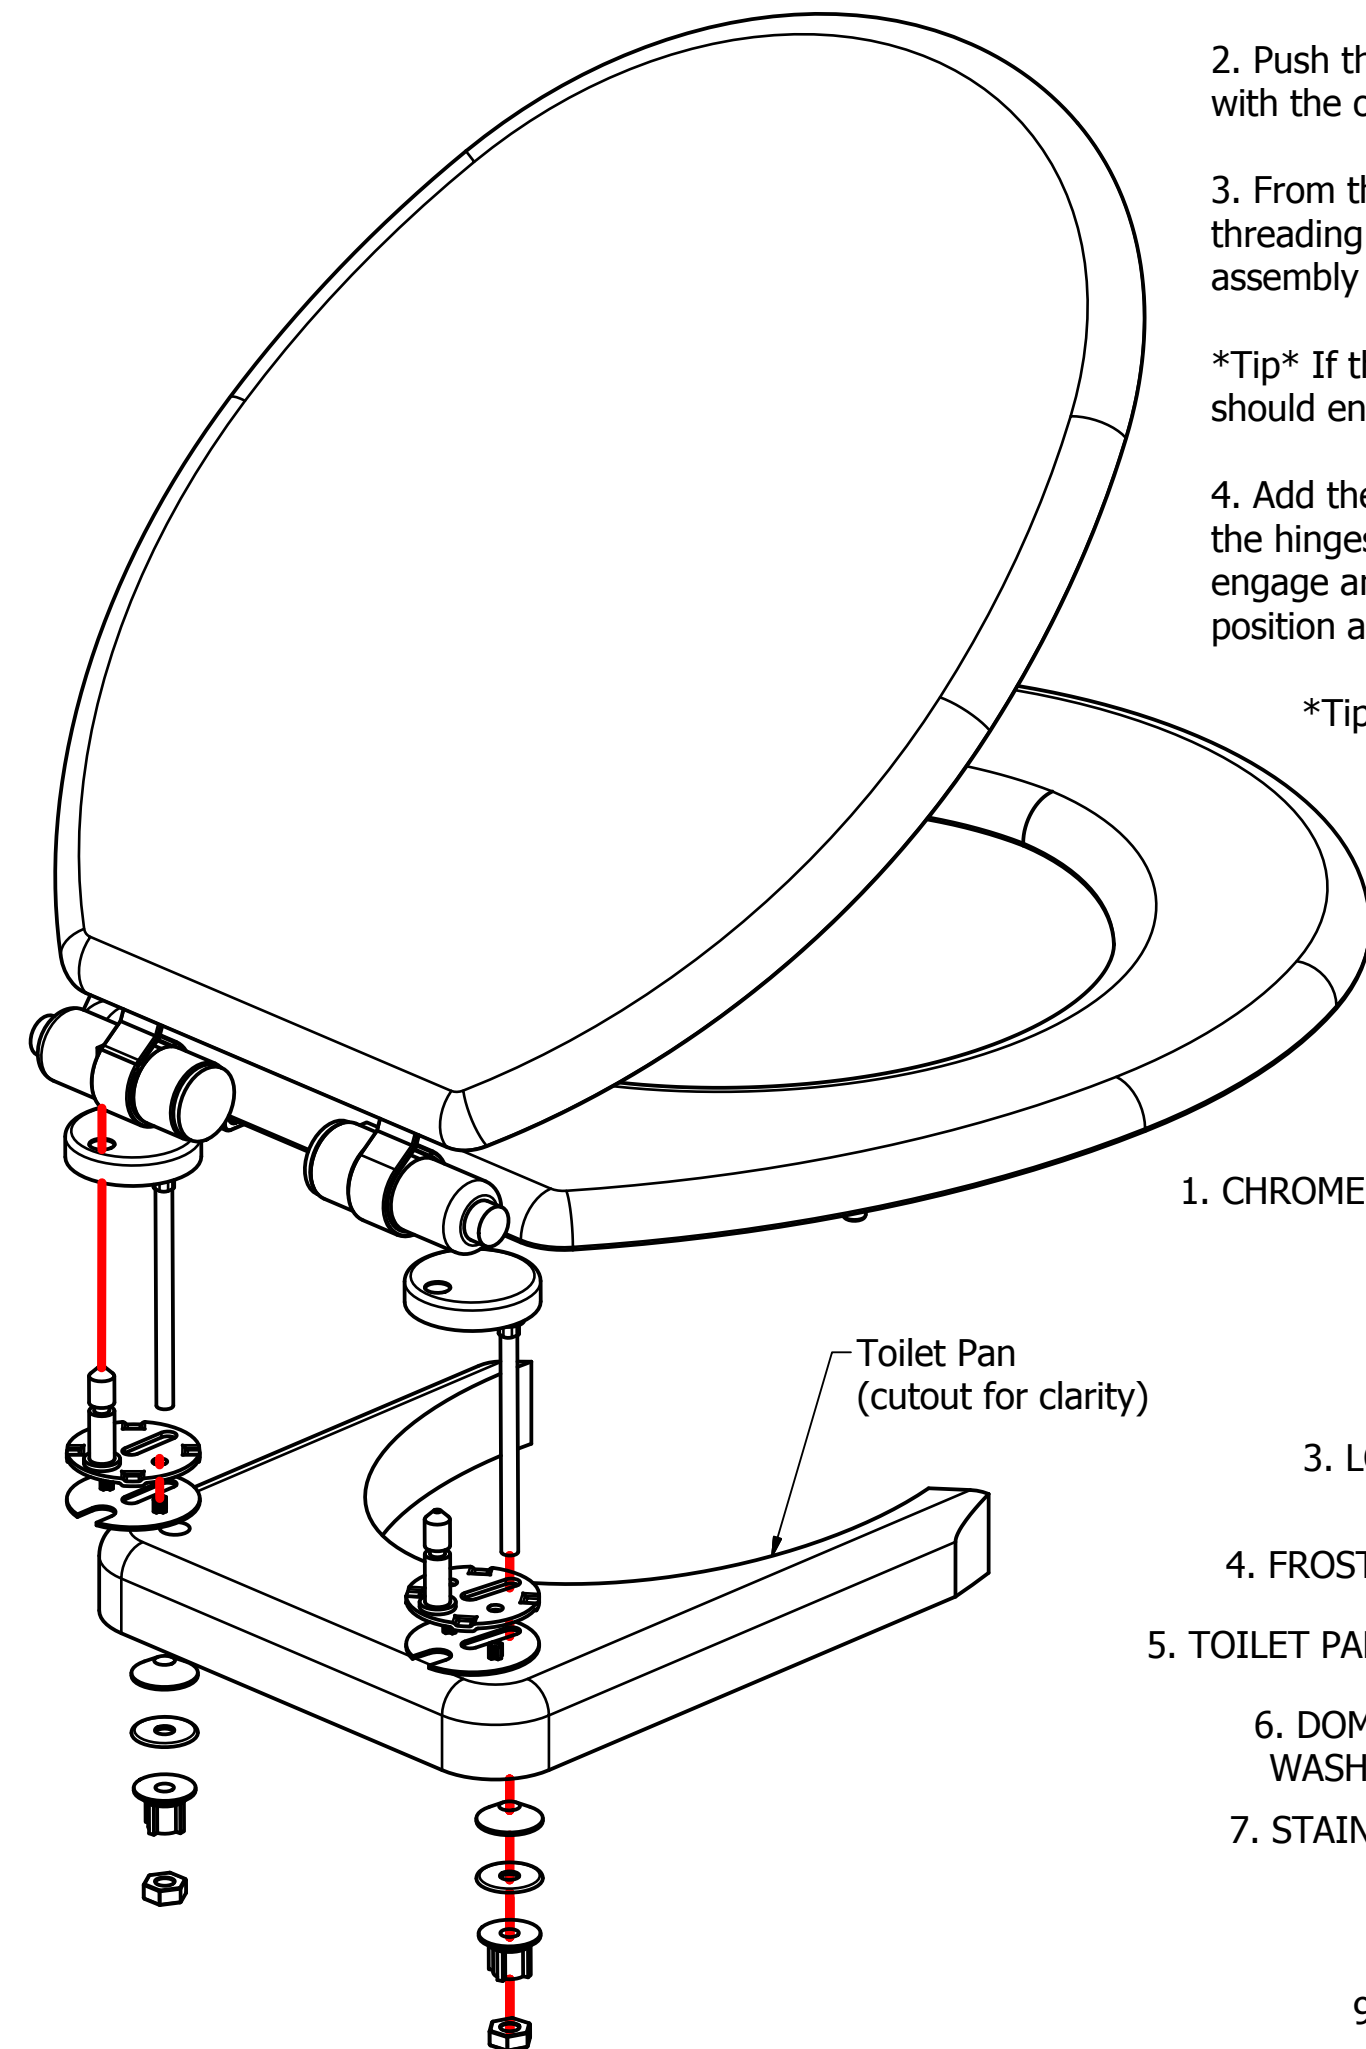

Toilet Pan
(cutout for clarity)

1. CHROME COVER CAP

2. BOLT

3. LOCKING PIN
ASSEMBLY

4. FROSTED GASKET


5. TOILET PAN (CUTOUT)

6. DOMED RUBBER
WASHER (WHITE)

7. STAINLESS STEEL
WASHER

8. SPACER

9. LOCK NUT

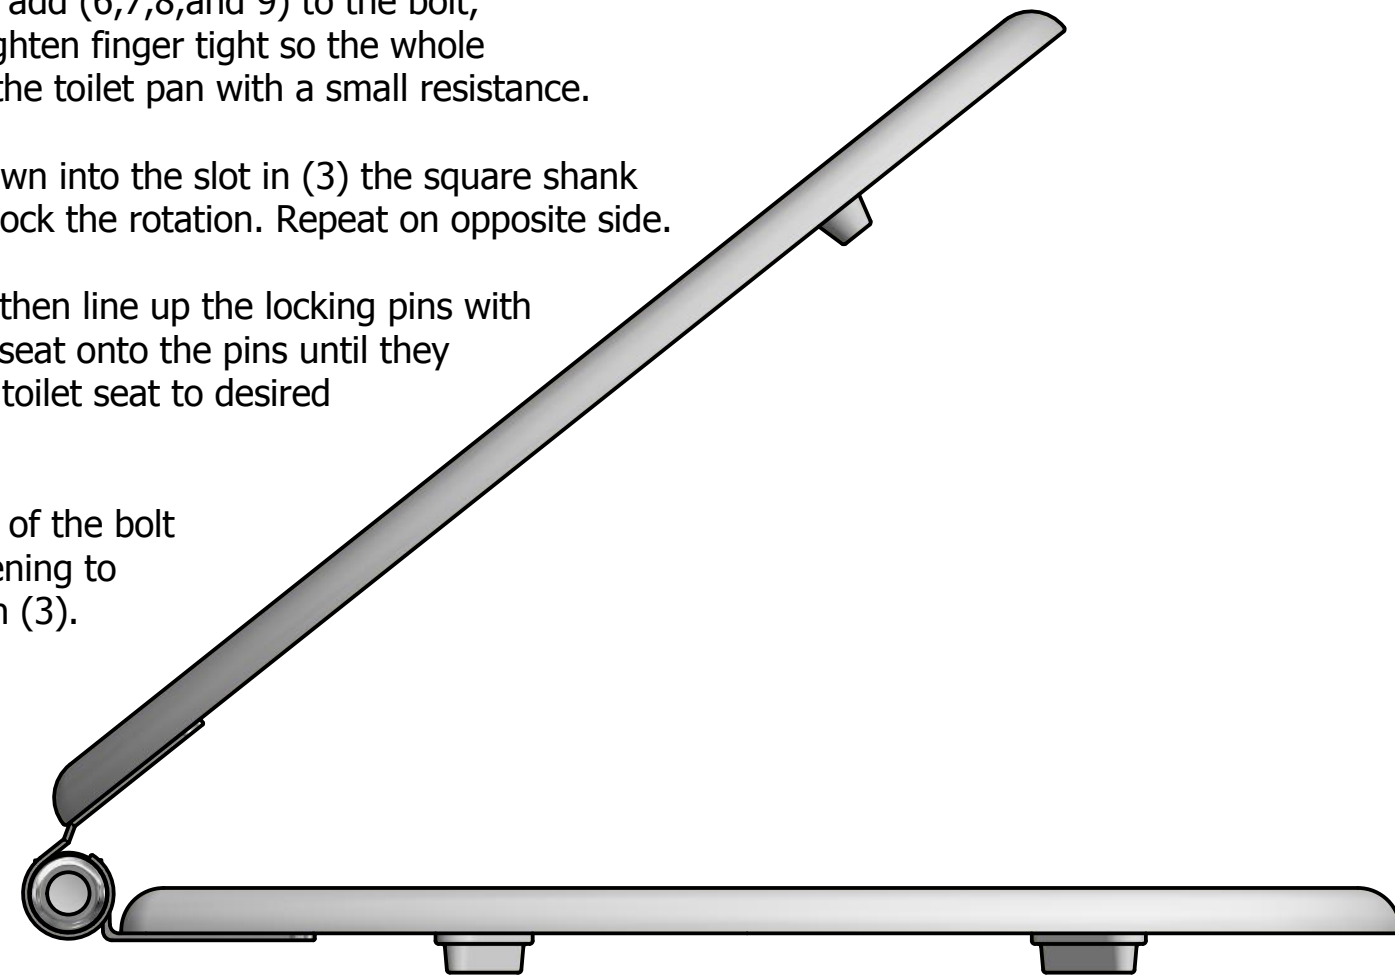

Toilet pan cutout for clarity