

**TO ENSURE THE CORRECT INSTALLATION IS EXECUTED IT IS RECOMMENDED USING A QUALIFIED COMPETENT INSTALLER TO INSTALL THE PRODUCT.**

### Wet Room Pole Fitting Examples





Determine the location of the base plate and secure to the floor using the fixings provided.



Once the base plate is fitted, Determine the length of pole needed, and cut to size.




Place the pole over the floor bracket and push onto the glass to secure

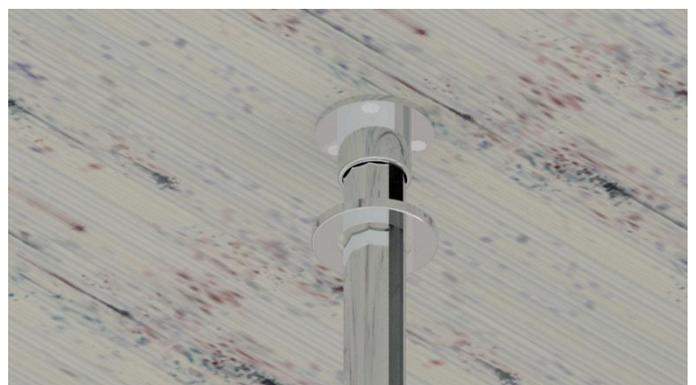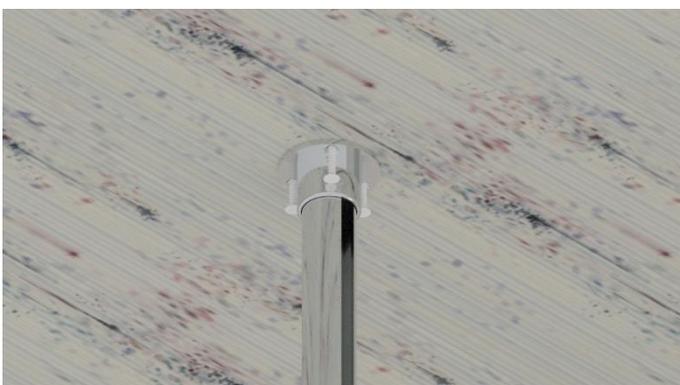

Slide the cover cap and Ceiling Mounting Bracket on to the pole and then secure ceiling bracket to ceiling with fixings provided.



Place cover cap over bracket and secure with Alan key and grub screw provided

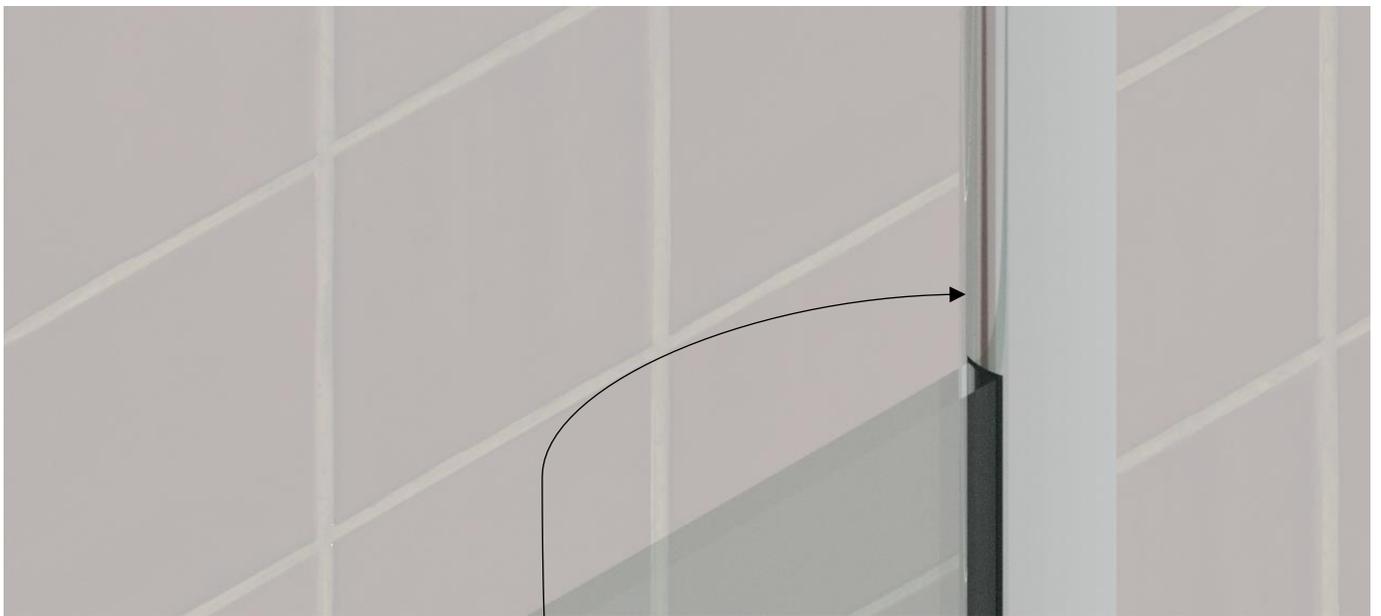

Cut cover trim to required length and clip into the exposed rebate.

